

Where Do I Find Everything I Need for Process Measurement and Control? OMEGA...Of Course!

TEMPERATURE

- ✓ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ✓ Wire: Thermocouple, RTD & Thermistor
- ✓ Calibrators & Ice Point References
- ✓ Recorders, Controllers & Process Monitors
- ✓ Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- ✓ Transducers & Strain Gages
- ✓ Load Cells & Pressure Gages
- ✓ Displacement Transducers
- ✓ Instrumentation & Accessories

FLOW/LEVEL

- ✓ Rotameters, Gas Mass Flowmeters & Flow Computers
- ✓ Air Velocity Indicators
- ✓ Turbine/Paddlewheel Systems
- ✓ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- ✓ pH Electrodes, Testers & Accessories
- ✓ Benchtop/Laboratory Meters
- ✓ Controllers, Calibrators, Simulators & Pumps
- ✓ Industrial pH & Conductivity Equipment

DATA ACQUISITION

- ✓ Data Acquisition & Engineering Software
- ✓ Communications-Based Acquisition Systems
- ✓ Plug-in Cards for Apple, IBM & Compatibles
- ✓ Datalogging Systems
- ✓ Recorders, Printers & Plotters

HEATERS

- ✓ Heating Cable
- ✓ Cartridge & Strip Heaters
- ✓ Immersion & Band Heaters
- ✓ Flexible Heaters
- ✓ Laboratory Heaters


ENVIRONMENTAL MONITORING AND CONTROL

- ✓ Metering & Control Instrumentation
- ✓ Refractometers
- ✓ Pumps & Tubing
- ✓ Air, Soil & Water Monitors
- ✓ Industrial Water & Wastewater Treatment
- ✓ pH, Conductivity & Dissolved Oxygen Instruments

CE



User's Guide

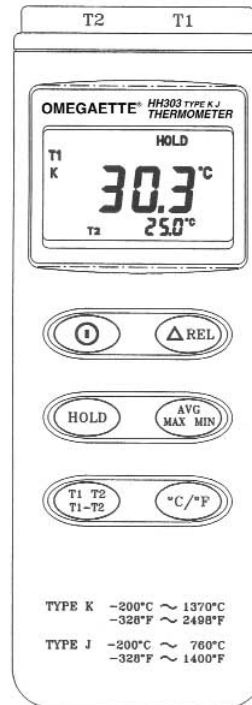

omega.com™

an OMEGA™

www.omega.com

e-mail: info@omega.com

OMEGAETTE® HH303 Type K J Thermometer

M3549/1299



OMEGA^{net} On-Line Service
www.omega.com

Internet e-mail
info@omega.com

Servicing North America:

USA:
ISO 9001 Certified
One Omega Drive, Box 4047
Stamford CT 06907-0047
Tel: (203) 359-1660
e-mail: info@omega.com
FAX: (203) 359-7700

Canada:
976 Bergar
Laval (Quebec) H7L 5A1
Tel: (514) 856-6928
e-mail: info@omega.ca
FAX: (514) 856-6886

For immediate technical or application assistance:

USA and Canada: Sales Service: 1-800-826-6342 / 1-800-TC-OMEGASM
Customer Service: 1-800-622-2378 / 1-800-622-BESTSM
Engineering Service: 1-800-872-9436 / 1-800-USA-WHENSM
TELEX: 996404 EASYLINK; 62968934 CABLE: OMEGA

Mexico: Tel: (001) 800-826-6342 FAX: (001) 203-359-7807
En Español: (001) 203-359-7803 e-mail: espanol@omega.com
info@omega.com.mx

Servicing Europe:

Benelux: Postbus 8034, 1180 LA Amstelveen, The Netherlands
Tel: +31 (0)20 6418405 FAX: +31 (0)20 6434643
Toll Free in Benelux: 0800 0993344
e-mail: nl@omega.com

Czech Republic: Rudé armády 1868, 733 01 Karviná 8
Tel: +420 (0)69 6311899 FAX: +420 (0)69 6311114
Toll Free: 0800-1-66342 e-mail: czech@omega.com

France: 9, rue Denis Papin, 78190 Trappes
Tel: +33 (0)130 621 400 FAX: +33 (0)130 699 120
Toll Free in France: 0800-4-06342
e-mail: france@omega.com

Germany/Austria: Daimlerstrasse 26, D-75392 Deckenpfronn, Germany
Tel: +49 (0)7056 3017 FAX: +49 (0)7056 8540
Toll Free in Germany: 0800 TC-OMEGASM
e-mail: germany@omega.com

United Kingdom: One Omega Drive, River Bend Technology Centre
ISO 9002 Certified Northbank, Irlam, Manchester
M44 5EX United Kingdom
Tel: +44 (0)161 777 6611 FAX: +44 (0)161 777 6622
Toll Free in United Kingdom: 0800-488-488
e-mail: sales@omega.co.uk

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, patient-connected applications.

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear are not warranted, including but not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (INPC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/ DISCLAIMER language, and additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. **BEFORE RETURNING ANY PRODUCTS TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS).** The assigned AR number should then be marked on the outside of the return package and on any correspondence. The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR WARRANTY RETURNS, please have the following information available **BEFORE** contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED.
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR NON-WARRANTY REPAIRS, consult OMEGA for current repair charges. Have the following information available **BEFORE** contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 1999 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

C O N T E N T S

TITLE	PAGE
I. Introduction.....	3
II. Specifications.....	3
III. Symbol Definition and Button Location.....	5
IV. Operation Instructions.....	7
4.1 Power-Up.....	7
4.2 Connection the Thermocouples.....	7
4.3 Selecting the Temperature Scale.....	7
4.4 Selecting the Thermocouple Type.....	7
4.5 Data-Hold Operation.....	7
4.6 T1,T2,T1-T2 Display Control.....	7
4.7 Relative Operation for Main Display.....	7
4.8 MAX/MIN/AVG Operation for Main Display.....	8
4.9 Auto Power Off.....	8
4.10 Low Battery Condition.....	8
4.11 Digital Output.....	9

I. Introduction:

This instrument is a digital thermometer for use with any K-type and J-type thermocouple as temperature sensor.

Temperature indication follows National Bureau of Standards and IEC584 temperature/voltage table for K-type and J-type thermocouples.

II. Specifications:

Numerical Display:

4 digital liquid crystal display

Measurement Range:

K-Type: -200°C ~ 1370°C -328°F ~ 2498°F

J-Type: -200°C ~ 760°C -328°F ~ 1400°F

Resolution:

K-Type: -200°C~ 800°C 0.1°C; 800°C ~1370°C 1°C
-328°F~ 1000°F 0.1°F; else 1°F

J-Type: -200°C~ 600°C 0.1°C; 600°C ~760°C 1°C
-328°F~ 1000°F 0.1°F; else 1°F

Maximum Voltage at Thermocouple Input:

60V DC, or 24Vrms AC

Environmental:

- o Operating Temperature and Humidity:
0°C ~50°C (32°F ~ 122°F); 0 ~ 80% RH
- o Storage Temperature and Humidity:
-10°C to 60°C (14°F ~ 140°F); 0 ~ 80% RH
- o Altitude up to 2000 meters.

Accuracy: at (23 ± 5°C)

Range	Accuracy
K-Type -200°C ~ 1370°C	±(0.1% reading + 0.7°C)
J-Type -200°C ~ 760°C	±(0.1% reading + 0.7°C)
K-Type -328°F ~ 2498°F	±(0.1% reading + 1.4°F)
J-Type -328°F ~ 1400°F	±(0.1% reading + 1.4°F)

For T1-T2 Measurement, the accuracy is ±(0.2% T1-T2 reading + 1.7°C)
or ±(0.2% T1-T2 reading + 3.4°F)

Temperature Coefficient:

For ambient temperatures from 0°C - 18°C and 28°C - 50°C,
for each °C ambient below 18°C or above 28°C add the
following tolerance into the accuracy spec.

0.01% of reading + 0.03°C (0.01% of reading + 0.06°F)

Note:

The basic accuracy Specification does not include the error of
the probe please refer to the probe accuracy specification for
additional details.

Sample Rate: 2.5 times per second

Dimension: 184x 64x 30mm

Weight: 210g Approx.(7.4oz)

Accessory:

K Type Bead Probe, Battery, Carrying Case, Instruction Menu.

Option:

Soft Ware Package (Program, RS232 Connection Cable) , AC
Adapter.

Power requirement:

9 Volt Battery, NEDA 1604 or JIS 006P or IEC6F22


Battery Life:

Approx. 100hrs with alkaline battery

AC Adapter:

9Vdc ±15% 100mA ; Plug Diameter: 3.5x 1.35mm

III. Symbol Definition and Button Location:

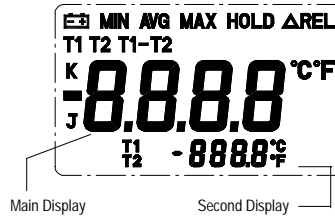

- :This indicates that the minus temperature is sensed.

°C °F :Centigrade and Fahrenheit indication.

K J :Thermocouple Type Indication


HOLD :This indicates that the display data is being hold.


MAX :The Maximum value is now being displayed

MIN :The Minimum value is now being displayed

AVG :The Average value is now being displayed.

ΔREL :The reading is now under Relative Mode.


 :The Battery is not sufficient for proper operation.

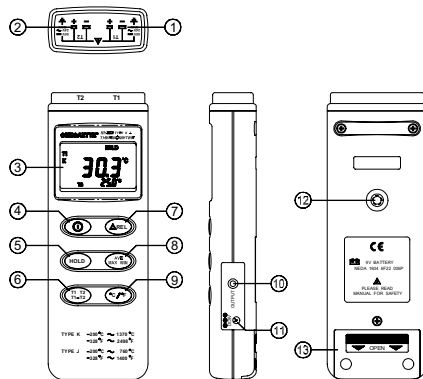

- ① T1 K J type temperature sensor connector
- ② T2 K J type temperature sensor connector
- ③ LCD display
- ④ ON/OFF button
- ⑤ HOLD button
- ⑥ T1, T2, T1-T2 control button
- ⑦ Relative readout button
- ⑧ MAX MIN Average control button
- ⑨ °C, °F control button
- ⑩ Digital output connector
- ⑪ AC power adapter connector
- ⑫ Tripod connector
- ⑬ Battery cabinet cover

IV. Operation Instructions :

4.1 Power-Up

Press the  key to turn the thermometer On or OFF.

4.2 Connection the Thermocouples

For measurement, plug the thermocouple into the input connectors.

4.3 Selecting the Temperature Scale


When the meter was first power on, the default scale setting is set at Celsius (°C) scale. The user may change it to Fahrenheit (°F) by pressing " °C/°F " button and vice versa to Celsius.

4.4 Selecting the Thermocouple Type


By default, when the meter is powered on, it is K-Type. One may press and hold " °C/°F " button and then power on the meter, then it will change to J-Type.

4.5 Data-Hold Operation

The user may hold the present reading and keep it on the display by pressing the "HOLD" button. When the held data is no longer needed, one may release the data-hold operation by pressing "HOLD" button again.

When the meter is under Data Hold operation, the "△REL",  and " °C/°F " button are disabled.


4.6 T1,T2,T1-T2 Display Control:

One may select T1,T2 or T1-T2 to show on the main display by pressing  button. When T1 or T2 is select to show on the main display, the other temperature will be shown on the second display. When one select T1-T2 to show on the main display, T1 and T2 will be shown on the second display alternately.


4.7 Relative Operation for Main Display:


When one press the "△REL" button, the meter will memorize the present reading and the difference between the new reading and the memorized data will be shown on the display. Press the "△REL" button again to exit the Relative operation.


4.8 MAX/MIN/AVG Operation for Main Display:


When one press the  button the meter will enter the MAX/MIN mode. Under this mode the maximum value, minimum value and average value of latest 4 data is kept in the memory simultaneously and updated with every new data.

When the MAX symbol is display, the Maximum is shown on the display.


Press  again, then the MIN symbol is on the display and also the minimum reading.

Press  again, the AVG symbol is on the display and also the average reading.

Press  again, MAX, MIN and AVG will blink together. This means that all these data is updated in the memory and the reading is the present temperature.

One may press  to circulate the display mode among these options.

When the meter is under  operation, "△REL" and "°C/°F" are disabled.


To exit the MAX/MIN mode, one may press and hold  for two seconds.

4.9 Auto Power Off:

By default, when the meter is powered on, it is under auto power off mode. The meter will power itself off after 30 minutes if no key operation or RS232 communication. Key combination at power on or RS232 communication can disable auto power off.

One may press and hold "HOLD" button and then power on the meter and there will be two successive beeps to indicate that auto power off is disabled.

4.10 Low Battery Condition

When the battery voltage is under proper operation requirement, the  symbol will show on the LCD and the battery need to be replaced with new one.


4.11 Digital Output:

The Digital Output is a 9600bps N 81 serial interface.

The RX is a 5V normal high input port.

The TX is a 5V normal high output port.

The command of Digital Output is list below.

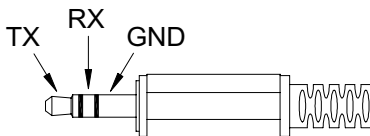

RS232 command	Function	Remarks
K(ASC 4BH)	Ask for model No.	Send 4 bytes
H(ASC 48H)	Hold button	
T(ASC 54H)	TIMER button	
M(ASC 4DH)	AVG/MAX/MIN button	
N(ASC 4EH)	Exit AVG/MAX/MIN mode	
R(ASC 52H)	REL button	
C(ASC 43H)	°C/°F button	
A(ASC 41H)	Inquire all encoded data	Send encoded 8 byte

- **Command K:**

Return 4 bytes. For example, when sends command "K" to meter, it will return "3", "0", "3", ASCII(13) .

(0x13) represent T1,- 199.9°C, The total byte number should be 7+1+7+1+5+chr(13)=22Bytes

- **Command T:**

Equivalent to one pushing on the HOLD button.

- **Command M:**

Equivalent to one pushing on the HOLD AVG/MAX/MIN button and no message is returned.

- **Command R:**
Equivalent to one pushing on the REL button and no message is returned.
- **Command C:**
Equivalent to one pushing on the °C/°F button and no message is returned.
- **Command A:**

1st BYTE:

The first byte is the start byte , it value is 2.

2nd BYTE:

bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0
C/F	Low Bat	Hold	REL	K/J	MAX/AVG/MIN		

bit 2	bit 1	bit0	
0	0	0	→ normal mode
0	0	1	→ MAXIMUM mode
0	1	0	→ MINIMUM mode
1	0	0	→ AVG mode
1	1	1	→ calculate MAX/MIN/AVG in back-ground and lcd "MAX""AVG""MIN" will flash.

bit3: 1→0→K TYPE 1→J TYPE

bit4: 1→REL

bit5: 1- HOLD 0→not HOLD

bit6: 1→LOW BATTERY 0→BATTERY NORMAL

bit7: 1→°C 0→°F

3rd BYTE:

bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0
		point	minus	OL	point	minus	OL

bit0: 1→main window value is OL, 0→not OL

bit1: 1→main window value is minus, 0→main window value is plus.

bit2: 1→4th byte and 5th byte represent #### 0→4th byte and 5th byte

represent ###.#

bit3:1→sub window value is OL , 0→not OL

bit4:1→sub window value is minus, 0→sub window value is plus.

bit5:1→6th byte and 7th byte represent #### 0→6th byte and 7th byte represent ###.#

bit7 bit6:

00→Main window is T1-T2,sub window is T1

01→Main window is T1-T2, sub window is T2

10→Main window is T1, sub window is T2

11→Main window is T2, sub window is T1

4th BYTE: first two BCD code of main window value.

5th BYTE: last two BCD code of main window value

6th BYTE: first two BCD code of sub window value.

7th BYTE: last two BCD code of sub window value.

8th BYTE: The last byte is the end byte , it value is 3, first and last byte are used to check frame error.

Calibration Procedure

Date	JUN./06/2002
Page	1 of 1

Model No. HH302 & HH303
Environmental: 23 ± 5 °C

K,J Thermometer (HH302) calibrate procedure

1. Hold REL+AVG+TIMER then press power , release all button ,press HOLD +C/F in 5 seconds, LCD will show “CAL 1”.
2. Input 52.418 mV via copper wire , press REL button when LCD display a stable value(about 14,000 count). Then LCD will display “CAL 2”
3. Input 33.290 mV via copper wire, press REL button when LCD display a stable value(about 18,000 count), Then LCD will display “CAL 3”
4. Input 0 C via thermocouple wire, press REL button when LCD display a stable value(less then 1000 count),

Now , press REL button again to finish calibrating .

K,J Thermometer (HH303) calibrate procedure

1. Hold REL+AVG+ T1-T2 then press power , release all button ,press HOLD +C/F in 5 seconds, LCD will show “CAL 1”.
2. Input 52.418 mV via copper wire , press REL button when LCD display a stable value(about 14,000 count). Then LCD will display “CAL 2”
3. Input 33.290 mV via copper wire, press REL button when LCD display a stable value(about 18,000 count), Then LCD will display “CAL 3”
4. Input 0 C via thermocouple wire, press REL button when LCD display a stable value(less then 1000 count),

Now , press REL button again to finish calibrating .

Omega

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>