




User's Guide



<http://www.omega.com>
e-mail: info@omega.com

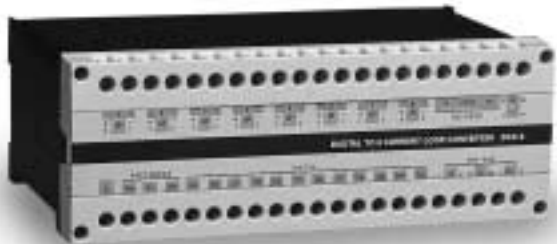

DRA-DCC-8 DIGITAL TO 8 CURRENT LOOP CONVERTER



OMEGAnetSM On-Line Service
<http://www.omega.com>

Internet e-mail
info@omega.com

Servicing North America:

USA:
ISO 9001 Certified

One Omega Drive, Box 4047
Stamford, CT 06907-0047
Tel: (203) 359-1660
FAX: (203) 359-7700
e-mail: info@omega.com

Canada: 976 Bergar
Laval (Quebec) H7L 5A1
Tel: (514) 856-6928
FAX: (514) 856-6886
e-mail: canada@omega.com

For immediate technical or application assistance:

USA and Canada:

Sales Service: 1-800-826-6342 / 1-800-TC-OMEGASM
Customer Service: 1-800-622-2378 / 1-800-622-BESTSM
Engineering Service: 1-800-872-9436 / 1-800-USA-WHENS M
TELEX: 996404 EASYLINK: 62968934 CABLE: OMEGA

Mexico and
Latin America:

Tel: (95) 800-TC-OMEGASM
En Espanol: (95) 203 359-7803

FAX: (95) 203-359-7807
e-mail: espanol@omega.com

Servicing Europe:

Benelux

Postbus 8034, 1180 LA Amstelveen, The Netherlands
Tel: (31) 20 6418405
Toll Free in Benelux: 06 0993344
e-mail: nl@omega.com

FAX: (31) 20 6434643

Czech Republic:

Ostravska 767,733 01 Karvina
Tel:42(69)6311899
e-mail: czech@omega.com

FAX:42(69) 6311114

France:

9, rue Denis Papin, 78190 Trappes
Tel: (33) 130-621-400
Toll Free in France: 0800-4-06342
e-mail: france@omega.com

FAX: (33) 130-699-120

Germany/Austria:

Daimlerstrasse 26, D-75392 Deckenpfronn, Germany
Tel: 49 (07056) 3017
Toll Free in Germany: 0130 11 21 66
e-mail: germany@omega.com

FAX: 49 (07056) 8540

United Kingdom:

ISO 9002 Certified

25 Swannington Road,
Broughton Astley, Leicestershire,
LE9 6TU, England
Tel: 44 (1455) 285520
FAX: 44 (1455) 283912
Toll Free in England: 0800-488-488
e-mail: uk@omega.com

P.O. Box 7, Omega Drive,
Irlam, Manchester,
M44 5EX, England
Tel: 44 (161) 777-6611
FAX: 44 (161) 777-6622

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice. WARNING: These products are not designed for use in, and should not be used for, patient connected applications.

Contents

1. MOUNTING INSTRUCTIONS
2. REPLACING FUSES
3. ASSEMBLY
4. SUPPLY VOLTAGE
5. MODES OF OPERATION
 - 5.1 0-20 or 4-20mA output current selection
 - 5.2 Switch Settings
6. PARALLEL CONTROL MODE
 - 6.1 PLC Interface
 - 6.2 The "E" (ENABLE) Terminal
7. SERIAL CONTROL MODE
 - 7.1 RS232c / RS422 Select
 - 7.2 RS422 Termination
 - 7.3 Serial Control Switch Settings
 - 7.4 Serial Communication Parameters
 - 7.4.1 Baud Rate Select
 - 7.4.2 ID Code
 - 7.4.3 Command Formats
8. SELF TEST MODES
 - 8.1 Self Test # 1
 - 8.2 Self Test # 2
 - 8.3 Self Test # 3
9. MULTIDROP CONFIGURATION
10. PUTTING THE UNIT INTO OPERATION
11. CALIBRATION
12. SPECIFICATIONS

1. MOUNTING INSTRUCTIONS

The DRA-DCC-8 is designed for standard DIN rail mounting.

Place the unit on the upper part of the mounting rail with the fastening tab facing down. Using a suitable flat screwdriver loosen the tab slightly and attach the unit to the rail. Once the tab is loosened, ensure that the unit is fastened securely in place.

2. REPLACING FUSES

In order to replace a blown fuse, the unit has to be disassembled, as follows:

- a. Take off both terminal strips by removing the four screws at the edges.

Note: This does not require disconnecting the cables connected to the strips.

- b. Remove the front panel using a suitable flat screwdriver. Press down gently on the plastic springloaded tabs located in the slots either side of the unit.
- c. Disconnect the flat connector which couples the LED circuit on the front panel.
- d. Replace the blown fuse.

WARNING: Never install a fuse rated more than 800mA

3. ASSEMBLY

The DRA-DCC-8 unit includes two printed circuit cards designated as P.N 7041 and P.N 7040. The two printed circuit cards should occupy the slots in the enclosure according to fig 1.

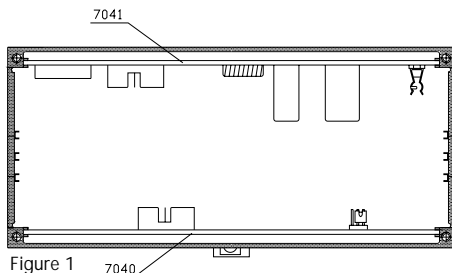


Figure 1

Insert the two printed cards into their slots. Connect the flat cable between them. Connect the front panel flat cable. The panel must be inserted into the grooves on both sides of the case while pressing down until a distinct "click" is heard. Assembly is completed by laying the terminal strips in place.

Note: The terminal strips are polarized and must not be placed backwards.

4. SUPPLY VOLTAGE

The DRA-DCC-8 is powered by a DC power supply at a range of 15-32Vdc. In order to determine the minimum supply voltage, use the following equation:

$$V_{min} = 8 + R_{load}(\Omega) * 0.02$$

where:

V_{min} is the minimum required supply voltage.

$R_{load}(\Omega)$ is the maximum output load including the leads resistance.

Note: If V_{min} turns to be less than 15V, the minimum required voltage should be 15 Vdc.

5. MODES OF OPERATION

The DRA-DCC-8 unit can be operated in several modes, determined by an internal array of 8 DIP switches as follows:

- 4-20 or 0-20mA output current mode
- Parallel control mode
- Serial control mode
- Self test mode

5.1 0-20 OR 4-20mA OUTPUT CURRENT MODE

Two current output spans are available: 4-20mA or 0-20mA selected by SW6. The DRA-DCC-8 receives 12 bits of data which determine the output current value. A channel data value of 4095 (FFF) is always interpreted as a 20mA output current. A channel data value of 0 (000) will produce a 0mA output current when SW6 is OFF, or 4mA when ON.

5.2 SWITCH SETTINGS

Parallel Control Mode

MODE	S1	S2	S3	S4	S5	S6	S7
0-20mA	OFF	OFF	X	X	X	OFF	OFF
4-20mA	OFF	OFF	X	X	X	ON	OFF

Serial Control Mode

BAUD RATE (BPS)	S1	S2	S3	S4	S5	S6	S7		
300	OFF	OFF	UNIT ID CODE			ON=4-20mA	ON		
4800	ON	OFF				ON	ON		ON
9600	OFF	ON				OFF	OFF	OFF=0-20mA	ON
19200	ON	ON				ON	ON		ON

SW5 MSB

Self Test Mode

MODE	S1	S2	S3	S4	S5	S6	S7
SELF TEST#1	ON	OFF		X		X	OFF
SELF TEST#2	OFF	ON		X		*	OFF
SELF TEST#3	ON	ON		X		*	OFF

* according to para #5.2

6. PARALLEL CONTROL MODE

MODE	S1	S2	S3	S4	S5	S6	S7
PARALLEL MODE	OFF	OFF		X		*	OFF

* according to para #5.2

In the parallel control mode, the DRA-DCC-8 unit is controlled via a 15 bit bus. Three Address bits (A0-A3) select the proper current output channel and 12 Data bits (D0-D11) determine its value (A0 and D0 are MSB). The DRA-DCC-8 microprocessor continuously scans the input vector (Address + Data) terminals and updates its memory tables upon recognizing a new vector. The unit is asynchronous in nature. The data should be valid for at least 160 microseconds.

6.1 PLC INTERFACE

The PLC's output modules can be divided into three popular types; TTL output module, 24Vdc sink type and 24Vdc source type.

There is a jumper selector on printed circuit card PN 7040 which selects between Sink/Source input. (TTL output module should usually be considered as sink type). See figure 2.

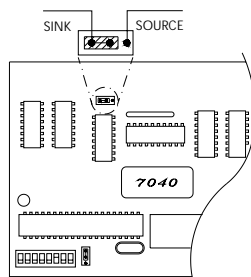


Figure 2.

6.2 THE "E" (ENABLE) TERMINAL

For E="1" the unit is enabled, which means that all input vectors are received and the output is updated. When E="0" the unit ignores any new input vector. The E terminal is recommended to be used as a strobe for parallel data which has a long setup time. In this case the following sequence is recommended: prior to applying a new vector, the E terminal should be set to logical 0 (inhibit state), then the new input vector should be imposed. Once the new data is set, the E terminal should be pulsed.

The E terminal is also used for multidrop configuration. The 15 bit vectors are applied to the units in parallel and the selection is carried out by controlling the "E" inputs.

7. SERIAL CONTROL MODE

7.1 RS232c / RS422 SELECT

he DRA-DCC-8 is equipped with two serial communication ports: The RS232c and the RS422. A jumper switch at the right side of the DIP switch array is used to select the required communication type. See figure 3.

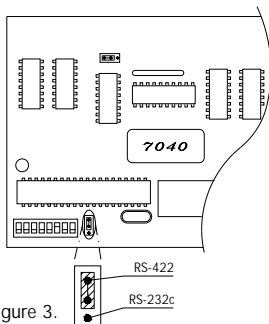


Figure 3.

7.2 RS422 TERMINATION

The SW8's ON state terminates the RS422 receiver terminals with a 100Ω load. In a multidrop configuration, the last (most distant) DRA-DCC-8 unit should be terminated in order to match the transmission lines.

Note: Only one termination load per RS422 communication link is permissible.

7.3 SERIAL CONTROL SWITCH SETTINGS

S1	S2	S3	S4	S5	S6	S7
BAUD RATE		ID CODE			*	ON

* according to para #5.2

7.4 SERIAL COMMUNICATION PARAMETERS

The communication protocol is 8 bit ASCII, even parity, and one stop bit.

7.4.1 BAUD RATE SELECT

SW1 and SW2 select one out of four available baud rates.

	SW1	SW2
300 BPS	OFF	OFF
4800 BPS	ON	OFF
9600 BPS	OFF	ON
19200 BPS	ON	ON

7.4.2 ID CODE

Up to eight DRA-DCC-8s can be connected in a multidrop configuration. Switches SW3, SW4, and SW5 (MSB) set the ID code.

7.4.3 COMMAND FORMATS

Three types of command formats are available:

- Without echo back
The host computer sends a message and does not receives an acknowledgment.
- With echo back
The host computer sends a message and receives an acknowledgment stating the DRA-DCC-8 ID number and the addressed channel number.
- Status report

7.4.3.1. WITHOUT ECHO BACK FORMAT

[A] [ID CODE] [CHANNEL VALUE] [CR]

The character A begins the command block.

The second byte is the ID code (07). The third byte is the addressable channel number (07). Up to four bytes of a channel's value can be in BCD mode (0-4095). Leading zeroes can be omitted. The last byte is [CR] which must terminate the command block.

7.4.3.2. WITH ECHO BACK FORMATS

[C] [ID CODE] [CHANNEL VALUE] [CR]

This format differs only in the opening character. After every command block transfer, the DRA-DCC-8 echoes back the following:

[C] [ID CODE CHANNEL] [LF] [CR]

Note: If the value is omitted it will be treated as zero. Separators such as blanks or commas are not allowed.

Example:

Channel 4 in DRA-DCC-8 no. 7 has to receive the value of 981. Echo back is required
The command format is:

[C] [7] [4] [981] [CR]

The echo back will be: C 7 4

Note: The channel numbers on the DRA-DCC-8 front panel are designated from 1 to 8, in binary they are designated from 0 to 7.

Note: When applying the echo back mode, it is advisable to wait for the echo back before transmitting a new command.

7.4.3.3 STATUS REPORT FORMAT

[S] [ID CODE] [CR]

The addressed DRA-DCC-8 unit will respond with the values stored in its eight channels. The response will start with S, ID code, following with eight channel values separated with commas and [LF] [CR] as terminators.

Example:

DRA-DCC-8 unit number 3 has the following stored data: ch1: 300, ch2: 1270, ch3: 0, ch4: 4087, ch5: 2099, ch6: 764, ch7: 3078, ch8: 550. The response from the device will be:

S3,300,1270,0,4087,2099,764,3078,550 [LF] [CR].

Note: Wait until the status report has terminated before transmitting new commands.

8. SELF TEST MODES

The DRA-DCC-8 is provided with three test modes.

MODE	S1	S2	S3	S4	S5	S6	S7
SELF TEST#1	ON	OFF		X		X	OFF
SELF TEST#2	OFF	ON		X		*	OFF
SELF TEST#3	ON	ON		X		*	OFF

* according to para #5.2

8.1 SELF TEST #1 (Communication Ports Test)

In order to test the serial communication ports, this test mode converts the unit to a transponder for ASCII characters. Any transmitted character will be echoed to the host terminal. The host parameters should be set to:

Baud rate : 4800, Word length: 8 bits, Parity: even, Stop bit: 1

8.2 SELF TEST #2 (Same Level)

In this test mode, the DRA-DCC-8 unit ignores the address field. All the outputs are set according to the data field only.

8.3 SELF TEST #3 (Saw Tooth)

In this test mode, only one output channel (according to the address setting) will produce a saw tooth wave form in which the whole value range is used.

9. MULTIDROP CONFIGURATION

Up to eight DRA-DCC-8 units can be installed in a multidrop configuration using the RS422 communication port.

The controller's RS-422 transmitter is connected to the units' receivers while the controller's RS-422 receiver is connected to the units' transmitters.

As the communication cable might be several thousand feet long, it is necessary to terminate the end of the line with its characteristic impedance in order to avoid reflections in the transmission line causing data distortion. SW8 in its ON state terminates the Rx inputs with a 100Ω load.

10. PUTTING THE UNIT INTO OPERATION

The DRA-DCC-8 is supplied with a set configuration for parallel control mode. The DIP switch setting is:

MODE	S1	S2	S3	S4	S5	S6	S7
PARALLEL 4-20mA	OFF	OFF	OFF	OFF	OFF	ON	OFF

The communication port selector (see para #7.1) is set to RS232C.

The unit should be set up according to the required configuration.

Before applying voltage to the unit see para #4 for power supply consideration.

The channel LEDs are connected in series with the output current so that they will light only as an indication of a closed current loop.

Note: After every power on, the unit is reset and the initialized default output currents are according to the SW6 setting (see para #5.2).

In the parallel control mode, internal pull-up resistors on each of the input terminals keep them in logical 1 state. The unit will recognize input voltage up to 0.5V as logical 0 and voltages from 4V to 60V as logical 1.

11. DRA-DCC-8 CALIBRATION

Generally there is no need to calibrate the DRA-DCC-8 unit. However if calibration is required, the following steps should be carried out: Two potentiometer trimmers, one for "Zero" and the other for "Span" are located on printed card 7040. The trimmer close to the card edge is the "Zero". Use the following switch setup for switching all the outputs between 4 and 20mA

MODE	S1	S2	S3	S4	S5	S6	S7
ALL CH. = 4mA	OFF	OFF	X	X	X	ON	OFF
ALL CH. = 20mA	OFF	ON	X	X	X	ON	OFF

Note: Set the unit to sink mode (fig.2).

Step 1:

Select one channel (for example ch.#1) for the initial tuning. Set the DIPswitch array to "all 4mA".

Apply supply voltage to the unit. The initial state of all the output currents is 4 mA. Use SW2 to switch all the outputs between 4 and 20mA. Iteratively set the "Zero" and the "Span" trimmers for 4.00mA and 20.00mA.

Step 2:

Monitor all the 8 channels in 4mA state, and calibrate the Zero trimmer so that their average readings is 4.000mA.

Then repeat for 20mA state, and calibrate the Span trimmer so that their average readings is 20.000mA. This procedure should be repeated until calibration is satisfactory.

12. SPECIFICATIONS

INPUTS: PARALLEL INPUTS	Parallel & Serial control inputs 3 - Output current loop address 12 - Output current value (Data) 1 - Enable (E)
LOGIC LEVELS:	0 < "0" < 0.5V, 4 < "1" < 60V
DATA HOLD TIME:	160 microsecond
MAXIMUM PARALLEL INPUT RATE:	6000 updates per second
SERIAL COMMUNICATION	RS232c full duplex RS422 full duplex
BAUD RATES:	300, 4800, 9600, 19200 BPS
PARITY:	Even
STOP BIT:	One
STATUS REPORT:	Reports as interrogated
MULTIDROP CAPABILITY:	Up to eight units
OUTPUTS: OUTPUT CURRENT SPAN: OUTPUT CURRENT SETTLING TIME:	8 continues current loops 0-20mA or 4-20mA (user selected) 4.2 ms max. for 99% of step
POWER SUPPLY:	15-32 Vdc (regulated)
CURRENT CONSUMPTION:	85mA max.
MAXIMUM LOOP RESISTANCE:	According to $R_{max}(K\Omega) = (V_{supply} - 6)/20$
ACCURACY:	$\pm 0.1\%$ of span typical, $\pm 0.2\%$ of span max.
RESOLUTION:	0.025% of span typical, 0.05% of span max.
INDICATORS:	Yellow Power On LED 8 Red output channel LEDs
AMBIENT TEMPERATURE Operation: Storage:	-10 to 60 °C (14 to 140 °F) -25 to +85 °C (-13 to 185 °F)
RELATIVE HUMIDITY:	5 to 95%, non condensing
HOUSING Box: Terminals:	Plastic Polycarbonate According to IP 50 DIN 40050 According to IP 20 DIN 40050
MOUNTING:	Standard DIN rail
FUSE:	630mA fast blow (5x20mm)
WEIGHT:	0.7Kg (1.5 lb.)
DIMENSIONS:	73.2H x 200W x 121mmD (2.88"x7.88"x4.76")

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of 13 months from date of purchase. OMEGA Warranty adds an additional one (1) month grace period to the normal one (1) year product warranty to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product. If the unit should malfunction, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of being damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear are not warranted, including but not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY / DISCLAIMER language, and additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR WARRANTY RETURNS, please have the following information available BEFORE contacting OMEGA:

1. P.O. number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR NON-WARRANTY REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. P.O. number to cover the COST of the repair,
2. Model and serial number of product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible.

This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 1996 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without prior written consent of OMEGA ENGINEERING, INC.

Where Do I Find Everything I Need for
Process Measurement and Control?
OMEGA...Of Course!

TEMPERATURE

- Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- Wire: Thermocouple, RTD & Thermistor
- Calibrators & Ice Point References
- Recorders, Controllers & Process Monitors
- Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- Transducers & Strain Gauges
- Load Cells & Pressure Gauges
- Displacement Transducers
- Instrumentation & Accessories

FLOW/LEVEL

- Rotameters, Gas Mass Flowmeters & Flow Computers
- Air Velocity Indicators
- Turbine/Paddlewheel Systems
- Totalizers & Batch Controllers

pH/CONDUCTIVITY

- pH Electrodes, Testers & Accessories
- Benchtop/Laboratory Meters
- Controllers, Calibrators, Simulators & Pumps
- Industrial pH & Conductivity Equipment

DATA ACQUISITION

- Data Acquisition & Engineering Software
- Communications-Based Acquisition Systems
- Plug-in Cards for Apple, IBM & Compatibles
- Datalogging Systems
- Recorders, Printers & Plotters

HEATERS

- Heating Cable
- Cartridge & Strip Heaters
- Immersion & Band Heaters
- Flexible Heaters
- Laboratory Heaters

ENVIRONMENTAL
MONITORING AND CONTROL

- Metering & Control Instrumentation
- Refractometers
- Pumps & Tubing
- Air, Soil & Water Monitors
- Industrial Water & Wastewater Treatment
- pH, Conductivity & Dissolved Oxygen Instruments

M2612/0197

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>