

# Panasonic®

## Installation Manual

Additional Cordless Handset

Model No. **KX-TPA50**     **B02**



**Thank you for purchasing a Panasonic product.**

This unit is an additional handset compatible with the following series of Panasonic SIP Cordless Phone:

KX-TGP500/KX-TGP550

You must register this handset with your base unit before it can be used. This installation manual describes only the steps needed to register and begin using the handset. For further details, please read the base unit's User Guide on the Panasonic Web site at:

**<http://panasonic.net/pcc/support/sipphone/>**

**Charge the batteries for about 6 hours before initial use.**

Please read this installation manual before using the unit and save it for future reference.

---

# Accessory information

---

## Supplied accessories

Accessory item/Part number	Quantity
Charger/PNLC1007ZB	1
AC adaptor/PQLV219EX or PQLV219EZ	1
Rechargeable batteries* <sup>1</sup> /HHR-65AAAB	2
Handset cover* <sup>2</sup>	1
Belt clip/PNKE1029Z1	1

\*1 Please read the replacement battery information section of the base unit's User Guide on the Panasonic Web site. See page 1 for Panasonic URL.

\*2 The handset cover comes attached to the handset.

### Note:


- Please read the additional/replacement accessory section of the base unit's User Guide on the Panasonic Web site. See page 1 for Panasonic URL.

---

## Setting up

---

### Connections

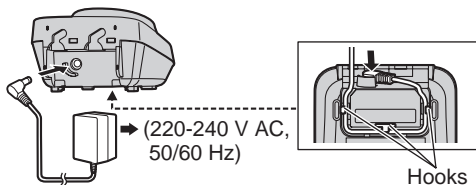

## Note:

- Use only the supplied Panasonic AC adaptor PQLV219E.
- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)

---


## Battery installation/Battery charge

### Important:

- Use the supplied rechargeable batteries. For replacement, we recommend using the Panasonic rechargeable batteries noted in the base unit's User Guide on the Panasonic Web site. See page 1 for Panasonic URL.
- Wipe the battery ends (+, -) with a dry cloth.
- Avoid touching the battery ends (+, -) or the unit contacts.
- Confirm correct polarities (+, -).
- USE ONLY Ni-MH batteries AAA (R03) size.
- Do NOT use Alkaline/Manganese/Ni-Cd batteries.

Charge for about 6 hours.

- When the batteries are fully charged, the charge indicator goes off.

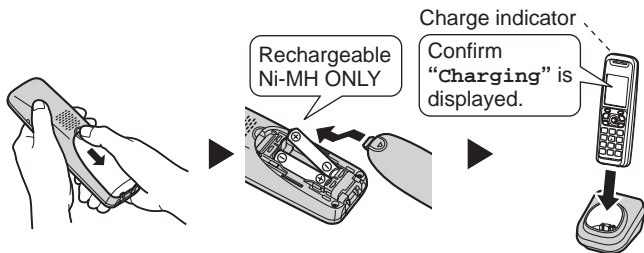

## Note:

- If the batteries are fully charged, but the operating time seems to be shorter, clean the battery ends (+, -) and the charge contacts with a dry cloth and charge again.

---

## Registering a handset to the base unit

### 1 Base unit:

#### ■ KX-TGP500 series

Press and hold **[ALL]** for about 4 seconds until the STATUS indicator flashes in red.

#### ■ KX-TGP550 series

Press and hold **[ALL]** for about 4 seconds until the registration tone sounds and the STATUS indicator flashes in red.

- If all registered handsets start ringing, press the same button to stop. Then repeat this step.
- The next step must be completed within 90 seconds.

### 2 Handset:

**[OK↵]**

3 Wait until “**Enter Base PIN**” is displayed. → Enter the base unit PIN (default: “0000”). → Press **[OK]**, then wait until a long beep sounds.

- If you forget your PIN, contact your phone system dealer.


### Note:

- If an error tone sounds, or if **Y** is still displayed, register the handset according to the registering section of the base unit's User Guide on the Panasonic Web site. See page 1 for Panasonic URL.

---

## Belt clip

### ■ To attach

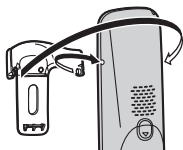


### ■ To remove



---

## Wall mounting

- 1 Drive the screws (not supplied) into the wall.
- 2 Mount the charger (1), then slide it down (2) and to the right (3) until it is secure.

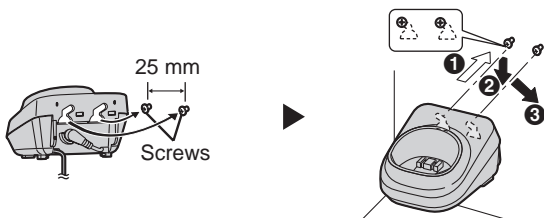

### Note:

- Make sure that the wall is strong enough to support the weight of the unit.

---

## For your safety

To prevent severe injury and loss of life/property, read this section carefully before using the product to ensure proper and safe operation of your product.

---

### WARNING

---

#### Power connection

- Completely insert the AC adaptor/power plug into the power outlet. Failure to do so may cause electric shock and/or excessive heat resulting in a fire.
  - Regularly remove any dust, etc. from the AC adaptor/power plug by pulling it from the power outlet, then wiping with a dry cloth. Accumulated dust may cause an insulation defect from moisture, etc. resulting in a fire.
  - Unplug the product from power outlets if it emits smoke, an abnormal smell, or makes an unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped emitting and contact your phone system dealer.
- 

#### Installation

- To prevent the risk of fire or electrical shock, do not expose the product to rain or any type of moisture.
  - Do not place or use this product near automatically controlled devices such as automatic doors and fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident.
- 

#### Operating safeguards

- The use of excessive sound volume through earphones, headphones, or headsets may cause hearing loss.
- 

### CAUTION

---

#### Installation and relocation

- The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the product and is easily accessible.
- 

#### Battery

- We recommend using the supplied batteries or additional/replacement batteries noted in the battery information section of the base unit's User Guide on the Panasonic Web site. See page 1 for Panasonic URL. **USE ONLY rechargeable Ni-MH batteries AAA (R03) size.**
  - Do not mix old and new batteries.
-

- Do not open or mutilate the batteries. Released electrolyte from the batteries is corrosive and may cause burns or injury to the eyes or skin. The electrolyte is toxic and may be harmful if swallowed.
- Exercise care when handling the batteries. Do not allow conductive materials such as rings, bracelets, or keys to touch the batteries, otherwise a short circuit may cause the batteries and/or the conductive material to overheat and cause burns.
- Charge the batteries provided with or identified for use with this product only, in accordance with the instructions and limitations specified in this manual.
- Only use a compatible charger to charge the batteries. Do not tamper with the charger. Failure to follow these instructions may cause the batteries to swell or explode.

---

## Other information

- Operating the product near electrical appliances may cause interference. Move away from the electrical appliances.
- Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

---

### Routine care

- **Wipe the outer surface of the product with a soft moist cloth.**
- Do not use benzine, thinner, or any abrasive powder.

---

### Notice for product disposal, transfer, or return

- This product can store your private/confidential information. To protect your privacy/confidentiality, we recommend that you erase information such as phonebook or caller list entries from the memory before you dispose of, transfer, or return the product.

---

### General information

- This equipment is designed for use in the U.K.
- In the event of problems, you should contact your service provider in the first instance.


### Declaration of Conformity:

- Panasonic System Networks Co., Ltd. declares that this equipment is in compliance with the essential requirements and other relevant provisions of Radio & Telecommunications Terminal Equipment (R&TTE) Directive 1999/5/EC. Declarations of Conformity for the relevant Panasonic products described in this manual are available for download by visiting:  
<http://www.doc.panasonic.de>

**Contact to Authorised Representative:**  
Panasonic Testing Centre  
Panasonic Marketing Europe GmbH  
Winsbergring 15, 22525 Hamburg, Germany

---

### Information for Users on Collection and Disposal of Old Equipment and used Batteries

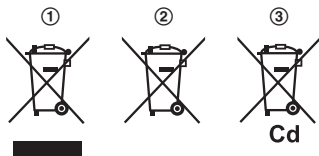

These symbols (①, ②, ③) on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

---

### For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

---

### Information on Disposal in other Countries outside the European Union

These symbols (①, ②, ③) are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

---

### Note for the battery symbol

This symbol (②) might be used in combination with a chemical symbol (③). In this case it complies with the requirement set by the Directive for the chemical involved.



---

# Guarantee

This guarantee is in addition to and does not in any way affect any statutory or other rights of consumer purchasers. If within the applicable guarantee period, the product proves to be defective by reason of faulty design, workmanship or materials, we undertake subject to the following conditions to have the defective product (or any part or parts thereof) repaired or replaced free of charge.

1. The product shall have been purchased and used solely within either the U.K. or R.O.I. and in accordance with standard operating instructions and the technical and/or Safety Standards required in the U.K.
2. On being found defective, please consult with the retailer from where it was purchased for assistance.
3. This guarantee shall not apply to damage caused through fire, accident, lightning, misuse, wear and tear, neglect, incorrect adjustment or repair, to damage caused through installation, adaptation, modification or use in an improper manner or inconsistent with the technical and/or safety standards required in the country where this product is used, or to damage occurred during transit to or from the purchaser.
4. If at any time during the guarantee period any part or parts of the product are replaced with a part or parts not supplied or approved by us or of an objective quality safe and suitable for the product, or the product has been dismantled or repaired by any person not authorised by us, we shall have the right to terminate this guarantee in whole or in part immediately without further notice.
5. The purchaser's sole and exclusive remedy under this guarantee against us is for the repair or replacement of the product or any defective part or parts and no other remedy, including, but not limited to, incidental or consequential damage or loss of whatsoever nature shall be available to the purchaser.
6. This guarantee shall not apply to batteries and any other items of limited natural life.
7. Our decision on all matters relating to complaints shall be final. Any product or defective part which has been replaced shall become our property.
8. The guarantee period applicable to this product shall be 12 months.

Please keep these operating instructions with your receipt.

## Panasonic Business Systems U.K.

Receipt No. _____	Date of purchase _____
Model No. _____	Serial No. _____

# CE0682

Panasonic Business Systems U.K.

Panasonic House, Willoughby Road, Bracknell, Berkshire, RG12 8FP

Panasonic System Networks Co., Ltd.

1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan

**Copyright:**

This material is copyrighted by Panasonic System Networks Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic System Networks Co., Ltd.

© Panasonic System Networks Co., Ltd. 2010



\*TPA50B02\*

**PNQX3051ZA** DM0810SY0

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>