

CD140



www.philips.com/support

EN Digital Cordless Telephone



Warning

Use only rechargeable batteries.

Charge each handset for 24

hours before use.

PHILIPS

Table of contents

1	Important	2
1.1	Power requirements	2
1.2	Conformity	2
1.3	Recycling and disposal	2
1.4	Using GAP standard compliance	4
1.5	Electric, Magnetic and Electromagnetic Fields (“EMF”)	4
2	Your phone	6
2.1	What’s in the box	6
2.2	Overview of the phone	7
3	Getting started	10
3.1	Connect the base station	10
3.2	Install rechargeable batteries	11
3.3	Place the handset on the charging cradle	11
3.4	Configure your phone	12
3.5	Register your handset	13
4	Using your phone	14
4.1	Make a call	14
4.2	Answer a call	15
4.3	End a call	15
4.4	Recall	15
4.5	How to use the intercom	16
4.6	How to find a handset	17
5	Use more of your phone	18
5.1	Call in progress	18
5.2	Phonebook	18
5.3	Call log	19
5.4	Redial list	20
5.5	Settings	20
5.6	Default settings	24
6	Frequently asked questions	25

1 Important

Take time to read this user manual before you use your CD140. It contains important information and notes regarding your phone.

1.1 Power requirements

- This product requires an electrical supply of 220-240 volts AC. In case of power failure, the communication can be lost.
- The Electrical network is classified as hazardous. The only way to power down the charger is to unplug the power supply from the electrical outlet. Ensure that the electrical outlet is always easily accessible.

Warning

- Do not allow the charging contacts or the battery to come into contact with metal objects.
- Do not allow the charger to come into contact with liquids.
- Never use any other battery than the one delivered with the product or recommended by Philips: risk of explosion.

- Always use the cables provided with the product.
- Handsfree activation could suddenly increase the volume in the earpiece to a very high level: make sure the handset is not too close to your ear.
- This equipment is not designed to make emergency calls when the power fails. An alternative has to be made available to allow emergency calls.

1.2 Conformity

We, Philips declare that the product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on www.p4c.philips.com.

1.3 Recycling and disposal

Disposal instructions for old products:

The WEEE directive (Waste Electrical and Electronic Equipment Directive; 2000/96/EC) has been put in

place to ensure that products are recycled using best available treatment, recovery and recycling techniques to ensure human health and high environmental protection. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. Inform yourself about the local separate collection system for electrical and electronic products marked by this symbol.



Use one of the following disposal options:

- Dispose of the complete product (including its cables, plugs and accessories) in the designated WEEE collection facilities.
- If you purchase a replacement product, hand your complete old product back to the retailer. He should accept it as required by the WEEE directive.

Disposal instructions for batteries:



Batteries should not be disposed of with general household waste.

Packaging information:

Philips has marked the packaging with standard symbols designed to promote the recycling and appropriate disposal of your eventual waste.



A financial contribution has been paid to the associated national recovery & recycling system.



The labeled packaging material is recyclable.

1.4 Using GAP standard compliance

The GAP standard guarantees that all DECT™ GAP handsets and base stations comply with a minimum operating standard irrespective of their mark. Your CD140/145 handset and base station are GAP compliant, which means the minimum guaranteed functions are: register a handset, take the line, receive a call and dial. The advanced features may not be available if you use another handset than a CD140/145 with your base station.

To register and use your CD140/145 handsets with a GAP standard base station of a different make, first follow the procedure described in the manufacturer's instructions, then follow the procedure described in Section 3.5.

To register a handset of another make to the CD140/145 base station, place the base station into registration mode (Section 3.5), then follow the procedure in the manufacturer's instructions.

1.5 Electric, Magnetic and Electromagnetic Fields ("EMF")

- 1 Philips Royal Electronics manufactures and sells many consumers oriented products, which usually, as with any electronic apparatus, have the ability to emit and receive electromagnetic signals.
- 2 One of Philips' leading Business Principles is to take all necessary health and safety precautions for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.
- 3 Philips is committed to develop, produce and market products that cause no adverse health effects.
- 4 Philips confirms that if its products are handled properly for their intended use, they are safe to use

according to scientific evidence available today.


- 5** Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

2 Your phone

2.1 What's in the box



Telephone handset

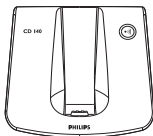

Base station



Power supply unit



Line cord



2xAAA Rechargeable
batteries



Quick start guide



User Manual



Warranty card


Note

The line adaptor may not be attached to the line cord. You may find the line adaptor in the box. In that case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.

In multihandset packs, you will find one or more additional handsets, chargers with power supply units and additional rechargeable batteries.

2.2 Overview of the phone

2.2.1 Handset

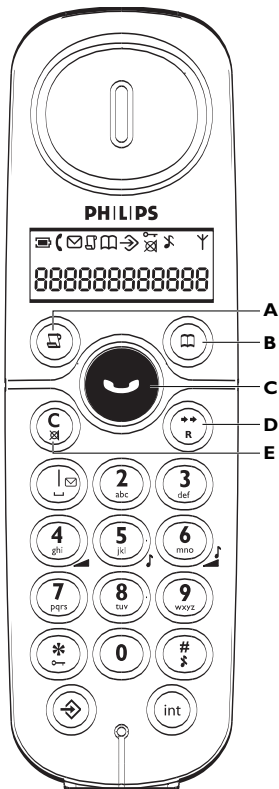

A Call Log key

In idle mode: Press to access the call log list

B Phonebook key

In idle mode: Press to access the phonebook

C Talk key

In idle mode: Press to answer when there is an incoming call

In idle mode: Press to make a call

During a call: Press to end a call

D Redial/Flash key

In idle mode: Press to access the redial list

In predial mode: Press to insert a flash

Note

The first digit cannot be a flash during predialling.

E Clear/Back/Mute key


In editing mode/predialling mode: Short press to delete one character/digit

In editing mode/predialling mode: Long press to delete all the characters/digits

In phonebook review/call log review/redial list review mode: Press to exit to idle mode

In phone setting mode: Press to exit to previous level

During call connection: Press to mute the microphone

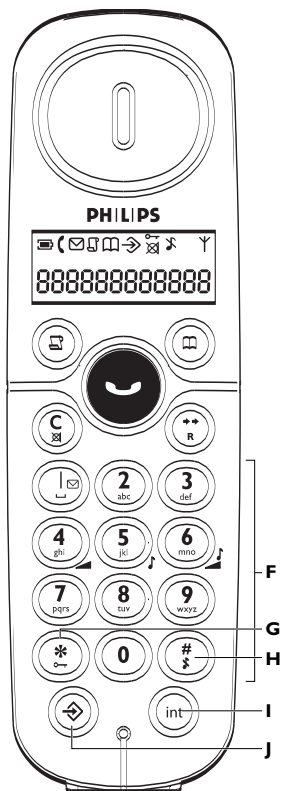

F Alphanumeric keypad

G Star key

In idle mode: Short press to insert a *

In idle mode: Long press to activate or deactivate keypad lock

H Hash key

In idle/dialling mode: Short press to insert a #

In idle mode: Long press to mute the ringer

In dialling mode: Long press to enter a pause

I Call Transfer / Intercom / Conference

In idle mode: Short press to initiate an intercom call

During external call connection: Short press to initiate an internal call or switch call between an internal call and an external call











Long press to initiate a conference call with an external call and another internal call

J Program key


In idle mode: Press to enter into the phone setting mode

In phone setting mode (except editing mode): Press to confirm and save the settings

2.2.2 Display icons on the handset

	Indicate battery level. Display empty battery icon when the battery level is low, otherwise, full battery icon is displayed.
	Display when the phone is in use. Blink during ringing.
	Blink when new messages are received and not read yet
	Display when browsing the call log. Blink when missed calls are received.
	Display when browsing the phonebook
	Display when the phone is in phone setting mode
	Display when the keypad is locked
	Display when the microphone is muted
	Display when the ringer is turned off
	Display when the handset is registered and within the range of the base station. Blink when the handset is out of range or is searching for a base.

2.2.3 Base station

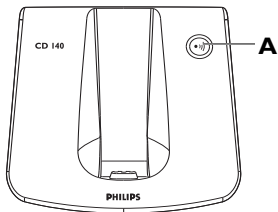

A Page key

Press to page the handset
Press and hold for three seconds to start registration procedure

3 Getting started

3.1 Connect the base station

⚠ Caution

Avoid placing the base station too close to large metal objects such as filing cabinets, radiators or electrical appliances. This can impair the range and sound quality. Buildings with thick internal and external walls may impair transmission of signals to and from the base.

⚠ Warning


Power is applied when the power adaptor is plugged into the unit and connected to the electricity socket. The only way to power down the unit is to unplug the power adaptor from the electricity socket. Therefore, ensure that the electricity socket is easily accessible.

The power adaptor and the telephone line cord have to be connected correctly, as incorrect connection could damage the unit.


Always use the telephone line cord supplied with the unit.

Otherwise, you may not get a dial tone.


- 1** Insert the plug of the power cord into the socket at the bottom of the base station.

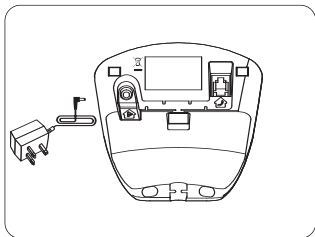

- 2** Insert the plug of the line cord into the socket at the bottom of the base station.

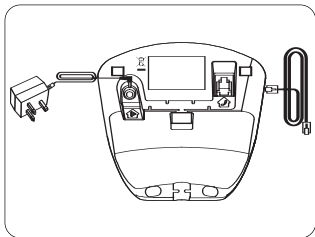

- 3** Connect the other end of the line cord to the telephone line socket and the other end of the power cable to the electricity socket.

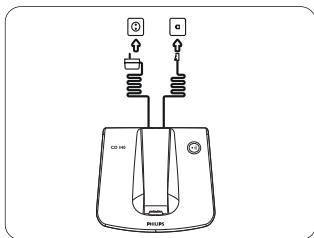


Note

The line adaptor may not be attached to the line cord. In this case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.

3.2 Install rechargeable batteries

Your CD140 is supplied with two rechargeable batteries. Before using the handset, install the batteries into the handset and fully charged them up.

- 1** Slide out the battery cover

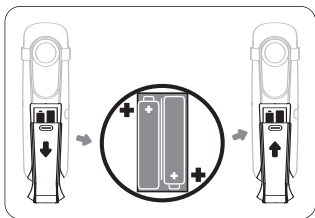


- 2** Place the batteries as indicated in the battery compartment and replace the battery cover.

3.3 Place the handset on the charging cradle

Charge the handset for at least 24 hours before using it for the first time.




When the battery is fully charged, the talk time of your CD140 is approximately 12 hours and the standby time is approximately 120 hours.

- 1** Place the handset on the charging cradle of the base station.
- 3** When the handset is fully charged,  is displayed.

3.4 Configure your phone

Before using your CD140, you need to configure it according to the country of use.

Depending on your country, country selection screen may not appear. In that case, you do not need to select the country code to configure your phone. After charging it for a few minutes, the country code selection screen appears. Follow these steps to configure your phone:

- 1 Press 
 - Only the country codes available in the product will appear on the screen.
- 2 Press  repeatedly to scroll to your desired country code. (See the country setting table for reference).
- 3 Press  for validation
 - Your phone is configured according to your selected country code and back to idle screen.

Country setting table




Code	Country
01	Germany
02	Austria
03	Turkey
04	UK
05	Ireland
06	France
07	Italy
08	Portugal
09	Greece
10	Spain
11-1	Switzerland
11-2	Switzerland
11-3	Switzerland
12	France
13	Netherlands
14-1	Belgium
14-2	Belgium
15	Sweden
16	Norway
17	Finland
18	Denmark
21	Romania
22	Poland
23	Czech
24	Hungary
25	Slovakia

Code	Country
26	Slovenia
27	Croatia
28	Bulgaria
29	Serbia
30	Singapore
31	Indonesia
32	Malaysia
35	Australia
36	New Zealand
39	Brazil
40	Mexico

Note


Once the country is selected, the default line settings for the selected country will be applied to your phone automatically.




Tip

If you chose the country in use wrongly or would like to change the country after the first configuration, you can press , , enter 4-digit PIN code (default PIN is 0000) and press  in idle mode to its default settings. The handset will go back to country code selection screen and you can select the country code again. If

country selection is not needed, the handset will go back to idle screen after reset.

3.5 Register your handset

You will need to register your new handset or if you wish to register the handset to a different base unit. You can register up to four handsets on a single base station. Before entering the 4-digit PIN, press  on the base unit for around three seconds when the base is in standby mode.

- 1 Press , 
- 2 Enter the default or existing 4-digit PIN code. (Default PIN is 0000)
- 3 Press  to start registration


Note

If the PIN code you entered is incorrect, a long beep is emitted and the phone returns to standby mode.


4 Using your phone

4.1 Make a call

4.1.1 Predialling




- 1 Enter the phone number (maximum 24 digits)
- 2 Press  to dial the number
 - *The call is initiated.*

4.1.2 Direct dialling

- 1 Press  to take the line
- 2 Enter the phone number
 - *The call is initiated.*

4.1.3 Call from the call log


This feature is available if you have subscribed the Caller Line Identification service (CLI) with your network provider.


- 1 Press  to show the latest call log entry
- 2 Press  repeatedly to scroll through the list of unanswered calls to select your desired unanswered call
- 3 Press  to dial the selected number


Note

The oldest entry will be deleted when the memory is full.


4.1.4 Call from the phonebook


- 1 Press  and the first number in the phonebook displays

The number stored in memory location 0 will be displayed if a number has been stored in this location before, otherwise, only memory location number  will be displayed.

- 2 Press  repeatedly until the desired phone number displays

Tip

For numbers stored in location numbers 0 to 9, you can enter the phonebook location number directly to access your desired phone number. For numbers stored in memory locations 10 to 19, press  repeatedly to access.

- 3 Press  to dial the selected number
 - *The call is initiated.*


4.1.5 Call from the redial list


1 Press 

- *The display shows the last number dialled.*

Note

The handset stores the last five numbers dialled.


2 Press  repeatedly to show the other last numbers dialled

3 Press  to dial the selected number

4.1.6 Call timer

The call timer shows the duration of your current call when you hang up your phone. It is shown in minutes and seconds format (MM-SS).

4.2 Answer a call

When the phone rings, press .

- *The call is initiated.*
-

4.3 End a call

Press  during a call connection

- *The call ends.*

OR

Put the handset on to the base station

- *The call ends.*
-


4.4 Recall

To use this feature, you have to subscribe the service with your local service provider.

You can use the recall function to make or receive a second call. The operations mentioned in Section 4.4.1 and 4.4.2 may be varied by countries and local service providers. Consult the details of recall operation of this service from your local service provider.



4.4.1 How to make a second call

During a call:

1 Press  to put the current call on hold

- *You will hear the dialling tone.*

2 Enter the number of the second call and it will be dialled out.

3 When the second call is answered, you can press  and  to toggle between the two calls.

4.4.2 How to answer a second call

To use this feature, you have to subscribe the service with your

local service provider. If another call comes in during a call, you will hear a short beep periodically:

- 1 Press to answer the second call
 - *The first call is being hold automatically.*
- 2 Press and to toggle the call connection between the first caller and the second caller

Note

If you have subscribed the Caller ID service, the caller ID of your callers will appear on the display.

4.5 How to use the intercom

This feature is only available when there are at least two registered handsets. It allows you to make internal calls, transfer external calls from one handset to another handset and make conference calls.

4.5.1 How to make an internal call

- 1 Press
- 2 Press the handset number that you want to talk with
- 3 Press

- *The intercom is established.*

Note

If the called handset is busy, a busy tone will be emitted from the calling handset.

4.5.2 How to transfer an external call to another handset

During an external call:

- 1 Press
- 2 Press the handset number that you want to talk with
 - *The called handset will ring if it is available, press on the called handset to start intercom and the external call will be put on hold automatically.*

Note




You can press to switch the call between the internal call and the external call.

- 3 Press to transfer the external call on the calling handset
 - *The calling handset transfers the external call to the called handset.*


4.5.3 How to make a 3-way conference call


The conference call feature allows one external call to be shared with two handsets (in intercom). The three parties can share the conversation and no network subscription is required.

During an external call:

- 1 Press 
- 2 Press the handset number that you want to talk with and the called handset rings if it is available
- 3 Press  on the called handset to establish the call connection with the calling handset
- 4 Press and hold  on the calling handset
 - *The conference call is initiated.*

During the conference call:


- 1 Press  to put the external call on hold and go back to internal call
 - *The external call is put on hold automatically.*



- 2 Press and hold  to establish the conference call again

Note

Any handset hangs up during a conference call will leave the other handset still in connection with the external call.

4.6 How to find a handset

You can locate the handset by pressing  on the base station.




All the handsets registered to the base will produce the paging tone and you can stop the paging by pressing  on the handset or  on the base again.

5 Use more of your phone

5.1 Call in progress





5.1.1 Mute/Unmute microphone

During a call:

- 1 Press 
 - The microphone is turned off and  is shown on the display.
 - 2 Press  again to turn on the microphone
-

5.1.2 How to adjust earpiece volume

During a call:





- 1 Press 
- 2 The current earpiece volume level is displayed
- 3 Press ,  or  to select your desired earpiece volume level
 - The phone will go back to call connection screen.

5.2 Phonebook


You can store up to 20 phonebook entries into 20 different memory locations in your handset. Each phone number can have a maximum of 24 digits. If you have more than one handset, each handset has its own phonebook.

5.2.1 How to store a number in the phonebook

In idle mode:



- 1 Press 
- 2 Press 
- 3 Press  repeatedly to select your desired memory location number
- 4 Enter the phone number
- 5 Press  to save the number
 - The number is saved in the selected memory location.

Note

If the memory location is occupied, the number stored in this location will be displayed. You can press  to edit the phone number.

5.2.2 How to access the phonebook





In idle mode:

- 1 Press  to access the phonebook
 - Number stored in the memory location 0 will be displayed if a number has been stored in this location before.
- 2 Press  repeatedly to review other phonebook entries



Tip


To access numbers stored in memory locations from 0 to 9, you can directly press the memory location numbers to review the stored phone numbers.

5.2.3 How to edit the phonebook entry or delete a number





- 1 Press 
- 2 Press 
- 3 Press  repeatedly until the desired number displays
- 4 Press  to delete a digit one by one

Tip


You can press and hold  to delete the whole number, then press  to delete the phonebook entry and the phone will go back to idle screen.

- 5 Edit the number
- 6 Press  to confirm
 - The selected memory location content is updated.

5.2.4 How to delete the entire phonebook


- 1 Press 
- 2 Press 
- 3 Press 
- 4 Press 
 - All the phonebook entries are deleted.

5.3 Call log

This feature is available if you have subscribed the Caller Line Identification service (CLI) with your network provider. Your phone can store up to 10 unanswered calls.  will blink to remind you of any unanswered calls received. If you have subscribed to Caller Line Identification (CLI), and provided

that the identity of the caller is not withheld, the number of the caller will be displayed. The unanswered calls are displayed in chronological order with the most recent unanswered call at the top of the list.


5.3.1 How to access the call log

- 1 Press  to access the call log directly





 - *The latest unanswered call is displayed.*

Note

If the call log is empty, “-----” will display.

- 2 Press  repeatedly to review other unanswered calls

5.3.2 How to delete the entire call log

- 1 Press 
- 2 Press 
- 3 Press 
- 4 Press 



 - *All the entries in the call log are deleted.*

5.4 Redial list

Your phone can store the last five numbers you have dialled.




Only the first 24 digits of each number are stored.

5.4.1 How to access the redial list

- 1 Press 
 - *The latest last number dialled is displayed.*
- 2 Press  repeatedly to review other dialled numbers






5.5 Settings

5.5.1 How to set the time

- 1 Press 
- 2 Press 
- 3 Enter the time (HH-MM) in 24-hour format
- 4 Press  to save the settings






5.5.2 How to set the ring melody

Your phone comes with 10 different ring melodies.



- 1 Press 
- 2 Press 
 - *The current ring melody is played.*
- 3 Press one of the digit keys from  through  to select your desired ring melody
- 4 Press  to save the settings

5.5.3 How to set the ring volume

Three ring volume levels are available for your selection.







- 1 Press 
- 2 Press 
 - The current ring volume level is played and displayed.
- 3 Press one of the digit keys from  through  to select your desired ring volume level
- 4 Press  to save the settings

Tip





You can press and hold  to turn off the ringer.  will display.

5.5.4 How to set the earpiece volume

Three earpiece volume levels are available for your selection.

- 1 Press 
- 2 Press 
 - The current earpiece volume level is displayed.
- 3 Press  (low),  (medium) or  (high) to select your desired earpiece volume level
- 4 Press  to save the settings


5.5.5 How to activate/deactivate the keypad lock





- 1 Press and hold 
 -  is displayed if keypad lock is activated.
- 2 Press and hold  again to deactivate the keypad lock
 -  will be disappeared if keypad lock is deactivated.

Tip

You can also deactivate the keypad lock by removing and replacing the batteries of the handset.


5.5.6 How to select recall time

Recall time is the time delay by which the line will be disconnected after you press . The default value of recall time preset in your CD140 should be the best suited for your country network. You do not need to change it.

- 1 Press 
- 2 Press 
- 3 Press one of the digit keys from  through  to select the recall time






Note

Number of available recall time options vary by different countries.




- 1 Press  to save the settings.

5.5.7 How to select dial mode

This dial mode setting is country dependent . Pulse mode may not be available in some countries.





- 1 Press 
- 2 Press 
 - *The current settings are displayed.*
- 3 Press  for pulse mode or  for tone mode
- 4 Press  to save the settings.

5.5.8 How to turn on/turn off the key tone

- 1 Press 
- 2 If the key beep is turned on before, press  to turn off the key tone
- 3 Press 
 - *The keypresses thereafter will not be heard.*

5.5.9 How to set the auto prefix

The maximum length of an auto prefix number is 10 digits. Once the number is set, it will be automatically inserted at the beginning of each number that will be dialled.

- 1 Press , 
- 2 Enter the detect digit where length of detect digit cannot be more than five digits
- 3 Press 
- 4 Enter the auto prefix number
- 5 Press  to save the settings






5.5.10 How to change the master PIN

The master PIN is a 4-digit PIN for handset registration and reset of your phone. Default master PIN is 0000. This PIN is also used to protect the settings of your handset. Your handset will prompt you whenever the PIN is required.

Note

The default product PIN code is preset to 0000. If you change this PIN code, keep the PIN details in a safe place where


you have easy access to them. Do not lose the PIN code.



- 1 Press 
- 2 Press 
- 3 Enter the default / current 4-digit PIN code (0 to 9)
- 4 Press 
- 5 Enter the new 4-digit PIN
- 6 Press 
- 7 Enter the new 4-digit PIN again to reconfirm
- 8 Press  to save the settings.
 - *The new PIN is saved.*


Note

If an incorrect PIN is entered, a long beep is emitted and the phone will return to idle mode.


5.5.11 How to program voice mailbox number

Some network service providers offer voice mailbox services. Contact your network provider for more information about this feature. You can set your voice mailbox number in  directly.

- 1 Press 
- 2 Press 




- 3 Enter the phone number of your network voice mailbox
- 4 Press  to save the settings

5.5.12 How to access your voice mail number

- 1 Press and hold  to dial out to your voice mailbox number.

5.5.13 How to restore to default settings

You can reset your phone to the default settings (see Section 5.6) at any time. After a reset, all your personal settings and call log entries will be deleted, but your phonebook remains unchanged.

- 1 Press 
- 2 Press 
- 3 Enter your 4-digit PIN
- 4 Press 
 - *Your phone is reset to its default settings.*

5.6 Default settings

Items	Default values
Earpiece volume	Level 2
Ring melody	Melody 1
Ring volume	Level 3
Key tone	ON
Recall time	Country dependent
Dial mode	Country dependent
Master PIN	0000
Redial list	Empty
Call log	Empty
Phonebook memory	Remain unchanged

6 Frequently asked questions

In this chapter you will find the most frequently asked questions and answers about your phone.

Connection

The handset does not switch on!

- Charge the battery: Put the handset on charger. After a few moments the phone will switch on
- Check the charger connections
- Use only the SUPPLIED RECHARGEABLE BATTERIES

The phone does not work at all.

- Make sure that the adaptor and the phone cord are connected properly
- Check that the batteries are fully charged and installed properly

-
- This phone does not work during power failure.

Communication is lost during a call!

- Charge the SUPPLIED RECHARGEABLE BATTERIES
- Move closer to the base station

Poor audio quality

- Move closer to the base station
- Move the base station at least one metre away from any electrical appliances

No dialling tone

- Check the connections. Reset the phone: unplug and plug back in the mains
- Charge the batteries for at least 24 hours
- Move closer to the base station

- Use the line cable provided
- Connect the line adaptor (when needed) to the line cord

The is blinking.

- Move closer to the base station
- Check battery level
- Register the handset to the base station

The appears.

- Replace the batteries with new ones (use only rechargeable batteries)

Set-up

Caller ID does not work properly.

- Check with your local phone company that the CID service is subscribed to
- Let the phone ring at least once before answering

The Call Waiting call cannot be answered.


- Check with your local phone company and select the correct recall duration

The handset displays nothing, but only the is blinking.


- Try again by disconnecting and connecting the base station power supply and follow the procedure to register a handset (see Section 3.5)
- Remove and place back the handset batteries

Sound

Handset does not ring!

- Increase the volume
- Make sure that the adaptor and the phone cord are connected properly
- Move the handset closer to the base unit
- Make sure the handset ringer is turned on ( is not displayed on the LCD)

Caller does not hear me!

- Microphone may be muted:
During a call, press 

Noise interference on your radio or television

- Move the power adaptor or base station as far away as possible

I forget my PIN

- 1** Press 
- 2** Press 
- 3** Press **##**793**

- Your phone will reset to its default settings and you can get the default PIN of 0000. Phonebook records will not be erased.

Product behaviour


Caller Line Identification (CLI) service does not work

- Check your subscription with your network operator

A phonebook entry cannot be stored

- Delete an entry to free memory

The handset is unable to register

- Make sure that  has been pressed for three seconds
- Each base can only register up to four handsets.
- Each handset can only be registered to one base.



© 2006 Koninklijke Philips Electronics N.V.

All rights reserved.

Document number: 3111 285 32151

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>