

Register your product and get support at
www.philips.com/welcome

PicoPix

PPX2230

PPX2330



UK User Manual

PHILIPS

Table of Contents

| | |
|---------------------------------------------------------|-----------|
| Overview | 3 |
| Dear Customer | 3 |
| About this User Manual | 3 |
| 1 General Safety Information | 4 |
| Setting Up the Device | 4 |
| Repairs | 4 |
| Power Supply | 4 |
| 2 Overview..... | 6 |
| Top of the Device | 6 |
| Side view | 6 |
| Bottom of the Device | 6 |
| Overview of the Menu Functions | 7 |
| 3 Initial Operation | 8 |
| Setting up the Device | 8 |
| Connect power supply / charge battery | 8 |
| Initial Installation | 8 |
| 4 Memory card / USB storage medium 9 | |
| Inserting a Memory Card | 9 |
| Connecting USB Storage Medium | 9 |
| Connect to a computer (USB) | 10 |
| 5 Connect to the Playback Device | 11 |
| Connecting to a computer | 11 |
| Connecting using Audio/Video (CVBS) Adaptor Cable | 11 |
| Connecting the Headphones | 12 |
| 6 Media Playback..... | 13 |
| Video Playback | 13 |
| Photo Playback | 14 |
| Music Playback | 15 |
| Managing files | 15 |
| 7 Settings | 18 |
| 8 Service..... | 20 |
| Care Instructions for the Battery | 20 |
| Battery deep discharge | 20 |
| Cleaning | 21 |
| Device overheated | 21 |
| Troubleshooting | 22 |
| 9 Appendix..... | 23 |
| Technical Data | 23 |

Overview

Dear Customer

Thank you for purchasing our Pocket Projector.
We hope you enjoy your device and its many functions!

About this User Manual

With the installation guide on the following pages, you can start using your device quickly and easily. Detailed descriptions can be found in the following sections of this user manual.

Read the entire user manual carefully. Follow all safety instructions in order to ensure proper operation of your device. The manufacturer accepts no liability if these instructions are not followed.

Symbols Used

Note



Troubleshooting

This symbol designates tips that will help you to use your device more effectively and easily.

CAUTION!



Damage to the Device or Loss of Data!

This symbol gives warning of damage to the device and possible loss of data. These damages can result from improper handling.

DANGER!



Danger to Persons!

This symbol gives warning of danger to persons. Physical injury or damage can result from improper handling.

I General Safety Information

Do not make any changes or settings that are not described in this user manual. Physical injury or damage to the device or loss of data can result from improper handling. Take note of all warning and safety notes indicated.

Setting Up the Device

The device is exclusively for indoor use. The device should be placed securely on a stable, flat surface. Position all cables in such a way that no one will stumble on them, thus avoiding possible injuries to persons or damage to the device itself.

Do not plug in the device in moist rooms. Never touch the mains cable or the mains connection with wet hands.

The device must have sufficient ventilation and may not be covered. Do not put your device in closed cabinets or boxes.

Do not place the machine on soft surfaces such as tablecloths or carpets and do not cover the ventilation slits. Otherwise the device could overheat or catch fire.

Protect the device against direct sunlight, heat, large temperature fluctuations and moisture. Do not place the device in the vicinity of heaters or air conditioners. Observe the information on temperature and humidity in the technical data.

When the device is running for a long period of time, the surface becomes hot and a warning symbol appears on the projection. The device switches automatically to stand-by mode when it gets too hot. After the device has cooled down, you can continue playback by pressing any key.

Do not allow liquids to enter into the device. Switch off the device and disconnect it from the mains supply if liquids or foreign substances end up inside the device. Have the unit inspected by a technical service department.

Always handle the unit with care. Avoid touching the lens. Never place heavy or sharp objects on the projector or the power cable.

If the projector gets too hot or emits smoke, shut it down immediately and unplug the power cable. Have your device examined by trained professionals at a technical service location. To prevent the spread of fire, open flames should be kept away from the device.

Under the following conditions, a layer of moisture can appear inside the device which can lead to malfunctions:

- if the device is moved from a cold to a warm area;
- after a cold room is heated;
- when this device is placed in a damp room.

Proceed as follows to avoid any moisture build-up:

- 1 Seal this device in a plastic bag before moving it to another room, in order for it to adapt to room conditions.
- 2 Wait one to two hours before you take the device out of the plastic bag.

The device should not be used in a very dusty environment. Dust particles and other foreign objects may damage the unit.

Do not expose the device to extreme vibrations. It may damage the internal components.

Do not allow children to handle the device without supervision. The packing materials should be kept out of the hands of children.

Repairs

Do not make any repairs to the device yourself. Improper maintenance can result in injuries or damage to the device. Only have your device repaired by an authorised service centre.

Do not remove the type label from your device; this would void the warranty.

Power Supply

Use only a compatible power adapter (see chapter Appendix / Technical Data). Check whether the mains voltage of the power supply matches the mains voltage available at the setup location. This equipment complies with the voltage type specified on the unit.

The capacity of the battery diminishes with time. If the device functions only with the power supply, the battery is defective. Contact an authorised service centre to replace the battery.

Do not try to replace the battery yourself. Incorrect handling of the battery or using the wrong type of battery can cause damage to the device or cause injury.

DANGER!



Risk of explosion with incorrect type of batteries

Only replace the batteries with the same or comparable batteries.

There is a risk of explosion if the incorrect battery type is used.

Switch the device on or off using the power switch before removing the power supply from the socket.

Turn off the device and remove it from the power supply before cleaning the surface. Use a soft, lint-free cloth. Never use liquid, gaseous or easily flammable cleansers (sprays, abrasives, polishes, alcohol). Do not allow any moisture to reach the interior of the device.

DANGER!



High Power LED

This device is equipped with an high power LED (Light Emitting Diode), which emits very bright light. Do not look directly into the projector lens. This could cause eye irritation or damage.

DANGER!



Danger of Hearing Damage

Do not use the device over a longer time at high volume—especially when using headphones. This could lead to the risks of hearing damage.

2 Overview

Top of the Device


- 1—USB cable
USB connection for a computer / port for power supply
USB connection for a USB storage medium
- 2—Focus wheel for image sharpness.

Note




Note that the distance to the projection surface must be a minimum of 0.3 meters and a maximum of 2.1 meters. If the Pocket Projector is located outside of this range, it will not be possible to focus the image. Turn the focus wheel carefully so as to avoid damaging the lens.

- 3—OK key
 - ⊙—Confirm entry / start, stop video/music playback or slideshow.
- 4—Navigation keys
 - ⬆/⬇—Navigating / during music playback select previous, next title when image display is switched off / during video/picture playback wake Quick setting bar
 - ⬅/⬆—Navigating / during music playback: adjust volume level / during video playback start forward or backward / during picture playback select previous, next picture
- 5—⏪ key
 - ⏪—One menu step back, one directory level back / cancelling a function

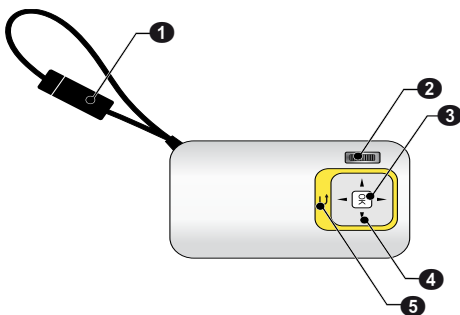


Side view

- 1—Loudspeaker
- 2—Battery status monitor
Charge indicator with connected power supply:
Red: Charging battery
Green: battery is fully charged
- 3 **MICRO SD**— Memory card slot (Micro SD/Micro SDHC)
- 4 — Audio output / video input (**PPX2330**)
Headphone connection or connection for external speakers
- 5 **ON/OFF**—On/Off switch

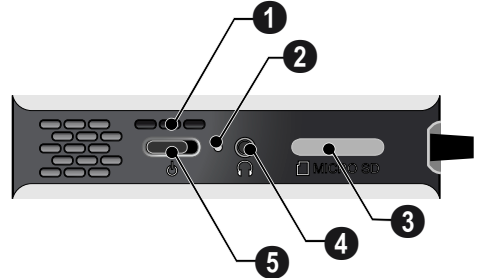


Bottom of the Device

- 1 Tripod socket

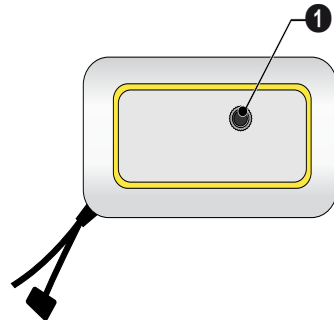

Overview of the Menu Functions

- 1 After switching on the device the main menu appears.
- 2 Select the desired menu using the navigation keys (▲/▼, ◀/▶).
- 3 Confirm with (OK).
- 4 By pressing the (⏪) key several times you will return to the main menu.

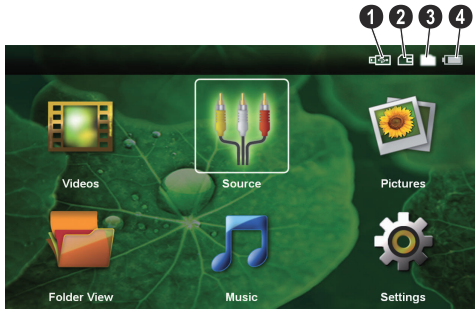

Videos—Selecting files for video playback

Source – Switch to the external video input **AV** .

Pictures—Selecting files for the slideshow

Folder View—Selecting files for Playback. Copy or Delete Files (Mark the files with ▶ and confirm using (OK)).

Music—Selecting music files for playback

Settings—Configure settings for playback and for the device

Symbols in the Main Menu

You can change the storage location using the (▲/▼) keys. The chosen storage appears highlighted in white.

- 1—USB storage medium
- 2—Memory card
- 3—Internal memory
- 4—Charge level of the internal battery. The icon will be red, when the battery needs to be recharged.

3 Initial Operation

Setting up the Device

A tripod accessory is available if you want to elevate the device.

Connect power supply / charge battery


CAUTION!



Mains Voltage at the Site of Installation!

Check whether the mains voltage of the power supply matches the mains voltage available at the setup location.

Connect the USB plug to a computer, to charge the battery. Alternatively you may connect the USB plug to the power adapter (not included) (see also chapter Compatible Power Supply, page 23).

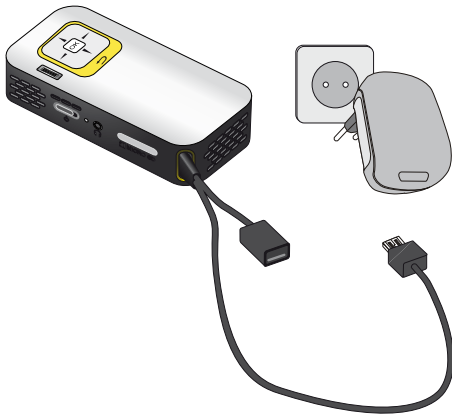

Initial Installation

- 1 Switch the device on using the on/off switch on the side.
- 2 Turn the device towards a suitable projection surface or wall. Note that the distance to the projection surface must be a minimum of 0.3 meters and a maximum of 2.1 meters. Make sure the projector is in a secure position.
- 3 Use the focus wheel on the top to adjust the image sharpness.
- 4 Select the desired menu language using /.
- 5 Confirm with .

Note



The main menu appears instead of the language selection

The device has already been installed. In order to change the menu language, proceed as follows:

- 1 Use the navigation keys to select **Settings**.
- 2 Confirm with .
- 3 Select with / **Language**.
- 4 Confirm with .
- 5 Select the desired language with /.
- 6 Confirm with .
- 7 Exit with .

4 Memory card / USB storage medium

Inserting a Memory Card




- 1 Remove the cover of the memory card socket **MICRO SD**.
- 2 Insert a memory card with the contacts facing upwards into the **MICRO SD** slot at the side of the device. Your device supports the following memory cards: micro SD/SDHC.
- 3 Insert the memory card into the slot until it snaps into position.

DANGER!




Inserting a Memory Card!

Never pull out the memory card while the device is accessing it. This could cause data to be damaged or lost.

In order to make sure that the device does not access the memory card, press the  key in the main menu until the symbol for the internal memory has been selected.

- 4 Press lightly on the memory card to remove it.
- 5 The memory card is ejected.
- 6 Remove the memory card.
- 7 Close the cover of the memory card slot in order to protect the socket from dust.


Connecting USB Storage Medium

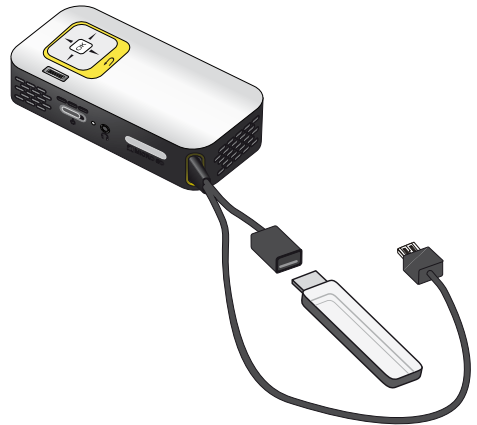

- 1 Connect the USB storage medium to the USB socket of the cable

Connect to a computer (USB)

You can use the USB cable to connect the Pocket Project to a computer. In this way, you are able to copy files back and forth between the internal memory, an inserted memory card and the computer. You can also delete the files. You can playback the files saved on the Pocket Projector on your computer.

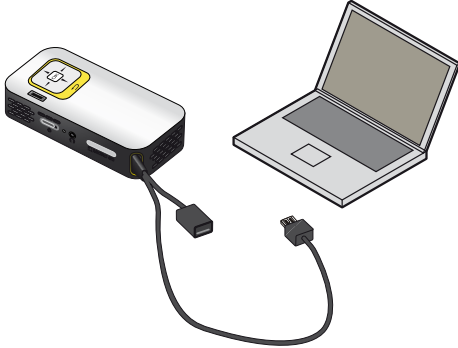

- 1 Connect the USB plug of the Pocket Projector with a free USB socket of your computer.
- 2 Switch the device on using the on/off switch on the side.
- 3 A confirmation appears when the devices are connected successfully.

Note



Successful connection

You cannot use the Pocket Projector when it is connected to a computer via USB.

- 4 If a memory card has been inserted, it will be displayed as another disk drive.
- 5 You can move, copy or delete data from the computer, the memory card (if inserted) and the internal memory.

5 Connect to the Playback Device

Only use the supplied cable or cables that are available as accessories to connect the projector.

Supplied Cables

Video-(CVBS) cable (PPX2330)

Connecting to a computer

(PPX2330)

Installing the Software

- 1 Close all open programs and applications before beginning the installation process.
- 2 Connect the device with a USB socket of your computer.
- 3 Select **PicoPix2330** as drive in the Windows Explorer and start the program **PicoPix Fun Viewer** with a double-click.
- 4 Your computer will now prepare for the installation process. Follow the instructions of the installation wizard and restart the computer.

Note



Disconnect the Device from the Computer

Disconnect the device from the computer before restarting. This could cause the computer to boot from the Pocket Projector being recognised as a USB storage medium.

- 5 The software has been installed and you will find the icon **PicoPix Fun Viewer** on the desktop.


Start projection

- 1 Connect the USB plug of the Pocket Projector with a free USB socket of your computer.
- 2 Start the software **PicoPix Fun Viewer** by double clicking on the icon on the desktop.
- 3 Follow the instructions of the Software to start with the projection.

Connecting using Audio/Video (CVBS) Adaptor Cable

(PPX2330)


Use the projector's audio/video cable (A/V cable) to connect camcorders, DVD players or digital cameras. The jacks for these devices are yellow (video), red (audio right) and white (audio left).

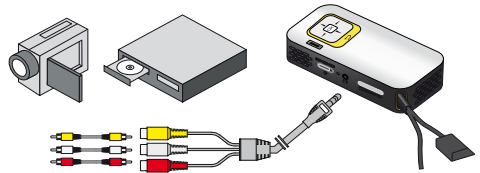

- 1 Connect the supplied A/V cable to the socket of the projector.
- 2 Connect the video device's audio/video jacks to the A/V cable using a conventional composite video (RCA) cable.
- 3 Select **Menu > Source** and switch to **AV**.

Connecting to mobile multimedia devices

Some video devices (e.g.: pocket multimedia players, ...) require specific connection cables. There are either supplied with the device or acquired from the manufacturer of the multimedia device. Please note that only the original cables from the device manufacturer may function.

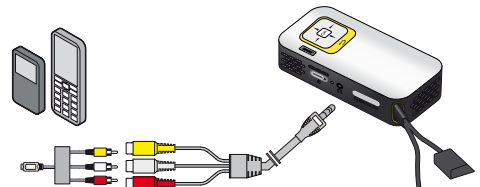

Note



Switching to the multimedia device signal output

See the multimedia device instruction manual to find out how to switch the signal output to this jack.

Connecting the Headphones

(PPX2330)

- 1 Before connecting the headphones, turn down the volume on the device.
- 2 Connect the headphones to the projector's headphone slot. The device speakers deactivate automatically when the headphones are connected.



- 3 After connecting the headphones, increase the volume to a comfortable level.

DANGER!



Danger of Hearing Damage

Do not use the device over a longer time at high volume—especially when using headphones. This could lead to the risks of hearing damage. Before connecting the headphones, turn down the volume on the device. After connecting the headphones, increase the volume to a comfortable level.

6 Media Playback


Video Playback

Video Playback (USB/SD card/ internal memory)

- 1 Switch the device on using the on/off switch on the side.
- 2 After the initial screen the main menu appears.



- 3 Use the navigation keys to select **Videos**.
- 4 Confirm with **OK**.
- 5 **With an inserted memory card or USB storage device:** Select the internal memory, the USB storage medium or the memory card using the keys **▲/▼**.
- 6 Confirm with **OK**.
- 7 Use **▲/▼** to select the video file that you wish to play.

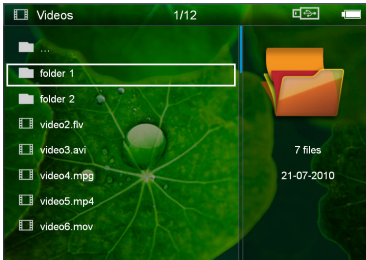

Note



Displaying video files

Only those videos that are compatible with the Pocket Projector will be displayed.

- 8 Press **OK** to start playback.

- 9 Press **⏻** to end playback and return to the overview.
- 10 When you press **⏻** again, you will return to the main menu.

Note



Navigation during playback

Review / cue: Press **⏮/⏭** long.

Press **OK** to stop or continue playback.

File Format

There are various video file formats as *.mov, *.avi, *.m4v. Many of these formats function as a container that contains the various encoded audio and video files. MPEG-4, H.264, MP3, and AAC are all examples of encoded audio/video files. In order to play these files, the projector must read them and decode the audio/video signals.

Please note that some files cannot be played as a result of different video and audio encoders.

Supported File Formats

| Container | Video Format |
|---------------------|----------------------|
| *.avi, *.mov, *.mp4 | MJPEG, MPEG-4, H.264 |
| *.mkv | MPEG-4, H.264 |
| *.ts | MPEG-2, H.264 |
| *.rm, *.rmvb | Real video |
| *.dat | MPEG-1 |
| *.vob | MPEG-2 |
| *.mpg, *.mpeg | MPEG-1, MPEG-2 |

Video Playback (A/V socket)

(PPX2330)

- 1 Connect the audio/video output of the external device to the Pocket Projector's **⏮** socket. Use the corresponding cable and cable adapter for this purpose (see also chapter Connecting using Audio/Video (CVBS) Adaptor Cable, page 11).
- 2 To find out how to deactivate the video output for the external device, please see the relevant instruction manual. Most often, this option is labeled "TV out" or "TV Output" in the corresponding menu.
- 3 Start the video playback on the external device.

Modify settings during playback


- 1 Press the or key.
 - 2 Use the / keys to choose from the following settings:
 - Brightness:** Adjust brightness
 - Contrast:** Adjust contrast
 - Saturation:** Adjust colour saturation
 - Smart Settings:** Select predefined settings for brightness / contrast / colour saturation
 - Volume:** Adjust volume level
 - 3 Modify the setting using /.
- The device saves the modified settings automatically.

Modify other settings

- 1 Press the button.
- 2 Use the / keys to choose from the following settings:
 - Image Settings:** Adjust brightness, contrast, colour saturation
 - Sound Settings:** Adjust volume or key beep
 - Power Save:** This function reduces the light output in order to increase the operating time for the built-in battery.
- 3 Confirm with .
- 4 Modify the setting using and /.
- 5 Confirm with .

Photo Playback

- 1 Switch the device on using the on/off switch on the side.
- 2 After the initial screen the main menu appears.

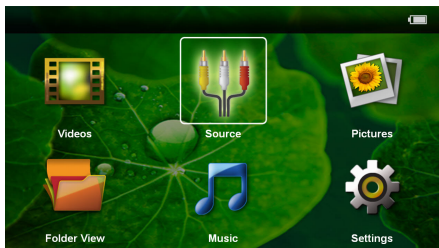

- 3 Use the navigation keys to select **Pictures**.
- 4 Confirm with .
- 5 **With an inserted memory card or USB storage device:** Select the internal memory, the USB storage medium or the memory card using the keys /.
- 6 Confirm with .

- 7 Miniature photos are displayed on the screen as an overview.



Note



Miniature view or list

In the settings, you are able to select whether the overview will be displayed as miniatures or in a list.

Note



Many photos on the memory card or the USB medium

If there are a lot of photos on the memory card or the USB storage medium it can take a moment before the overview appears.

- 8 Use / or / to select the image that you want to start the slide show with.
- 9 Press to start the slide show.
- 10 Press to end the slide show and return to the overview.
- 11 When you press again, you will return to the main menu.

Pause slideshow

- 1 Press to stop the slide show and open the menu. If you don't press a button within four seconds the slide show will continue.
- 2 Select with / and confirm with to stop or continue the slideshow.

Slide Show with background music

- 1 Press to stop the slide show and open the menu.
- 2 Select with / and confirm with to start background music.
- 3 Press to adjust the volume level.

Rotate the Image

- 1 Press to stop the slide show and open the menu.
- 2 Select with / and confirm with to rotate the current image.

Zoom in / Zoom out

- 1 Press **OK** to stop the slide show and open the menu.
- 2 Select with **◀/▶** **P** and confirm with **OK** to enlarge the current image.
- 3 Use the **◀/▶/▲/▼** keys to move around the magnified image.
- 4 Press **⊞** to continue the slide show.

Music Playback


Note




Switch off the image playback

You can turn off image playback while playing music in order to save power (see also chapter Music settings, page 18). As soon as you press the **⊞** key, the image reappears and the fan starts again.

- 1 Switch the device on using the on/off switch on the side.
- 2 After the initial screen the main menu appears.

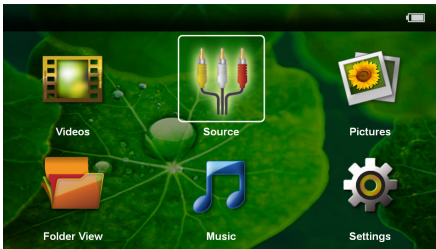

- 3 Use the navigation keys to select **Music**.
- 4 Confirm with **OK**.
- 5 **With an inserted memory card or USB storage device:** Select the internal memory, the USB storage medium or the memory card using the keys **▲/▼**.
- 6 Confirm with **OK**.
- 7 Use **▲/▼** to select the file that you wish to play.

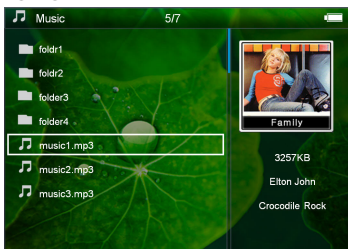

- 8 Press **OK** to start playback.

- 9 Press **OK** to stop or continue playback.

Note



Navigating when image playback is switched off

Press **▲/▼** to skip to the previous or next song.
Press **OK** to stop or continue playback.
Press **⊞** to return to the selection.

- 10 Press **⊞** to end playback and return to the overview.
- 11 When you press **⊞** again, you will return to the main menu.


You can adjust the volume during playback using **◀/▶**. Press repeatedly **◀** to switch off the volume (mute function).

Managing files

Copy Files

You can copy files back and forth from the internal memory to the connected USB storage medium or memory card.

- 1 Switch the device on using the on/off switch on the side.
- 2 After the initial screen the main menu appears.

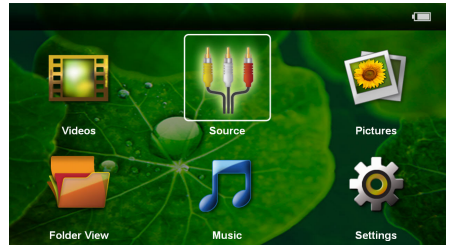

- 3 Use the navigation keys to select **Folder View**.
- 4 Confirm with **OK**.
- 5 **With an inserted memory card or USB storage device:** Select the internal memory, the USB storage medium or the memory card using the keys **▲/▼**.
- 6 Confirm with **OK**.
- 7 Use **▲/▼** to select the file that you want to copy.

Note



No Files Found (0 files)

Only those files that are compatible with the Projector will be displayed.

- 8 Mark the file using . Pressing deselects the chose file(s). Press long to select all files in current folder.

Note




Mark the entire folder

You can also mark an entire folder to copy all files from the folder. Note that the copy process of large folders can takes some time.

- 9 Use / to select other files.

- 10 Press .

- 11 Select with / **Copy**.

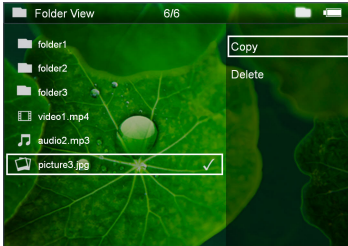

- 12 Confirm with .

- 13 Use / to select the destination memory: **SD card, internal memory or USB storage medium**.

- 14 Confirm with .

Note



Files already exist

If the files you are copying already exist in the target folder, you must choose whether or not you want to overwrite them using / and . If you choose not to overwrite these files, copies will be created. The copies can be recognised by a number added to the file names.

- 15 The files are copied.

Note



Error

If errors occur during the copying process, make sure that enough free space is available on the medium.

Note



Removing storage medium

Only remove the storage medium after the copy process is complete.

Delete Files

You can delete files from the internal memory, the connected USB storage medium or the memory card.

- 1 Switch the device on using the on/off switch on the side.
- 2 After the initial screen the main menu appears.



- 3 Use the navigation keys to select **Folder View**.

- 4 Confirm with .

- 5 **With an inserted memory card or USB storage device:** Select the internal memory, the USB storage medium or the memory card using the keys /.

- 6 Confirm with .

- 7 Use / to select the file that you want to delete.

Note



No Files Found (0 files)

Only those files that are compatible with the Projector will be displayed.



- 8 Mark the file using . Pressing deselects the chose file(s). Press long to select all files in current folder.

- 9 Use / to select other files.


- 10 Press .

- 11 Select with / **Delete**.

- 12 Confirm with .

13 Use / if you want to delete the files or cancel the deletion process.



14 Confirm with .

Note



Error

If errors occur during the deletion process, make sure that the storage medium is not write-protected.

Note




Deleting photos on the memory card

When deleting photos via the computer, note that the photos may not be correctly displayed when the memory card is inserted into the digital camera again. Digital cameras sometimes store additional information in specific folders, including previews and orientation information.


For this reason, only delete the photos using the digital camera.

7 Settings

- 1 Switch the device on using the on/off switch on the side.
- 2 After the initial screen the main menu appears.

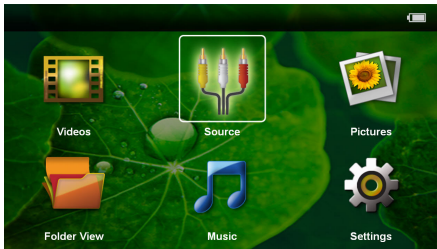

- 3 Use the navigation keys to select **Settings**.
- 4 Confirm with **OK**.
- 5 Use **▲/▼** to select from the following settings.

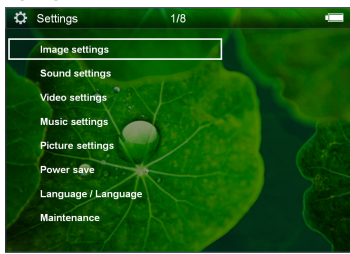

- 6 Confirm with **OK**.
 - 7 Modify the settings using **OK**, **▲/▼**.
 - 8 Confirm with **OK**.
- The **⊖** key takes you one step back in the menu.

Image settings

Wall paper—Select background images

Fit Screen—Convert videos and images original, optimal, zoom mode.

Projection mode

Front—Normal projection; the device is located in front of the projection surface/screen.

Rear—Rear projection; the device is located behind the projection surface; the image is horizontal mirrored.

Ceiling—The device is hanging from the ceiling in an upside-down position; the image is rotated by 180 degrees.

Rear ceiling—The device is hanging from the ceiling in an upside-down position behind the projection surface; the image is rotated by 180 degrees and horizontal mirrored.

Wall color correction—Colour correction of the projected image to adjust to coloured projection surfaces

Smart Settings—Select predefined settings for brightness / contrast / colour saturation. If you modify these settings, the setting is switched to **Manual**.

Brightness—Adjust brightness

Contrast—Adjust contrast

Saturation—Adjust colour saturation

Sound Settings:

Volume—Adjust the volume

Key beep—Turn key tones on and off

Video settings

View—Display all videos in a list or a corresponding folder structure on the drive.

Repeat—Set the repeat type for video files: Repeat deactivated (**Off**), repeat all videos in a directory (**Directory**), repeat only the current video (**Movie**), repeat all videos (**All**).

Resume play—If this function is activated, playback will continue at the position it was last stopped. If deactivated, playback will always start at the beginning of the video.

Music settings

View—Show all songs in a list or a corresponding folder structure on the drive.

Screen—Activate or deactivate the projection during playback.

Repeat—Set the repeat type for music files: Repeat deactivated (**Off**), repeat all songs in a directory (**Directory**), repeat only the current song (**Song**), repeat all songs (**All**).

Shuffle—Activate this function for random playback. Otherwise, playback will take place in sequence.

Picture settings

View—Display the images as a thumbnail or as a list during selection in the main menu.

Time per slide—Image viewing time during slide show

Repeat—Set the type of repeat for slide show photos: Repeat off (**Off**), repeat all photos in the directory (**Directory**), repeat all stored photos (**All**).

Slide transition—Set image transitions

Slideshow order—Play slide show in order or randomly

Power Save

Eco mode—This function reduces the light output in order to increase the operating time for the built-in battery. When operating from the power supply, the energy saving mode is always deactivated in order to ensure the best-possible image display.

Sleep mode—With this function, the projector automatically shuts down after a specified period of time or at the end of a movie.

Language

Select the desired language for the menu.

Maintenance

Reset settings—Reset settings to factory defaults.

Firmware Update—Update Firmware

Note



Connect for the duration of the firmware update the power adapter.

Information—Display free space in the internal memory and information on the device (Capacity: / Free space: / Firmware Version / Device name: / Model / Mcu Version)

8 Service

Care Instructions for the Battery

The capacity of the battery diminishes with time. You can prolong the life of the battery if you observe the following points:

- Without a power supply, the device operates from the built-in battery. When the battery does not have sufficient capacity, the device switches to stand-by mode. Connect the device to the power supply.
- When the battery does not have sufficient capacity, the battery symbol in the display turns red.
- When the device is running for a long period of time, the surface becomes hot and a warning symbol appears on the projection. The device switches automatically to stand-by mode when it gets too hot. After the device has cooled down, you can continue playback by pressing any key.
- Use the device at least once a week.
- Charge the battery regularly. Don't store the device with a completely discharged battery.
- If the device is not used for several weeks, discharge the battery a little by using the device before storing it.
- If the device only works using the USB connection or with the power supply, the battery is defective.
- Keep the device and the battery away from sources of heat.

! DANGER!



Do not replace the battery yourself

Do not try to replace the battery yourself. Incorrect handling of the battery or using the wrong type of battery can cause damage to the device or cause injury.

Battery deep discharge

When the battery is in deep discharge or the device is not used for a longer period, proceed as followed:

- 1 Connect the USB plug to a computer, to charge the battery. Alternatively you may connect the USB plug to the power adapter (not included) (see also chapter Compatible Power Supply, page 23). The device behaves as follows:

| | Device off | Device on |
|------------------------------|-------------------------------------------------|-------------------------------------------------|
| Connect to a computer | Device turns on and off again. Slow charging | Device turns on and off again. Slow charging |
| Connect to the power adapter | Device turns on and off again. Fast charging | Device remains turned on. Slow charging |

- 2 The device can be turned on and is ready to use after approximately five minutes of charging time.

Battery recharge time with device off

| | Turning on possible | Completely charged |
|---------------|----------------------------|---------------------------|
| Slow charging | 5 minutes | 10 hours |
| Fast charging | 5 minutes | 3 hours |

Cleaning

DANGER!



Switching off the device!

Switch the device on or off using the power switch before removing the power supply from the socket.

DANGER!



Instructions for Cleaning!

Use a soft, lint-free cloth. Never use liquid or easily flammable cleansers (sprays, abrasives, polishes, alcohol, etc.). Do not allow any moisture to reach the interior of the device. Do not spray the device with any cleaning fluids.

Wipe over the surfaces gently. Be careful that you do not scratch the surfaces.

Cleaning the Lens

Use a brush or lens cleaning paper for cleaning the lens of the projector.

DANGER!



Do not use any liquid cleaning agents

Do not use any liquid cleaning agents for cleaning the lens, to avoid damaging the coating film on the lens.

Device overheated

A overheat symbol appears if the device is overheated.

- At maximum level of brightness the symbol appears in the status bar and the device turns automatically to minimum level of brightness.
- At minimal level of brightness the symbol shows for three seconds in the middle of the screen. Then the device turns off automatically.

Troubleshooting

Power Cycling

If a problem occurs that cannot be corrected with the instructions in this user manual (see also the help below), follow the steps given here.

- 1 Switch the device off using the on/off switch on the side.
- 2 Wait at least ten seconds.
- 3 Switch the device on using the on/off switch on the side.
- 4 If the problem repeats, please contact our technical customer service or your retailer.

| Problems | Solutions |
|------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The Pocket Projector cannot be switched on | <ul style="list-style-type: none">• Connect your computer or a compatible power supply to recharge the internal battery. Make sure the Pocket Projector is switched off. |
| No sound from the external connected device | <ul style="list-style-type: none">• Check the cables to the external device• Set the volume on the external device• Only the original cables from the device manufacturer may function |
| Bad sound quality with your computer connection | <ul style="list-style-type: none">• Check if the audio cable is connected to the computer's headphone socket or the line-out socket.• The volume setting on the computer should not be too high. |
| Only the initial screen appears and not the image from the external device | <ul style="list-style-type: none">• Check if the cables are connected to the right sockets.• Please check that the external device is switched on• Check if the video output of the external device is switched on. |
| Only the initial screen appears and not the image from the connected computer | <ul style="list-style-type: none">• Check if the software at your computer has been started. |
| Device switches to stand-by mode | <ul style="list-style-type: none">• When the device is running for a long period of time, the surface becomes hot and a warning symbol appears on the projection. The device switches automatically to stand-by mode when it gets too hot. After the device has cooled down, you can continue playback by pressing any key.• When the battery does not have sufficient capacity, the device switches to stand-by mode. Connect the device to the power supply. |
| Devices changes from maximum level of brightness to minimum level of brightness when the device is connected over USB to play videos. | <ul style="list-style-type: none">• When the environment temperature is too high, the devices turns automatically from maximum level of brightness to minimum level of brightness in order to protect the high power LED.• Use the device with lower environment temperatures. |
| Device can not connect with an Android device (for example mobilephone/smartphone with Android operating system) when connected via USB. | <ul style="list-style-type: none">• Deactivate the function „USB debugging“ in the settings menu of your Android device before connecting the Pocket Projector via USB; your Android device should be recognized as USB storage medium. |

9 Appendix

Technical Data

| | |
|--------------------------------------|----------------------------------------------------------------------------------------|
| Dimensions (L × H × W)..... | 94 × 22 × 53 mm |
| Weight..... | 0,14 kg |
| Recommended Ambient..... | 5–35 °C |
| Relative Humidity..... | 15–85% (non-condensing) |
| File format..... | *.avi, *.mov, *.mp4, *.mkv, *.divx, *.dat, *.mpg, *.mpeg, *.vob, *.ts, *.rm, *.rmvb |
| Photo formats..... | JPEG, BMP |
| Music formats..... | MP3, WAV, WMA, OGG,AAC |
| Video Standard (CVBS) (PPX2330)..... | PAL, SECAM, NTSC |
| Headphone connection (PPX2330)..... | Mono - jack plug: 3,5 mm |
| Audio Output..... | 1 W |
| Internal memory..... | 2 GB |
| Compatible Memory Cards..... | micro SD/SDHC |

Technology / Optical

| | |
|-------------------------------|-------------------|
| Display technology..... | nHD 0,2" DLP |
| Light source..... | RGB LED |
| Resolution..... | 640 × 360 pixel |
| Supported aspect ratio..... | 16:9, 4:3 |
| Brightness (Bright Mode)..... | up to 30 lumen |
| Contrast ratio..... | 1500:1 |
| Projected image size..... | 10–60 inch |
| Screen distance..... | 0,3 m up to 2.1 m |
| Horizontal Scan Rate..... | 31–69 kHz |
| Vertical Scan Rate..... | 56–85 Hz |

Built-in rechargeable battery

| | |
|--------------------------------|------------------------|
| Battery type..... | Li-Ion |
| Capacity..... | 2600mAh 3.7V |
| Charging time..... | 3 h |
| Operating time..... | 1.5 h |
| Operating time (ECO mode)..... | 2 h |
| Manufacturer..... | Mbell Technology Group |

Minimum PC Requirements

| | |
|----------------------------|------------------------------------------------------------|
| Processor..... | Intel Pentium M or AMD Athlon |
| Clock rate..... | 2GHz |
| Operating System..... | Windows XP Professional (SP2), Windows Vista, Windows 7 |
| RAM..... | 1 GB DDR SDRAM |
| Free Hard Drive Space..... | 40 MB |
| USB Port..... | USB 2.0 |

Compatible Power Supply

| | |
|-------------------|-------------------------------|
| Manufacturer..... | Kuantech Incorporated Company |
| Model No..... | KSAPK0110500200HE |
| Input..... | 100-240VAC |
| Output..... | 5V, 2A |

All data are provided for reference purposes only.
Sagemcom Documents SAS reserves the right to make any changes without prior notice.



The CE marking certifies that the product meets the main requirements of the European Parliament and Council directives 2006/95/CE, 2004/108/CE and 2009/125/CE on telecommunications terminal equipment, regarding safety and health of users and regarding electromagnetic interference.

The declaration of compliance can be consulted on the site www.picopix.philips.com.

Preservation of the environment as part of a sustainable development plan is an essential concern of Sagemcom Documents SAS. The desire of Sagemcom Documents SAS is to operate systems observing the environment. The desire of Sagemcom Documents SAS is to operate systems observing the environment and consequently it has decided to integrate environmental performances in the life cycle of this product, from manufacturing to commissioning use and elimination.



Packaging: The presence of the logo (green dot) means that a contribution is paid to an approved national organisation to improve package recovery and recycling infrastructures. Please respect the sorting rules set up locally for this kind of waste.

Batteries: If your product contains batteries, they must be disposed of at an appropriate collection point.



Product: The crossed-out waste bin stuck on the product means that the product belongs to the family of electrical and electronic equipment. In this respect, the European regulations ask you to dispose of it selectively;

- At sales points in the event of the purchase of similar equipment.
- At the collection points made available to you locally(drop-off centre, selective collection, etc.).

In this way you can participate in the re-use and upgrading of Electrical and Electronic Equipment Waste, which can have an effect on the environment and human health.

The paper and cardboard packaging used can be disposed of as recyclable paper. Have the plastic wrapping and Styrofoam packaging recycled or dispose of it in the non-recyclable waste, depending on the requirements in your country.

Trademarks: The mentioned references in this manual are trademarks of the respective companies. The lack of the trademarks ® and ™ does not justify the assumption that these dedicated terminologies are free trademarks. Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Sagemcom Documents SAS disclaims any and all rights in those marks.

Neither Sagemcom Documents SAS nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or failure to strictly comply with Sagemcom Documents SAS operating and maintenance instructions.

Sagemcom Documents SAS shall not be liable for any damages or problems arising from the use of any options or any consumable materials other than those designated as original Sagemcom Documents SAS / PHILIPS products or Sagemcom Documents SAS / PHILIPS approved products.

Sagemcom Documents SAS shall not be held liable for any damage resulting from electromagnetic interference that occurs from the use of any interface cables other than those designated as Sagemcom Documents SAS / PHILIPS products.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Sagemcom Documents SAS. The information contained herein is designed only for use with this product. Sagemcom Documents SAS is not responsible for any use of this information as applied to other devices.

This user manual is a document that does not represent a contract.

Errors, printing errors and changes are reserved.

Copyright © 2012 Sagemcom Documents SAS



PHILIPS and the PHILIPS' Shield Emblem are registered trademarks of Koninklijke Philips Electronics N.V. and are used by Sagemcom Documents SAS under license from Koninklijke Philips Electronics N.V.

© 2012 Sagemcom Documents SAS

All rights reserved

Sagemcom Documents SAS

Documents Business Unit

Headquarters : 250, route de l'Empereur
92500 Rueil-Malmaison Cedex · FRANCE

Tel: +33 (0)1 57 61 10 00 · Fax: +33 (0)1 57 61 10 01

www.sagemcom.com

Simplified Joint Stock Company · Capital 8.479.978 € · 509 448 841 [RCS](#) Nanterre

PPX2230 · 2330

UK

253461900-C

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>