

PLANAR®

PLANAR LCD MONITOR PQ191M MANUAL

www.planar.com

This unit has been engineered and manufactured to ensure your personal safety, however improper use may result in electrical shock or fire hazards. In order to allow the proper operation of all safeguards incorporated in this display, observe the following basic rules for its installation, use, and servicing.

On Safety

Use only the power cord supplied with the unit. In case you use another power cord, make sure that it is certified by the applicable national standards if not being provided by the supplier. If the power cable is faulty in any way, please contact the manufacturer or the nearest authorized repair service provider for a replacement.

The power supply cord is used as the main disconnection device. Ensure that the socket-outlet is easily accessible after installation.

Operate the display only from a power source indicated in the specifications of this manual or listed on the display. If you are not sure what type of power supply you have in your home, consult with your dealer.

Overloaded AC outlets and extension cords are dangerous. So are frayed power cords and broken plugs. They may result in a shock or fire hazard. Call your service technician for replacement.

Do not Open the Display.

- There are no user serviceable components inside.
- There are Dangerous High Voltages inside, even when the power is OFF.
- In case of difficulty, refer first to the Troubleshooting section of this manual.

To Avoid Personal Injury :

- Do not place the display on a sloping shelf unless properly secured.
- Use only a stand recommended by the manufacturer.

To Prevent Fire or Hazards:

- Always turn the display OFF if you leave the room for more than a short period of time. Never leave the display ON when leaving the house.
- Keep children from dropping or pushing objects into the display's cabinet openings. Some internal parts carry hazardous voltages.
- Do not add accessories that have not been designed for this display.
- During a lightning storm or when the display is to be left unattended for an extended period of time, unplug it from the wall outlet.

On Installation

Do not allow anything to rest upon or roll over the power cord, and do not place the display where the power cord is subject to damage.

Do not use this display near water such as near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

Displays are provided with ventilation openings in the cabinet to allow the release of heat generated during operation. If these openings are blocked, built-up heat can cause failures which may result in a fire hazard. Therefore, NEVER:

- Block the bottom ventilation slots by placing the display on a bed, sofa, rug, etc.
- Place the display in a built-in enclosure unless proper ventilation is provided.
- Cover the openings with cloth or other material.
- Place the display near or over a radiator or heat source.

Do not rub or strike the Active Matrix LCD with anything hard as this may scratch, mar, or damage the Active Matrix LCD permanently.

Do not press the LCD screen with your finger for a long time as this may cause some afterimages.

Some dot defects may appear as Red, Green or Blue spots on the screen. However, this will have no impact or effect on the display performance.

If possible, use the recommended resolution to obtain the best image quality for your LCD display. If used under any mode except the recommended resolution, some scaled or processed images may appear on the screen. However, this is characteristic of the fixed-resolution LCD panel.

On Cleaning

- Unplug the display before cleaning the face of the display screen.
- Use a slightly damp (not wet) cloth. Do not use an aerosol directly on the display screen because over-spraying may cause electrical shock.

On Repacking

- Do not throw away the carton and packing materials. They make an ideal container in which to transport the unit. When shipping the unit to another location, repack it in its original material.


Connecting the Display

Using the Computer


1. Connect the signal cable. When attached, tighten the thumbscrews to secure the connection.
2. Connect the power cord into a proper power outlet that is easily accessible and close to the display.

NOTE


- This is a simplified representation of the rear view.
- This rear view represents a general model; your display may differ from the view as shown.

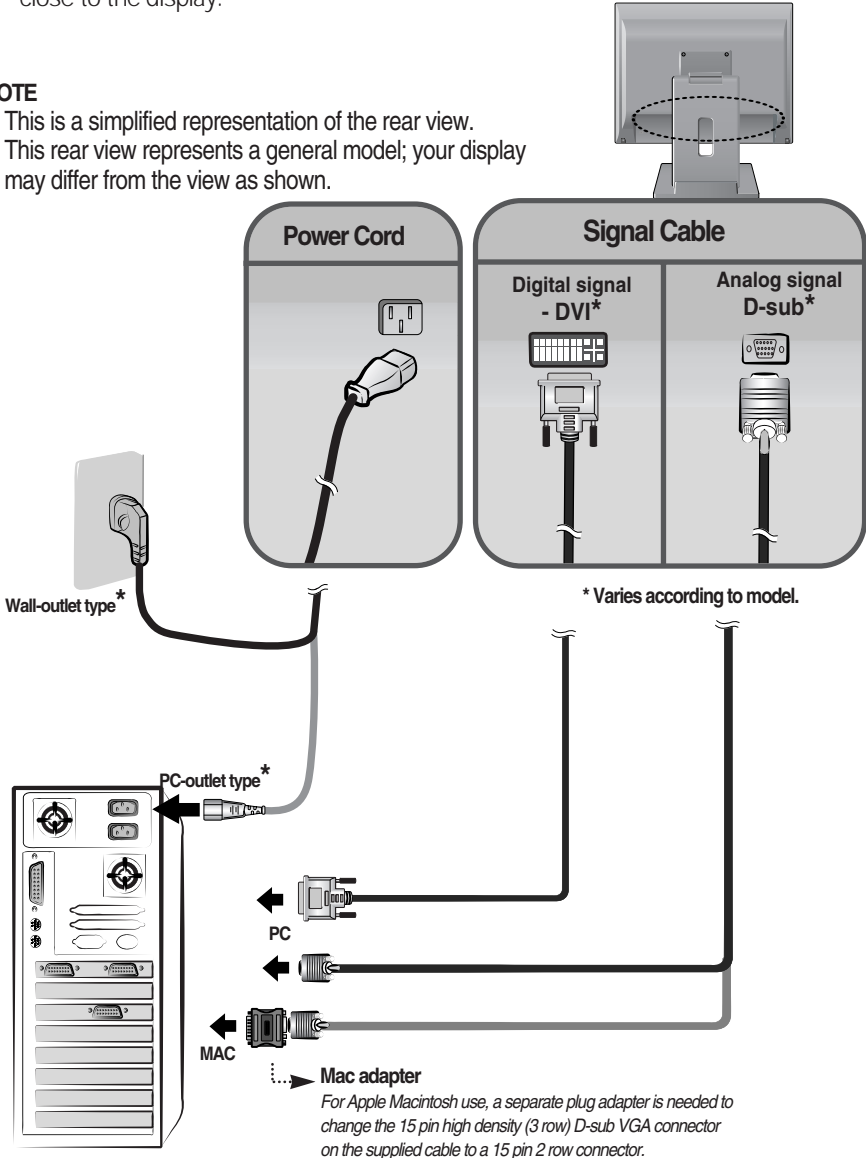

Front Panel Controls

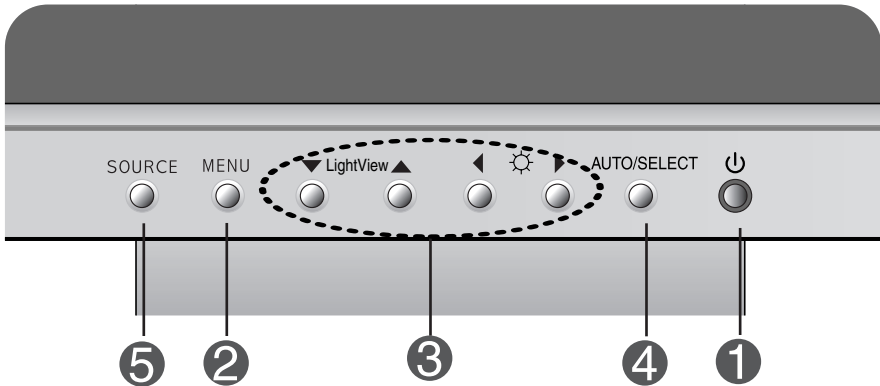

Control	Function
1 Power Button	Use this button to turn the display on or off.
Power (DPMS) Indicator	This Indicator lights up green when the display operates normally. If the display is in DPM (Energy Saving) mode, this indicator color changes to amber.
2 MENU Button	Use this button to enter or exit the On Screen Display.
3 ▼▲◀▶ Buttons	Use these buttons to choose or adjust items in the On Screen Display.
4 AUTO/SELECT Button	Use this button to enter a selection in the On Screen Display.

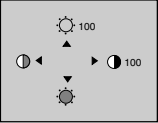Control	Direct Access Function						
<div style="border: 1px solid black; background-color: #333; color: white; padding: 5px; text-align: center; font-weight: bold; margin-bottom: 5px;">LIGHT VIEW</div> <table style="width: 100%; border-collapse: collapse; font-size: small;"> <tr> <td style="padding: 2px;">DAY</td> <td style="padding: 2px;">TEXT</td> </tr> <tr> <td style="padding: 2px;">NIGHT</td> <td style="padding: 2px;">TEXT</td> </tr> <tr> <td style="padding: 2px;">USER MODE</td> <td style="padding: 2px;">PHOTO</td> </tr> </table>	DAY	TEXT	NIGHT	TEXT	USER MODE	PHOTO	<p style="font-size: 2em; font-weight: bold; margin-bottom: 5px;">3</p> <p style="font-weight: bold; margin-bottom: 5px;">▼ LightView ▲</p> <p>This function optimizes the brightness, contrast or color value to the surrounding conditions and settings and enables you to enjoy the most suitable picture by adjusting the surroundings (DAY/NIGHT/USER MODE).</p> <ul style="list-style-type: none"> TEXT: For viewing letters MOVIE: For viewing movies PHOTO: For viewing pictures or the photographs USER MODE: This function memorizes the manual adjustment -Brightness, Contrast and Color value on the On Screen Display.
DAY	TEXT						
NIGHT	TEXT						
USER MODE	PHOTO						
	<div style="text-align: center; margin-bottom: 10px;">◀ ☀ ▶</div> <p>Bring up Contrast and Brightness adjustment.</p> <p style="font-size: small;">: ◀ ☀ ▶ → ▼ ▲ ◀ ▶ → MENU</p>						
<div style="border: 1px solid black; background-color: #333; color: white; padding: 5px; text-align: center; font-weight: bold; margin-bottom: 5px;">PROCESSING AUTO CONFIGURATION</div>	<p style="font-size: 2em; font-weight: bold; margin-bottom: 5px;">4</p> <p style="font-weight: bold; margin-bottom: 5px;">AUTO adjustment function</p> <p>When adjusting your display settings, always press the AUTO/SELECT button before entering the On Screen Display(OSD). This will automatically adjust your display image to the ideal settings for the current screen resolution size (display mode).</p> <p>The best display mode is 1280x1024.</p>						
<p style="font-size: 2em; font-weight: bold; margin-bottom: 5px;">5</p> <p style="font-weight: bold; margin-bottom: 5px;">SOURCE</p> <p>Use this button to make Dsub or DVI connector active. This feature is used when two computers are connected to the display. The default setting is Dsub.</p>	<p style="font-weight: bold; margin-bottom: 5px;">CONTROLS LOCKED/UNLOCKED</p> <p style="font-weight: bold; margin-bottom: 5px;">: MENU and ▶</p> <p>This function allows you to secure the current control settings, so that they cannot be inadvertently changed. Press and hold the MENU button and ▶ button for 3 seconds: the message "CONTROLS LOCKED" appears.</p> <p>You can unlock the OSD controls at any time by pushing the MENU button and ▶ button for 3 seconds: the message "CONTROLS UNLOCKED" will appear.</p>						
<div style="border: 1px solid black; background-color: #333; color: white; padding: 5px; text-align: center; font-weight: bold; margin-bottom: 5px;">CONTROLS LOCKED</div> <div style="border: 1px solid black; background-color: #333; color: white; padding: 5px; text-align: center; font-weight: bold; margin-bottom: 5px;">CONTROLS UNLOCKED</div>							


Screen Adjustment

Making adjustments to the image size, position and operating parameters of the display is quick and easy with the On Screen Display Control system. A short example is given below to familiarize you with the use of the controls. The following section is an outline of the available adjustments and selections you can make using the OSD.

NOTE

- Allow the display to stabilize for at least 30 minutes before making image adjustments.

To make adjustments in the On Screen Display, follow these steps:

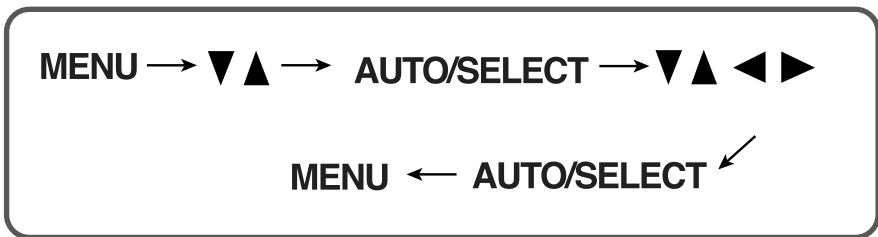

- 1 Press the **MENU** Button, then the main menu of the OSD appears.
- 2 To access a control, use the ▼ or ▲ Buttons. When the icon you want becomes highlighted, press the **AUTO/SELECT** Button.
- 3 Use the ▼ ▲ ◀ ▶ Buttons to adjust the item to the desired level.
- 4 Accept the changes by pressing the **AUTO/SELECT** Button.
- 5 Exit the OSD by Pressing the **MENU** Button.

On Screen Display(OSD) Selection and Adjustment

The following table indicates all the On Screen Display control, adjustment, and setting menus.

Main menu	Sub menu	A	D	Reference
BRIGHTNESS CONTRAST	BRIGHTNESS	●	●	To adjust the brightness and contrast of the screen
	CONTRAST	●	●	
COLOR	PRESET	9300K	●	To customize the color of the screen
		6500K	●	
	R/G/B(User Color)	●	●	
	GAMMA	●	●	
POSITION	V POSITION	●		To adjust the position of the screen
	H POSITION	●		
TRACKING	CLOCK	●		To improve the clarity and stability of the screen
	PHASE	●		
SETUP	LANGUAGE	●	●	To customize the screen status for a user's operating environment
	OSD POSITION	●	●	
	SIGNAL	●	●	
	FACTORY RESET	●	●	
● : Adjustable A : Analog Input D : Digital Input				

NOTE

- The order of icons may differ depending on the model (A7–A9).






On Screen Display(OSD) Selection and Adjustment

You were introduced to the procedure of selecting and adjusting an item using the OSD system. Listed below are the icons, icon names, and icon descriptions of the all items shown on the Menu.


NOTE

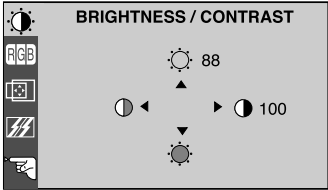- OSD (On Screen Display) menu languages on the monitor may differ from the manual.






To adjust the brightness and contrast of the screen

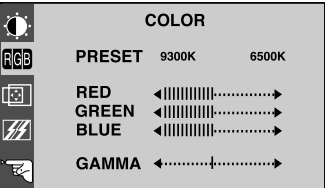OSD Adjust	Description
 The screenshot shows the 'BRIGHTNESS / CONTRAST' OSD menu. On the left is a vertical toolbar with icons for brightness/contrast, RGB, zoom, equalizer, and a hand. The main area has a central sun icon with '88' next to it, and two horizontal sliders below it. The left slider is at 100 and the right slider is at 100.	  BRIGHTNESS To adjust the brightness of the screen.
	  CONTRAST To adjust the contrast of the screen.


To customize the color of the screen

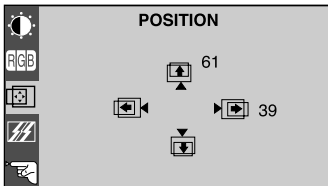OSD Adjust	Description
 The screenshot shows the 'COLOR' OSD menu. On the left is a vertical toolbar with icons for brightness/contrast, RGB, zoom, equalizer, and a hand. The main area has 'PRESET' with '9300K' and '6500K' options. Below are 'RED', 'GREEN', and 'BLUE' sliders, and a 'GAMMA' slider.	PRESET 9300K/6500K Select the screen color. <ul style="list-style-type: none">9300K: Slightly bluish white.6500K: Slightly reddish white.
	RED GREEN BLUE Set your own color levels.
	GAMMA Set your own gamma value. (-50~50) On the monitor, high gamma values display whitish images and low gamma values display high contrast images.


To adjust the position of the screen

OSD Adjust	Description
 The screenshot shows the 'POSITION' OSD menu. On the left is a vertical toolbar with icons for brightness/contrast, RGB, zoom, equalizer, and a hand. The main area has a central image with '61' above it and '39' to its right. Arrows indicate movement directions.	  Vertical Position To move image up and down.
	  Horizontal Position To move image left and right.

To improve the clarity and stability of the screen

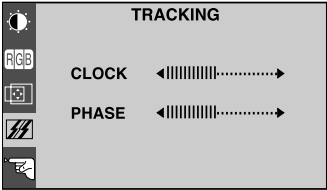OSD Adjust	Description
 <p>The image shows the OSD TRACKING menu. It has a vertical sidebar on the left with icons for a sun, RGB, a square with a plus, a square with a diagonal line, and a speaker. The main area contains the title 'TRACKING' and two options: 'CLOCK' and 'PHASE'. Each option has a horizontal bar with a series of vertical lines and arrows at both ends, indicating a range of adjustment.</p>	<p>CLOCK To minimize any vertical bars or stripes visible on the screen background. The horizontal screen size will also change.</p> <p>PHASE To adjust the focus of the display. This item allows you to remove any horizontal noise and clear or sharpen the image of characters.</p>

To customize the screen status for a user's operating environment

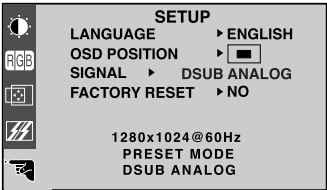OSD Adjust	Description
 <p>The image shows the OSD SETUP menu. It has a vertical sidebar on the left with icons for a sun, RGB, a square with a plus, a square with a diagonal line, and a speaker. The main area contains the title 'SETUP' and several options: 'LANGUAGE' (with a right arrow and 'ENGLISH'), 'OSD POSITION' (with a right arrow and a small rectangle), 'SIGNAL' (with a right arrow and 'DSUB ANALOG'), and 'FACTORY RESET' (with a right arrow and 'NO'). At the bottom, it displays '1280x1024@60Hz', 'PRESET MODE', and 'DSUB ANALOG'.</p>	<p>LANGUAGE To choose the language in which the control names are displayed.</p> <p>OSD POSITION To adjust position of the OSD window on the screen.</p> <p>SIGNAL To select DSUB ANALOG, DVI DIGITAL or DVI ANALOG / as the active input. This feature is used when two computers are connected to the display. The display automatically detects the proper input when only one video source is connected.</p> <p>FACTORY RESET Return to all factory default settings except "LANGUAGE". If you don't want to reset the monitor, use the ◀ ▶ button to select NO and then press the AUTO/SELECT button.</p>

Check the following before calling for service.

No image appears	
<ul style="list-style-type: none">● Is the power cord of the display connected?● Is the power indicator light on?● Is the power on and the power indicator green?● Is the power indicator amber?● Do you see an "INPUT SIGNAL OUT OF RANGE" message on the screen?● Do you see a "NO SIGNAL" message on the screen?	<ul style="list-style-type: none">• Check and see if the power cord is connected properly to the power outlet.• Press the Power button.• Adjust the brightness and the contrast.• If the display is in power saving mode, try moving the mouse or pressing any key on the keyboard to bring up the screen.• Make sure if the power is on.• Try to turn on the PC.• This message appears when the signal from the PC (video card) is out of horizontal or vertical frequency range of the display. Typically this issue can be resolved by restarting the PC with the display connected.• This message appears when the signal cable between your PC and your display is not connected. Check the signal cable and try again.

Do you see a "CONTROLS LOCKED" message on the screen?	
<ul style="list-style-type: none">● Do you see "CONTROLS LOCKED" when you push MENU button?	<ul style="list-style-type: none">• You can secure the current control settings, so that they cannot be inadvertently changed. You can unlock the OSD controls at any time by pushing the MENU button and ▶ button for 3 seconds: the message "CONTROLS UNLOCKED" will appear.

Display image is incorrect

● Display Position is incorrect.

- Press the **AUTO/SELECT** button to automatically adjust your display image to the ideal setting.
If the results are unsatisfactory, adjust the image position using the **H position and V position** icon in the on screen display.
- Check **Control Panel --> Display --> Settings** and see if the frequency or the resolution were changed. If yes, readjust the video card to the recommend resolution.

● On the screen background, vertical bars or stripes are visible.

- Press the **AUTO/SELECT** button to automatically adjust your display image to the ideal setting.
If the results are unsatisfactory, decrease the vertical bars or stripes using the **CLOCK** icon in the on screen display.

● Any horizontal noise appearing in any image or characters are not clearly portrayed.

- Press the **AUTO/SELECT** button to automatically adjust your display image to the ideal setting.
If the results are unsatisfactory, decrease the horizontal bars using the **PHASE** icon in the on screen display.
- Check **Control Panel --> Display --> Settings** and adjust the display to the recommended resolution or adjust the display image to the ideal setting. Set the color setting higher than 24 bits (true color).

● The screen color is mono or abnormal.

- Check if the signal cable is properly connected and use a screwdriver to fasten if necessary.
- Make sure the video card is properly inserted in the slot.
- Set the color setting higher than 24 bits (true color) at **Control Panel - Settings**.

● The screen blinks.

- Check if the screen is set to interlace mode and if yes, change it to the recommend resolution.
- Make sure the power voltage is high enough, It has to be higher than **AC100-240V 50/60Hz**.

Specifications

Display	Flat Panel Active matrix-TFT LCD 19 inch diag viewable, Anti-Glare coating, 0.29 mm pixel pitch Horizontal Viewing Angle: -85 to +85 deg typical Vertical Viewing Angle: -85 to 85 deg typical	
Sync Input	Horizontal Freq.	Analog:30 - 83kHz (Automatic) Digital:30 - 71kHz (Automatic)
	Vertical Freq.	56 - 75Hz (Automatic)
	Input Form	Separate TTL, Positive/Negative Composite TTL Positive/Negative SOG (Sync On Green) Digital
Video Input	Signal Input	15 pin D-Sub Connector DVI - I connector (Digital/Analog)
	Input Form	RGB Analog (0.7Vp-p/75ohm), Digital
Resolution	Max	DVI Digital/Analog:VESA 1280 x 1024@60Hz D-sub Analog:VESA 1280 x 1024@75Hz
	Recommend	VESA 1280 x 1024@60Hz
Plug&Play	DDC 2B	
Power Consumption	Normal	: 43W
	Stand-by/Suspend	≤ 3W
	DPMS Off	≤ 3W
Dimensions &Weight (with tilt/ swivel stand)	Width	41.28 cm / 16.25 inches
	Height	43.50 cm / 17.13 inches
	Depth	22.30 cm / 8.78 inches
	Net	7.20 kg (15.87lbs)
Tilt/Swivel Range	Tilt	-5° ~ 30°
	Swivel	360°
Power Input	AC 100-240V~ 50/60Hz 1.0A	
Environmental Conditions	Operating Conditions	
	Temperature	10°C to 35 °C
	Humidity	10 % to 80 % non-Condensing
	Storage Conditions	
Temperature	-20°C to 60 °C	
Humidity	5 % to 95 % non-Condensing	
Brightness	300 cd/m2 typical	
Contrast	700:1 typical	
Power cord	Wall-outlet type	
Regulations	UL, cUL, FCC	

NOTE

- Information in this document is subject to change without notice.

Preset Modes (Resolution)


Display Modes (Resolution)			Horizontal Freq. (kHz)	Vertical Freq. (Hz)
1	VGA	640 x 350	31.469	70
2	VGA	720 x 400	31.468	70
3	VGA	640 x 480	31.469	60
4	VESA	640 x 480	37.500	75
5	VESA	800 x 600	37.879	60
6	VESA	800 x 600	46.875	75
7	MAC	832 x 624	49.725	75
8	VESA	1024 x 768	48.363	60
9	VESA	1024 x 768	60.123	75
10	MAC	1152 x 870	68.681	75
11	VESA	1152 x 900	61.805	65
12	VESA	1280 x 1024	63.981	60
13	VESA	1280 x 1024	79.976	75

VESA wall mounting


Connected to another object (stand type and wall-mounted type. This monitor accepts a VESA-compliant mounting interface pad.)

Kensington Security Slot- optional

Connected to a locking cable that can be purchased separately at most computer stores

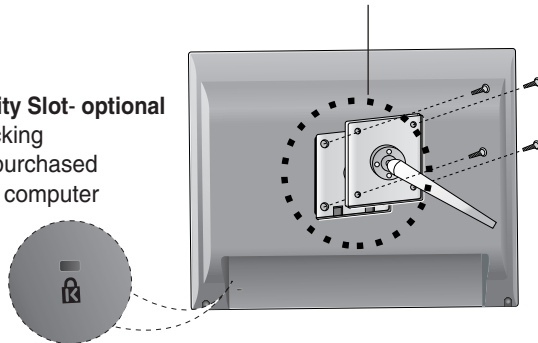

Signal Connector Pin Assignment

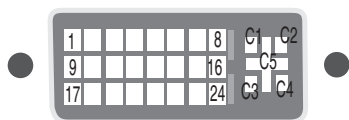

■ DVI-I Connector

Pin	Signal(DVI-I)
1	T. M. D. S. Data2-
2	T. M. D. S. Data2+
3	T. M. D. S. Data2/4 Shield
4	T. M. D. S. Data4-
5	T. M. D. S. Data4+
6	DDC Clock
7	DDC Data
8	Analog Vertical Sync.
9	T. M. D. S. Data1-
10	T. M. D. S. Data1+
11	T. M. D. S. Data1/3 Shield
12	T. M. D. S. Data3-
13	T. M. D. S. Data3+
14	+5V Power
15	Ground (return for +5V, H. Sync. and V. Sync.)


Pin	Signal(DVI-I)
16	Hot Plug Detect
17	T. M. D. S. Data0-
18	T. M. D. S. Data0+
19	T. M. D. S. Data0/5 Shield
20	T. M. D. S. Data5-
21	T. M. D. S. Data5+
22	T. M. D. S. Clock Shield
23	T. M. D. S. Clock+
24	T. M. D. S. Clock-
C1	Analog Red
C2	Analog Green
C3	Analog Blue
C4	Analog H. Sync.
C5	Analog Ground

T. M. D. S. (Transition Minimized Differential Signaling)

USB (Universal Serial Bus) is an innovation in connecting your different desktop peripherals conveniently to your computer. By using the USB, you will be able to connect your mouse, keyboard, and other peripherals to your display instead of having to connect them to your computer. This will give you greater flexibility in setting up your system. USB allows you to connect a chain of up to 120 devices on a single USB port; and you can “hot” plug (attach them while the computer is running) or unplug them while maintaining the Plug and the Plug auto detection and configuration. This display has an integrated BUS-powered USB hub, allowing up to 2 other USB devices to be attached it.

USB connection

1. Connect the upstream port of the display to the downstream port of the USB compliant PC or another hub using the USB cable. (Computer must have a USB port)
2. Connect the USB compliant peripherals to the downstream ports of the display.

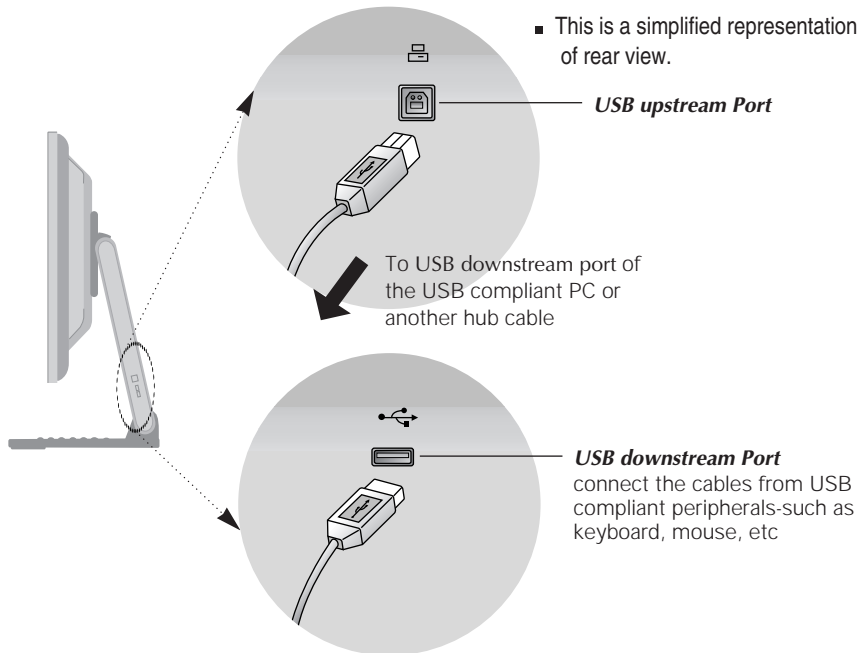

NOTE

- To activate the USB hub function, the display must be connected to a USB compliant PC(OS) or another hub with the USB cable(enclosed).
- When connecting the USB cable, check that the shape of the connector at the cable side matches the shape at the connecting side.
- Even if the display is in a power saving mode, USB compliant devices will function when they are connected the USB ports(both the upstream and downstream) of the display.

USB Specifications

USB standard	Rev. 1.1 complied BUS-powered hub
Downstream power supply	100mA for each (MAX)
Communication speed	12 Mbps (full), 1.5 Mbps (low)
USB port	1 Upstream port 2 Downstream ports

IMPORTANT: These USB connectors are not designed for use with high-power USB devices such as a video camera, scanner, etc. Recommend connecting high-power USB devices directly to the computer

PLANAR SYSTEMS, INC.

Customer Service

support: <http://planar.custhelp.com>

email: desktopmonitors@planar.com

phone: 1-866-PLANAR-1 (1-866-752-6271)

hours: M-F, 8am - 9pm EST

© 2003 **Planar Systems, Inc.** Planar is a registered trademark of Planar Systems, Inc. Other brands and names are the property of their respective owners.
Technical information in this document is subject to change without notice. ©0303

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>