

**Trust**

1290Z POWERCAM OPTICAL ZOOM

U K



**User's manual**  
Version 1.0

LIFE IS MORE! TRUST US

TRUST.COM



1290Z POWERCAM OPTICAL ZOOM

Thank you for your purchase. Register your product via our Internet site at [www.trust.com/register](http://www.trust.com/register), so that you will be eligible for optimal guarantee and service support. You will also be automatically informed of the development of your and other Trust products.

U K

LIFE IS MORE! TRUST US TRUST.COM

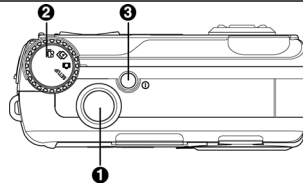


Fig. 1a

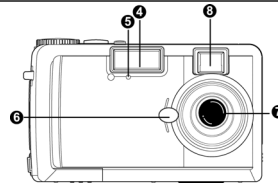


Fig. 1b

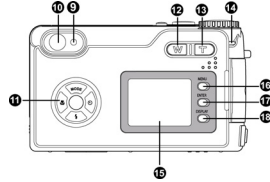


Fig. 1c

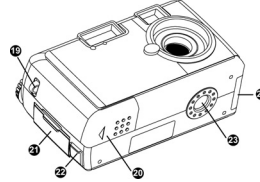


Fig. 1d

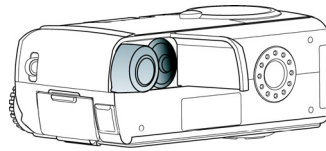


Fig. 2

<b>DATE SETTING</b>	
CARD FORMATTING	
LANGUAGE	ENG
LCD BRIGHTNESS	0
BEEP	ON
AUTO SHUT OFF	03MIN
VIDEO OUT	NTSC

Fig. 3

DATE SETTING	
<b>YEAR</b>	<b>2002</b>
MONTH	01
DATE	01
HOUR	12AM
MINUTE	00
OPTION	M/D/Y

Fig. 4

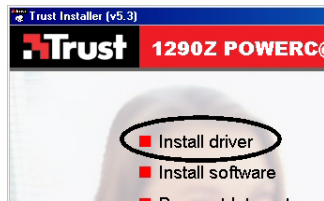


Fig. 5

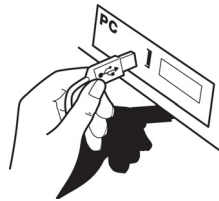


Fig. 6

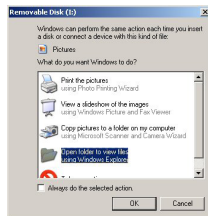


Fig.7



Fig. 8a

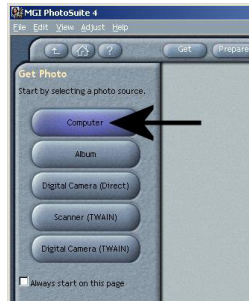


Fig.8b

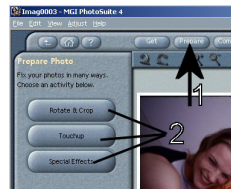


Fig. 8c

**!** Read the 'Quick Installation Guide' before using the camera for the first time.  
The basic functions of the camera are described here.

## **CONTENTS**

<b>1</b>	<b>Introduction</b>	<b>2</b>
1.1	Some general comments about photography	2
<b>2</b>	<b>Safety</b>	<b>2</b>
2.1	Batteries	3
<b>3</b>	<b>Approval</b>	<b>3</b>
<b>4</b>	<b>Explanation of the camera functions</b>	<b>3</b>
<b>5</b>	<b>Inserting and removing the batteries</b>	<b>5</b>
<b>6</b>	<b>Inserting the memory</b>	<b>5</b>
6.1	Formatting the memory	6
<b>7</b>	<b>User settings</b>	<b>6</b>
7.1	Setting the language of the OSD menu	6
7.2	Setting the date	6
<b>8</b>	<b>Taking photographs (📷)</b>	<b>7</b>
8.1	Zooming in and out	7
8.2	Selecting the mode	7
8.3	Self timer (⏱)	8
8.4	Focusing	8
8.5	Flash	8
<b>9</b>	<b>Recording video clips (📹)</b>	<b>9</b>
<b>10</b>	<b>Viewing pictures / videos</b>	<b>9</b>
10.1	Display on the camera (📷)	9
10.2	Connecting the camera to a computer	10
10.3	Playback on television	11
<b>11</b>	<b>Additional settings</b>	<b>12</b>
11.1	Capture mode	12
11.2	Settings in the Playback mode	13
11.3	Settings in the SETUP mode	14
11.4	Fitting the wrist strap	14
<b>12</b>	<b>Software</b>	<b>14</b>
12.1	Trust Photo Site	14
12.2	MGI PhotoSuite SE version 4.0	15
12.3	MGI Photovista	15
12.4	Deleting software and drivers	15
<b>13</b>	<b>Verification after installation (Windows)</b>	<b>16</b>
<b>14</b>	<b>Troubleshooting</b>	<b>16</b>
<b>15</b>	<b>Technical specifications</b>	<b>19</b>
<b>16</b>	<b>Warranty conditions</b>	<b>19</b>



## 1 Introduction

This instruction manual is for users of the TRUST 1290Z POWERC@M OPTICAL ZOOM. The camera is equipped with a 4 megapixel sensor and an optical zoom lens. The photos are saved on the memory card supplied with the camera.

### 1.1 Some general comments about photography

#### Taking test pictures

Before taking pictures of a unique event it is sensible to take some test pictures first. This is to make sure that the camera is working properly.

#### No damages can be claimed for a picture which is not satisfactory.

No damages can be claimed for unsatisfactory pictures caused by faulty working of your camera or software etc.

#### Exchanging picture data

No guarantees are given that pictures made with this camera can be reproduced on other apparatus, or that pictures made with other apparatus can be reproduced on this camera.

#### Sunlight

Do not point the camera at the sun for long periods as this can damage the sensor.

#### Knocking / shaking

Do not shake the camera or knock it against something. This may cause a fault, unsuccessful photographs, memory incompatibility or the loss of photographs from the memory.

#### LCD display

Small black or bright spots can sometimes be seen on a LCD display. This is a normal occurrence and has no influence on the quality of the image recorded by the camera. When there are no more than 10 of these spots it is not necessary to exchange the camera.

Exposing the LCD display to sunlight for a long time can cause defects.

#### Lens

Keep the glass of the lens clean. Use a cotton wool stick to clean the lens. If necessary, use special cleaning fluid for camera lenses. Do not use any other cleaning materials.

## 2 Safety

Read the following instructions carefully before using:

- The Trust 1290Z0 PowerC@m Optical Zoom does not require any special maintenance. Use a slightly moist soft cloth to clean the camera.
- Do not use any aggressive materials such as petroleum spirit or turpentine. These can affect the materials used.
- Never immerse the camera in a fluid. This can be dangerous and damage the product. Do not use the camera in the vicinity of water.
- Do not try to repair the camera yourself.

## 2.1 Batteries

- The Duracell Ultra batteries supplied with the device are not rechargeable. Do not try to recharge these batteries. This can give rise to danger of an explosion.
- Do not throw the batteries into a fire. The batteries could explode.
- Do not drill through the batteries.
- Keep the batteries out of reach of small children.
- Use solely NiMH AA batteries with this camera (at least 1800mAh).
- When the alkaline batteries (including Duracell Ultra batteries) are empty, ask your local authority where you can dispose of them.

**N.B.:** *standard NiCd AA batteries are unsuitable for use with this camera.*

**N.B.:** *do not use old and new batteries together, since the old batteries may drain the new batteries.*

**N.B.:** *remove the batteries if the camera is not to be used for a longer period of time. This will prolong the life of the batteries.*




## 3 Approval



This product conforms with the essential requirements and other relevant provisions stipulated by the applicable European directives. The Declaration of Conformity (DoC) is available at [www.trust.com/13984/ce](http://www.trust.com/13984/ce).

## 4 Explanation of the camera functions

Please refer to Figures 1a to 1d inclusive.

Item	Explanation	Description
1	Shutter release button	Press this button to take a photograph.
2	Selector dial	Dial for the selection of the mode. SETUP      Setup mode: For the adjustment of the settings.  Capture mode: Taking photographs. (Section 8)  Playback mode: Display photograph(s). (Section 10)  Video mode: Recording a video clip (Section 9)
3	Power Button	Press the button to switch on the camera. Press the button again to switch off the camera.
4	Flash	Use the built-in flash to highlight the subject.
5	Automatic exposure indicator	Illuminated/flashes when the automatic exposure function is used. (Section 8.3)
6	Lens cover	Protects the lens when the camera is not in use. Slide the button downwards to open the cover.
7	Lens	The lens focuses the image on the digital

U K

TRUST 1290Z POWERCAM OPTICAL ZOOM

Item	Explanation	Description
		image capturing circuitry. Make sure that the lens remains free of dust and fingerprints; take care not to scratch the lens.
8 + 10	Viewfinder	The viewfinder is used to determine the format of the photograph and its composition. The actual photograph is taken through the lens, not the viewfinder. The image may differ when the digital zoom is used.
9	Indicator	Indicates the current camera mode.
11	Control buttons	Button to scroll through the menu, or "←" button: macro function (Section 8.4) "→" button: automatic exposure (Section 8.3) "↑" button: mode (Section 8.2) "↓" button: flash settings (Section 8.5)
12	"W" button (zoom out)	Use the Zoom-out button to zoom out on the subject while in Capture mode.
13	"T" button (zoom in)	Use the Zoom-in button to zoom in on the subject while in Capture mode.
14	Indicator	Indicates the status of the memory.
15	LCD display	Use the LCD display to preview photos. In the Setup menu the LCD display can be used to view the configuration.
16	"MENU" Button:	Press the "MENU" button to enter the menu.
17	"ENTER" button	Use the "ENTER" button to confirm or perform a function.
18	"DISPLAY" button	Used to determine the presentation on the LCD display. Turning the LCD display off will save batteries.
19	Hook for the carrying strap	For your convenience, attach the carrying strap to the hook on the camera.
20	Battery cover	Protects the batteries.
21	Memory card cover	Protects the memory card.
22	USB connection	The USB (Universal Serial Bus) port is used to connect the camera to a PC for the transfer of photos.
23	Tripod socket	Use the tripod socket to fit a tripod to the camera. This optional accessory is used to stabilize the camera. This is ideal for photography when little light is available, e.g. at night.
24	Video-out connection / adapter connection	Connect your video-out cable to your TV and this socket to use the television to preview your images. You can also connect an adapter (not supplied with the camera) to this socket.

Table 1: camera functions



## Preparing the camera for use

### 5 Inserting and removing the batteries

Follow the instructions given below to insert or remove the batteries

**N.B.:** *make sure the camera is turned off.*

Open the battery cover and insert the batteries into the battery compartment as indicated on the inside of the battery cover. Close the battery cover.

When the battery voltage begins to fall the battery indicator (B) will be shown in the LCD display. Replace the batteries in time.

**N.B.:** *the camera case will become warm during use. This is normal.*

**N.B.:** *after inserting or replacing the batteries you will need to reset the date and the time (see Section 7.2)*

**N.B.:** *turn off the LCD display to prolong the life of the batteries.*

Battery life: It is preferable to use Ni-MH batteries rather than Alkaline batteries in digital cameras. Trust's product range includes a variety of Ni-MH battery chargers. (please refer to [www.trust.com/battery-chargers](http://www.trust.com/battery-chargers))

### 6 Inserting the memory

A memory card is supplied with this camera. You can save a number of photos on this card. We recommend the purchase of a memory card with a larger capacity. This will enable you to save more photographs (Table 2).

Memory cards can be purchased from, for example, a photography store.

Image quality	8MB	16MB	32MB	64MB	128MB
<b>Fine:</b>	3	11	23	46	97
<b>Standard (STD)</b>	7	22	47	96	195
<b>Basic</b>	11	34	72	149	301
<b>Economy (ECO)</b>	44	129	270	553	1118

Table 2: list of storage capacities

**N.B.:** *to avoid damage to the memory card or the camera, turn the camera off before inserting or removing the memory card.*

**N.B.:** *do not remove the memory card when the indicator is flashing.*

Follow the instructions given below to insert the memory card.

Open the memory-card cover (21, Figure 1d) and insert the memory card as indicated in the holder. Press the memory card into the slot until it clicks in place.

Remove the memory card by pushing it to release the lock. Remove the memory card.

**N.B.:** *the memory card fits only in one way in the camera. Do not force the card into the slot. This can damage both the memory card and the camera.*

The external memory card needs to be formatted for optimum use. See Section 6.1.

**N.B.:** *never remove the memory card while the camera is processing data. (the green indicator is flashing (14, Figure 1c). This can result in the loss of data, or defects.*

U K






Symbol	Mode	Description
	Photo, Playback, Video	No memory card in the camera.
	Photo, Playback, Video	The camera is unable to recognize the card. Check that the card has been inserted correctly. Format the card using the external card reader.
	Playback	No images stored on the memory card.
	Photo, Video	Memory card is full. No more images can be stored on the card.
	Playback	Playback not possible, for example because the recording is damaged.

Table 3: memory symbols shown on the LCD display

## 6.1 Formatting the memory

For the optimum use of the internal memory or a memory card format the memory before use.

**N.B.:** *formatting the memory card will delete all data stored on the card, inclusive of the images which have been write-protected.*

**N.B.:** *the card cannot be formatted in the write-protected mode (Lock).*

1. Switch on the camera, and turn the selector dial to "SETUP"
2. Press the "MENU" button. See Figure 3.
3. Select [CARD FORMATTING] using the "↑" button or the "↓" button
4. Press the "ENTER" button.
5. Select [YES] using the "↑" button or the "↓" button
6. Press the "ENTER" button. The memory card will now be formatted.

## 7 User settings

### 7.1 Setting the language of the OSD menu

1. Switch on the camera, and turn the selector dial to "SETUP"
2. Press the "MENU" button.
3. Select [LANGUAGE] using the "↑" button or the "↓" button (options: English, German, French, Italian, and Spanish)
4. Select the language using the "←" button or the "→" button
5. Your choice will be saved if you
  - a. Press the "ENTER", "↑" or "↓" buttons
  - b. Change to another mode
  - c. Switch off the camera

### 7.2 Setting the date

1. Switch on the camera, and turn the selector dial to "SETUP"
2. Press the "MENU" button. See Figure 3.

6

3. Select [DATE SETTING] using the "↑" button or the "↓" button
4. Press the "ENTER" button. See Figure 4.
5. Use the "↑" or "↓" button to select [YEAR/MONTH/DAY/HOUR/MINUTE/OPTION]  
Use the "←" or "→" button to adjust the setting
6. Press the "MENU" button to save the settings

## Basic use of the camera

### 8 Taking photographs (📷)

Please consult the Quick Installation Guide.

Make sure that the batteries and the memory card have been fitted to the camera.

1. Open the lens cover
2. Switch on the camera, and turn the selector dial to Capture mode (📷)
3. Use the viewfinder or the LCD display to position the camera on the subject
4. Press the shutter release button half-way in; the camera will adjust the exposure settings and the focus. Press the shutter release button fully in.
5. The photo will now be saved on the memory card.

**N.B.:** *it may take a little while to save the photograph. You will need to wait about 10 seconds before you can take the next photo.*

**N.B.:** *hold the camera steady to avoid taking blurred photos.*

#### 8.1 Zooming in and out


This camera has an optical zoom (3x) and a digital zoom (2x).

You can use the Zoom-in (T) or Zoom-out (W) buttons to reduce or increase the camera's field of view. Use the LCD display or the viewfinder (solely optical display) to preview the effect of the zoom function.

##### Digital zoom

The digital zoom enables you to magnify the image by a factor of 2.

Zoom in completely on the subject (keep the "T" button pressed in).



Briefly release the "T" button, and then press it in again. This will activate the digital zoom. The  symbol will be shown on the LCD display.

**N.B.:** *the digital zoom can decrease the image quality.*



#### 8.2 Selecting the mode

Use the "↑" button (MODE) to switch between the camera's various programmed settings.

Symbol	Mode	Description
none	Normal	Normal mode. You can adjust the settings in the menu.
	Portrait	Used to photograph people. The camera focuses on the person, and the background is less sharp.
	Landscape	Used to photograph landscapes such as mountains.


Symbol	Mode	Description
	Night view	Used to take photographs when little light is available. The camera uses a longer exposure time. The flash will be used. <b>N.B.:</b> <i>the use of a tripod is recommended when the camera is set to this mode.</i> <b>Note:</b> <i>the macro function cannot be activated.</i>

Table 4: mode settings

### 8.3 Self timer (⌚)

This function enables you to take a delayed photograph. The function can be used to take a self-portrait, a photograph of a group, or a macro photo (a close-up).

Use the "→" button (⌚) to set the self-timer.

Press the shutter release button fully in to take a photo with the self-timer.

The self-timer indicator (5, Figure 1b) will light for 7 seconds, and then begin to flash. The photo has been taken once the indicator is no longer illuminated/flashing.

The self-timer is switched off again after the photo has been taken.

**Note:** *you can interrupt the self-timer function by pressing the shutter release button again.*

### 8.4 Focusing

Use the "↓" button (⏴) to adjust the camera's focus.


Symbol	Distance	Description
<b>AF</b>	70 cm – infinite (~)	Auto focus: this setting is optimized for portrait photos of other people.
	10 - 70 cm (Wide) 25 - 70 cm (Tele)	Macro mode (for close-up photos).
<b>Inf.</b>	Infinite (~)	The focus is optimized for landscape photos; the lens is focused such that all objects in the field of view are equally sharp.

Table 5: focus settings

**Note:** *when the camera is used in the "Auto focus" mode you will need to press the shutter release button half-way in to focus the camera. The camera will now focus on the subject. Press the shutter release button fully in. (Do not release the shutter release button once the camera has focused on the subject)*

### 8.5 Flash

You can use the flash when there is insufficient ambient light, and to fill-in the subject when photographing against the light.

It will take about 10 seconds to charge the flash when the batteries are new. The LCD display is extinguished whilst the flash is charging. The status indicator flashes.

Symbol	Status	Function
	Automatic	The camera automatically uses the flash when so required.
	On	The flash will be used for all photographs. This is ideal when fill-in flash is needed (against the light). <b>N.B.:</b> <i>the flash is turned off in burst mode.</i>
	Off	The flash is not used.
	Red-eye reduction	The flash will be automatically used when there is insufficient light; an advance flash will be used to reduce the red-eye effect.

Table 6: summary of flash settings

## 9 Recording video clips

You can use this function to record video clips of a maximum duration of 30 seconds.

1. Turn the selector dial to video mode .
2. Press the shutter release button to begin recording. The camera will then make a recording until 30 seconds have passed or the shutter release button is pressed again.

**N.B.:** *the digital zoom cannot be used.*

**N.B.:** *you cannot zoom in or out during the recording.*

## 10 Viewing pictures / videos

### 10.1 Display on the camera

To view photos turn the selector dial to Playback mode and switch on the camera. The last photo you took will be displayed.

The default Playback method is to display individual photos on the full screen. Press the "←" button or "→" button to browse through the photos stored in the memory.

**N.B.:** *you will need to wait about 5 seconds before the photo is shown on the LCD display, allowing you to browse to the next photo*

U K

**Enlarging photos**

You can use the Zoom buttons (T)/(W) to display a photograph in more detail. The default zoom setting is 1.0x

Press the zoom-in button (T) to increase the zoom factor from 1.0x to 4.0x in 1.0x increments. Press the zoom-out button (W) to reduce the zoom factor

You can use the "↑", "→", "↓" and "←" buttons to browse through the photos.

**Thumbnails**

Press the "DISPLAY" button until the thumbnails are shown on the LCD display.

In Thumbnail Review mode up to nine photographs are displayed simultaneously on the LCD display. You can use the "↑", "→", "↓" and "←" buttons to browse through the thumbnails.

To return to Full-Screen view select the required photo and press the "ENTER" button. The selected picture will then expand to fill the entire LCD display.

**Video recordings**

Press the "ENTER" button to start the playback of the video. Press the "ENTER" button to interrupt the playback of the video. Press the "ENTER" button again to continue the playback.

Whilst the playback is interrupted you can use the "←" and "→" buttons to browse to the previous/next shot.

**Erasing an image**

1. Select the image you wish to erase
2. Press the "MENU" button.
3. Select [ERASE SINGLE IMAGE]
4. Press the "ENTER" button.
5. Select [YES] and press "ENTER" to erase the image.
6. Press the "MENU" button to return to the normal playback mode.

**N.B.:** *you cannot erase images which are protected or set ready for printing.*

**10.2 Connecting the camera to a computer**

This Section explains how the camera can be connected to a computer for the transfer of images.

Before you connect the camera to the computer you must complete the following steps:

1. Install the driver (only for Windows 98) Section 10.2.1
2. Connecting the camera to a computer Section 10.2.2
3. Copying photos/video-clips to the computer Section 10.2.3

**10.2.1 Installing the driver (only for Windows 98)**

**N.B.:** *do not connect the camera to your computer before you install the driver.*

1. Insert the CD-ROM in your computer's CD-ROM drive. The installation program will start automatically. If it does not start automatically, carry out the following:
  - a. Select 'Run' from the Windows Start menu.
  - b. Key in [D:\setup.exe] and click 'OK'

2. The Trust Software Installer window will be displayed (Figure 5). Select the language (in the top right-hand corner) you wish to use during the installation.
3. Select 'Install driver'
4. Follow the directions displayed on the monitor, and restart the computer if so advised.

#### 10.2.2 Connecting the camera to the computer (Windows and Macintosh)

1. Connect the small connector of the USB cable to the camera. (22, Figure 1d)
2. Connect the large end of the USB cable to an empty USB port on your computer (Figure 7). The Windows "New Hardware" Wizard will automatically detect the camera and guide you through the installation procedure. The desktop of a Macintosh will be supplemented by an "UNLABELED" icon

#### 10.2.3 Copying photos/video-clips to the computer

When the camera is connected to your computer the digital camera will behave like any other exchangeable disk drive connected to your computer. Copying images from your camera to the hard drive is then as easy as copying files from a floppy disk, ZIP drive, or CD-ROM.

**N.B.:** *some time may be required to copy the photos from the camera to the computer (8MB/80sec) ([www.trust.com/cardreaders](http://www.trust.com/cardreaders))*

##### 10.2.3.1 PC

Make sure than the camera is connected to the computer, and that the camera is switched on.

1. Windows XP: on connecting the camera a "Removable disk" window will be displayed on the monitor. (Figure 8). Select the option "Open folder to view files using Windows Explorer". Skip Step 2.
2. Open Windows Explorer. The contents of your computer will be displayed, inclusive of all your disk drives; provided your camera is connected properly the content of the camera's memory will be shown in an extra "Removable Disk" disk drive.
3. Select the digital camera's 'Removable Disk' station.
4. Open the DCIM -> 100PRDSC folder
5. Select the photos and drag them to a directory, for example "My Pictures", on your computer's hard drive.

##### 10.2.3.2 Macintosh

Make sure than the camera is connected to the Macintosh, and that the camera is switched on.

Open de UNLABELED folder on the desktop, and then open the "DCIM" -> 100PRDSC folder

You can view the images using a suitable program.



### 10.3 Playback on television

The camera can be connected to a TV or video to playback your photos and / or video-clips. A standard RCA video cable is supplied with the camera.

#### Setting video-out

The camera's TV-OUT should be set to PAL. This standard is the most usual standard used in Europe. See Table 9.

#### Connecting the camera to a TV:

1. Connect one end of the video cable to the camera's video-out connection. (24, Figure 1d)
2. Connect the other end of the video cable to your TV. Your TV needs an input for video signals (yellow RCA plug). The yellow plug is used for the image signal.  
You will need an adapter if your TV has only a SCART plug. This can be purchased from most TV and radio stores.
3. Adjust the TV to video-input display.
4. Switch on your camera. The camera's image will now be displayed on your TV. To display all images set the camera to slide show (Table 8). Each image is displayed for 2 seconds.

**N.B.:** *when you use the camera in slide show mode the image will be displayed on the TV for 2 seconds; about 5 seconds will elapse before the next image is displayed.*

**Note:** *make sure you use the PAL setting in Europe. The use of the incorrect standard will result in a fuzzy black-and-white image.*

**Note:** *the camera's video-out output is not suitable for use with your TV's aerial connection. Your TV needs a Video-in connection.*

**Note:** *if you do not see an image and you hear a loud humming sound through the speakers you may have connected the image plug to the incorrect socket. Check the connections.*

## Other settings



### 11 Additional settings

#### 11.1 Capture mode

Press the "MENU" button to adjust the additional settings.

Use the "▲" and "▼" buttons to select the function

Use the "←" and "→" buttons to adjust the setting

Option	Possible settings	Icon	Explanation
Mode	[Single]		Takes one photograph when the shutter release button is pressed
	[Burst]		Takes three successive photographs when the shutter release button is pressed
[Quality]	[Fine]	<b>Fine</b>	Set the camera's resolution (Table 2).
	[Eco]	<b>ECO</b>	
	[Basic]	<b>Basic</b>	
	[STD]	<b>STD</b>	















[ISO Sensitivity]	[100]		Set the ISO sensitivity. The amount of light required to take a good photo decreases with increase in ISO setting.
	[200]		
	[400]		
[Exposure] (also for the Video mode)	[0.00]		Set the exposure time. Adjustable from -1.50 -> 0 -> 1.50 in 0.25 increments
[White Balance] (also for the Video mode)	[AWB]		Use the AWB setting for the optimum brightness (lighting) of the photo.
	[Daylight]		Use when taking photos outdoors or in brightly-lit conditions.
	[Fluorescent]		Use when taking photos with fluorescent lighting.
	[Tungsten]		Use when taking photographs with tungsten lighting.
[Photometry]	[Spot]		The exposure settings are determined by the light falling on the subject in the middle of the field
	[Center weighted]		The exposure settings are determined by the lighting falling on all subjects in the field
[AE mode]	[Normal]		Normal exposure time
	[Creative]		A longer exposure time. Ideal for a still life.
	[Action]		A short exposure time, ideal for a motion shot.

Table 7: summary of the menu settings in the Capture mode

## 11.2 Settings in the Playback mode

Switch on the camera, and turn the selector dial to "Playback"

Press the "MENU" button to adjust the additional settings.

Use the "↑" and "↓" buttons to select the function

Press the "ENTER" button to adjust an option

Use the "←" and "→" buttons to adjust the setting

Setting	Options	Explanation
[Erase All Images]	[Yes]	Delete all images. Images marked as "Lock" will not be erased.
	[No]	
[Erase single image]	[Yes]	The selected image will be erased. Images marked as "Lock" will not be erased.
	[No]	
[Protect]	[Lock/Unlock]	Adjust the protection setting of the image.
[Print Setting]	[Select] <>	Set the image for printing directly to a printer using the card reader (DPOF).
	[Date Print]	



Setting	Options	Explanation
	[Quantity]	Date Print, prints the date on the print. The number can be set between 0 and 99
[Slide Show]		Start slide show. Press the "ENTER" button to start/stop the slide show.

Table 8: settings in the Playback mode

### 11.3 Settings in the SETUP mode

Switch on the camera, and turn the selector dial to "Setup" (Figure 3)

Use the "↑" and "↓" buttons to select the function

Use the "←" and "→" buttons to adjust the setting

Option	Function, and possible settings
[Date Setting]	Set the date (Figure 4)
[Card Formatting]	Format the memory card
[Language]	Set the language
[LCD Brightness]	Adjust the luminance of the LCD display. Ideal in sunlight, or in darker surroundings.
[Beep]	Set the aural signal
[Auto Shut off]	Adjust the energy-saving setting (1, 3, or 5 minutes)
[Video out]	Set Video-out to PAL or NTSC. On the adjustment of the setting the LCD display will be extinguished for a maximum of 5 seconds.

Table 9: settings in the setup mode

### 11.4 Fitting the wrist strap

Fit the wrist strap to the camera for optimum convenience, and for the safety of your camera. Attach the strap to the attachment point (19, Figure 1d)

## 12 Software

### 12.1 Trust Photo Site

Trust offers you an opportunity to publish your photographs on the Internet. To do so, surf to our website ([www.trustphotosite.com](http://www.trustphotosite.com)). A number of conditions are attached to the use of this site. The conditions are stated on our website, [www.trustphotosite.com](http://www.trustphotosite.com).

#### Installation (Windows)

Install the Trust Photo Upload from CD-ROM. (Trust Installer → Install software → Trust Photo Upload)

#### Use (Windows)

An instruction manual for the Trust PhotoSite is included on the CD-ROM. This explains how to install and use the software. (Trust Installer → Read instructions → Trust PhotoSite)

## 12.2 MGI PhotoSuite SE version 4.0

### Installation

1. Insert the CD-ROM in your CD-ROM drive. Trust Installer → "Install software" → "MGI PhotoSuite 4 SE".
2. Select the required language for the program. Click 'OK'.
3. Follow the on-screen instructions to complete the installation.
  - Check "Install Jerry Downs collection photo album"
  - Under "File association" check at least "JPEG image" for PhotoSuite 4
4. You can use "register online" to register the program with MGI. Click "Finish" to close the Wizard. Restart the computer when requested to do so.

### Use

1. Connect the camera to the computer, and switch on the camera.
2. Start MGI Photosuite 4 (Start – programs – MGI Photosuite – MGI PhotoSuite 4)
3. Click the "GET" button (Figure 8a)
4. Select "Computer" (Figure 8b)
5. Under "Look in" select the camera's "removable disk"
6. Open the DCIM -> 100PRDSC folder
7. Select the image and click "open".

**N.B.:** *a little time may be required to open the image. (a maximum of 30 seconds)*

8. You will then be able to edit the image (Figure 8c).
9. You can save the image on your computer. Click File and select "Save as.." The use of a new filename is recommended.

The Help function contains more information about the use of the software.

## 12.3 MGI Photovista

1. Insert the CD-ROM in your CD-ROM drive. Trust Installer → "Install software" → "MGI PhotoVista".
2. Select the required language for the program. Click 'OK'.
3. Follow the on-screen instructions to complete the installation.
4. You can use "register online" to register the program with MGI. Click "Finish" to close the Wizard. Restart the computer when requested to do so.

### Use

You can use this program to paste a number of photos to create a panorama photo. You can, for example, create a 360° photo.

Information about the initial use of the program is given in the "Quick Start Tutorial" (Help – Quick Start Tutorial)

## 12.4 Deleting software and drivers

Follow the steps given below if you wish to delete the camera's driver, the MGI PhotoSuite/Photovista software or the Trust Photo Upload program from your computer

1. In the Control Panel, go to Software (Start → Settings → Control Panel → software)



2. Click the program you wish to delete, and then click the "delete" button
3. Follow the instructions displayed on the monitor. Restart your computer if requested to do so.

### 13 Verification after installation (Windows)

Subsequent to the complete installation of the product and the programs the following programs will be installed on your computer; you can check for their presence:

Start – Settings – Control Panel – System – Device Manager

- Disk Drives – Digital Camera 4MP859 USB Device (Windows XP, 2000)
- Storage volumes – Generic Volume (Windows XP, 2000)
- Universal Serial Bus Controllers – USB Mass Storage Device (Win. XP, 2000)

- Disk drives – Digital Camera 4MP859 (Windows ME)
- Storage Device – USB Disk (Windows ME)
- Universal Serial Bus Controllers – USB Mass Storage Device (Windows ME)

- Disk drives – Digital Camera 4MP859 (Windows 98)
- Hard disk controllers – Digital Camera DISK device (Windows 98)
- Universal Serial Bus controllers – Digital Camera (Windows 98)

'Start – Settings – Control Panel' – Software

- Digital Camera Drivers
- MGI PhotoSuite 4.0 (remove only)
- MGI Photovista 2.02 (remove only)
- Trust Photo Upload

Start - Programs -----

- Trust - Trust Photo Upload - Trust Photo Upload
- MGI PhotoSuite 4 – MGI PhotoSuite 4
- MGI PhotoSuite 4 – Photo Viewer
- MGI PhotoSuite 4 – Read Me
- MGI Photovista – MGI Photovista
- MGI Photovista – Photovista Readme

**N.B.:** *the information given above will vary when the installation has been altered by the user (for example, not everything has been installed or locations other than the default locations have been selected).*

**N.B.:** *differences may also result from the use of new drivers available on the Internet.*

**N.B.:** *the location or name may vary in the Control Panel of different operating systems.*

### 14 Troubleshooting

#### **Procedure**

1. Read the solutions listed below
2. Check the latest FAQs, drivers and manuals on the Internet ([www.trust.com/13948](http://www.trust.com/13948))



## Messages shown on the LCD display, and solutions

Message	Solution
[Card Protected]	Memory card is write-protected, remove the card's write protection.
[Open the Lens Cover]	The lens cover is still closed. Open the lens cover.
[No Image]	No images on the memory card.
[Rec Error]	Problems have arisen with saving the image. Switch on the camera again.
[Card Error]	The camera cannot format the memory card. Use a card reader, or try another memory card.

Table 10: messages shown on the LCD display

Problem	Cause	Possible solution
The camera has no power.	The camera is switched off.	Press the power button to switch on the camera.
		The batteries are discharged. Replace the batteries with new ones. Refer to the section on batteries.
		The batteries are inserted incorrectly. Check the battery orientation. Refer to the section on batteries.
The camera won't take a picture.	Memory card full?	Backup your images and delete unwanted images, or format the memory card.
	Is the camera connected to a computer?	The camera's buttons are not operational whilst connected to a computer. Disconnect the camera to take photos.
The flash doesn't work.	Is the flash switched on?	Check whether the flash is set to automatic, or to always on. Refer to the section on the flash.
	The batteries may be weak.	The flash cannot be charged if the batteries are almost empty. Switch off the camera, and wait a few seconds before switching it on again. If this doesn't solve the problem then replace the batteries.
The images are blurry.	The camera or subject was moving when the shot was taken.	Hold the camera still; if so required, use a tripod. Use the self-timer.
	Adjustment of the lens focus	Check that the lens is focused correctly.

U K

Problem	Cause	Possible solution
Windows ME and Windows 2000: An "Unsafe Removal Device Detected" error message appears when the USB cable is unplugged from the computer.	Use if the "Safe Removal of USB Device" procedure is recommended when removing USB devices.	<p>Procedure:</p> <ol style="list-style-type: none"> <li>Right-click the Unplug or Eject hardware icon displayed at the bottom-right of your computer's monitor.</li> <li>Left-click the Unplug or Eject hardware text box to open the 'Unplug or Eject Hardware' screen.</li> <li>Select the device to be disconnected from the 'Unplug or Eject Hardware' screen, and then click the Stop button to call the 'Stop a Hardware device' confirmation screen.</li> <li>Select the device to be stopped from the 'Stop a Hardware device' confirmation screen, and click OK to call the 'Safe To Remove Hardware' confirmation.</li> <li>Disconnect the cable to the digital camera.</li> </ol>

If you still have problems after trying these solutions, please contact one of the Trust Customer Care Centers. You can find more information on the back of this instruction manual. Please have the following information available.

- The item number, in this instance: 13948;
- An accurate description of the precise nature of the problem;
- An accurate description of precisely when the problem occurs

**15 Technical specifications**

Image Sensor	Type: CCD Resolution: 4M pixels
Digital zoom	2x for taking photos 4x for playback, in 1.0 increments
Still image capture	2272 x 1704 (photo) 1600 x 1200 (Standard) 1280 x 960 (Basic) 640 x 480 (Economy)
Colour TFT LCD	Size: 1.6" Resolution: 280 x 220
Self-timer	Automatic, with menu compensation +/- 1.50 0.25 increments
Preset mode	Auto White Balance Daylight Fluorescent Incandescent lamp
Flash mode	Auto On Off Red-eye reduction
File format	JPEG compression EXIF 2.2 file format
Computer Interface	USB 1.1
Video-output	NTSC & PAL
Power source	2 x AA (Alkaline, NIMH, Lithium)
Storage interface	SD card socket support
Dimensions	Body: 106 x 63 x 40mm
Regulation and Certification	CE

U K

## 16 Warranty conditions

- Our products have a two-year manufacturer's warranty which is effective from the date of purchase.
- If there is a fault, return the product to your dealer. Include an explanation of the fault, the proof of purchase and all the accessories.
- During the warranty period, you will receive a similar model, if one is available. If no similar product is available, your product will be repaired.
- Please contact our help desk for missing components, such as the instruction manual, software or other components.
- The warranty becomes invalid if the device has been opened, if there is mechanical damage, if the device has been misused, if alterations have been made to the device, if the device has been repaired by a third party, in the case of negligence or if the device has been used for a purpose other than that originally intended.
- Excluded from the warranty:
  - Damage caused by accidents or disasters, such as fire, flood, earthquakes, war, vandalism or theft.
  - Incompatibility with other hardware/software which is not stated in the minimum system requirements.
  - Accessories, such as batteries, fuses (if applicable).
- Under no circumstances will the manufacturer be held responsible for any incidental or consequential damage, including the loss of income or other commercial losses resulting from the use of this product.





## CUSTOMER CARE CENTERS

<b>24 HOURS free service: <a href="http://www.trust.com">www.trust.com</a></b>		
<b>Residents in the UK and Ireland should contact:</b>		
Mon - Fri From 8:00 - 16:00	<b>UK Office</b> Phone Fax	+44-(0)845-6090036 +31-(0)78-6543299
<b>I residenti in Italia possono contattare:</b>		
lun - ven 9:00 - 13:00 / 14:00 -18:00	<b>Ufficio italiano</b> Telefono Fax	+39-051-6635947 +39-051-6635843
<b>Les habitants de la France et de l'Afrique du Nord peuvent contacter :</b>		
Lundi-vendredi De 9:00 à 17:00	<b>Bureau français</b> Téléphone Fax	+33-(0)825-083080 +31-(0)78-6543299
<b>Kontaktadresse für Einwohner Deutschlands:</b>		
Mo – Fr 9:00 - 17:00	<b>Deutsche Geschäftsstelle</b> Telefon Fax	0800-00TRUST (0800-0087878) +31-(0)78-6543299
<b>Los habitantes de España pueden ponerse en contacto con:</b>		
lun – viernes De las 9:00 a las 17:00 horas	<b>Oficina española</b> Teléfono Fax	+34-(0)902-160937 +31-(0)78-6543299
<b>Osoby mieszkające na terytorium Polski powinny skontaktować się:</b>		
Od pon. do pt. w godz 09:00-17:00	<b>Biuro w Polska</b> Tel Fax	+48-(0)22-8739812 +31-(0)78-6543299
<b>Inwoners van Nederland kunnen contact opnemen met:</b>		
ma – vr 9:00 - 17:00 uur	<b>Kantoor Nederland</b> Telefoon Fax	0800-BELTRUST (0800-23587878) +31-(0)78-6543299
<b>All other countries / Alle anderen Länder / Tous les autres pays Tutti gli altri paesi / Todos los demás países / Alle andere landen</b>		
Mon - Fri From 9:00 - 17:00	<b>European Head Office</b> Phone Fax	+31-(0)78-6549999 +31-(0)78-6543299

LIFE IS MORE! TRUST US TRUST.COM

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>