

***701 RF Terminal Users Guide  
Worth Data Inc.  
11/05***

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Shielded cables and I/O cords must be used with this equipment to comply with the relevant FCC regulations. Changes or modifications not expressly approved in writing by Worth Data may void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions: 1) this device may not cause interference, and 2) this device must accept any interference, including interference that may cause undesired operation of the device.

The 701 RF Terminal and B551 Base Station have been approved for use in the United States and Canada as a low power frequency hopping spread-spectrum radio operating in the unlicensed 902 MHz frequency range.

The LT701 model of this product has a laser scanner integrated with the Terminal as one unit. The laser used is a Class II Laser Product and has a 1.2 Milliwatt Output. To operate the laser scanner, aim the top of the case at a bar code, and press the long green key on the keyboard of the R/F Terminal. The light source will turn off, once a successful scan has occurred or 2.5 seconds has elapsed, whichever is first. Do not look directly into the laser light source with the "Scan Key" depressed; avoid direct eye contact with the laser light source.

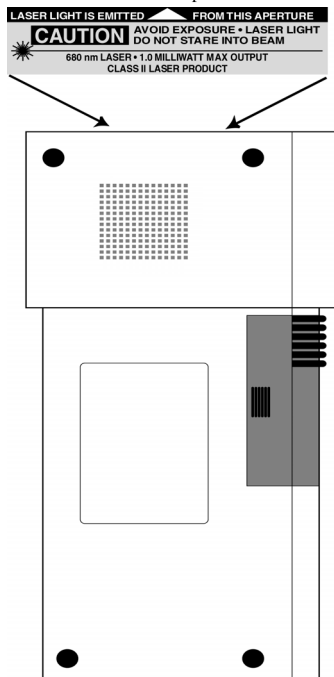

The LTnn models of the RF Terminal as well as the LZ300 and LZ400 Laser Scanners are covered by one or more of the following U.S. Patents:

Patent #	4,360,798	4,369,361	4,387,297	4,460,120
4,496,831	4,593,186	4,603,262	4,607,156	4,652,750
4673,805	4,736,095	4,758,717	4,816,660	4,845,350
4,896,026	4,897,532	4,923,281	4,933,538	4,992,717
5,015,833	5,017,765	5,021,641	5,029,183	5,047,617
5,103,461	5,113,445	5,140,144	5,142,550	5,149,950
5,157,687	5,168,148	5,168,149	5,180,904	5,229,591
5,230,088	5,235,167	5,243,655	5,247,162	5,250,791
5,250,792	5,262,627	5,280,163	5,280,164	5,280,498
5,304,786	5,304,788	5,321,246	5,377,361	5,367,151
5,373,148	5,378,882	5,396,053	5,396,055	5,399,646
5,408,081	5,410,139	5,410,140	5,412,198	5,418,812
4,420,411	5,436,440	5,444,231	5,449,891	5,449,893
5,468,949	5,479,000	5,479,002	5,479,441	5,504,322
5,528,621	5,532,469	5,543,610	5,545,889	5,552,592
5,578,810	5,589,680	5,612,531		

There are no user adjustments or maintenance operations to be performed on the integrated laser scanner.

# Introduction

---

The 701 RF Terminal is a low cost, easy-to-use radio frequency interactive terminal which communicates with PCs (or any computer) by serial port. This new terminal offers unprecedented power and ease of use, while maintaining compatibility with programs written for the older Worth Data Terminals. The list of fantastic features include:

- Low Cost
- Up to 3000 feet range (10 x the competition)
- 64 Terminals per Base Station
- Spread Spectrum frequency hopping avoids interference
- No license required in USA and Canada
- Small size, (6.3" l, 3.3"w, 1.3"d) even with laser
- Certified to multiple 5 ft. drops to concrete
- Long Battery Life (24 hours of usage)
- Fast Recharging (2 hours) from External Power Supply
- No programming necessary on terminal
- Host communication thru Serial
- User Customizable Voice Prompting plus Display
- Backlit Display Standard
- Uses AA Alkaline or NiMH batteries
- Support for Receipt or Label Printer
- Support for an external serial keyboard

The RF Terminal maintains software compatibility\* with applications written for the older generation T71/LT71 RF Terminals.

*\*There is a difference in the number of characters that can be sent to the Terminal. The new 700 RF Terminals have statement length **limitation of 231 characters**. See the Programming section for details.*

# Table of Contents

---

<i>Chapter 1</i>	<b>Installation .....</b>	<b>1-1</b>
	Components .....	1-1
	Installation Sequence .....	1-1
	Connecting the Base Station to a serial port.....	1-2
	R/F Terminal Operation.....	1-4
	Installing the R/F Terminal Utilities Software .....	1-8
<i>Chapter 2</i>	<b>RF System Setup .....</b>	<b>2-1</b>
	RF Terminal Setup.....	2-1
	RF Terminal Setup Parameters.....	2-5
	Base and Relay Setup .....	2-23
	Testing the RF link between base station and host ...	2-24
<i>Chapter 3</i>	<b>Operational Theory.....</b>	<b>3-1</b>
	How the Two-Way RF System works.....	3-1
	How the One-Way RF System works .....	3-3
	How Site Testing works .....	3-5
<i>Chapter 4</i>	<b>Performance Issues .....</b>	<b>4-1</b>
	Evaluating your area of planned operation.....	4-1
	Is radio traffic contention likely? .....	4-6
<i>Chapter 5</i>	<b>Before you begin programming... ..</b>	<b>5-1</b>
	Failure Planning.....	5-2
<i>Chapter 6</i>	<b>Programming for the RF Terminal .....</b>	<b>6-1</b>
	LOW Level ASCII sequences directly .....	6-1
	LOW Level ASCII Sequences using a DLL .....	6-12
	PromptCOM/ActiveX.....	6-12
	PromptNET TCP/IP Active X Controls .....	6-22
	Portable Printers .....	6-32
<i>Chapter 7</i>	<b>Voice Message Operations.....</b>	<b>7-1</b>
	Why Use Voice Messages and Prompts? .....	7-1
	RF Terminal's Voice Message Mapping.....	7-2
	Programming Voice Messages .....	7-2
<i>Chapter 8</i>	<b>Troubleshooting .....</b>	<b>8-1</b>
<i>Appendix A</i>	<b>Channel and Jumper Changes.....</b>	<b>A-1</b>
<i>Appendix B</i>	<b>Adding Relays.....</b>	<b>B-1</b>
<i>Appendix C</i>	<b>R/F Serial Pin-outs.....</b>	<b>C-1</b>

<i>Appendix D</i>	<b>Firmware Upgrades .....</b>	<b>D-1</b>
<i>Appendix E</i>	<b>Code 39 Specifications.....</b>	<b>E-1</b>
<i>Appendix F</i>	<b>Code 93 Specifications.....</b>	<b>F-1</b>
<i>Appendix G</i>	<b>Codabar Specifications .....</b>	<b>G-1</b>
<i>Appendix H</i>	<b>Code 128 Specifications.....</b>	<b>H-1</b>
<i>Appendix I</i>	<b>Interleaved 2 of 5 Code Specifications .....</b>	<b>I-1</b>
<i>Appendix J</i>	<b>UPC / EAN Specifications .....</b>	<b>J-1</b>
<i>Appendix K</i>	<b>MSI/Plessey Specifications .....</b>	<b>K-1</b>
<i>Appendix L</i>	<b>How to scan a bar code.....</b>	<b>L-1</b>
<i>Appendix M</i>	<b>Using the Scan Stand .....</b>	<b>M-1</b>
<i>Appendix N</i>	<b>Optional Features .....</b>	<b>N-1</b>
<i>Appendix O</i>	<b>ASCII Code Equivalent Table.....</b>	<b>O-1</b>
	<b>Index .....</b>	<b>1</b>

# Installation

---

## Components

The components in your R/F Terminal system will vary according to the configuration of your system. Your R/F Terminal shipment should contain at least:

- **An R/F Terminal T701 or LT701** (unit includes keypad and display). If the R/F Terminal is an LT701 model, it will have an integrated laser scanner built-in to the body of the terminal. Each terminal is shipped with a shoulder strap, boot, and Setup Menu.
- **An optional Scanner** – if you ordered the **T701** models instead of the **LT701** models with the built-in laser scanner.
- **Optional rechargeable batteries** and a 9v **power supply**.
- **Utilities CD ROM** – demo programs, DLL, and firmware loader program

If *Base Stations* were ordered with your system, you should receive at least:

- **A Base Station (B551)** including a 5v power adapter for each.
- **A Serial Cable (F34 or F36)** if a *Base Station*.
- **A Relay Test Cable and junction connector block** if ordering bases as *Relay Stations*.

Keep the shipping box for the R/F Terminal in the event it is necessary to return equipment for repair later.

## Installation Sequence

1. **Start with one Terminal and Base Station.** Get everything working with the single terminal and base and then add other terminals, being certain that all terminals have unique **Terminal IDs**. After all terminals are working, add the first relay. Then add remaining relays, remembering to: 1) assign **Relay IDs**, and 2) set the jumpers of each relay to **terminated** or **not terminated** properly.
2. All equipment is shipped with the default setting of Channel 0, Terminal ID 0, and Relay ID 0. Unless you have other Terminal/Base configurations already operating on that channel, you probably don't need to change the channel.
3. A Base and a Relay are the same product. A jumper change is all that is required to use a Base station as a Relay. See *Appendix A* for details.
4. Without attaching the Base Station to the computer, and with only the

power supply plugged in the base, you can perform a site test to be sure you have adequate coverage and the radios are working perfectly. (See *Chapter 4*).

5. Now connect the Base Station to the computer's serial port. Be sure to turn OFF all handshaking on the COM port used; in Windows, go to Start Menu, Settings, System, Device Manager, Ports (COM and LPT). Now run one of the RF Terminal demo programs found on the *Utilities CD-ROM*.
6. Now run one of the demo programs to validate that everything is working. If you have problems, refer to the **Trouble Shooting Section**.

## Connecting the Base Station to a serial port

### How it works...

The R/F Terminal transmits data to the Base station, which in turn transmits the data *to* the host serial port. The computer software reads the data coming through the serial port and processes the information accordingly. When the computer software running on the host has a task for the terminal, it transmits data *out* to the serial port, which then passes this data on to the Base station. The Base station then broadcasts the message to the terminal, causing the terminal to display the message to the user.

The Base station is not machine-sensitive (it needs a standard RS-232 serial port) nor is it operating system dependent (you just need to be able to read and write to the serial port as a separate device).

### Connecting the Base station...

If you specified a 25 pin cable (part #F34) or a 9 pin cable (part #F36) when you ordered your Base station, simply plug the RJ45 end of that cable into the **COMPUTER** port on the Base station, and the 25 or 9 pin end into your computer's serial port. If you are *not* connecting to a PC, see **Appendix C** for cable and serial pin-outs.

If your extension cable is over 80 feet long and you are running Windows, open up the DB9 or DB25 connector on the base station side and cut the unused pins (see **Appendix C**).

For an extension cable, you can use existing network cabling already in existence, but you must be certain that the Transmit and Receive data lines are not in the same twisted pair.

If you are using an extension cable and are having problems, test the cable by:

1. Connecting the Base station *without* using the extension cable. Simply plug in the F34 or F36 cable that came with the Base.
2. If the Base works with *only* the F34 or F36 cable in place, add in the extension cable **without changing the physical location of the Base station**. If the extension cable appears to be the culprit, check to be sure that Transmit lines are connected to Receive lines.

## **Configuring the Base station...**

After connecting the Base station to your serial port, you need to configure the serial settings on the Base station to match those required by your software. The default settings are:

- 9600 baud
- No parity
- 8 data bits
- 1 stop bit
- “None” protocol setting

You may want to increase the baud rate for performance. If you want to change any or all of these settings, see **Chapter 2** for details on configuring the Base station using the **700 RF Base Station Serial Configuration Utility**.

## **Base station channel...**

To determine what channel your Base station is set to, plug in the power supply and watch the LED light on the front of the Base station. The LED will blink “the channel + 3” times.

For example, the default channel is 0. On power up, the LED on a Base station set to channel 0 would blink 3 times. A Base station set to channel 5 would blink 8 times.

If this is the only Base station operating, leave the channel at 0. If you have other Base stations in the area and need to change the channel, see **Appendix A; Channel and Jumper Changes** for details on how to open the Base station and set the rotary switch inside to the desired channel.



# R/F Terminal Operation

## Using the RF Terminal keypad...



The R/F Terminal is turned on by pressing the green ON/OFF button located in the upper left-hand corner of the R/F Terminal keypad.

The R/F Terminal has a *Shut Down Time* feature that allows you to determine the length of time the R/F Terminal must be inactive before automatically shutting down to conserve battery power. When the R/F Terminal shuts down, simply press the ON/OFF button to resume operation.

The keypad is custom designed for the R/F Terminal operations. It has numeric and control keys in the non-shifted state, and alpha characters in its shifted state. You can readily determine if the SHIFT is on by the cursor on the display. When SHIFT is on, the cursor is a large black rectangle. When SHIFT is off, the cursor is a narrow underline character. For all prompts which ask for a YES or NO response, the ENTER key, is the YES reply, and the 0 (zero) key is the NO reply. As you key data, you will see each character displayed on the screen. If you make a mistake, you can delete the last character by pressing the DELETE key, or you can clear all characters displayed on the screen by pressing the CLEAR key.

You can order NIMH batteries (L01) from Worth Data along with a 9v recharging Power Supply that recharges the batteries completely within 2 hours. When recharging options are ordered with the Terminals, the Terminal's *Batteries Setup* parameter is set for recharging "1" which allows the batteries to be recharged under program control. Otherwise, the batteries shipped are alkalines with no recharging options set in the Terminal. However these are changeable by the customer. Using NIMH or alkaline batteries, you should get 24 hours of operation (assuming 1 transaction every 8 seconds).

If you did not order the rechargeable batteries and you change to rechargeables, you must change the Terminal's **Setup** to *Batteries 1* to allow recharging. If you want to charge the batteries without having to remove them from the Terminal, you must use the **Worth Data 9v power supply**.

You can safely use alkaline batteries in a terminal set for recharging, **providing** you don't plug a power supply into the terminal. ***Recharging Alkaline batteries may cause the batteries to explode and leak battery acid throughout the RF Terminal.*** Battery acid damage is not covered by the Worth Data warranty because it not deemed to be "normal use".

If you are using alkaline batteries (either *regular* or *rechargeables*) and have selected the **Rechargeables** setting in the *Battery* setup parameter (See **Chapter 2; RF System Setup**), the RF Terminal will generate the following error message:

**Alkaline Batteries  
Detected,  
Recharge-  
ables Are Specified  
Do Not Recharge**

**Battery Life Indicator**

The R/F Terminal detects low AA batteries and displays the following message:

**LOW BATTERIES  
Finish, Sign Off  
Change Batteries  
Hit Any Key\_**

At this point you have approximately 2 minutes of operational time to finish your transaction (or note where you are leaving off if in the middle of a transaction) and sign off. After 2 minutes, the R/F Terminal displays:

**CHANGE BATTERIES  
UNIT SHUT DOWN\_**

This message displays for 20 seconds before the R/F Terminal signs off from the host (if signed on) and then shuts itself down. If you turn it back on without changing batteries, you may experience constant beeping, intermittent scanning, and very irritating symptoms that look like equipment failure.

Once you remove the batteries, you have 5 minutes to change them before you lose the date and time in the Real-Time Clock.

The R/F Terminal also has a battery life indicator that can be accessed while operating in ONE-WAY or TWO-WAY mode or while in the MENU. To display the remaining battery life of the AA batteries (as well as the date and time) press the **STATUS** key:

**mm/dd/yy hh:mm  
AAxBAT■■■■■■■■■■■■■■■■■■■■-zz%**

*x=a when Alkaline batteries are specified in Battery setup*

*x=n when NiMH or NiCad batteries specified in Battery setup*

*zz=percent in numbers i.e. 99, 10, 05*

Press the **STATUS** key again to resume processing.

**To change the AA batteries:**

1. Turn **OFF** the R/F Terminal.
2. Remove the battery holder door on the back of the R/F Terminal by pressing down on the grooved portion of the door and pushing outward.
3. Remove the old batteries and insert the new ones, making sure to orient the batteries with the positive (+) end facing down toward the bottom of the R/F Terminal.

4. If using rechargeable batteries, make sure that rechargeables are specified. See the previous page to quickly determine the setting using the *Status key*.
5. Replace the battery door and turn the reader on using the ON/OFF switch.
6. Sign ON and resume your application.

### **Recharging the batteries**

1. Be sure you have specified rechargeable batteries in the RF Terminal's Setup. If you ordered rechargeable batteries with a RF Terminal, Worth Data makes the change before shipping. See *Battery* in the *RF Setup*.
2. With the RF Terminal shut off, plug the 9V power adapter into the RF Terminal, (the 5volt power supply used for the Base Station and the older RF Terminals cannot be inserted).
3. The firmware in the terminal then checks the level of charge in the batteries to see if they need charging, displaying the following message:

**Checking Batteries**  
**Please Wait.....**

4. If the batteries are already charged, the message will disappear. If the batteries need charging, the following message is displayed:

**Charging Batteries**  
**Please Wait.....**

## **R/F Terminal Menu Functions**

There are four modes of operation for the R/F Terminal:

- |                     |   |
|---------------------|---|
| <b>SIGN ON</b>      | <i>Signs R/F Terminal on for two-way communication with host.</i>   |
| <b>SETUP MODE</b>   | <i>Accesses Setup parameters for Terminal and Base.</i>   |
| <b>ONE-WAY</b>      | <i>Allows "dumb" data entry to computer. No prompts from host computer</i>  |
| <b>SITE TESTING</b> | <i>Allows user to test range and evaluate site to determine best position for Base. Also the acid test for suspected radio failure.</i> |

Upon power-up, the R/F Terminal displays the following opening screen:

**R/F TERMINAL 3C1nnx**  
**TERM ID: 0 R:nn**  
**USA CHANNEL: 0 6/6**  
**HIT ANY KEY**

*(The opening screen can be bypassed upon power up. See **Chapter 2**)*

- The first line on the screen, **R/F TERMINAL 3C1nnnx**, gives the firmware revision number.
- **TERM ID: 0** refers to the current Terminal ID. The default setting is **0**. Every Terminal must have a unique ID. **R:nn** refers to the version of the radio processor firmware.
- Line 3 refers to the channel currently used by the R/F Terminal. **USA CHANNEL: 0** refers to a Terminal set to channel **0**. The second part of this line identifies the display lines. Possibilities are **6/4** (6 line terminal operating in 4 line mode and **6/6** (6 line terminal operating in 6 line mode).

To move on to the first menu item, press any key on the R/F Terminal keypad. The display now reads:

**SIGN ON?**  
**KEY [YES/NO]?\_**

- Press the **YES** key to **SIGN ON** to a two-way communication host computer program through the Base station.
- Press **NO** to move on to the next menu item:

**SETUP MODE**  
**KEY [YES/NO]?\_**

- Pressing **YES** prompts for a password to enter the *Setup Mode* for the R/F Terminal or Base station.
- Press **NO** to move on to:

**ONE-WAY MODE**  
**KEY [YES/NO]?\_**

- Press **YES** to enter ONE-WAY mode. ONE-WAY mode allows the R/F Terminal to transmit data to the host computer without prompting from the host computer program – we call this “dumb” data entry. (If you want a Terminator Character on the bar code, you will have to enter a *Postamble* using the **Setup Menu**). ONE-WAY mode is also useful for demos, as it does not require any interaction from the host computer.
- Press **NO** to go to:

**SITE TESTING**  
**KEY [YES/NO]?\_**

- Press **YES** to enter SITE TESTING. SITE TESTING is an excellent way to assess your R/F communication in any area. It can help you determine the best place to locate your Base station for maximum R/F performance as well as troubleshoot

problems that may relate to range or interference.

- Press **NO** to loop back to the SIGN ON? prompt.

You can back-out of any mode or prompt by pressing the F1 key. For example, if you press YES at the SETUP MODE? prompt but really meant to press NO, press the F1 key to take you back to the menu. The F1 key on the R/F Terminal keypad works like the ESC key on the PC – it will usually get you out and back to the previous step. You can use the F1 key to exit and SIGN OUT when using a Two-Way communication program running on the host computer.

The entire mode menu can be skipped (see **Chapter 2; RF System Setup**), causing the R/F Terminal to automatically SIGN-ON or go to ONE-WAY mode on power up.

## Installing the R/F Terminal Utilities Software

The R/F Terminal system ships with a CD of programs for use with the R/F Terminal and Base station. The CD contains programs for the TriCoder and the RF Terminal. Click on the RF Terminal button.

Next you have the choice of installing the following:

### *Windows Demo Programs and RF DLL Programmers Library*

- Demo Programs in VB, Access, and Delphi
- 16 bit and 32 bit DLLs
- VB DLL-based QL3 printer demo program

### *Windows 700 RF Base Serial Configuration Utility*

### *ActiveX Tools*

- Serial Interface (*includes Excel and VB demos*)
- TCP/IP (*includes VB/Access and Delphi demos*)

### *Windows 700 RF Terminal Firmware Loader Program*

### *DOS/BASIC source demo programs* (requires GWBasic or QBasic)

Click on the set of programs you wish to install.

To install any of the programs found on the Utilities CD, simply insert the CD into your CDROM drive. The install program should start automatically. If it does not, simply run the SETUP.EXE program found on the CD.

### **Running the demo programs...**

The demo programs are all programs provided to help you test your R/F Terminal with a two-way communication program.

### **Using the Windows 700 RF Terminal Loader Utility**

The R/F Terminal Loader program is a Windows application that allows

you to download new R/F Terminal firmware from Worth Data into your R/F Terminal, Base or Relay. New firmware can be obtained on CD ROM directly from Worth Data or downloaded via the Web at:

**<http://www.barcodehq.com/download.html>**

### **Installing the Windows Terminal Loader Utility**

This program is for Windows 98, NT, 2000, XP, and ME:

1. Insert the CD into your CDROM drive. The "Hardware Utilities Installation" program should start automatically. If it does not, double click on the SETUP.EXE program on the CD in Windows Explorer.
2. Click on the RF Terminal button to select the type of hardware.
3. Click on the "Install RF Loader" button.
4. Follow the installation instructions on the screen.

Setup installs three programs and creates a program group for them:

***R/F TERMINAL EPROM LOADER HELP***  
***R/F TERMINAL EPROM LOADER***  
***UNINSTALL***

See **Appendix D**; *Firmware Upgrades* for details on how to use the EPROM Loader programs (Windows).



# RF System Setup

---

## RF Terminal Setup

The RF Terminal itself can be configured using the Terminal keypad or by using the bar coded Setup Menu. Even if you configure the RF Terminal using the keypad, you may need the bar coded Setup Menu to use as a reference. Most users do not need to change anything in the setup. The most commonly changed setup parameters are the *Terminal ID* (especially if you have more than 1 terminal) and the *Channel* (if you are adding an additional Base station). Some parameters are available only by bar code menu and others only by keypad:

Bar Code Menu Only	Keypad Only
Characters	Security Code
Reset	Relay Existence
	Control Keys Only
	Skip Opening Screens
	Display of Year
	Date and Time
	Aiming Dot Duration
	Automatic Check Back
	Display Backlighting

If you are using the bar coded Setup Menu and are unfamiliar with scanning bar codes, see **Appendix M**; *How to scan a bar code* to learn proper scanning technique before you begin scanning the bar codes on the Setup Menu.

## RF Terminal Default Settings

This is the default configuration of the RF Terminal as it is shipped from the factory. If you ever need to return the RF Terminal to these default settings, use the bar coded Setup Menu and scan the following bar codes in this sequence:

- START SETUP
- RESET
- END SETUP



## Default RF Terminal Configuration

Parameter	Default Setting	Parameter	Default Setting
Radio Terminal ID	0	MSI Code	Disabled
RF Channel	0		check digit not transmitted
Code 39	Enabled		Plessey Code disabled
	Accumulate Mode ON		Label Code5 disabled
	stop/start chs not xmit		Code 128
	check digit disabled		EAN/UCC 128 disabled
	Caps lock OFF		
2 of 5 Code	Disabled	Code 11	Disabled
	1 2 of 5 Code disabled	RSS-14	Disabled
	6 digit code length	Code 93	Disabled
	check digit disabled		Full ASCII disabled
UPC/ EAN	check digit disabled	Beep Tone	medium
	Enabled	Preamble	none
	UPC supps disabled	Postamble	none
	UPC-A NSC & check digit transmitted	Date Format	mm-dd-yy
	UPC-A NSC & check digit transmitted		
	EAN-13 country code & check digit transmitted	Baud Rate	9600
	EAN-13 country code & check digit transmitted	Parity	none
	UPC-E 1st char & check digit not transmitted	Data Bits	8
	UPC-E 1st char & check digit not transmitted	Stop Bits	1
	EAN-8 1st char & check digit not transmitted	Batteries	Alkaline default
	EAN-8 1st char & check digit not transmitted	Speaker	Speaker Volume 5 Headphone Volume 5
		Laser Options	none
		Shut Down Time	5 minutes
	Voice Messages	303015	
	Characters	none reassigned	
	Security Code	none	
	Control Keys Only	no	
Codabar	Disabled	Display of year	2 digit
	Start/Stop not transmitted	Skip opening screens	no
	CLSI format disabled	Aiming Dot	No
		Automatic Check Back	No
		Display Backlight Duration	5 seconds

*\*All parameters are set back to their defaults when reset using the bar coded Setup Menu, even parameters that are changed by keypad only. Shaded items are keypad access only.*

### Using the bar code RF Terminal Setup Menu

To use the bar coded RF Terminal Setup Menu, scan these bar codes in this order:

- **Start Setup** - you should hear 2 beeps
- **Setup Parameter bar code** (i.e. "Beep Tone")-you should hear 2 beeps for each scan
- **Number bar code that corresponds to the appropriate setting** (i.e. "3" to change the Beep Tone to "high") - you should hear 2 beeps for each scan
- **End Setup**-you should hear 3 beeps after END SETUP.

More than one *Setup Parameter* can be changed before you scan END SETUP. For example, if you scanned **START SETUP**, then “**Beep Tone**”, then **3**, then “**Speaker Operation**”, then **1**, then **END SETUP**, this would change the beep tone to “*high*”, and turn the speaker “*off*”.

If you are using a Laser Scanner to setup the RF Terminal, the beam will often cover more than one bar code. Cover any adjacent bar codes before scanning, and then check the RF Terminal display to make sure the correct setting was entered.

### **Using the keypad to setup the RF Terminal**

The RF Terminal can be setup via the Terminals' keypad by entering *Setup Mode* from the menu. Turn on the Terminal and press any key. You should see the SIGN ON? message:

**SIGN ON?  
KEY [YES/NO]?\_**

Press the NO key. The next prompt is the SETUP MODE? prompt:

**SETUP MODE?  
KEY [YES/NO]?\_**

Press the YES key. At this point, the terminal will ask for a password:

**SETUP MODE  
PASSWORD?\_**

Enter WDTRI on the keypad. The next item allows you to choose which item to configure:

**R/F Terminal----->1  
R/F Base Setup--->2  
Voice Operations->3**

Press 1 to enter the RF Terminal Setup. Now you are in the RF Terminal Setup Menu and can choose from the following options:

**RF Setup---0    Batteries--4  
BarCodes--1    Speaker---5  
RS232-----2    Other-----6  
Date/Time--3    Exit-----F1**

At this point, choose which group you want to configure. Most of the RF Terminal setup parameters are accessible from either the keypad Setup Menu or the bar code Setup Menu. There are only 2 that are available only from the bar code Setup Menu while there are quite a few options that are available **only** from the keypad Setup. See the beginning of this chapter for a comparison of the two Setup Menus.


The groups in the keypad Setup Menu contain the following setup parameters:

Setup Group	Parameter	Setup Group	Parameter
<b>RF Setup</b>	RF Terminal ID	<b>Date/Time</b>	Set Time
0	RF Channel	3	Set Date
	Security Code		Date Format
	Skip opening screens		Display of Year
		<b>Battery</b>	Recharging or Not
<b>Bar Codes</b>	Code 3 of 9	4	
1	UPC/EAN		
	Code 2 of 5/1 2 of 5	<b>Speaker</b>	Speaker Volume
	2 of 5 Length	5	Headphone Volume
	Code 128		Beep Tone
	Codabar		
	MSI/ Plessey	<b>Other</b>	Shut Down Time
	Code 11	6	Preamble
	Code 93		Postamble
	RSS-14		Voice Messages
			Laser Options
			Aiming Dot Duration
<b>RS232</b>	Baud Rate		Automatic Check Back
2	Protocol		Control Keys Only
	Parity		LCD Display Mode
	Data Bits		LCD Backlight
	Stop Bits		LCD Backlight Duration

Once you have selected a group to edit, you will see each parameter displayed in the order listed above. Use the next section of this chapter as a reference for all RF Terminal Setup Parameters, whether they are configured using the keypad or the bar coded Setup Menu. Each parameter is followed by either a key symbol:



and the group you will find the parameter in, *RF Setup*

or a bar code symbol: 

or both, depending on how the parameter can be configured.

# RF Terminal Setup Parameters

Default settings are shown in **bold** type in this manual and are marked by a \* on the bar code Setup Menu.

The RF Terminal will typically require no setup changes except, Terminal ID (if more than one terminal) and enabling bar codes to be read other than UPC or Code 39.

## RF Terminal ID



<b>Default ID</b>	<b>0</b>
Available ID's	0-9, A-Z, a-z, - =

- Every terminal needs a unique *Terminal ID*. The default *Terminal ID* is always shipped as **0**. If you have more than one RF Terminal assigned to a Base Station, you must be sure that each RF Terminal has a unique *Terminal ID*, (otherwise you will have big troubles including false error messages). The *Terminal ID* is always displayed on the Start Up screen when you power up the terminal. There are 64 *Terminal ID's* available - **0-9, A-Z, a-z**, and the special characters "-" and "=". To change the *Terminal ID*, enter one character either by scanning from the bar code Setup Menu or by pressing a key on the RF Terminal keypad. The channel setting is displayed on the RF Terminal's opening screen.

## RF Terminal Channel



RF  
Setup

<b>Default Channel</b>	<b>0</b>
------------------------	----------

- The terminal's radio operates by "frequency hopping" spread spectrum. The radios hop from one frequency to another very 400ms. The radio goes through 25 different frequencies and then repeats the sequence – all in the 902 MHz band at 150 milliwatts of power. Different sequences define the channels. It is possible to have more than one RF Network in the same area, providing each RF Network is on separate channels to avoid interference and general confusion.
- The default *Channel* is always shipped as **0**. There are 10 channels in the USA. The Channel can be set by entering the corresponding characters (0-9) either by scanning the bar coded Setup Menu or by entering the character from the RF Terminal keypad.
- All Terminals, Base Stations and Relays in the RF Network must be set to the same channel. The channel is always displayed on the Start Up screen when you power up the Terminal. It is possible to have more than one RF Network in the same area, providing each RF Network is on separate channels to avoid interference and general confusion.

There are 10 channels of frequency hopping available for the US, Canada and Mexico operating in the 902 MHz band. These channels display as "USA Channel" on the screen upon power-up of the Terminal. The channels in MHz are:

USA Versions	
RF Terminal	RFU1nnnx
Base Station	BSU1nnnx

## Security Code



RF  
Setup

Disabled	0
Enabled	1

- A **Security Code** can be utilized to minimize the possibility of a Base Station listening to data from a Terminal that is talking to a different Base Station. A **Security Code** can also prevent interference from having many Base Station/RF Terminal configurations in one area; i.e. a merchandise mart with multiple vendors all running RF Terminal networks.
- A **Security Code** consists of 3 characters - any combination of ASCII 33 - ASCII 126. This allows for the possibility of more than 830,000 different character combinations. The characters are entered using the bar coded FULL ASCII MENU provided with the RF Terminal. See **Appendix O; ASCII Code Equivalent Table** for the correct corresponding characters.
- Once you press **1** to enable the **Security Code**, you will see the following prompt on the Terminal:

**Enter Security Code\_**

You will be able to see the code as you enter it on the Terminal but once you have moved on to another Setup Parameter, you will only see the status; **0** (disabled) or **1** (enabled) if you go back to it.

- If you forget the **Security Code** that you have already used on other Terminals, the only way to see the code is to go into the Base Setup using the *Serial Configuration Utility*.
- You can only access the **Security Code** setup parameter by going into Setup Mode via the RF Terminal keypad but you must use the bar coded FULL ASCII MENU to scan in ASCII characters 33-126.

## Control Keys Only



Other

No	0
Yes	1

- Several special keys on the RF Terminal keypad can generate a response automatically, sending a separate message to the host by

simply pressing the appropriate control key (without pressing the ENTER key afterward). This allows for simple and fast scrolling by the operator. The arrow keys, Begin, End, and Search are the specific keys supported. The default setting is to require the ENTER key to be pressed before data transmission.

- If you set this feature to **1** (YES), in order for the RF Terminal to transmit the following values, the corresponding **Control Key** must be the *first* key pressed in a data entry sequence. If it is not the first data entered, the arrow key is ignored.

Control Key on RF Terminal	Code transmitted to Host
Up Arrow	FS (ASCII 28)
Down Arrow	GS (ASCII 29)
Left Arrow	RS (ASCII 30)
Right Arrow	US (ASCII 31)
Begin	ETB (ASCII 23)
End	CAN (ASCII 24)
Search	VT (ASCII 11)

The message is sent to the host as:

Bytes	Function	Value
1	RF Terminal ID	0-9, A-Z, a-z, - =
2	Data Transmitted	ASCII Value from Table Above
Last	Terminator of Message	CR

## LCD Display Mode



<b>6 line display mode</b>	<b>0</b>
4 line display mode	1

**WARNING:** All Terminals are shipped with 6 line displays and are configured as 6 line display terminals; as shipped these terminals will not work in an existing system programmed for 4 line display terminals. If you are currently operating a system that uses 4 line displays and have not changed your program to utilize the 6 line display terminals, you **MUST** change the LCD Display Mode to 4 line display in order for a Terminal with a 6 line displays to SIGN ON to your system. The LCD Display Mode should only be changed if you are trying to use an application program that only supports the 4 line formatting commands.

## LCD Backlight Display Mode



Other

No	0
<b>Yes</b>	<b>1</b>

In all units shipped since December 2004, the Backlit Display is standard. The default setting is for the LCD Backlight to be ON. As shipped the *Backlight Duration* is 5 seconds.

## Backlight Duration



Other

Always ON	0
Duration in # of seconds	1..2..5..9

This setting determines how long the Backlight Display is on at startup or when triggered by pressing the F2 key. **Always ON** will create a drain on your batteries and you can expect shorter battery life. The default setting is 5 seconds.

## Skip Opening Screens



RF  
Setup

<b>No</b>	<b>0</b>
Go to Two-Way (SIGN ON)	1
Go to One-Way (ONE WAY)	2

- Many users want to skip the opening screens and go directly to SIGN ON or ONE WAY communication once their programs are fully operational. Selecting **1** or **2** will automatically take the operator to the corresponding mode and into your application, skipping the usual Mode Menu (SIGN ON?Y/N, SETUP?Y/N, ONE WAY?Y/N, SITE TESTING?Y/N). If you want to return to the Mode Menu at any time, simply press the F1 key.

If you skip the opening screen, you may want to quickly check the settings of the Terminal without having to reset this parameter, so the Status Key will display four lines as follows:

**mm/dd/yy hh:mm**

**alkBAT■■■■■■■■■■■■■■■-zz%**

**alk** - when Alkaline batteries are specified in Battery setup

**rch**- when NiMH or NiCad batteries specified in Battery setup

**zz**=percent or battery life left in numbers i.e. 99, 50, 23

The next two lines show the following:

**UC31003A ID<sub>x</sub> CH<sub>n</sub> RL<sub>x</sub>**

**6/6 SC=*N* RF=*NN* C=*N***

- The first character on the line is:  
**U** for US/Canada Channel model  
The next two characters “**C3**” is the board level.
- **1003A** is the main processor's firmware version
- **ID<sub>x</sub>** , where *x* is the Terminal ID assigned (**0-9,A-B, a-z, -=**)
- **CH<sub>n</sub>** , where *n* is the Terminal's Channel in use (**0-9**)

- **RLx** , where *x* indicates the ID of the relay (**0-F**) with which the terminal was last communicating (**N** if it was not a relay, but a base)
- **6/6** is a 6 line terminal in 6 line mode; other possibilities are **6/4**  
**SC=N** indicates no Security Code is programmed (if *Y*, Security Code)  
**RF=NN** refers to the radio processor firmware revision number  
**C=N** indicates no Character mapping (if *Y*, beware, characters are remapped)

Press the **STATUS** key again to resume processing

## Speaker and Headphone Volume Controls



*Speaker*

By selecting Speaker in the keyboard Setup Mode, you get to the options to control the Speaker/Beeper and Headphone volumes. If you are using headphones, you will want set the Speaker volume to 0 to conserve batteries. Volume settings possible are 0-9. The prompt for Speaker Volume is:

**SPEAKER VOLUME**  
**Enter 0-9 for Volume**  
**Control**  
**Current Value is: 5**

The prompt for Headphone Volume is:

**HEADPHONE VOLUME**  
**Enter 0-9 for Volume**  
**Control**  
**Current Value is: 5**

## Automatic Check Back



*Other*

This parameter should not be changed under normal circumstances. After the host sends a prompt, the Terminal goes to sleep waiting on the operator to key or scan input in response to the prompt. It waits until the *Automatic Shut Off* time or until the operator responds. This parameter sets the time that the Terminal stops waiting on input from the operator, discards the current prompt, and goes back to the host to see if there is a change in instructions. If no change, the host must resend the prompt again because the Terminal has discarded the original prompt. The host now has the opportunity to change a prompt. The time can be set in increments of 5 seconds, up to 495 seconds. The default value is 00. The values possible for entry are 00-99. An entered 99 gives 99x5 seconds, or 495 seconds between check backs. The Terminal sends back an *ASCII 07* for the data back to the host (ID ASCII 07 CR). This parameter's prompt is:

**AUTOMATIC CHECK BACK**  
**Key 00-99.**  
**Current Value: 00**



## Code 3 of 9 (Code 39)



Bar  
Codes

<b>Enable Code 3 of 9</b>	<b>0</b>
Disable Code 3 of 9	1
<b>Enable Full ASCII Code 39</b>	<b>2</b>
Disable Full ASCII Code 39	3
<b>Enable Code 39 Accumulate Mode</b>	<b>4</b>
Disable Code 39 Accumulate Mode	5
Enable Start/Stop character transmission	6
<b>Disable Start/Stop character transmission</b>	<b>7</b>
Enable Mod 43 Check Digit	8
<b>Disable Mod43 Check Digit</b>	<b>9</b>
Enable Check Digit transmission	A
<b>Disable Check Digit transmission</b>	<b>B</b>
Caps Lock ON	C
<b>Caps Lock OFF</b>	<b>D</b>

- The Start and Stop character for Code 39 is the \* character. Settings **6** and **7** determine whether or not those characters are transmitted to the computer along with the data. For example, at setting **6**, the data of **1234** would be transmitted as **\*1234\***. Transmitting the start and stop characters can be useful if you need to differentiate between data that comes from a bar code versus data coming from the keypad.
- Enabling use of the Mod 43 check character requires that the last character of your bar code conform to the Mod 43 check character specifications. See **Appendix E; Code 39** for more information. Enable transmission (**A**) will send the check digit data along with the rest of the bar code data to your computer. To use **A**, you must also be using **8**.
- **Caps Lock ON** causes lower case letters read as data to be transmitted to the computer as UPPER CASE, and upper case letters to be transmitted as LOWER CASE. Numbers, punctuation and control characters are not affected. **Caps Lock OFF** means that letters will be transmitted exactly as read. This setting applies to **all** bar code types.
- See **Appendix E; Code 39** for more information regarding **Accumulate Mode**.

# UPC/EAN



<b>Enable UPC/EAN</b>	<b>0</b>
Disable UPC/EAN	1
Enable UPC/EAN Supplements	2
<b>Disable UPC/EAN Supplements</b>	<b>3</b>
<b>Enable transmission of UPC-A NSC or EAN 13 1st 2 digits</b>	<b>4</b>
Disable transmission of UPC-A NSC or EAN-13 1st 2 digits	5
<b>Enable transmission of UPC-A and EAN-13 check digit</b>	<b>6</b>
Disable transmission of UPC-A and EAN-13 check digit	7
Enable transmission of UPC-E NSC and EAN-8 1st digit	8
<b>Disable transmission of UPC-E and EAN-8 1st digit</b>	<b>9</b>
Enable transmission of UPC-E and EAN-8 Check digit	A
<b>Disable transmission of UPC-E and EAN-8 check digit</b>	<b>B</b>
<b>UPC-E0 Compressed</b>	<b>C</b>
UPC-E0 Expanded	D
<b>EAN-8 observing 9&amp;A</b>	<b>E</b>
EAN-8 forced to transmit 8 digits always	F

- Use setting **2** to enable reading of the 2 and 5 digit UPC/EAN supplements commonly found on magazines and paperback books as well as the Extended Coupon Codes. Using this setting force left to right reading of UPC codes to assure that the supplement code is not missed.
- ISBN (International Standard Book Numbering) bar codes are EAN-13 with a 5-digit supplement. If the “Bookland” bar code uses 978 (books) or 977 (periodicals) as the first three digits, then the RF Terminal can transmit it in the ISBN format. The settings for this are found under the *Laser Options* parameter. To enable transmission of the ISBN format, set the *Laser Options* parameter to **D**. To return to the default of normal EAN-13 transmission, set it to **C**. For details on ISBN, see **Appendix J, UPC/EAN**.
- Use setting **4** and **9** to enable transmission of the NSC character to your computer. The **Number System Character** is the leading character in the bar code. For details, see **Appendix J, UPC/EAN**.
- Use setting **6** and **A** to enable transmission of the check digit character to your computer. The check digit is the last character and is based upon a calculation performed on the other characters.
- Setting **C** transmits UPC-E0 bar codes as is; setting **D** transmits them with inserted zero’s to make them the same length as a UPC-A bar code. A NSC of 0 is assumed. It is possible to read UPC-E1 bar codes; by default this option is disabled. Do not enable UPC-E1 if you plan on reading EAN-13 bar codes; you may experience partial reads when reading EAN-13. The UPC-E1 option is set in the *2 of 5 Code*

parameter. To enable UPC-E1 reading, set the **2 of 5 Code** parameter to **8**. To turn *off* UPC-E1 reading, set it back to the default of **9**.

- If you prefer to transmit UPC-E bar codes in a 6-digit format while EAN-8 is transmitted in its original 8-digit format use setting **F**. This will allow you to use settings **9** and **A** and still transmit EAN-8 as 8 digits.
- UPC-A can be transmitted in EAN-13 format by adding a leading 0 (USA county code) to the UPC-A data. This setting is found in the **Laser Options** parameter. To transmit in EAN-13 format, set the **Laser Options** parameter to **F**. To return to the default (UPC-A transmitted in original format) set it to **E**.

## Code 128



Bar Codes

Disable Code 128	0
<b>Enable Code 128</b>	<b>1</b>
Enable UCC/EAN-128	2
<b>Disable UCC/EAN-128</b>	<b>3</b>
Enable Storage Tek Code (TriOptic Code 39)	C
<b>Disable Storage Tek Code (TriOptic Code 39)</b>	<b>D</b>
Bar Code ID's transmitted	E
<b>Bar Code ID's not transmitted</b>	<b>F</b>

- UCC/EAN-128 is a subset of Code 128 that follows certain specifications regarding character content, length and check digits. Enabling UCC/EAN-128 (**2**) causes the RF Terminal to look for a Code 128 bar code that begins with the Code 128 F1 (Function 1) character. See **Appendix H: Code 128** for more details.
- The StorageTek Tape Label code is a proprietary variation of Code 39 code used for the storage of computer data tapes. Enabling the tape label code (**C**) does not disable reading of Code 128 or Code 39 bar codes.
- Bar Code ID's are characters assigned to each bar code type to identify that particular type of code. These Bar Code IDs can be outputted as prefix to the bar code data to identify what type of bar code you are using. The Bar Code ID's are assigned as follows:

Bar Code	ID	Bar Code	ID	Bar Code	ID	Bar Code	ID
Codabar	a	2 of 5	f	UPC-E (1)	o	LabelCode 4	y
Code 39	b	Code 128	g	EAN-8	p	LabelCode 5	z
UPC-A	c	Code 93	i	RSS-14	r		
EAN-13	d	MSI	j	StorageTek	s		
1 2of5	e	UPC-E(0)	n	Plessey	x		

*The ID character is transmitted in front of the bar code data.*

## Codabar



Bar  
Codes

Enable Codabar	0
<b>Disable Codabar</b>	<b>1</b>
Enable CLSI Codabar	2
<b>Disable CLSI Codabar</b>	<b>3</b>
<b>Disable Start/Stop character transmission</b>	<b>4</b>
Enable Start/Stop character transmission	5

- CLSI is a form of Codabar often used by libraries.
- Setting **5** will transmit the Codabar *start* and *stop* characters with the bar code data to your computer. If you are varying the start and stop characters to differentiate between different labels, transmitting the start and stop can be helpful. See **Appendix G**; *Codabar* for more information.

## 2 of 5 Code



Bar  
Codes

Enable Interleaved 2 of 5	0
<b>Disable Interleaved 2 of 5</b>	<b>1</b>
Enable Interleaved 2 of 5 check digit	2
<b>Disable Interleaved 2 of 5 check digit</b>	<b>3</b>
Enable check digit transmission	4
<b>Disable check digit transmission</b>	<b>5</b>
Enable Standard 2 of 5	6
<b>Disable Standard 2 of 5</b>	<b>7</b>
Enable UPC- E1	8
<b>Disable UPC- E1</b>	<b>9</b>
<b>Normal Code 39 decode (Laser scanners)</b>	<b>B</b>
Loose Code 39 decode (for use with LZ400 thru windshields)	C
Looser Code 39 decode (for use with LZ400 thru windshields)	D

- Setting **2** requires that the last digit in your bar code conform to the specifications for the 2 of 5 check digit calculation. See **Appendix I**; *2 of 5 Code* for more information.
- Transmission of the check digit (**5**) requires the use of setting **2** and will transmit the check digit along with the bar code data to the computer.
- Setting **B** pertains to the decoding algorithms used by the RF Terminal when using a Laser Scanner. In most cases, this should be left at the default **B** setting.
- If scanning VINs (Code 39) through windshields with a laser scanner, (applies to the LZ400 only) try setting this parameter to **C** or **D**. Try **D** first. If you get substitutions, try **C**.

## 2 of 5 Length



<b>Default setting</b>	<b>06</b>
Valid entries	00-98
To read variable length 2 of 5 codes	00

- 2 of 5 is so susceptible to misreads that the RF Terminal adds an additional safeguard - it can be configured to look for fixed-length data only.
- The default setting of **06** causes the RF Terminal to read **only** 2 of 5 codes that are 6 digits in length. To set the RF Terminal to read a different length, scan any two-digit number from the bar pad table. For example, to change the RF Terminal to accept an 8-digit bar code, scan **0** then **8** from the bar pad table. 2 of 5 code must always be an even number of digits so the length setting must always be an even number.
- Reading variable length I 2of5 or 2 of 5 codes is to be avoided if at all possible. The **00** setting is supplied for the purposes of reading codes of unknown length, counting the digits and setting the length to the proper number.

## MSI and Plessey



*Bar  
Codes*

<b>Disable MSI</b>	<b>0</b>
Enable MSI, 1 Mod 10 check digit	1
Enable MSI, 2 Mod 10 check digits	2
Enable MSI, 1 Mod 11/ Mod 10 check digit	3
<b>Transmit no check digits</b>	<b>4</b>
Transmit 1 check digit	5
Transmit 2 check digits	6
Enable Plessey bar code (mutually exclusive with MSI)	7
Enable LabelCode5 (mutually exclusive w/MSI & Plessey)	8
Enable LabelCode4 (mutually exclusive w/all above)	9

- **LabelCode5** and **LabelCode4** are proprietary bar code types used by Follet.
- If you have enabled the Mod 10 or Mod 11 check digits, they will be transmitted along with your bar code data from the RF Terminal to your host.
- For more information regarding MSI or Plessey Code, see **Appendix K; MSI Plessey Code.**

## RSS-14



*Bar  
Codes*

<b>Disabled</b>	<b>0</b>
14 digits with no identifiers, i.e. 10012345678902	1
14 digits + identifiers, i.e. Je00110012345678902	2
14 digits + UCC-128 format, i.e. JC110012345678902	3

- By default, standard RSS-14 is disabled, scan 1 to enable. We support the standard and stacked versions of RSS-14 formats.

For more information on RSS-14, see the AIM website at [http://www.aimglobal.org/standards/symbinfo/rss\\_overview.asp](http://www.aimglobal.org/standards/symbinfo/rss_overview.asp)

## Code 93



Bar  
Codes

Enable Code 93	0
<b>Disable Code 93</b>	<b>1</b>
Enable Full ASCII Code 93	2
<b>Disable Full ASCII Code 93</b>	<b>3</b>

- Code 93 is similar in character set to Code 39. See **Appendix F**; *Code 93* for more information. Code 93 is not a commonly used bar code symbology.

## Preamble



Other

Preambles are user-defined data that is attached to the beginning of data (bar code or keyed) that is transmitted to the host by the RF Terminal. For example, if you set a preamble of @@ and scanned bar code data of **12345**, @@**12345** would be transmitted to the host.

- By default, the RF Terminal has no preambles configured. Preambles can contain up to 15 characters scanned from the bar coded FULL ASCII Menu. **To set a preamble:**
  1. Scan the **Preamble** bar code or select **Preamble** from the keypad menu.
  2. Scan the desired characters (up to 15) from the FULL ASCII Menu.
  3. Scan the **SET** bar code, or if using the keypad, press **ENTER**.
  4. To clear the **Preamble** and return to the default (no Preambles defined), scan **CLEAR** at step #2, and then continue with your setup.
- You can use the **Preamble** to trim characters from the data you are entering into the RF Terminal. You can trim from 1-15 characters from the data by creating a preamble of:

~x

where ~ is ASCII 126 and x is a single hex digit 1-F (corresponding to 1-15). Data that is shorter than the trim amount is transmitted without trimming. **Preambles** trim characters from the front of the data. Here are some examples:

Data	Preamble	Data Transmitted
123	XYZ	XYZ123
12345678	~3XYZ	XYZ45678
12345678	~9	12345678
12345678901	~A	1
123456	~5	6

#### Preamble trims leading characters

- Using the Bar Code ID feature and the **Preamble**, you can trim data selectively, trimming characters only on the bar code type specified. To use selective trimming, enter:

~*bx*

where *b* is the Bar Code ID character (see the *Code 128 setup parameter*) and *x* is the number of characters to trim from the front of the data. For example, ~**b2~c1** says “trim 2 characters from Code 39 data and 1 character from UPC-A data”. Remember that the **Preamble** trims leading data. This applies to One-Way and host prompted communication.

- Lastly, the **Preamble** can be used to check a minimum/maximum data length for bar code data entered. To check for bar code length in the **Preamble** enter:

|*nnmm*

where | is ASCII 124, *nn* is the two-digit minimum and *mm* is the two-digit maximum. |0210 would check for a minimum of 2 characters and a maximum of 10. If you try to scan a bar code outside the minimum or maximum lengths, no decode will result. Entering data by keypad is not affected.

## Postamble



Other

**Postambles** are user-defined data that is attached to the end of data (bar code or keyed) that is transmitted to the host by the RF Terminal. For example, if you set a Postamble of @@ and scanned bar code data of **12345**, **12345@@** would be transmitted to the host.

- By default, the RF Terminal has no Postambles configured. Postambles can contain up to 15 characters scanned from the bar coded FULL ASCII Menu. **To set a Postamble:**
  - Scan the **Postamble** bar code or select **Postamble** from the keypad menu.
  - Scan the desired characters (up to 15) from the FULL ASCII Menu.
  - Scan the **SET** bar code, or if using the keypad, press **ENTER**.
  - To clear the **Postamble** and return to the default (no Postambles defined), scan **CLEAR** at step #2, and then continue with your setup.

- You can use the **Postamble** to trim characters from the data you are entering into the RF Terminal. You can trim from 1-15 characters from the data by creating a Postamble of:

~x

where ~ is ASCII 126 and x is a single hex digit 1-F (corresponding to 1-15). Data that is shorter than the trim amount is transmitted without trimming. Postambles trim characters from the end of the data. Here are some examples:

Data	Postamble	Data Transmitted
123	XYZ	123XYZ
12345678	~3XYZ	12345XYZ
12345678	~9	12345678
12345678901	~A	1
123456	~5	1

**Postamble trims trailing characters**

- Using the Bar Code ID feature and the **Postamble**, you can trim data selectively, trimming characters only on the bar code type specified. To use selective trimming, enter:

~bx

where **b** is the *Bar Code ID character* (see the *Code 128 setup parameter*) and **x** is the number of characters to trim from the end of the data. For example, ~b2~c1 says “trim 2 characters from Code 39 data and 1 character from UPC-A data”. Remember that the **Postamble** trims trailing data.

- Lastly, the **Postamble** can be used to check a maximum character length for data entered. To check for length in the **Postamble**, enter:

|nnmm

where | is ASCII 124, *nn* is the two-digit minimum and *mm* is the two-digit maximum. |0210 would check for a minimum of 2 characters and a maximum of 10. If you try to scan a bar code outside the minimum or maximum lengths, no decode will result. Entering data by keypad is not affected.

## Characters



This setting allows the RF Terminal to output chosen ASCII characters in place of the actual characters entered. For example, if you scanned the number **1** (*hex 31*) and wanted the RF Terminal to output *hex 92* instead, you would enter **3192** for the **Characters** parameter. This would re-assign the output characters, with the RF Terminal outputting *hex 92* every time it sees *hex 31*. To re-assign characters:

- Scan **Characters**



- Scan up to seven 4-digit pairings where the first 2 digits represent the hex number to *replace* and the second 2 digits represent the hex number to *insert*. You can have up to seven character reassignments.
- Scan **SET**

You can eliminate the output of a character by using **FF** as the hex number to insert. For example, if you wanted to eliminate all \$, following the above instructions, enter **24FF**.

## Beep Tone



Speaker

Lowest	0
Low	1
<b>Medium</b>	<b>2</b>
High	3
Highest	4
No Beep Tone	5

## Batteries



<b>Alkaline Batteries</b>	<b>0</b>
<b>Rechargeables</b>	<b>1</b>

- In order to get an accurate *Battery Status* reading; you must select the correct battery type. If you ordered NiMH batteries (part number L01) with the RF Terminal, this will be set to Rechargeable before shipping.
- If you didn't order re-chargeable batteries, this shipped setting is Alkaline. *Battery Status* can be displayed by pressing the STATUS key on the RF Terminal keypad.
- Before you can recharge the batteries, this parameter must be set to Rechargeables. Don't try to recharge alkaline batteries. They might explode. This will void your warranty.
- If you decide to use rechargeables after ordering the RF Terminal without rechargeables included, you must change this setting allow recharging.

## Date Format



Date/  
Time

<b>US Format</b>	<b>0</b>
European Format	1

- The US format of **mm/dd/yy** is the default setting.
- If you switch formats, you must reset the date (**SET DATE**) in the new format also.

## Set Date



For correct date display, the 6-digit date must be set in the date format you plan to use. By default the US terminals use the US date format of **dd/mm/yy**. If you change the date format, you must re-set the date to match the new format. For example, to set a date of January 20, 1999, you would enter 012099 (US format) or 200199 (European format). The date can be scanned in from the bar coded Setup Menu or entered from the RF Terminal keypad. To display the date during operation, press the STATUS key.

## Set Time



The time is set using a 4-digit military **hhmm** format. For example, to set the time to 3:08 p.m., you would enter **1508**. The time can be scanned in from the bar coded Setup Menu or entered from the RF Terminal keypad. To display the time during operation, press the STATUS key.

## Display of Year



2 digit

0

4 digit

1

- By default, the RF Terminal is configured to display and transmit the year in a **2-digit format**; i.e. 1999 would transmit and display as **99**.
- *Before* you change the RF Terminal to display a 4-digit year, i.e. **1999**, make sure that the software receiving data from the RF Terminal is set up to accept a 4-digit year.

## Voice Message Partitions



This parameter partitions the total amount of voice messages into different message lengths. The default setting is:

**303015**

xx yy zz

where: **xx** is number of ½ second messages  
**yy** is the number of 1-second messages  
**zz** is the number of 2-second messages

The total time allotted must not exceed **75** seconds. To change the partitions, scan or enter **6** digits total; **2** for the number of ½-second messages, **2** for the number of **1-second** messages and **2** for the number of **2-second** messages. See the default setting as an example.

**WARNING:** *changing the **Voice Message Partitions** parameter after you have recorded messages could result in having to re-record some of them; they would still be there but longer messages may get cut up and shorter ones combined.*

## Shut Down Time



Other

By default, if the RF Terminal is inactive (no keystrokes or scanning) for more than **5 minutes**, it will shut itself down in order to conserve batteries. This includes SIGNING OFF if appropriate. To resume operation, you must turn the RF Terminal back on using the ON/OFF key. To change the amount of time the RF Terminal waits before shutting down:

- **Scan Shut Down Time**
- Scan two digits - the default is **05** (5 minutes)- to correspond to the length of time in minutes. For example, **01** would be **1 minute**.

If you want to prevent the RF Terminal from shutting off automatically at all, set the **Shut Down Time** to **00**.

## Laser Scanner Options



Other

<b>None</b>	<b>0</b>
Double Decode	1
4.5 second laser beam	3
<b>Transmit EAN-13 normally</b>	<b>C</b>
Transmit EAN-13 in ISBN format	D
<b>Transmit UPC-A normally</b>	<b>E</b>
Transmit UPC-A in EAN-13 format (with 0 flag character)	F

- By default, the RF Terminal has no special laser options set. If any of the features below seem to fit your situation, set them appropriately. Settings **C** through **F** are not laser-dependent and are for UPC/EAN bar code types only. See the **UPC/EAN** parameter for more information
- **Double Decode** is there to minimize the possibility of misreads when scanning very poor quality bar codes. This option forces the RF Terminal to keep reading until it gets two results that are identical. This "double scan checking" takes longer but will minimize misreads since it must get the same result twice before considering it a "good" read.
- **4-second laser beam** increases the amount of time the laser beam is activated, giving the laser more time to try and read a code. This option is useful for trying to read poor quality code. Using the 4-second laser beam with long range lasers give the operator more time to aim the laser properly at a distant bar code (usually using the "marker" beam). The default beam time is 2 seconds.

## Aiming Dot Duration



Other

This parameter applies to the built-in internal laser as well as the LZ200 and LZ400 tethered laser scanners. Before the laser beam spreads, you can create a brighter aiming dot to be sure you are on the bar code you want to read. The default is set to **00**, no aiming dot. You can key in 01 through 99 which creates an aiming dot in 1/10<sup>th</sup> second increments; i.e., 20 would be two seconds.

## Reset



While in Setup Mode, **DO NOT** scan the **RESET** bar code unless you want to set *all* of the RF Terminal setup parameters back to the factory default settings. Scanning **RESET** will erase *all* changes you have made.

*The following serial parameters Baud Rate, Parity, Data Bits, and Stop Bits apply only to firmware updates and a portable printer such as the Cameo and QL3 printers.*

## Baud Rate



RS232

300	0
600	1
1200	2
2400	3
4800	4
<b>9600</b>	<b>5</b>
19,200	<b>6</b>

## Parity



RS232

<b>None</b>	<b>0</b>
Even	1
Odd	2

- **None** is generally used with 8 data bits
- **Even** or **Odd** parity is generally used with 7 data bits.

## Data Bits



RS232

7 bits	0
<b>8 bits</b>	<b>1</b>

## Stop Bits



RS232

<b>1 bit</b>	<b>0</b>
2 bits	1

## Protocol



RS232

<b>None</b>	<b>0</b>
XON/XOFF	1
Maintain backward compatibility for illegal statement handling	E
<b>Illegal statement handling for current versions</b>	<b>F</b>

- Settings **0** and **1** pertain to use of a *serial Printer* with your RF Terminal. Use setting **1** for **XON / XOFF** if your *serial Printer* supports it. It **DOES NOT** apply to the Cameo and QL3 Printers.

- Settings **E** and **F** pertain to the way the RF Terminal handles illegal statements coming from the host computer. RF Terminal software versions *prior* to 9.059 did not handle illegal statements the same way as current versions. *This setting is really only applicable if you had written your host program to be compatible with RF Terminal versions prior to RFT9059.*

## Base and Relay Setup


The Base and Relay Setup is only accessible via the RF 700 Configuration Utility included on the Utilities CD that came with your RF Terminal. You can also download the utility from our website at:

<http://www.barcodehq.com/utilities/rfserial.exe>


### Using the RF 700 Configuration Utility

After you install the Configuration Utility from the CD or from the web, make sure your Base or Relay Station is attached to one of the computer COM ports using the 9 pin serial cable (F36) included with your system and that the power supply (5v from Worth Data ONLY) is plugged in. A Base Station will light the LED Green, while a Base jumpered as a Relay will light a the LED Yellow, so be sure your unit is jumpered properly.

Start the RF 700 Configuration Utility.

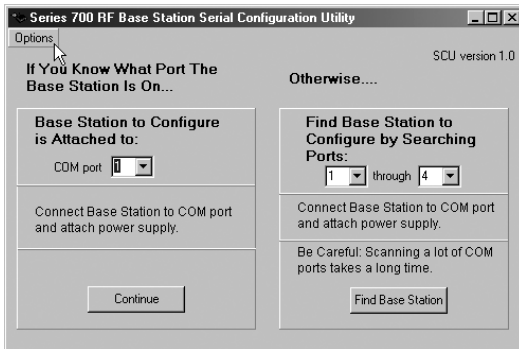

If you know which COM port you are attached to, select that port in the program, then click "**Continue**". If you are unsure of the COM port number, the program can find it for you. Enter the range of COM ports to search, then click "**Find Base Station**".

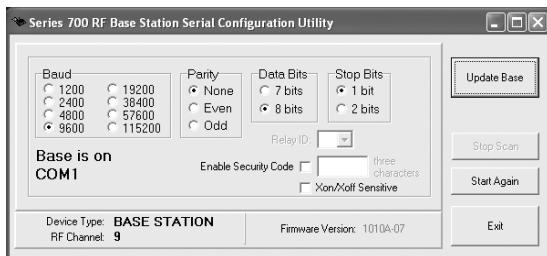

The program will look for the Base or Relay and determine its current configuration. Once the program finds it, it will display the Device Type (BASE or RELAY), the RF Channel (default is 01) and the Firmware Version (xxxx-pp). The first five characters are for the main processor's firmware, which can be updated by you from the latest firmware always available on our website. The last two last two characters are the firmware version of the radio processor; this is not field updateable. If these two characters don't show, (you see only xxxxx), it means your radio processor is not responding and you need to call us to authorize a repair.

If you want to change any of the settings (**Baud**, **Parity**, **Data Bits** and **Stop Bits**), you can do so by clicking the desired setting.

If you are configuring a Relay, the first Relay should be configured as **Relay ID "0"**, which is the default. If you have more than one Relay, then select the desired Relay ID for this unit.

You can enable a **Security Code** for either a Base or a Relay. The Security Code needs to be three characters and when enabled, requires anyone wanting to make a change to the Base or Relay to enter this 3-character code.

"**Xon/Xoff Sensitive**" should be checked ONLY if your system has XON/XOFF specified for handshaking on the serial port in use. Typically in Windows, handshaking will be set to "None" and you should leave this setting unchecked. See "*Addressing a Terminal not Signed In*" and "*Base Station Initialized Message*" in **Chapter 6** for details.

Once you have made any and all changes, click on the "**Send Settings**" button. Your Base or Relay is now configured!

## Testing the RF link between base station and host

Use the following command to test the transmission of data from host to Base and back again to the host:

```
@@*Edataaaaaaaaa<EOT>
```

where *dataaaaaaaaa* is any string of data, terminated by EOT. This string should be sent from the host to the Base Station. If the data is received by the Base, it is echoed back to the host in the format:

### **dataaaaaaaaa<CR>**

where *dataaaaaaaaa* is the data string from the original transmission, terminated by a CR (ASCII 13). This test verifies communication in both directions (host to Base, Base to host).

- If the data isn't echoed back, either your host COM port or the Base Station has a problem.
- Once you know the Base Station is communicating with the host correctly, compare the channel of the Base Station with the channel of the Terminal. Use Site Testing to check the communication of the Terminal to the Base and back. Stay close, make sure no other Terminals are in use, and go to Site Test mode on the Terminal. You should get 96-100% on first try. If you don't, it's a good chance your radios need repair. Call Worth Data for an RMA.

If you are using PICK or UNIX as your operating system, make sure the Base Station is set to "XON/XOFF Sensitive".

# Operational Theory

---

Before you jump in and start writing a complex host program, it might be nice to be familiar with the theory behind the operation of your RF Terminal. The RF Terminal has three different modes of communication:

- **Two-Way Mode** - the host program transmits requests for data to the terminal via the Base Station. The RF Terminal transmits a response back to the Base Station, which in turn sends the data on to the host program. This is a truly interactive mode allowing you to create flexible programs for a variety of applications that are computer led and controlled.
- **One-Way Mode** - the RF Terminal transmits to the host with only confirmation from the Base Station. The host program receives data from the Base Station as it would any other serial device. The host cannot send data to the terminal; it can only receive information.
- **Site Test Mode** – the Base Station and RF Terminal work together to evaluate the site and determine the best location for the Base Station. The site test evaluates the percentage of successful transmissions on the first and second tries from any given area. The higher the percentage, the more successful your communications will be from that area. This helps you to identify problem areas before you implement your RF Terminal system. At 30 ft., this is also the acid test for suspected bad radios in a base or in a terminal.

Let's start with a discussion of the basic theory behind a **Two-Way** RF Terminal system.

## How the Two-Way RF System works

### Basic RF System communications...

The RF system consists of three components – *Host Computer*, *Base Station* and *RF Terminal*. The *Base Station* connects to the *Host Computer* via the serial port. The application running on the *Host Computer* sends a data prompt to the serial port where the *Base Station* receives it. The *Base Station* then transmits the data prompt via radio frequency to the intended *RF Terminal*. The *RF Terminal* displays the data prompt on the display and waits for the operator to enter the requested data. Once the operator enters his data, the *RF Terminal* transmits the data to the *Base Station*, which in turn passes it on to the *Host Computer*. The application on the host computer processes the information and sends a new data prompt out to the *Base Station* and the whole process begins again.



## A little more in depth...

This RF system's dialogue is Terminal initiated. The Terminal says, "I'm here, give me something to do. The Worth Data RF system is different from other systems in that our RF Terminal does not constantly "listen" for a data prompt from the host. We decided to use a different approach that would help to eliminate unnecessary radio traffic, conserve battery power, reduce the size of the Terminal, and greatly simplify the base station's logic/circuitry.

*Here is how it works:*

Each RF Terminal has a **Terminal ID**. When the RF Terminal powers up, it asks if you want to **SIGN ON?** Pressing YES at the **SIGN ON?** prompt causes the RF Terminal to transmit its *Terminal ID* and a byte of data indicating to the Base Station that it wants to sign on to the system.

When you press YES to the **SIGN ON** prompt on the RF Terminal, the Terminal will display the following message:

### **WAITING ON BASE TO ACKNOWLEDGE**

This message is normal when first establishing communication and may occur occasionally during normal operation.

When the Base Station receives a **SIGN ON** message from a RF Terminal, the Base Station transmits the SIGN ON information to the host computer. The host computer application can then do one of two things:

1. If it has something for the Terminal to do, it can send a prompt to the Base, which in turn transmits it to the Terminal. The RF Terminal receives the prompt, waits for the operator to enter the requested data, and then transmits the data back to the Base Station.
2. If the host program does nothing within an allotted time, the Terminal displays the message:

### **WAITING ON HOST PROMPT**

Lets suppose that a RF Terminal and a Base Station have been processing data by sending prompts and data back and forth as described in example 1. The Base Station sends a data prompt to the RF Terminal, the RF Terminal transmits the operator-entered data back to the Base Station. If the host program has another prompt for the terminal, the Base sends it out, repeating the process above.

Suppose the host program does *not* have a prompt ready to send back to the Terminal; the Terminal transmits its data to the Base Station but does not receive a new data prompt. The Terminal then retransmits its data (it thinks maybe the host didn't receive it) and waits for a response.

Once the terminal has received a prompt back from the host, the time it took the host to respond is sent to the Terminal. For all subsequent transmissions,

the terminal goes to sleep until the time it took the last time for the host to respond has expired; then the terminal wakes up and listens. If it has nothing, it retransmits its data and waits for a response.

The original data transmission could have collided with another message, or the Base could have received the Terminal's data but had not yet received the host's prompt response. If the previous transmission got through, the Base Station knows that the data is a retransmission rather than a new data transmission so it sends a message to the Terminal telling it:

“I have nothing for you from the host, go to sleep”.

While in “sleep” mode, the Terminal “wakes” up at a random interval and asks “do you have anything for me yet”, waiting for either a “go to sleep” message or a new data prompt. After each delays, the Terminal displays:

### **WAITING FOR HOST PROMPT**

If a Terminal receives *no* response at all from a Base Station (no data prompt or “go to sleep” message), it retransmits its data and waits for a response. If the Terminal gets no response after 10 re-transmissions, it assumes it out of range from the Base Station with which it was communicating, and attempts of establish contact with any Base Station. If the Terminal can't contact any Base Station, it displays:

### **TRANSMISSION FAILED HIT ANY KEY\_**

Pressing a key on the Terminal starts the re-transmission process over again. The RF Terminal will try to retransmit its data, displaying the TRANSMISSION FAILED message after every 10 unsuccessful tries.

## **Can I change a prompt after it has been sent?**

Normally once the Terminal has received a prompt from the host, it goes to sleep and waits (as long as it takes) for the operator to scan or key something in response. The host cannot send another prompt without creating a "Sequence Error." You might want to change the prompt or locate a lost terminal with beeping.

There is a special setting in the RF Terminal Setup in which you specify the time (between 5 seconds and 7 minutes) you want the Terminal to quit waiting for input from the operator, blank the screen, send back a special control character to the host program, display "Waiting on Host Prompt" and wait for a prompt from the host application program; the host application program can choose to send back different instructions or simply repeat the previous prompt's instructions, (See *Automatic Check Back* in the **Programming Section**).

## How the One-Way RF System works

The RF System can be used to perform “dumb” data entry to the computer – you could even use *Portkey* to transmit the data through a serial connected Base as though it has been entered from the keyboard. This is useful if you want to enter data directly into an application. This type of data transmission is called **One-Way Mode**. Once the RF Terminal transmits data to the Base Station, the Base Station acknowledges receipt of the information by echoing back the data to the Terminal that sent it, along with a beep. If the data transmission *did not* make it through to the Base station after 10 tries, the RF Terminal will give two long beeps and display the following message:

**TRANSMISSION FAILED  
TO RETRY, MOVE CLOSER  
AND PRESS ENTER.  
F1 TO EXIT.**

One-Way mode also works well as a test program since it doesn't require a program running on the host computer or even that the Base Station be connected to the host. To get into **One-Way Mode**:

At power up, the RF Terminal asks if you want to

**SIGN ON?  
KEY [YES/NO]?\_**

SIGN ON is for Two-Way communication only. Press NO, then press NO again at:

**SETUP MODE?  
KEY [YES/NO]?\_**

When you see:

**ONE WAY MODE?  
KEY [YES/NO]?\_**

Press YES. If the Base Station already has other RF Terminals signed on in Two-Way mode, you will not be allowed into the system. A Base Station must be dedicated to one mode at a time.

If the Base Station is dedicated to One-Way mode, you will see the following prompt on the RF Terminal display:

**Data Received Was  
Enter Data?**

Since you have just started your One-Way session, there is no data to display on line #2. Line #3 is now asking you to scan or key data into the RF Terminal. If you are entering data from the RF Terminal keypad, you must press the ENTER key to transmit your data. If the Base Station receives the data, the RF Terminal displays the following prompt:

**Data Received Was  
aaaaaaaaaaaaaaaaaaaa  
Enter Data?**

Where *aaaaaaaaaaaaaaaaaaaa* is the data received by the Base Station (and transmitted to the Host Computer if connected). You can exit One-Way Mode simply by pressing the F1 key on the RF Terminal keypad.

In One-Way Mode, the RF Terminal transmits its *Terminal ID* to the Base Station but it *does not* pass it on to the Host Computer. If your application on the Host Computer needs to know which RF Terminal data came from, use the *Preamble* setup parameter to enter unique identifying information. Data is also transmitted *without a Terminator Character* (like a CR or TAB that is transmitted after the data); so if you need one, use the *Postamble* setup parameter to add the appropriate character(s) after your data. For more information on *Preambles* and *Postambles* see **Chapter 2; RF System Setup** for details.

## How Site Testing works

The RF Terminal uses **Site Test** mode to: 1) test the radios at short range, (50 ft.) as an acid test for correct operation, and 2) to evaluate a specific site for effective coverage. Because each operating environment is different, it is almost impossible to predict the range without **Site Testing**.

Before you permanently install any hardware, you should perform a Site Test to fully evaluate your planned area of operation. During the test the RF Terminal is transmitting messages and waiting for acknowledgement from the Base Station. (Since this US Terminal hops over 25 different frequencies, the Site Test goes across all frequencies to make comparisons valid; this takes about 10 seconds.) The Site Test evaluates the percentage of successful transmissions. The higher the percentage, the more successful your communications will be from that area. Site Testing does not require your Base Station be attached to your Host Computer. All you need is your Base Station, 5v power supply and RF Terminal. For detailed information on how to perform a Site Test and use the results to determine the best location for your Base Station, go to **Chapter 4; Performance Issues**.



## Performance Issues

---

### Evaluating your area of planned operation

Since every operational environment is different, it is impossible for us to tell you exactly what equipment you need and where you should put it to achieve maximum performance from your RF System. However with 3000 ft. open area range, unless you are going through a lot of walls, you probably won't care where the Base is located, and you probably will not need a Relay.

**Site Testing** was developed so that the user could start with a minimum system (RF Terminal and Base Station) and determine for themselves what their realistic operating range is, what additional equipment they need, and where to install their Base Stations to achieve optimum performance. Some other manufactures require expensive Site Tests before you can even purchase any equipment from them. Our Site Testing allows you the flexibility to Site Test whenever you choose, whether it is before you install your system or during operation to troubleshoot RF problems. Site Testing is the most valuable tool you have to help you achieve an efficient RF System with maximum range.

There is also some basic information about Radio Frequency itself that can help you make smart choices about the location and composition of your system:

- **Metal walls are almost impenetrable by RF.** If your warehouse computer is located in a metal shed, don't locate the Base Station inside with the computer. Locate the Base Station outside the metal shed instead.
- **The more walls you try to transmit through, the more the signal breaks down.** Walls that have metal studs (interior office walls) and concrete walls with steel rebar slightly degrade the signal with each wall you try to go through. Metal walls may require the use of Relay Stations to achieve adequate coverage.
- **Organic material absorbs RF energy.** If you are trying to operate in an area with lots of densely packed organic material (bags of beans or corn), expect and plan for reduced operating ranges.

There are some additional measures (other than a Site Test) you can take early on to maximize your range:

- **Base Stations should be located at the center of the area of intended coverage.** If they are not located in the center, they should be tilted in the direction of use.
- **Raise the Base Station.** Sometimes just raising the Base Station 12 feet will dramatically increase your operating range, especially

in a warehouse or grocery store environment. Mounting the Base Station on the ceiling with the antenna pointing down is the best.

## Performing a Site Test

As we have said before, the Site Test is your most valuable tool for evaluating your planned area of operation. All you need to perform a Site Test is a RF Terminal, a Base Station and it's 5v power supply. There are a few things you need to do though before you begin:

- Make sure **all other** Base Stations are turned **OFF**.
- Make sure that the Base Station and RF Terminal you are using are set to the same channel. Base Stations and RF Terminals are shipped from the factory set channel 0. If you need to change the channel, see **Appendix A; Channel and Jumper Changes**.

The Base Station does not need to be connected to a host computer to do a Site Test. Simply connect the Base Station to wall power using the 5v power adapter. Locate the Base where you think you will have the best range and power it up. Turn on the RF Terminal and press a key at the opening screen.

- Press **NO** at the **SIGN ON?** prompt
- Press **NO** at the **SETUP MODE?** prompt
- Press **NO** at the **ONE WAY MODE?** prompt
- Press **YES** at the **SITE TESTING?** Prompt

If the Base Station is powered up, walk to the area where you want to perform your first test, (start at 50 ft. or greater). When in position, stop and look at the RF Terminal display. It should read:

**Press Enter When  
Ready, F1 to Exit**

Press the ENTER key to start the test. During the test, (about 2 seconds), hold still during the test – moving around can result in inaccurate results. During the test the RF Terminal is transmitting many messages and waiting for acknowledgement from the Base Station. During the test the following message displays on the RF Terminal screen:

**Site Testing in  
Progress, Please  
Wait.....**

**Please Wait...** will display on your screen until the test is finished. If it takes more than a few seconds, there is something wrong. When the test is finished, you will see the results displayed in the following format:

**nn% Good  
Press Enter When  
Ready, F1 to Exit**


The first line shows the percent of successful transmissions. As long as you are getting at least 90%, you will have excellent results in the location tested.

If you don't get the minimum results shown above:

1. Try hanging the Base Station upside down or tilted toward the area of usage – this alone can double the effective range.
2. If using a European terminal, try a different channel. You may find less interference on another channel. There are several to choose from, only try 1 or 2 others. This does not apply to the US Terminal, because all channels use the same 25 frequencies, just in a different hopping order.
3. Try locating the Base Station closer to the area of difficulty. Remember that moving the Base Station will require you to recheck the other locations already tested.
4. If none of the above works, you will have to consider using a Relay.

## Relay Stations

Keeping all of the above factors in mind, using Relay Stations can increase your area of coverage by 5 times. Relays work like a remote antenna, passing data to the Base Station via cable instead of radio frequency. Base Stations are used as Relay Stations by changing the jumpers inside. See *Appendix A* for details.

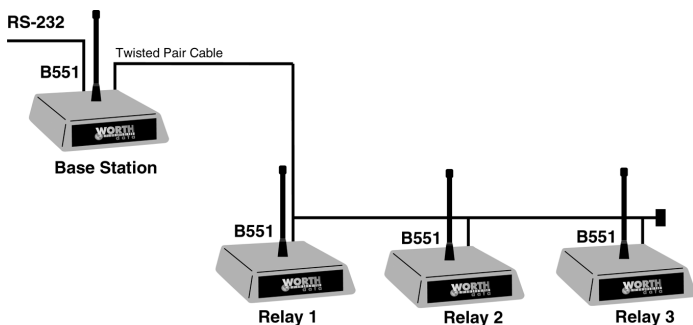

Relay Stations are attached to the Base Station using a cable that connects from the Base's RELAY port to the Relays' RELAY port. When you order a Relay Station, you receive a 3-foot test cable with it. Although Relay Stations will increase your range of operation, they will also add about 1/2 second to the response time.

### How Relay Stations work...

It helps to know how Relay Stations work before you add them to your system. Although Relays increase your operational range, they also slow the response time of your system. In order to use Relays, the Terminal must be configured to acknowledge that Relays are present. This is done using the



**Relay Existence** setup parameter. By default, the RF Terminal is *not* configured to look for Relays. This setup parameter can only be accessed via the RF Terminal keypad - it cannot be configured using the bar coded RF Terminal Setup Menu. See **Chapter 2; RF System Setup** for details.

Once the RF Terminal is Relay-ready, it can use the Relay instead of the Base Station to communicate. If a RF Terminal tries to transmit 10 times to a Base Station without a response, it broadcasts a “who can hear me” message. If both the Base Station and the Relay hear the message, whoever answers back to the RF Terminal first becomes the point of contact for that RF Terminal.

Once a RF Terminal has established communication with a Relay, it addresses that particular Relay until another communication failure (10 transmissions with no response) occurs. If a Base Station is within hearing distance of the RF Terminal, it will ignore messages meant for the Relay.

When a Relay receives data from a RF Terminal, it then transmits that data to the Base Station over RS-422 twisted-pair cable. The Base Station in turn transmits data (via cable) for that RF Terminal to the Relay, for subsequent broadcast to the RF Terminal.

Relays are “dumb”. Relays do not know whether a transmission was received by the Base Station or not, so it is up to the RF Terminal to retransmit its data if it does not receive a message from the Host Computer (via the Relay). The Relay can recognize data from the Terminal though and if it receives 10 re-transmissions from the RF Terminal, the Relay assumes that the Base Station cannot hear it and broadcasts the message:


**RELAY n CANNOT BE  
HEARD BY THE BASE  
NOTIFY SUPERVISOR  
PRESS ANY KEY**

At this point, the RF Terminal puts out the “who can hear me” message. The **RELAY n CANNOT BE HEARD** message usually indicates a cabling problem and should be checked out immediately.

Sometimes a Relay gets a response from the Base Station that is partial data or garbage. The Terminal retransmits its data since it has not received a new prompt. If this occurs ten times, the RF Terminal broadcasts, “who can hear me”. At this point the Relay is still functioning and answers the RF Terminal’s call. Should the Relay respond to the RF Terminal first, the whole sequence starts again. If the Relay *again* gets “garbage” messages from the Base and the Terminal re-transmits 10 times, then the Relay concludes that there is something wrong and broadcasts the **RELAY CANNOT BE HEARD** message. This situation indicates that you may have an electrical “noise” problem – check your cabling as well as any electrical equipment that is in the area.


## Determining coverage areas for Base Stations and Relays

As we said before, it is almost impossible to predict the effective RF communications range in a given environment. The typical area of coverage is a 1000 - 3000 ft. radius.

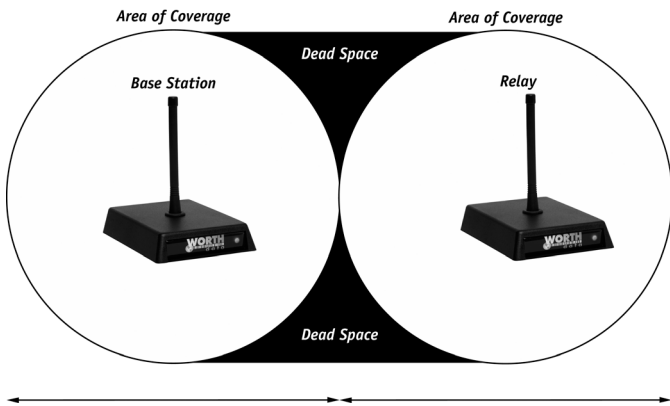

After a Site Test, if you have determined that you will need to add Relays to cover the area you want to operate in, you will need to determine where to place your Relay in relation to your Base Station. To effectively cover an area, there must be overlap between the area covered by the Base Station and the area covered by the Relay. The example below shows what can happen with no area overlap:

As you can see, the only area adequately covered is in a path where the two circles touch. The "dead space" is completely without coverage. Alternatively, locating the Base Station and Relay as shown below results in better coverage:

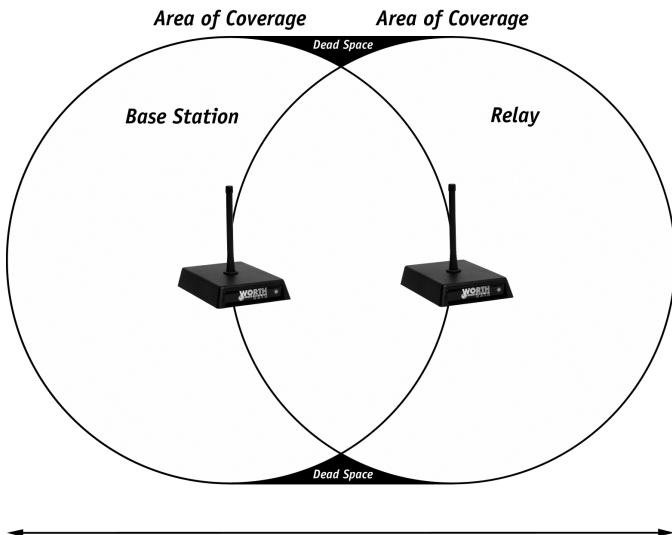

To Site Test a Relay, all other Relays and Base Stations must be turned off.

This is the only way to know for sure which Relay is responding. Alternatively, perform the Relays' test out of range of the other Relays and Base Stations.

### **Relay Installation**

Relay Stations are connected to the Base by twisted-pair wire. See

**Appendix B: Adding Relays** for the pin outs and a testing plan.

## **Is radio traffic contention likely?**

The radio traffic time is about 15ms per transaction. Radio time is not going to be a gating factor, even with more terminals than the allowed 64 maximum.

The bottleneck could partially be the serial port baud rate in high volume applications. The default baud rate is 9600 baud; you can increase this up to 115,200 baud, but the greater the baud rate, the less the RS-232 cable distance allowable.

The gating factor for the application is almost always going to be the application program. By splitting the application between two or more work stations, each talking to a separate set of Terminals/Base Station, that factor can be minimized.

## Before you begin programming...

---

The RF Terminal operates in two basic ways:

**One-Way communication**, where all data transfer is initiated by the RF Terminal. This is not very useful, because it has no editing or prompting. The Base Station itself simply acknowledges the receipt of the data by echoing it back to the Terminal. The host computer has no dialog whatsoever with the Base Station or Terminal; it is simply used to take the data coming from the Base through the serial port and do something with it.

**Two-Way communication**, where messages from the host user program are sent to the Base Station (via the serial port), then from the Base Station to the RF Terminal. The Terminal responds back to the Base with data and its Terminal ID. The data is then transmitted from the Base to the host computer where it is processed and the next command is sent out. Each RF Terminal has a unique Terminal ID, allowing a single Base Station to handle up to 64 Terminals.

Two-way dialog is established when a Terminal SIGNS ON to the RF network. The host computer application waits until a Terminal SIGNS ON, then begins its processing by sending the first prompt out to the Terminal via the Base Station. If the Terminal does not receive a prompt from the host, it goes into “sleep” mode, “waking up” and checking with the Base periodically (see **Chapter 3**; *Operational Theory* for details) to see if it has any messages waiting. This conserves battery power and reduces radio traffic.

Two-Way mode requires programming to communicate with the Terminal where One-Way mode does not. We have tried to make it easy for the programmer to communicate with the Base Station; no protocol or handshaking is required. This type of communication is fine when the Base is located only a few feet from the serial port it is connected to. If you are locating your Base Station farther away, use shielded, grounded (bare wire Pin 1 touching shield) cable, lower baud rates and possibly, line drivers for very noisy environments. (Do not use Cat 5 wire for a serial cable).

Before you begin programming, there are some factors you should take into consideration during the planning process.

- **Plan for system failures.** This includes hardware failures, software failures and operator failures. In order to create an efficient application, you must put some thought into what you will do when different parts of the system fail.
- **Look for All Errors.** Be sure your program is trapping all possible error conditions that the Base Station may return to you. The list includes:

*Sequence Errors detected*  
*Illegal Command detected*  
*Base Station Initialized*  
*Addressing a Terminal Not Signed In*  
*Command without an ID*

All of these error conditions are detailed in the next chapter. Don't forget to program for them; this is a common mistake. Failure to trap them will give create very strange, unpredictable results.

Even though you don't think your code will ever make a mistake, take advantage of feedback that the Base Station provides. Failure to do so is a common mistake that eventually results in serious program failure, sometimes due to hardware problems that go undetected.

- **Parse the Returned Strings thoroughly.** Don't assume anything about the next response from the Base to your program and look only for the partial string such as the ID only; parse the string returned completely and be sure you are examining every possibility. Failure to do so is a common mistake.
- **Plan for expansion.** You may start small (1 base/1 Terminal) but try to create an application that will allow for easy expansion and addition - especially of Terminals.
- **Use the Demo Programs.** The demo programs can at least allow you to see how the system functions and whether you can anticipate any system-wide problems. The demo programs should also be used as a response-time benchmark.

## Failure Planning

### Hardware Failures

Let's assume that each part of the system has failed. How are you going to know what has happened and how are you going to recover?

- The most frequent failures are at the Terminal level. If a Terminal has a hardware failure, it will not be able to SIGN OUT. It is possible for the Terminal operator to press the ON/OFF key or the F1 key by accident, forcing the Terminal to SIGN OUT - sometimes in the middle of a transaction. This happens at battery-changing time also. You need to plan for partial transactions - do you trash the data you do have and start over, or pick up where you left off?
- Keep in mind that if a Terminal has SIGNED OUT in mid-transaction, the Base Station clears any pending message for that Terminal before it will allow it to SIGN ON again. Make allowances to re-send messages or prompts that were cleared upon SIGN ON if necessary.

- If a Base Station has a hardware failure, neither the Terminal nor the host computer will be able to communicate with it. When the Base Station comes back on-line, it sends a “Base Station Initialized” message back to the host, letting the host know that it must re-initialize all Terminals and pick up any incomplete transactions.

### **Operator Errors**

- Plan on your operator walking out of range and going to lunch in the middle of a transaction. What do you do with the data you do have, and where are you going to start up again?
- Let’s say your operator is SIGNED ON and decides it’s time to take a break. Instead of pressing the F1 key to SIGN OUT, he presses the OFF key. Pressing the OFF key is OK (it will SIGN him OUT) but there is a delay until the SIGN OUT is acknowledged. Because of the delay, the operator might think he didn’t press the key hard enough and press it again - this time actually powering down the Terminal *before* the SIGN OUT was complete. If this happens, you need to plan to *re-send* the last prompt to the Terminal when he SIGNs ON again.



## Chapter 6

# Programming for the RF Terminal

---

The four levels of programming support offered for the RF Terminal are:

- 1) Low Level ASCII sequences sent to and from the Base Station by the user program reading/writing to the serial port.
- 2) Low Level ASCII sequences sent to and from the Base Station using DLL for Windows for serial port reading/writing.
- 3) Active X drop-in components. Every necessary function is defined. You just complete the code for each function.
- 4) TCP/IP Active X drop-in components used by the “Server” computer to communicate with the “Client” computer that has the Base Station(s) attached.

## LOW Level ASCII sequences directly

### Planning

Remember, plan for every error that the Base Station might return including:

*Sequence Errors detected*

*Illegal Command detected*

*Base Station Initialization detected*

*Addressing a Terminal Not Signed In detected*

*Command without an ID*

Programs can be written in any language that has access to the serial port (reading/writing), regardless of the platform. No more than one Base Station is allowed for each serial port.

### Host to Terminal Programming

The basic format of a message that is transmitted from Host to Base to Terminal is fairly simple:

Byte position	Function	Possible values
1	RF Terminal ID	0-9, A-Z, a-z, - =
2+	Command(s)	**
Last	Termination of message	EOT (ASCII 4)

The **RF Terminal ID** is always the first byte and always only 1 character in length. There are 64 different possible values - 0-9 , A-Z, a-z, - and =.



The **Command(s)** section of the message always starts with the second byte and can consist of one or more commands - including data to be displayed or voice messages to be broadcast.

The last byte is always ASCII 4 (**EOT**) to terminate the message.

Here is a listing of valid commands and examples:

Command characters	Command function
*@	Reinitializes <b>all</b> terminals
3@	Reinitializes Terminal #3
1@B <i>n</i>	Make Terminal #1 beep <i>n</i> (1-9) times
2@C0 *	Clears the entire screen (4 lines or 6 lines) on Terminal #2. *See more about 4 and 6 line displays on page 6-4.
0@C1	Clears line 1 on Terminal #0
1@C2	Clears line 2 on Terminal #1
2@C3	Clears line 3 on Terminal #2
0@C4	Clears line 4 on Terminal #0
3@C5 *	Clears line 5 on Terminal#3 (if 6 line display), Clears all lines if 4 line display. *See more about the two display types on page 6-4.
1@C6 *	Clears line 6 on a 6 line display. Will do nothing on a 4 line display. *See more about 4 and 6 line displays on page 6-4.
1@D <i>n</i>	Displays date and time on line <i>n</i> (1-4) in US (mm/dd/yy, hh:mm:ss) or Euro (dd/mm/yy, hh:mm:ss) format on Terminal #1
1@V <i>nn</i>	Play voice message # <i>nn</i> (01-99) on Terminal #1
1@S <i>dataxxxx</i>	Output <i>dataxxxxxx</i> to serial port on Terminal #1 -max 231 chs

A typical “prompt” command sequence follows the format below:

**0@*n,m,o,data***

- where*
- n*** is the line number (1-4) you want the prompt displayed on
  - m*** is the character position (1-20) where you want the prompt displayed
  - o*** is the character that determines whether the prompt is for **display only** (0) or is **waiting for data input** (1) See the table below for valid characters for this position.
  - data*** is the data you want displayed

For example, the command **@1,1,1, Enter Quantity** would display **Enter Quantity** starting at position 1 on line 1, then wait for the operator to enter their data.

These are valid entries for the third position character:

0	No data input for this Command, Display ONLY
1	Data input required from the keypad or scanner
2	Only keypad input allowed, start un-shifted
3	Only keypad input allowed, start SHIFTED
4	Only scanner input allowed
5	Only accept YES (Enter key or C key) or NO (0 key or B key) keypad response. (Terminal sends 1 for YES, 0 for NO). C and B key are there to facilitate YES/NO keypad entry while scanning with integrated laser.
A	same as 1, but time stamped as prefix (hhmmss)
B	same as 2, but time stamped as prefix (hhmmss)
C	same as 3, but time stamped
D	same as 4, but time stamped
E	same as 4, but can press END key to break-out of scanner-only input mode. Terminal ID + CR is sent to host
S	SHIFTED keypad input or scanner input
p	un-shifted keypad entry with no display (for passwords)
P	SHIFTED keypad entry with no display (for passwords)
R	Data input required from the RS-232 serial port (waiting for serial input can be bypassed by pressing the ENTER key which will send a NULL data string back to host computer.) Uses for this are PDF 417 Serial Scanners, and the Cameo Printer's magnetic stripe input. A POS terminal becomes possible. Scan the credit card and print the receipt, all on the RF Terminal.
K	Data input from an external serial keyboard that attaches to the serial port. As data is keyed, the characters are displayed on the RF Terminal LCD display.
M	This command is for a printer initialization and magstripe input on the Zebra Cameo printer equipped with the magstripe option.

Here are some rules and useful tips for creating messages (one or more commands per message):

- Re-initialize commands **\*@**, or **n@** (where **n** is the Terminal ID 0-F) clear the buffer for terminal(s) in the Base Station. Following a re-initialization, the host program should re-display of all the screen data necessary to start the application.
- A message with multiple commands is legal and useful. For example, the command “@1,1,0, PLEASE ENTER@2,1,1,QTY” would display PLEASE ENTER on line 1, display QTY on line 2, and then wait for data input. All 6 lines can be filled with one message.
- Messages can be a combination of multiple commands, (i.e. voice messages, initialization, clearing lines, requesting data entry), up to

231 characters in length. A message cannot though, contain an @S command in combination with any other command. A message also *should not* contain more than 1 request for data entry (third character in command is 1). For example:

**@1,1,1,ITEM@2,1,1,QTY**

has two data entry “prompt” commands combined. If this message were sent to the RF Terminal, the first data entry prompt (@1,1,1,ITEM) would be executed, but any and all commands after the first data entry prompt in that statement would be ignored without warning – there will be no display or indication of an illegal command.

The @S command (for serial output) statement *cannot* be combined with any other command - even clear (@Cx) commands. After a @S command is successfully completed, the Base Station sends back to the host the RF Terminal ID followed by a CR (ASCII 13). There is a 231 character limit on data for this command. If you send a command of more than 231 characters, you will get an Illegal Command returned, (ID ? CR). If you need to send 300 characters of data, send the first part, wait for the acknowledgement (ID CR), and then send the remaining part. If you are using the @S command with a printer *other* than the Zebra Cameo or QL3, you may have to change the *Protocol* parameter in the RF Terminal to **XON/XOFF**. This will allow the RF Terminal to deal with the character buffer limitations of your particular printer. If you are using the O’Neil MicroFlash Printer, you must send a **NULL** character before the valid data to wake up the printer. See your printer manual for details and see **Chapter 6** for details on printer protocol.

- The @M command is similar to the @S command, except it *can* be combined with other commands because it is a data entry command too. This command is for a printer initialization and magstripe input on the Zebra Cameo printer equipped with the magstripe option. The format of the command is:

**@Mdddatttta(EOT)**

where dddatttta might be ! U1 MCR 80 T1 T2+ CR + LF

(Refer to the Cameo manual for the exact string sequence you need to send. The above example sends over an 10 second request for reading Track 1 and Track 2).

There is no reply to the host except the magstripe data. If the card cannot be read, pressing the ENTER key on the Terminal will send back ID+CR. This is the breakout method.

This command must be the last in a series of commands. For example, the following would be a typical multi-command statement:

```
@C0@1,1,0,Swipe Card@M! U1 MCR 80 T2 (CR)(LF)(EOT)
```

where CR is ASCII 13

LF is ASCII 10

EOT is ASCII 4

The statement causes the RF Terminal to transmit the string "!U1 MCR 80 T2 CR LF" to the Cameo printer. The printer then wakes up and blinks to indicate the magstripe input is ready to be swiped; when the swipe is complete, the Terminal sends back the data to the host computer as:

ID+T2:Data on Card+CR (the printer's CR LF stuff is stripped)

If the request is for Track 1 and Track 2, the data sent back is

ID+T1:data on 1+T2:data on 2+CR

- Every statement must end with a data entry "prompt" command, whether the statement is a single command by itself or several commands combined together. Any illegal statement will be ignored as a command but will be displayed on the addressed RF Terminal display exactly as written. If no Terminal ID was included in the statement, it will try to display the invalid statement on ID 0. Once the ENTER key is pressed on the Terminal displaying the invalid statement, the terminal sends the Base Station a "?" character. The Base Station then in turn sends the message  $n?CR$  (where  $n$  is the Terminal ID and CR is a carriage return) back to the Host computer.
- The "Clear lines" command (@Cx) for the 4 line displays differ slightly from the "Clear lines" command for the current 6 line displays.

The following table shows the programming differences for 4 lines/6 lines:

Command	4 Line	6 Line
@C0	Command did not exist	Clears all lines on both a 4 line display and a 6 line display.
@C5	Cleared all lines on a 4 line display	Clears line 5 on a 6 line display. Clears ALL lines on a 4 line display.
@C6	Command did not exist	Clears line 6 on a 6 line display. Will not affect a 4 line display

- In order to maintain compatibility with 4 line display terminals in an existing system, there is a new option in the RF Terminal Setup for 6 line display terminals. The LCD DISPLAY MODE allows the user to configure a 6 line display terminal as a 4 line display (centering the data on the display and conforming to the old programming command format, i.e. @C05 clears all lines). See Installation and Setup for details on how to get into LCD DISPLAY MODE.
- The SIGN ON character for a 6 line display RF Terminal operating in 6 line display mode (see the previous point concerning LCD DISPLAY MODE) is different than for a 4 line display. A 6 line display terminal operating in 6 line mode signs on using ASCII 22. If the 6 line terminal is configured for 4 line display, it signs on using ASCII 15. This allows you to use both types of display in the same system and be able to distinguish between the two terminal types. See page 6-6 for more information on SIGN ON.

**CAUTION:** All 6 line display terminals are by default, configured as 6 line display terminals and will try to SIGN ON using ASCII 22. If you are trying to SIGN ON to an existing 4 line display terminal system that has not had any changes in its programming to utilize the 6 line display terminals, the 6 line display terminal will NOT BE ABLE TO SIGN ON. Make sure to reconfigure the Terminal using the LCD DISPLAY MODE to operate as a 4 line display terminal.

Here are some sample command statements utilizing some of the programming tips offered above:

<b>@2,1,1,ENTER ITEM NO</b>	Display <b>ENTER ITEM NO</b> on line 2, position 1 and wait for data input. This is a <b>valid</b> single command <b>statement</b> – it ends with a data entry request.
<b>@V23@1,2,1,WRONG ITEM</b>	Play voice message 23, display <b>WRONG ITEM</b> on line1, position 2 and wait for data input. This is a <b>valid</b> multiple command <b>statement</b> – it ends with a data entry request.
<b>@C1@1,7,0,PICKING</b>	Clear line 1. Display <b>PICKING</b> at position 7 of line 1. This statement is <b>illegal</b> . To be a valid statement, it must end with a data entry request. For example: <b>@C1@1,7,0,PICKING@2,7,1,ITEM</b>
<b>@1,1,1,ITEM@2,1,1,QTY</b>	Since only one command can be a “prompt” data entry request, this is an <b>illegal statement</b> and would be ignored as a command. It would be valid if changed to <b>@1,1,0,ITEM@2,1,1,QTY</b>

## Base Station to Host Formats

The basic format of a message that is transmitted from Base to Host is fairly simple:

Byte position	Function	Possible values
1	RF Terminal ID	0-9, A-Z, a-z, - =
2+	Data Transmitted	**
Last	Termination of message	CR (ASCII 13)

Typically, the Base Station is sending the “answer” to the hosts “question” - for example, if a Base sent a host message to a terminal #2 that said:

**2@1,1,1,ITEM NUMBER + EOT**

The RF Terminal would display ITEM NUMBER on line 1, position 1 and accordingly, the operator would then enter an item number by scanning or using the keypad. The RF Terminal transmits the data entered -say it’s **123** - to the Base Station, which in turn transmits the following to the host:

**2123+CR**

Where **2** is the Terminal ID, **123** is the data and **CR** is the termination, (the plus sign is not transmitted).

Besides data, there are other messages that the Base Station will send to the Host:

### Serial Reply

After a **Serial** command (@S) has been successfully completed, the Base Station sends to the Host the Terminal ID followed by a CR. Serial

commands are typically used for attached serial printers. Serial commands cannot be combined with other commands in a message to the Base Station/Terminal. Remember, you can only send 231 characters (including the ID + @S + EOT).

## **SIGN ON**

To login to the host computer, the user presses a key on the RF Terminal at power-up to get to the SIGN ON screen. As the user SIGNs ON, the Base Station sends back the following SIGN ON message to the host:

Byte position	Function	Possible values
1	RF Terminal ID	0-9, A-Z, a-z, - =
2+	SIGN ON	SYN (ASCII 22) if 6 line display configured as a 6 line display.
		SI (ASCII 15) if 6 line display terminal configured as 4 line display.
Last	Termination of message	CR (ASCII 13)

After a terminal SIGNS ON, the host should be prepared to acknowledge the SIGN ON and give the terminal instructions, such as:

***Standby for Assignment, Press ENTER to acknowledge  
Nothing to do, Press ENTER and See Supervisor  
Pick Item 1234***

If there is something for the Terminal to do, the host should send instruction to the terminal (as in "Pick Item 1234" above). If there is nothing to do at the time of SIGN ON, the host should acknowledge the SIGN ON and tell the terminal to *Stand By* or *See Supervisor* (see lines 1 and 2 above). You will notice that in lines 1 & 2 above, there is a request for the operator to press the ENTER key. This is required for the message to be a valid command - remember that all messages must end with a request for data input. The host should then expect a response from the terminal of **Terminal ID + DATA** (none if only pressing ENTER key) + **CR**.

SIGN ON is a good way for the terminal operator who has not received instruction from the host for several minutes to determine if he is still connected and if the host is still functioning. By SIGNing OUT and SIGNing back ON, the operator should receive a message that there is nothing to do. It is also a good idea for the host to keep track of elapsed time that a terminal has not had a message sent out to it. The host should then send a message periodically to re-assure the operator (remember to ask him to press ENTER) that instruction is coming or tell him to see his supervisor for re-assignment (or whatever makes sense for your application).

Ideally, if the operator is leaving the area (to go to lunch or move to another building) before he is out of range of the network, he should SIGN OUT, then SIGN ON upon his return.

A 6 line display terminal configured as a 6 line display (see Installation and Setup for LCD DISPLAY MODE) sends **ASCII 22** as its SIGN ON character. A 6 line display terminal configured as a 4 line display will transmit the ASCII 15 character for SIGN ON.

### **SIGN OUT**

When a RF Terminal is powered down manually or the user presses the F1 key to exit data entry mode to go to one of the other modes (SETUP or ONE WAY), the host receives the following SIGN OUT message:

Byte position	Function	Possible values
1	RF Terminal ID	0-9, A-Z, a-z, - =
2+	SIGN OUT	SO (ASCII 14)
Last	Termination of message	CR (ASCII 13)

## **Base Station Error Feedback**

The following are four different unexpected feedbacks that the Base Station can send back to your program: (Be sure to look for each of them to be sure your program doesn't blow up at an unexpected time.)

### **Addressing a Terminal not SIGNED ON**

If the host attempts to send a message to a terminal that is not SIGNED ON, the Base Station sends back the following message to the host computer:

Byte position	Function	Possible values
1	RF Terminal ID	0-9, A-Z, a-z, - =
2+	Terminal NOT Signed In	DC1(ASCII 17)
Last	Termination of message	CR (ASCII 13)

The ASCII 17 character can be changed to ASCII 16 for XON/XOFF sensitive systems by changing the Base Station Setup. See **Chapter 2; RF System Setup** for details.

If the Base Station receives five **Addressing a Terminal not SIGNED On** messages in a row, it transmits the following message to the Terminal and shuts down: (it will recognize a reinitialize command (\*@EOT) from the host though)

### **Base Shut Down Due to Host Logic Error**

Check your program for the sequence error before starting again. The host program will have to reinitialize the Base Station or you will have to cycle



power on the Base Station and have the Terminal Sign On again in order to continue.

### Sequence Error Message

The host program must observe the one-for-one "host prompt/terminal response" protocol at all times. The host cannot send a second data entry prompt until it has received a response to the first data entry prompt. If it does, this is considered a **Sequence Error**. If the Base Station receives a command that is out of sequence, it sends the following message back to the host:

Byte position	Function	Possible values
1	RF Terminal ID	0-9, A-Z, a-z, - =
2+	Sequence Error	DC2 (ASCII 18)
Last	Termination of message	CR (ASCII 13)

If the Base Station receives 5 **Sequence Error**'s in a row, it transmits the following message to the Terminal and shuts down: (the only host command that it will receive is \*@EOT)

### **Base Shut Down Due to Host Logic Error**

Check your program for the sequence error before starting again. You will have to reinitialize the Base Station by host program control (\*@EOT) or manually cycle power on the Base Station and have the Terminal Sign On again in order to continue.

### Illegal Command

- When a terminal receives an illegal statement from the host, it will display the entire statement on the terminal. Once the ENTER key is pressed on the terminal, the terminal sends a "?" back to the Base Station.

Byte position	Function	Possible values
1	RF Terminal ID	0-9, A-Z, a-z, - =
2+	Illegal Command	?
Last	Termination of message	CR (ASCII 13)

For example, if Terminal #2 received an illegal command, the Base station would transmit to the host:

**2?CR**

- If a command is sent from the host to the base station without a valid terminal ID character, such as:

**@1,1,1,Scan Serial Number**

since the command doesn't specify which terminal it is meant for, the base sends the following message back to the host:

**\*?CR**

- If the Base Station receives more than 231 characters, it treats that statement as an Illegal Command. If it sees more than 231 characters 5 times in a row, it transmits the following message to the Terminal and shuts down:

**Base Shut Down  
Due to Host Logic  
Error**

You can re-initialize the terminal by sending `*@EOT` or by powering the base off and back on.

**Automatic Check Back**

When a terminal checks back in to see if there is a change in instructions, the host can send back the same prompt or send back a new prompt. The check back occurs according to the time specified in the Terminal's setup, (specified in increments of 5 seconds). When a check back occurs, the Terminal clears the screen of the current prompt, and sends back the following message:

Byte position	Function	Possible values
1	RF Terminal ID	0-9,A-Z,a-z,-=
2+	Check Back	BEL (ASCII 07)
Last	Termination of message	CR (ASCII 13)

**Base Station Initialized Message**

Whenever the Base Station is powered up, it sends a message back to the host as follows:

Byte position	Function	Possible values
1	BASE ID	* ( <i>Base ID is fixed</i> )
2+	Base Initialization	DC3 (ASCII 19)
Last	Termination of message	CR (ASCII 13)

Since ASCII 19 is XOFF, the ASCII 19 character can be changed to ASCII 20 for XON/XOFF sensitive systems by changing the Base Station Setup. See **Chapter 2; RF System Setup** for details.

The **Base Station Initialized** message is provided so that the host will know that there has been a power interruption on the Base Station. When a serial device powers up, the first byte transmitted is often garbage. QBASIC handles the garbage character without incidence, but GWBASIC does not unless `ON ERROR GOTO` is used to trap the error. Be aware of this potential garbage-byte problem in your programming. To isolate and

test for the problem, power up the Base *without* the serial cable connected. After you power the Base up, plug in the serial cable. You will *not* see the “**Base Initialized**” message but it should not matter when testing for the garbage data.

If a terminal is signed-on to the system, and the base station is re-initialized, the following message is sent to the terminal:

**Base Reinitialized X  
Cycle Power on RF  
Terminal and Sign-on  
again to Restart\_**

where *X* is either a **P** (base initialization was power-related) or **H** (base initialization was host-related).

## Control Keys for Possible Programming

There are some keys on the RF Terminal keypad that when pressed, can transmit special ASCII characters back to the host program. This feature might be used by a programmer to allow the operator to review transactions. **You can use these keys for special program functions, such as scrolling thru data, backing up steps, jumping, finishing a process, etc** The keys are as follows:

Key	Code transmitted to Host
UP ARROW key	FS (ASCII 28)
DOWN ARROW key	GS (ASCII 29)
LEFT ARROW key	RS (ASCII 30)
RIGHT ARROW key	US (ASCII 31)
BEGIN key	ETB (ASCII 23)
END key	CAN (ASCII 24)
SEARCH key	VT (ASCII 11)

The STATUS key is reserved to only display the Time and Date.

The Control keys can be used *without* pressing the ENTER key by using the **Control Keys Only** Terminal Setup parameter. See **Chapter 2; RF System Setup** for details.

## LOW Level ASCII Sequences using a DLL

The DLL disk is included with every RF Terminal system. To install the program, run the INSTALL.EXE program from Windows Explorer. The program, **PromptCOM** comes in both 16 bit and 32 bit versions of a *Windows Dynamic Link Library* (DLL) that allows programmers to easily add the ability to send prompts and receive data from their RF Terminal via the RF Base Station or direct serial link.

The *Application Programming Interface* (API) for **PromptCOM** consists of the following functions:

<b>InitComDLL</b>	<i>Initializes the PromptCOM system</i>
<b>CloseComDLL</b>	<i>Shuts down the promptCOM system and frees resources without closing the parent application.</i>
<b>Setup</b>	<i>Setup is used to configure the COM port</i>
<b>SendCommand</b>	<i>This function both sends a command to the terminal with the given ID</i>
<b>GetCommData</b>	<i>This function returns the data entered at the remote unit for that prompt</i>
<b>DataAvailable</b>	<i>Use this function to check if there is data to process before calling GetCommData</i>

There are sample programs distributed on the diskette for Visual Basic, Access and Delphi. There is also a Visual Basic code example that does not require the DLL. Use the Help System as documentation and view the README file for the latest changes.

## PromptCOM/ActiveX

Drop-in components are tools that are added to your programming environment "tool kit". There are a variety of different technologies around for implementing a drop-in component such as VBX (for Visual Basic) and VCL (for Delphi and C Builder) and COM (ActiveX). Only the ActiveX variety are widely compatible with almost all development environments.

**PromptCOM/ActiveX** is a drop in COM component that allow programmers to easily add the ability to send prompts to and receive data from their R/F Terminal via an RF Base Station. It is compatible with

Visual Basic, Visual C++, Delphi, and most other 32-bit development platforms. See the help file for installation instructions.

## Programming Considerations for Serial COM

Before making any method calls, make sure you :

- Set the COM port properties (device name, baud, parity, bits,) as desired. Make sure the port is closed (call **CloseDevice**) before making changes to any of the port settings.
- Call the **OpenDevice** method. This activates the COM port used by this instance of the **WDterm** control.
- Set the **ActiveTerminal** property to identify the terminal on which you desire to operate. You can change the **ActiveTerminal** at any time in order to direct commands to appropriate terminals.

## Test For Good Communication - Serial COM

Implement an event handler for **OnTermBaseRegister** that causes a beep or displays a message when called. If communication between the host PC and the base station is good, your event handler will fire when your program is running and you power up an attached base station.

### Multiple Base Stations

- For installations using multiple base stations attached to a single host PC (these were called "channels" in **PromptCOM/DLL**) simply add a **WDterm** control to your application for each base station.

### Terminal Tracking

- Since you get one set of event handlers for each base station, you will need some scheme for keeping track of where each terminal (up to 64 per base station) is in its transaction sequence. One possible solution is to use a "state" variable for each terminal (perhaps stored in an array). Test the state variable to determine the next prompt for any given terminal. See the samples for more ideas.
- It is very important to keep track of "login status" for each terminal. Every **SignOut** event should have an associated **SignIn** event and a given terminal should not be allowed to **SignIn** twice without an intervening **SignOut**. Multiple **SignIns** from one terminal without appropriate **SignOuts** indicate either:
  1. A terminal going out of range and having its power cycled before returning within range OR
  2. Two (or more) terminals using the same ID (terminal ID conflict).

## Concepts - Serial COM

When you use drop-in components in your program you will follow the standard object-oriented programming paradigm that uses properties, methods, and events to implement the functionality of the drop-in component.

- **Properties** are the various configuration variables used by the drop-in component. An example of a property is the **ComDeviceName** setting.
- **Methods** are function calls used to issue commands and access features of the drop-in component. An example of a method is sending an **Input** command to the terminal.
- **Events** are function definitions placed in your application's source code. The function definitions in your source code are called Event Handlers. The skeleton structure of the event handler's source code is automatically generated. The code in the Event Handler is called ("fired") by the drop-in component when a specific event occurs. An example of an event is when a terminal returns data and the **OnTermData** event is fired.

The details of how to access Properties/Methods/Events varies between development platforms. Details of how it works in some of the most popular platforms is illustrated in the samples included with the RF Utilities CD or available for download from our website at:

<http://www.barcodehq.com/wdterminal.exe>

## Properties - Serial COM

Properties are the various configuration variables used by the **WDterm** control. They are directly assignable in your application (e.g. "**WDterm.ActiveTerminal = 5**") and can be set in your development environment's object browser.

**Important:** Except for **ActiveTerminal** and **Quiet**, all properties require the serial port to be "closed" before they can be changed. Use the **CloseDevice** method before setting properties and then call **OpenDevice** to re-open the serial port.

Note that your development environment may show more properties for the **WDterm** control than are listed here. This is normal. You may ignore properties you see that are not listed here.

### **ActiveTerminal**

Valid values: *0 -63*

Definition: This is the terminal ID (0-63) to which method call instructions are directed.

### **ComDeviceName**

Valid values: *COM1-COM16*

Definition: This is the serial port that this instance of the control will use. If you have more than one base station, drop in another **WDterm** control and set its **ComDeviceName** for your other COM port(s).

### **ComBaudValue**

Valid values: *300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200*

Definition: This is the serial port speed setting and must match the base station setting.

### **ComParity**

Valid values: *None, Even, Odd.*

Definition: This is a serial port setting and must match the base station setting. **WDterm** may allow other settings but those listed here are the only ones compatible with current version base stations.

### **ComDataBits**

Valid values: *7, 8*

Definition: This is a serial port setting and must match the base station setting. **WDterm** may allow other settings but those listed here are the only ones compatible with current version base stations.

### **ComStopBits**

Valid values: *1, 2*

Definition: This is a serial port setting and must match the base station setting. **WDterm** may allow other settings but those listed here are the only ones compatible with current version base stations.

## Quiet

Valid values: *True, False*

Definition: If **Quiet** is set to True then any status and error message generated by **WDterm** will be suppressed.

## Methods - Serial COM

Methods are commands that you issue to the **WDterm** control. All of the "Inputxxx" commands cause the terminal to wait for operator input.

*Note that your development environment may show more available methods for the **WDterm** control than are listed here. This is normal. You may ignore methods you see that are not listed here.*

*Important:* When your application starts up, the serial port is "closed". You must call **OpenDevice** before other method calls will work.

Except for the **RelnitAll** method, all methods use the **ActiveTerminal** property to identify the terminal to use.

### OpenDevice

Function: Opens the communications (serial) port. This must be called before any of the methods described below. Make sure to set all Properties as desired before calling this method (except **ActiveTerminal** or **Quiet**).

### CloseDevice

Function: Closes the communications (serial) port. This must be called before changing any of the Property settings (except **ActiveTerminal** or **Quiet**). When your application starts up, the serial port is "closed". You must call **OpenDevice** before other method calls will work.

### InputAny

Parameters: *line, position, prompt, shifted, timestamped*

Function: This instructs the **ActiveTerminal** to display the prompt at line and position and wait for data to be entered from either terminal keypad or scanner. If shifted is set to "true", the terminal will start in shifted mode. Timestamped appends a (hhmmss) prefix to the returned data.



## InputKeyBd

Parameters: *line, position, prompt, shifted, timestamped*

Function: This instructs the **ActiveTerminal** to display the prompt at line and position and wait for data to be entered from the terminal keypad only. If shifted is set to "true", the terminal will start in shifted mode. Timestamped appends a (hhmmss) prefix to the returned data.

## InputScanner

Parameters: *line, position, prompt, allowbreakout, timestamped*

Function: This instructs the **ActiveTerminal** to display the prompt at line and position and wait for data to be entered from the terminal scanner only. Setting allowbreakout to true allow user to "break out" of scanner only mode by pressing the end key on the terminal. A termID+CR will be sent to the host.

## InputYesNo

Parameters: *line, position, prompt*

Function: This instructs the **ActiveTerminal** to display the prompt at line and position and wait for a **Yes** (Enter key or C key) or a **No** (0 key or B key) from the terminal keypad.

*Note: C and B keys are used to facilitate keypad entry while scanning with the integrated laser.*

## InputPassword

Parameters: *line, position, prompt, shifted*

Function: This instructs the **ActiveTerminal** to display the prompt at line and position and wait for data to be entered from the terminal keypad only. The entered data is not displayed on the terminal.

## InputSerial

Parameters: *line, position, prompt*

Function: This instructs the **ActiveTerminal** to display the prompt at line and position and wait for data to be received through the terminal serial port. Waiting for serial input can be bypassed by pressing the enter key on the terminal which will send an empty data string to the host (fires the **OnTermData** event handler).

## **OutputSerial**

Parameters: *data*

Function: This instructs the **ActiveTerminal** to send data to the terminal's serial port. Data must be less than 231 characters in length for each call to **OutputSerial**.

## **SendDisplay**

Parameters: *line, position, prompt*

Function: This instructs the **ActiveTerminal** to display the prompt at line and position. Must be followed by an **"Input"** method call to take effect.

## **ClearScreen**

Function: This instructs the **ActiveTerminal** to clear its display. Must be followed by an **"Input"** method call to take effect.

## **ClearLine**

Parameters: *line*

Function: This instructs the **ActiveTerminal** to clear the specified line on its display. Must be followed by an **"Input"** method call to take effect.

## **SendDate**

Parameters: *line*

Function: This instructs the **ActiveTerminal** to display date and time on the specified line number. Must be followed by an **"Input"** method call to take effect.

## **Beep**

Parameters: *count*

Function: This instructs the **ActiveTerminal** to beep count times. Count may be a value from 1 to 9. Must be followed by an **"Input"** method call to take effect.

## PlayVoice

Parameters: *msgnum*

Function: This instructs the **ActiveTerminal** to play voice message number *msgnum*. *Msgnum* may be a value from 1 to 99. Must be followed by an "**Input**" method call to take effect.

## Relnit

Function: This instructs the **ActiveTerminal** to re-initialize. Must be followed by an "**Input**" method call to take effect.

Base Stations use the message "Buffer Reinitialized..." to indicate a single terminal re-initialization.

## RelnitAll

Function: Instructs all attached terminals to re-initialize.

## Events - Serial COM

**WDterm** events occur when a specific condition is met. When an event is "fired", an event handler function in your application is called.

Though the details of exactly how it is done varies from one programming environment to the next, the source code skeletons for the various event handlers are automatically generated and inserted into your source code for you. See the samples for more specific information.

Each event passes relevant information to your event handler function. The only event that does not pass any data is **OnTermBaseRegister**. All others pass at least the Terminal ID on which the event occurred. **OnTermData** also passes the data that was keyed or scanned into the terminal.

Terminal ID is always passed as 0-63. A Terminal ID value of 99 indicates an error.

Once you have the event handler skeletons, you can proceed to add whatever functionality you desire to each event.

You must call the **OpenDevice** method before any events can be fired.

## OnTermBaseRegister

Event: An attached base station has successfully powered up and communicated with the host computer via the serial connection.

### **OnTermSignIn6**

Data passed: *terminal*

Event: A six-line terminal has signed in. Terminal ID is passed in terminal.

### **OnTermSignIn4**

Data passed: *terminal*

Event: A four-line terminal has signed in. Terminal ID is passed in terminal.

### **OnTermSignOut**

Data passed: *terminal*

Event: A terminal has signed out. Terminal ID is passed in terminal.

### **OnTermData**

Data passed: *terminal, data*

Event: A terminal has sent data in response to an Input method call.

### **OnTermNotSignedIn**

Data passed: *terminal*

Event: A command has been sent to a terminal that is not signed in.

### **OnTermSequenceError**

Data passed: *terminal*

Event: The one-for-one host prompt/terminal response protocol has been violated. The host cannot send a second Input command until it has received a response from the first **Input** command. If a base station receives 5 sequence errors in a row, a Host Logic error is generated and the base shuts itself down.

*While PromptCom/ActiveX will intercept and prevent most logic errors, they are still possible so you should implement this event handler!*

### **OnTermIllegalCommand**

Data passed: *terminal*

Event: An illegal command has been sent to a terminal.

*PromptCom/ActiveX is designed to prevent illegal commands but software is not always perfect and*

*we may not have imagined all the ways in which our customers will want to use it!*

### **OnTermUpArrow**

Data passed: *terminal*

Event: The up-arrow button has been pressed on a terminal. You must issue another **Input** method call before **WDterm** can respond to another keypress on the terminal.

### **OnTermDownArrow**

Data passed: *terminal*

Event: The down-arrow button has been pressed on a terminal. You must issue another **Input** method call before **WDterm** can respond to another keypress on the terminal.

### **OnTermLeftArrow**

Data passed: *terminal*

Event: The left-arrow button has been pressed on a terminal. You must issue another **Input** method call before **WDterm** can respond to another keypress on the terminal.

### **OnTermRightArrow**

Data passed: *terminal*

Event: The right-arrow button has been pressed on a terminal. You must issue another **Input** method call before **WDterm** can respond to another keypress on the terminal.

### **OnTermBeginKey**

Data passed: *terminal*

Event: The BEGIN button has been pressed on a terminal. You must issue another **Input** method call before **WDterm** can respond to another keypress on the terminal.

### **OnTermEndKey**

Data Passed: *terminal*

Event: The END button has been pressed on a terminal. You must issue another **Input** method call before

**WDterm** can respond to another keypress on the terminal.

### **OnTermSearchKey**

Data passed: *terminal*

Event: The SEARCH button has been pressed on a terminal. You must issue another **Input** method call before **WDterm** can respond to another keypress on the terminal.

## **PromptNET TCP/IP Active X Controls**

**PromptNET/ActiveX** is a drop in COM component that allows programmers to easily add the ability to send prompts to and receive data from their R/F Terminal via an RF Base Station across a TCP/IP network connection.

**PromptNET** requires a "Client" computer on a TCP/IP network (to which up to 4 serial Base Stations can be attached) and a "Server" computer visible on the network to the Client.

The client computer runs the **PromptNET** Client Utility program as a background task. The server computer runs your application which uses the **PromptNET** ActiveX component to communicate with the Client.

The ActiveX component is compatible with Visual Basic, Visual C++, Delphi, and most other 32-bit development platforms. The client program requires Windows 98 or later. See the help file for installation instructions.

## **Programming Considerations**

### **Network Setup**

- The network settings on both client and server must support TCP/IP communications.
- It is critical that the client and server computers are "visible" to each other across your network. Both computers must have an IP address in the same subnet. The server requires a static IP address while the Client can either have a static address or use an assigned IP address via a DHCP server or equivalent. Refer to your Windows networking administration utility in the Control Panel to configure computer IP address settings.
- **PromptNET** uses ports 54123 (server) and 54124 (client).
- You can link server and client through a dial-up or DSL internet link as long as the server has a static IP address and your router passes the above ports.

- If you are unsure of how to set up your IP configuration properly, refer to your network administrator for help.

### Client Utility

- Make sure the Client Utility is properly installed on the client computer and communicating with at least one Base Station. Test the Client by cycling power on the Base Station. You should see a "Base SignOn" message in the monitor window.

### Server Communications

- Run the Server Test Utility on the server computer. Now go to the client computer, set the IP address for the server computer and a unique "Base Name" for the Client Utility and attempt to connect to the Server Test Utility. If the Client Utility connects, you are configured properly. Go to the server computer, shut down the Server Test Utility and begin work on your **PromptNET** server application.
- For Client/Server communications, the Client Utility is required to be running on the PC that the serial Base Stations are attached to.
- Before making any **WDIPterm** method calls in your application, make sure to set the **ServerOn** property to "true".

### Test For Good Communication

- Implement an event handler for **OnTermBaseRegister** that causes a beep or displays a message when called. If communication between the host PC and the base station is good, your event handler will fire when your program is running and you power up an attached base station.

### Multiple Base Stations

- For installations using multiple base stations attached to a single client PC, simply use the four "channels" provided by the Client Utility program.

### Terminal Tracking

- Since you get only one set of event handlers, you will need some scheme for keeping track of where each terminal (up to 64 per base station, up to 4 base stations per client) is in its transaction sequence. One possible solution is to use a "state" variable for each terminal (perhaps stored in an array). Test the state variable to determine the next prompt for any given terminal. See the samples for more ideas.
- It is very important to keep track of "login status" for each terminal. Every SignOut event should have an associated SignIn event and a given terminal should not be allowed to SignIn twice without an

intervening SignOut. Multiple SignIns from one terminal without appropriate SignOuts indicate either:

1. A terminal going out of range and having its power cycled before returning within range OR
2. Two (or more) terminals using the same ID (terminal ID conflict).

## Concepts - TCP/IP COM

Drop-in components are tools that are added to your programming environment "tool kit". Only the ActiveX variety are widely compatible with almost all development environments. When you use drop-in components in your program you will follow the standard object-oriented programming paradigm that uses properties, methods, and events to implement the functionality of the drop-in component.

**Properties** are the various configuration variables used by the drop-in component. An example of a property is the **ServerOn** setting.

**Methods** are function calls used to issue commands and access features of the drop-in component. An example of a method is sending an **Input** command to the terminal.

**Events** are function definitions placed in your application's source code. The function definitions in your source code are called Event Handlers. The skeleton structure of the event handler's source code is automatically generated. The code in the Event Handler is called ("fired") by the drop-in component when a specific event occurs. An example of an event is when a terminal returns data and the **OnTermData** event is fired.

The details of how to access Properties/Methods/Events varies between development platforms. Details of how it works in some of the most popular platforms is illustrated in the samples included with the RF Utilities CD or available for download from our website at:

<http://www.barcodehq.com/wdterminal.exe>

## Properties - TCP/IP COM

Properties are the various configuration variables used by the **WDIPterm** control. They are directly assignable in your application (eg. "WDIPterm.ServerOn = true") and can be set in your development environment's object browser.

Note that your development environment may show more properties for the **WDIPterm** control than are listed here. This is normal. You may ignore pro-perties you see listed in your development environment that are not listed here.



## ServerOn

Valid values: *True, False*

Function: Set to *True* to enable the server. Set to *false* to turn the server off. You should leave this off unless your program is actually running. Setting it to *True* at design-time can cause problems.

## Quiet

Valid values: *True, False*

Function: If **Quiet** is set to *True* then any status and error message generated by **WDIPterm** will be suppressed.

## LogFile

Valid values: *blank or a valid file name*

Function: If the file does not exist it will be created. If it exists, it will be appended to. If **LogFile** is blank, no log file is maintained.

## ClientList

Valid Values: *Read Only.*

Function: Returns a formatted string listing all attached client **BaseNames** and associated IP numbers. Format is "basename CR/LF ip address CR/LF basename...".

## Methods - TCP/IP COM

Methods are commands that you issue to the **WDIPterm** control. All of the "**Inputxxx**" commands cause the terminal to wait for operator input.

*Note that your development environment may show more available methods for the **WDIPterm** control than are listed here. This is normal. You may ignore methods you see that are not listed here.*

### InputAny

Parameters: *basename, channel, terminal, line, position, prompt, shifted, timestamped*

Function: This instructs the terminal attached to client *basename* on channel to display the prompt at line and position and wait for data to be entered from either terminal keypad or scanner. If *shifted* is set to "true", the terminal will start in shifted mode. *Timestamped* appends a (hhmmss) prefix to the returned data.

## **InputKeyBd**

Parameters: *basename, channel, terminal, line, position, prompt, shifted, timestamped*

Function: This instructs the terminal attached to client *basename* on channel to display the prompt at line and position and wait for data to be entered from the terminal keypad only. If *shifted* is set to "true", the terminal will start in shifted mode. *Timestamped* appends a (hhmmss) prefix to the returned data.

## **InputScanner**

Parameters: *basename, channel, terminal, line, position, prompt, allowbreakout, timestamped*

Function: This instructs the terminal attached to client *basename* on channel to display the prompt at line and position and wait for data to be entered from the terminal scanner only. Setting *allowbreakout* to true allow user to "breakout" of scanner only mode by pressing the end key on the terminal. A *termID+CR* will be sent to the host.

## **InputYesNo**

Parameters: *basename, channel, terminal, line, position, prompt*

Function: This instructs the terminal attached to client *basename* on channel to display the prompt at line and position and wait for a Yes (Enter key or C key) or a No (0 key or B key) from the terminal keypad.

*Note: C and B keys are used to facilitate keypad entry while scanning with the integrated laser.*

## **InputPassword**

Parameters: *basename, channel, terminal, line, position, prompt, shifted*

Function: This instructs the terminal attached to client *basename* on channel to display the prompt at line and position and wait for data to be entered from the terminal keypad only. The entered data is not displayed on the terminal.

## **InputSerial**

Parameters: *basename, channel, terminal, line, position, prompt*

Function: This instructs the terminal attached to client *basename* on channel to display the prompt at line and position and wait for data to be received through the terminal serial port. Waiting for serial input can be bypassed by pressing the enter key on the terminal which will send an empty data string to the host (fires the **OnTermData** event handler).

## **OutputSerial**

Parameters: *basename, channel, terminal, data*

Function: This instructs the terminal attached to client *basename* on channel to send data to the terminal's serial port. Data must be less than 231 characters in length for each call to **OutputSerial**.

## **SendDisplay**

Parameters: *basename, channel, terminal, line, position, prompt*

Function: This instructs the terminal attached to client *basename* on channel to display the prompt at line and position. Must be followed by an "**Input**" method call to take effect.

## **ClearScreen**

Parameters: *basename, channel, terminal*

Function: This instructs the terminal attached to client *basename* on *channel* to clear its display. Must be followed by an "**Input**" method call to take effect.

## **ClearLine**

Parameters: *basename, channel, terminal, line*

Function: This instructs the terminal attached to client *basename* on *channel* to clear the specified line on its display. Must be followed by an "**Input**" method call to take effect.

## SendDate

Parameters: *basename, channel, terminal, line*

Function: This instructs the terminal attached to client *basename* on *channel* to display date and time on the specified line number. Must be followed by an "Input" method call to take effect.

## Beep

Parameters: *basename, channel, terminal, count*

Function: This instructs the terminal attached to client *basename* on *channel* to beep count times. Count may be a value from 1 to 9. Must be followed by an "Input" method call to take effect.

## PlayVoice

Parameters: *basename, channel, terminal, msgnum*

Function: This instructs the terminal attached to client *basename* on *channel* to play voice message number *msgnum*. *Msgnum* may be a value from 1 to 99. Must be followed by an "Input" method call to take effect.

## Relnit

Parameters: *basename, channel, terminal*

Function: This instructs the terminal attached to client *basename* on *channel* to re-initialize. Must be followed by an "Input" method call to take effect.

*NOTE: Base Stations use the message "Buffer Reinitialized..." to indicate a single terminal re-initialization.*

## RelnitAll

Parameters: *basename, channel*

Function: This instructs all terminals attached to client *basename* on *channel* to re-initialize.

## TestClient

Parameters: *none*

Function: This instructs the Server to "ping" all attached clients. Results are recorded in the log.

## Events - TCP/IP COM

**WDIPterm** events occur when a specific condition is met. When an event is "fired", an event handler function in your application is called.

Though the details of exactly how it is done varies from one programming environment to the next, the source code skeletons for the various event handlers are automatically generated and inserted into your source code for you. See the samples for more specific information.

Each event passes relevant information to your event handler function.

**OnTermData** passes the data that was keyed or scanned into the terminal.

*Terminal ID* is always passed as 0-63. A terminal ID value of 99 is used as a placeholder for logging purposes.

Once you have the event handler skeletons, you can proceed to add whatever functionality you desire to each event.

You must set the **ServerOn** property to true before any events can be fired.

### **OnTermBaseRegister**

Data passed: *basename, channel*

Event: A base station on client *basename* has successfully powered up on *channel* and communicated with the host computer via the serial connection.

### **OnTermSignIn6**

Data passed: *basename, channel, terminal*

Event: A six-line terminal has signed in on *channel* at client *basename*. Terminal ID is passed in *terminal*.

### **OnTermSignIn4**

Data passed: *basename, channel, terminal*

Event: A four-line terminal has signed in on *channel* at client *basename*. Terminal ID is passed in *terminal*.

### **OnTermSignOut**

Data passed: *basename, channel, terminal*

Event: A terminal has signed out on *channel* at client *basename*. Terminal ID is passed in *terminal*.

### **OnTermData**

Data passed: *basename, channel, terminal, data*

Event: A terminal on *channel* at client *basename* has sent *data* in response to an **Input** method call.

### **OnTermNotSignedIn**

Data passed: *basename, channel, terminal*

Event: A command has been sent to a *terminal* that is not signed in.

### **OnTermSequenceError**

Data passed: *basename, channel, terminal*

Event: The one-for-one host prompt/terminal response protocol has been violated. The host cannot send a second **Input** command until it has received a response from the first **Input** command. If a base station receives 5 sequence errors in a row, a Host Logic error is generated and the base shuts itself down.

*While **PromptNET/ActiveX** will intercept and prevent most logic errors, they are still possible so you should implement this event handler!*

### **OnTermIllegalCommand**

Data passed: *basename, channel, terminal*

Event: An illegal command has been sent to a terminal.

*PromptNET/ActiveX is designed to prevent illegal commands but we may not have imagined all the ways in which our customers will want to use it!*

### **OnTermUpArrow**

Data passed: *basename, channel, terminal*

Event: The up-arrow button has been pressed on a terminal. You must issue another **Input** method call before **WDIPterm** can respond to another keypress on this terminal.

### **OnTermDownArrow**

Data passed: *basename, channel, terminal*

Event: The down-arrow button has been pressed on a terminal. You must issue another Input method call before **WDIPterm** can respond to another keypress on this terminal.

### **OnTermLeftArrow**

Data passed: *basename, channel, terminal*

Event: The left-arrow button has been pressed on a terminal. You must issue another Input method call

before **WDIPterm** can respond to another keypress on this terminal.

### **OnTermRightArrow**

Data passed: *basename, channel, terminal*

Event: The right-arrow button has been pressed on a terminal. You must issue another Input method call before **WDIPterm** can respond to another keypress on this terminal.

### **OnTermBeginKey**

Data passed: *basename, channel, terminal*

Event: The BEGIN button has been pressed on a terminal. You must issue another Input method call before **WDIPterm** can respond to another keypress on this terminal.

### **OnTermEndKey**

Data passed: *basename, channel, terminal*

Event: The END button has been pressed on a terminal. You must issue another **Input** method call before **WDIPterm** can respond to another keypress on this terminal.

### **OnTermSearchKey**

Data passed: *basename, channel, terminal*

Event: The SEARCH button has been pressed on a terminal. You must issue another **Input** method call before **WDIPterm** can respond to another keypress on this terminal.

# Portable Printers

## Cameo and QL 3 Common Information

Both of these printers are stocked by Worth Data for the convenience of our users who need portable printing.

These printers do **not** require any special protocol; they do not require the "wake-up byte" as do other printers. They do require a special cable that can be ordered from Worth Data (part #C12); cable pin-outs are available in **Appendix C: Cable Pin-outs**.

Shipped with every Cameo or QL 3 printer ordered is a CD ROM with the Programmers Manual in PDF format and a label design program – **LabelVista**. This program allows you to design the program and create multiple format files that can be sent to the printer where they become resident in flash. Variable fields are defined and can then be filled in by the program when in operation.

Keep in mind the following information when using these versatile printers:

- The printer turn on ("Wake-up") is accomplished by the RF Terminal toggling the DSR line on the printer, so only the @S command and the data you are sending to the printer is needed.
- Once the RF Terminal has turned on the printer, it stays on until the host program turns it off using the POWER OFF COMMAND "ESC(0x1b) p'(0x70)" described in the **Printing Systems Programming Manual**, or until the automatic shut-down takes place (2 minute default).
- The 231 character limit applies to your command string. See your **Portable Printing Systems Programming Manual** for details on programming your printer.

## Zebra Cameo Printer

The Zebra "Cameo" Printers are portable direct thermal receipt printers, (**not** label printers – the QL 3 below prints labels). Bar codes can be printed on the receipts, but you can't print labels.

One model of the Cameo printer is available with a magnetic stripe reader, allowing magnetic stripe input to the RF Terminal using the @M (magstripe input) command.

- The Cameo printer with magstripe input is capable of reading Track 1, Track 2 or Tracks 1&2. See your **Portable Printing Systems Programming Manual** for the correct character string to send in the @M command to turn on the magstripe reader. (see page 6-2 for details).



- When the Terminal sends data to the host, it sends it in the following format:

**RF Terminal ID + DATA + CR**

Typically, the data is simply a string of characters, but in the instance of data coming from the magstripe reader, there are some additional characters you need to be aware of. The magstripe reader sends its data in the following formats:

**Track 1:**

T1: DATA

**Track 2:**

T2: DATA

**Track 1&2:**

T1: DATAT2: DATA

So, when the RF Terminal transmits the data to the host, it will be in the following format:

**RF Terminal ID + T1: DATA + CR**

**or**

**RF Terminal ID + T2: DATA + CR**

**or**

**RF Terminal ID + T1: DATA + T2: DATA + CR**

For further information, see your **Printing Systems Programming Manual** on the CD ROM shipped with the printer.

## **Zebra QL 3 Printer**

The QL 3 Printer is used for label printing. It doesn't have Magstripe input. The classic application is for printing shelf labels during shelf price verification:

1. The operator scans a shelf label.
2. The Terminal transmits scanned data to the host computer.
3. The host computer looks up the price, description, etc. and transmits the computer price back and sends the necessary commands to the attached QL 3 printer to prints a new shelf label with the correct price.
4. The terminal operator then peels off the label and applies it to the shelf.

Each printer is shipped with a no charge roll of thermal paper that can be used for development, including determining the exact label size that best fits you needs and the capabilities of the printer.

We stock the 2” and 3” QL 3 printers with several label sizes immediately available including:

<b>Part Number</b>	<b>Description</b>	<b>Price/Roll</b>
E2L1	2"x1" Vinyl Shelf Adhesive Labels	\$3.50
E2L2	2"x1.25" Paper Permanent Adhesive Labels	\$2.50
E2L3	2"x2" Paper Permanent Adhesive Labels	\$2.50
E2L4	2"x1.25" Vinyl Shelf Adhesive Labels	\$3.00
E3L1	3"x1" Vinyl Shelf Adhesive Labels	\$7.50
E3L2	3"x1.75" Paper Permanent Adhesive Labels	\$5.00

Shelf adhesive labels are designed for ease of removal to facilitate replacement. Permanent adhesive labels are designed to stick and stay stuck, making removal difficult without leaving a residue.



# Voice Message Operations

---

The RF Terminal's exclusive use of voice prompts allows you to overcome problems such as literacy, language and lighting. With proper planning, voice prompting can enhance your RF Terminal application, making it faster and simpler. Voice messages are recorded in the RF Terminal, and then triggered by a prompt from the host computer.

## Why Use Voice Messages and Prompts?

- Voice messages can be in *any* language.
- The operator does not have to be able to read to perform some jobs.
- Audible instructions can be heard in poor lighting where it is difficult to read a LCD screen. **MOST IMPORTANTLY**, the data collection process is faster because the operator does not have to continually look at the screen for instructions. This is especially useful when you do not want or need to enter data from the keypad. Scanning bar coded numbers from a Quantity BARPAD can make keying unnecessary.

Voice messages and prompts are a good way to keep the operator's attention focused on the job at hand. Audible error messages and warnings also help to limit mistakes and downtime.

## Tips for Using Voice Prompts

Over 90 voice messages can be recorded in the RF Terminal. Here are some tips on making your voice prompts user-friendly:

- Short messages are preferable for prompts; most English prompts can be stated in ½ second. Instead of saying, "Enter the Item Number," say "Item". The typical RF Terminal operator does not want to hear long messages thousands of times. Error messages are typically longer because they are the exception and need to provide more precise instruction to the user.
- **Record your voice prompts calmly.** A frantic sounding voice can become irritating, especially when heard repeatedly.
- **Speak clearly.** Correct pronunciation will make the voice prompts easier to follow for all users. Use common words that all users will understand.
- **Vary the tone of your voice for different prompts.** Using a different tone of voice or even a different voice for consecutive

prompts or error messages will make it easier for the user to distinguish between them.

- **Be sure to record error messages for *all* possible problems** that the user may encounter during a session. Once the operator becomes accustomed to listening to the voice prompts, it may become easy to overlook a “display only” error message.

## RF Terminal’s Voice Message Mapping

The RF Terminal is shipped with 75 seconds of total recording time. The time allotted for each message is partitioned as follows:

- 30 – ½ second messages** (message numbers 01-30)
- 30 - 1 second messages** (message numbers 31-60)
- 15 - 2 second messages** (message numbers 61-75)

Messages are sequentially numbered beginning with the ½-second messages, followed by the 1-second messages, and finally the 2-second messages. You can change the partitions to allow for more or less of a particular length message. For example, if you decide you do not want *any* ½ second messages and you want 15 *more* 1-second messages, your allocation would look like this:

- 00 – ½ second message**
- 45 - 1 second messages** (message numbers 01-45)
- 15 - 2 second messages** (message numbers 46-60)

Voice message partitions are set in the RF Terminal either from the bar coded *Setup Menu* or by the keypad setup. From the Setup Menu, scan the bar code for “Voice Messages”, and then scan six digits. The first 2 digits correspond to the ½ second messages, the second 2 digits for the 1-second messages and the last 2 digits for the 2-second messages. See **Chapter 2; RF System Setup** for details on Terminal setup (by bar code setup menu *and* keypad). Remember that the total amount of time must add up to 75 seconds.

## Programming Voice Messages

To record and playback messages or assign messages to error conditions, you have to get to SETUP MODE and enter the password. If you don’t know how to do this, see **Chapter 2; RF System Setup** for details on how to get into the SETUP MODE. Once you have entered the password (OK, its WDTRI) you will see the following prompt:

**R/F Terminal Setup->1**  
**R/F Base Setup----->2**  
**Voice Operations---->3**

Press **3** to select **Voice Operations**. The next screen gives you your options:

**Record/Playback--->1**  
**Assign Errors----->2**  
**Cloning Master----->3**  
**Cloning Receiver-->4**

Pressing the “1” key takes you into the voice recording and playback function. Pressing the “2” key allows you to assign voice message numbers to error conditions. “3” and “4” allow you to clone voice messages from one RF Terminal to another. Each option is shown in detail below:

## **Recording and Playback of Voice Messages**

If you respond with a “1” at the menu, you will see the following Record/Playback prompt:

**RECORD/PLAYBACK?**  
**KEY [R/P]?**

First, we will playback a message that has already been recorded. Let’s use message #01 for this example. Press the **P** key (for Playback) to get to the next prompt:

**KEY [R/P]?**  
**MESSAGE #: \_**

At this prompt, enter a two digit number for the message number you want to listen to. Enter “01” and then press the **ENTER** key. You will probably hear the “ITEM” prompt recorded at the factory unless you have edited or reset the default messages. If you heard nothing, a new message can be safely recorded in the area assigned to message # 01. After you have heard the message (or static if no message has been recorded), the RF Terminal displays the RECORD/PLAYBACK prompt again:

**RECORD/PLAYBACK?**  
**KEY [R/P]?**

To record a message, get out the microphone (no, it’s not an earphone) shipped with the RF Terminal and plug it into the AUX jack located next to the POWER jack on the bottom of the RF Terminal. Answer the prompt by pressing the **R** key to record a message. The bottom line of the display now reads:

**MESSAGE #: \_**

Enter the message number you are going to record. For this example, enter message #03 (by default this is a blank message) by pressing **03**, then the **ENTER** key. The RF Terminal screen now shows:

**HIT ANY KEY TO**  
**START RECORDING**

To record a message, press any key and hold it down. When you release the key, immediately start speaking into the microphone. To practice, let's record something in message #03. Get ready to say ITEM (in English or your language) into the microphone of the RF Terminal. When ready, press the **ENTER** key and the *instant* you release it, speak ITEM into the microphone. Remember to speak clearly – you have plenty of time to say ITEM in ½ second. When the message time is over, you will hear two beeps. The display is back to the RECORD/PLAYBACK prompt:

### **RECORD/PLAYBACK? KEY [R/P]?**

Now you're ready to listen to your first recording. Press the **P** key and key in **03** for the message number. Do not be discouraged if you didn't record the entire message. Our first attempt produced "EM" in a very frantic tone of voice. Practice speaking clearly and calmly (think of the poor guy who has to hear it 10,000 times next week) as soon as the key is released. You will get the hang of it with just a little practice.

That is the way all messages – prompts *and* errors - are recorded. If you are not sure which message numbers are blank, you can listen to messages until you find a blank for recording.

The host computer relies on the fact that the voice messages are stored in the RF Terminal itself and *not* generated by the host. The host computer will trigger the broadcast of a voice message by sending a prompt to the RF Terminal that tells it which message number to play. If the host thinks that message #05 is STOP when it's really GO, it can cause confusion for the operator. That is why it is important to keep track of what messages are recorded where.

## **Assigning Error Messages**

Error Messages are recorded the same way other messages are - by going into RECORD/PLAYBACK, selecting a message number and recording a voice message. The RF Terminal comes from the factory with some voice prompts and error messages pre-recorded. You can change any of these messages but keep in mind that the error conditions are hardware-related and that the voice error messages they are linked to are fixed. For example, the "**Low Batteries**" message is located at message #31. Whenever the RF Terminal detects very low batteries, it will play message #31, regardless of what is recorded there. You could record "Happy Birthday" and the RF Terminal would broadcast it any time it detected the low battery condition. To avoid confusion, try to keep the error messages somewhat related to the error condition they represent.

## Default Voice Messages

Here are the default messages and the numbers they are recorded under:

Message Recorded	Message #
Prompt	
ITEM	#01
QUANTITY	#02
Error messages	
LOW BATTERIES	#31
CHANGE BATTERIES	#32
TRANSMISSION FAILED	#33

## Cloning Voice Messages and Setup from RF Terminal to RF Terminal

If you have several RF Terminals, you can record all of your voice messages in one RF Terminal and then simply “clone” them to your other RF Terminals. Cloning also copies the RF Terminal setup (except for Terminal ID).

You need 2 cables to clone RF Terminals; the **Data Cloning Cable #F38** and the **Voice Cloning Cable #T15**. The *Data Cloning Cable* plugs into the “Computer” port on each RF Terminal. This cable must be connected to clone properly.

One jack on the Voice Cloning Cable has two black rings on it – this end must plug in to the **RECEIVING** RF Terminal (the one you are transmitting to). Plug the single-banded jack end into the **MASTER** RF Terminal (the one you are going to record *from*).

Once both cables are plugged in to both Terminals, go to the Setup Menu on both Terminals. Select **3** for **Voice Operations** from the menu.

The “Receiving” RF Terminal must be started first. On the receiving Terminal, press the **4** key for **Cloning Receiver**. The “Receiving” unit will display:

**Recv Setup/Voice**  
**Please Wait\_**

Now you can start the “Master” RF Terminal by pressing the **3** key for **Cloning Master**. The “Master” Terminal will display:

**Xmit Setup/Voice**  
**Please Wait\_**

During the cloning process, you will hear the voice messages played aloud as they are copied. The process takes about 75 seconds to complete. After the Terminals are done cloning, they will both display:

**End of Cloning**  
**Hit Any Key\_**



If you did not hear the correct messages or you heard no messages at all, check your cables and receiver/master setup - **you may have transmitted from the wrong RF Terminal.**

**DATA XMIT ERROR  
CYCLE POWER**

If you get the DATA XMIT ERROR message, you have to restart the whole cloning procedure.

# Troubleshooting

---

## General Considerations

### Site Test

The most basic tool for troubleshooting is the Site Test at 50 feet range. (See *Chapter 4* for the details on how to do a Site Test). If the Site Test fails at close range (50 feet), you have found the problem. The radio on either the Base Station or the RF Terminal is defective. A Terminal will operate very poorly at a distance of less than 10 feet from the Base due to high transmitter power. Make sure to Site Test at least at 50 ft. range.

If you have multiple terminals and multiple Base Stations, after site test failure, you can determine if the failure is with the Terminal or the Base by substitution. If you have only one Terminal and Base, you have no way of knowing which has failed; you must call us and get an RMA for both units to be checked out at the factory in Santa Cruz or in Ireland.

If the Site Test passes, there is nothing wrong with the radios.

### Changing Batteries

For RF Terminals, the most frequent cause of problems is low batteries that have either been ignored or undetected. The real test for batteries is to remove batteries from a working unit and place them in a suspect unit. Don't assume that just because the batteries are new they are good. We have purchased "new" batteries off the shelf and tested them immediately to discover they are bad.

Most of the time batteries become the problem as a result of two failures:

1. The operator ignores the **Low Batteries** message and doesn't finish up the transaction and immediately change the batteries. If you turn the unit off and turn it on again, the batteries may have had time to "almost" recover. Unfortunately they will have so little reserve power that they will likely operate just long enough to produce some very screwy behavior on the RF Terminal. Intermittent laser beams, continuous beeping, black bars on the screen, etc. are just a few of the disastrous symptoms that can be exhibited.
2. NiCad or NiMH rechargeable batteries are being used, but the Terminal thinks that Alkalines are still being used. The Terminal ships with Alkaline batteries in the Setup. Alkalines and rechargeable batteries have different reserve powers, so the Terminal has to know if you have decided to use rechargeables in order to properly notify you that the batteries have reached the low point requiring the batteries to be changed.

If you are using rechargeable batteries, you must change the **Batteries** parameter in the **Terminal Setup** to reflect the usage of rechargeable batteries, otherwise you will strange behavior on the Terminal including: Intermittent laser beams, continuous beeping, black bars on the screen, etc. See **Chapter 2: Batteries** to change the setting. To display the remaining battery life of the AA batteries and the type of batteries the Terminal is expecting, press the **STATUS** key shows:

**AAxBAT■■■■■■■■■■■■■■■■■■■■-zz%**

*x=a when Alkaline batteries are specified in Battery setup*

*x=n when NiMH or NiCad batteries specified in Battery setup*

Press the **STATUS** key again to resume processing.

## Problems with a new installation:

“**Waiting for Base to Acknowledge**” is a normal message, generated when you first try to establish radio contact. If your Terminal continues to generate this message and it ultimately results in a “**Transmission Failed**” message, your radios are not communicating. Be sure they’re on the same channel and try again. If you have multiple terminals, try another terminal. If the 2<sup>nd</sup> terminal also fails on the same channel, the base station is bad. If the 2<sup>nd</sup> terminal passes the Site Test, the first terminal is bad.

If the Terminal displays the “**Waiting on Host Prompt**” message, the host program is not communicating with the Base Station. There is no radio problem, because the Base Station has already acknowledged the Terminal’s Sign In. The Terminal is waiting on the Host to tell it to do something. Try the demo program; if it works the problem is your program.

If using the Active X program with XP, be sure "connection pooling" is disabled.

If the demo program fails, the problem is one of the following:

1. The cable between the Base Station and host computer is bad. Try the test with extension cables removed.
2. The host COM port is bad or assigned to another device driver installed. Try another COM port or try another computer.
3. RARELY !!!The RS232 chip (U13 location) on the Base Station is bad. If you have other Bases, swap these pluggable chips to see if the problem goes away.

# Terminal Error Messages

Message	Meaning – Action Required
<i>"Waiting for Base to Acknowledge...?"</i>	This is a normal message, generated when you first establish radio contact. If you continue to get this message and it results in a "Transmission Failed" message, your Radios in Base and Terminal are not communicating. Be sure they are on same channel. They may need repair.
<i>"Waiting on Host Prompt"</i>	Problem is between Host computer and Base station. Check to see if host application is running. Check serial parameters and eliminate any extension cables. Run the Demo program. Try another COM port or another computer.
<i>"Base Station Shut Down Due to Host Logic Error, Cycle Terminal Power"</i>	<p>Problem is in host program. Notify programmer!</p> <p>If the Base Station receives 5 <b>Sequence Errors</b> in a row, it transmits the message to all terminals signed in and shuts down. Check your host program for the sequence error before starting up again. <b>OR</b></p> <p>If the Base Station receives 5 messages addressed to a Terminal not Signed ON, it transmits this message to the all terminals signed in and shuts down.</p> <p>You will have to cycle power on the Base Station or you can send a command (*@EOT) from the host and have the Terminal Sign On again to continue. See Chapter 6, page 6-8 for more information on <b>Sequence Errors</b>.</p>
<i>"Base Reinitialized X Cycle Power on RF Terminal and Sign-on again to Restart_"</i>	Base Station has been reinitialized. If message reads " <i>Base Reinitialized P</i> ", then reinitialization is due to a power problem. If " <i>Base Reinitialized H</i> " then the reinitialization was initiated by the host program. Fix problem (cycle power on Base or re-initialize from host program).
<i>"Buffer Reinitialized Cycle Power on RF Terminal and Sign-on again to Restart_"</i>	The host program has reinitialized the buffer in the Base Station for this terminal only. The Base is still operational and ready for you to power off your terminal, power on, and SIGN ON again. Other terminals are not affected.
<b>LOW BATTERIES</b> <i>Finish, Sign Off</i> <b>Change Batteries</b>	Finish the transaction you have started. The Press F1 to Sign Out. Then turn off the Terminal and change the batteries.
<b>CHANGE BATTERIES</b> <b>UNIT SHUT DOWN</b>	<p>The terminal will display this message for 20 seconds, sign out, and turn off.</p> <p>Change the batteries immediately. Don't let someone else pick it up and operate with partially recovered batteries</p>

<b>Message</b>	<b>Meaning – Action Required</b>
<b><i>Relay n Cannot be Heard by the Base Notify Supervisor</i></b>	The terminal has established contact with Relay Station x. Relay Station x has attempted to communicate with the Base Station through the 422 cabling with no success. Cable is bad.
<b><i>Transmission Failed To Retry, Move Closer And Press Enter</i></b>	The terminal has tried 10 times to get its message through to the Base Station with no success. Could be result of bad radio in base or terminal. Could be the operator has gone out of range of the base- if so, move closer and press any key. Could also be that there are too many terminals competing for radio time on one base station.
<b><i>One Way Not Allowed Base in Other Mode Press &lt;Enter&gt; Key</i></b>	One-Way is not allowed if the Base is already in some other mode such as Two-Way or Site Testing which was not properly concluded. Also, if you are SIGNEd IN in One-Way mode and someone else SIGNs IN in Two-Way mode, the person in One-Way mode will be kicked out of the system with this message. Two-Way mode ALWAYS supercedes all other modes.
<b><i>Site Testing Not Allowed, Base in Other Mode Press &lt;Enter&gt; Key</i></b>	Site Testing is not allowed if the Base is already in some other mode such as Two-Way or One-Way which was not properly concluded. Also, Two-Way mode ALWAYS supercedes other modes. If you are Site Testing and someone SIGNs IN in Two-Way mode, you will be kicked out of the system with this error message.
<b><i>No Firmware Detected 1 – Download Firmware 0 – Power off Terminal Press 0 or 1 now_</i></b>	The firmware has somehow been wiped out – probably from an interrupted firmware download. Press 1 to Download Firmware or press 0 to power off the terminal.
<b><i>Duplicated Terminal ID, Notify Supervisor Press Any Key to Turn off Terminal</i></b>	With one ID already SIGNEd IN to the host, a second terminal with the same ID tried to SIGN IN. Every terminal requires a unique ID for proper system operation.
<b>RED LED</b>	The Pick processor cannot communicate. Call for RMA.
<b>GREEN LED</b>	Base operating as a Base
<b>YELLOW LED</b>	Base operating as a Relay

- Two or more terminals with the same ID can generate all kinds of strange messages including those shaded above.
- **Two bases on the same channel are big trouble.**

Sometimes you get an error message and after checking, everything on the Base seems to be set OK. Drop power on the suspect Base and try signing in again. If you get the same message, there is another Base answering which should not be on the same channel.

# Troubleshooting specific problems

## I can't communicate at all...

- First, check the communication link from the Base Station to the host. Use the following command to test the transmission of data from host to Base and back again to the host:

**@ @\*Edataaaaaaaa<EOT>**

where *dataaaaaaaa* is any string of data, terminated by EOT. This string should be sent from the host to the Base Station. If the data is received by the Base, it echoes it back to the host in the format:

**dataaaaaaaa<CR>**

where *dataaaaaaaa* is the data string from the original transmission, terminated by a CR (ASCII 13). This test verifies communication in both directions (host to Base, Base to host).

- If the data isn't echoed back, either your host COM port or the Base Station has a problem.
- Once you know the Base Station is communicating with the host correctly, compare the channel of the Base Station with the channel of the Terminal. Use Site Testing to check the communication of the Terminal to the Base and back. Make sure no other Terminals are in use, and go to Site Test mode on the Terminal. You should get 96-100% on first try at greater than 10 feet. If you don't, it's a good chance your radios need repair. Call Worth Data for an RMA.
- If you are using PICK or UNIX as your operating system, make sure the Base Station is set to "XON/XOFF Sensitive".

## My response time is poor...

- First, do Site Test 50 feet from the Station. If it's not 90+%, the Radio in the Terminal or the Base Station is the problem.
- Second, run one of the demo programs. If the demo runs fast, it is your program that is slow.
- If you have good response time everywhere but on the outer fringe area, you may need to add a Relay.

## I'm not getting the distance I need...

To maximize range, the Base Stations and Relays should be located:

1. At the center of the area of intended coverage, and
2. As high as possible - mounted on the ceiling of a room with the antenna pointing downward works the best. Sometimes just raising the Base Station to 12 feet will dramatically increase the distance, especially in warehouses or grocery stores with tall shelving. A

Base Station mounted on the wall with the antenna parallel to the floor is the worst position.

To accurately determine the hardware required to cover a particular area, you should use the Site Test mode built in-to the RF Terminal.

### **I can't communicate with the RS-232 port on my host CPU...**

- This is one of the biggest problems called in. If you are not using our cables, check your cables first. If you have an extension cable, remove it for testing. If you have an extension cable of 80 feet or more attached to a Windows host, you need to be sure certain pins are not attached in the DB9 or DB25. See **Appendix C; RF Serial Pin-outs**.
- If you are using the PICK or UNIX operating systems, be sure you have set the Base Station to be "XON/XOFF Sensitive". You need to do this to prevent the XOFF code being sent as a "Base Initialization" message.
- Windows 95,98,2000,ME, NT; COM port setup should also be changed to turn off XON/XOFF. XON/XOFF is the default for Windows. You set these through the control panel, *System, Device Manager, Ports (COM & LPT), COM Port, Port Settings, Flow Control*. Set *Flow Control* to None.

## **RF Terminal Problems**

**When laser is triggered, it cycles power by itself – 1<sup>st</sup> screen**

**When a voice message plays, it cycles power by itself –1<sup>st</sup> screen**

**I get black bars on the display when I turn it on**

**When I turn it on, it just beeps continually.**

- If the batteries are way low, when turned on, the Terminal will just keep beeping; it is cycling power, over and over because the batteries are too low.
- If the batteries are at a specific low point, the laser triggering or playing a voice message will be just enough extra power draw to force the terminal to cycle power.
- Change to known good batteries, preferably out of a working unit and try again. Some "new" batteries are not good.

**The unit won't power up with batteries (good batteries) but it will power using the Base Station power supply**

- Your battery terminals inside the case may be corroded with battery acid or just contamination. Open up the case and clean the battery terminals with alcohol soaked cloth. Battery acid leaks are not covered by the Worth Data warranty.

### I get 6 beeps when the RF Terminal powers up...

- The unit needs repair. Call Worth Data for an RMA.

## Problems reading Bar Codes

### The reader won't beep when I try to read bar codes...


- Try reading a known good bar code - try the **1** on the Setup Menu bar pad table. Follow the steps for proper scanning technique discussed in **Appendix M; How to scan a bar code.**
- Make sure the reader is configured to read the type of bar code you are trying to scan. Most bar code types are *disabled* by default and need to be enabled using the Setup Menu or keypad while in Setup Mode.

### I get extra characters at the beginning or end of my bar code data...

- Clear the Preamble and Postamble settings.

### I have very poor read rates when scanning bar codes...

- Carefully follow the scanning instructions in **Appendix M; How to scan a bar code** when reading any and all bar codes. As straightforward as scanning may seem, many people who call with a complaint about poor read rates simply aren't doing it right.
- Try reading the following bar code below as an example of a known "good" bar code. This bar code is a Code 39 bar code and is readable by the RF Terminal set to its default settings.

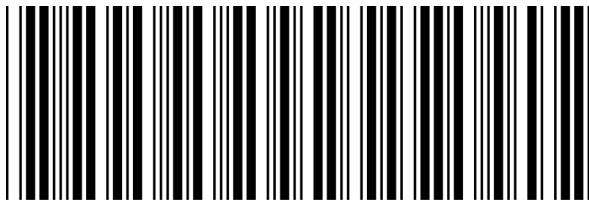

TEST LABEL

- Make sure *your* bar codes have clearly defined dark bars and clean white spaces. If the bars are so light that they are gray instead of black or are so dark that they "bleed" into the white spaces, the printing of the bar codes is the problem. Whoever is printing the bar codes needs to make the necessary corrections.
- The bar code should also have a "quiet zone" of at least ¼" to the left of the first bar and to the right of the last bar. Make sure to start your scanning to the left of the bar code in the "quiet zone", moving the scanner quickly and smoothly as if drawing a line through the bar code. If using a laser scanner or CCD scanner, make sure the beam covers the bar code completely.
- Make sure you are using the correct type of scanner for the type of



bar code you are reading. If you are using an *infrared* wand, your bar code must be printed using infrared-quality ink.

- If using a laser or CCD, clean the window of the scanner with a soft cloth.

## If you have a problem...

- If you have a problem with your RF System, **consult the troubleshooting section of this manual FIRST**. As a last resort before calling for an RMA, you can perform a diagnostic reset on your terminal. This resets everything back to the factory defaults, so be prepared to remake any setup changes (i.e. Terminal ID) you had made prior to the reset.
  1. At the **SIGN ON** prompt, press the **F1** key and release it.
  2. then press the **SHIFT** key and release it.
  3. press the **D** key and release (you will now see a menu)
  4. press the **K** key and release.

If you cannot find the answer here, or the diagnostic reset does not work, call your Dealer or Worth Data for help.

- **Save the shipping box.** If you ever need to send the RF Terminal or any of its' parts back for repair, us this box.
- Before you call your dealer or Worth Data for technical support, have your RF Terminal and related equipment in front of you and **be prepared to explain your problem in detail to the Technical Support Engineer.**
- The Engineer may ask you to go through some troubleshooting procedures while on the telephone. This will help them determine what is wrong and what the course of action should be. **Many problems can be resolved over the telephone and will not require that you return the equipment to us.** If you *do* need to return any of the RF equipment to Worth Data, the Engineer will issue an RMA number.
- If you do need to return the RF Terminal for ANY reason, **you MUST have an RMA number** first. Write the RMA number on the outside of the original shipping box and make sure to insure the shipment. All RMAs should be shipped back to the following address unless directed otherwise:


**RMA #XXXXXX  
Worth Data Inc.  
623 Swift St.  
Santa Cruz, CA 95060  
831-458-9938**

# Channel and Jumper Changes

## Opening a Base

As preparation for changing the Channel on a Base Station or changing to the base to operate as a Relay, the case must be opened to expose the circuit board with the switches and jumpers. Be sure you disconnect power before opening the case.


Turn your Base Station upside-down, and unscrew its single phillips head screw. If you don't completely remove the screw, you can use it as a lever to pull up on the cover.

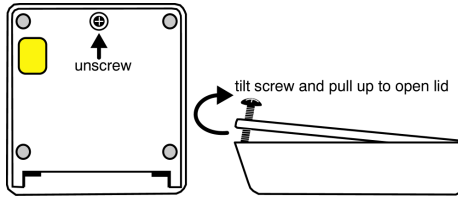

Otherwise, insert a fingernail, credit card edge or small screwdriver blade into the gap between the Base and side of the case, and gently use it as a lever to lift up the edge of the Base. Then grasp the edge of the Base and open it outward like a door.

## Changing a Base to a Relay

Moving the jumpers to any of the Relay positions causes the Base Station to operate as a Relay. A Base station blinks green on power up; a Relay blinks yellow on power up.

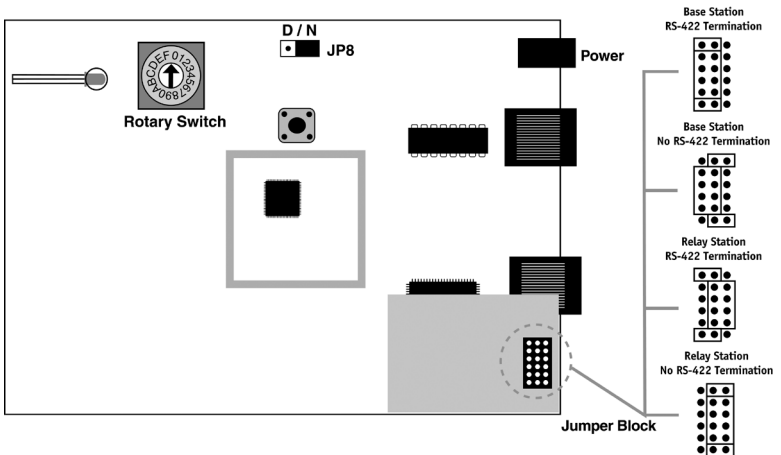

## RS-422 Termination Jumpers

Refer to the circuit board diagram on page A-1 for details.

The Base can be jumpered to be 422 terminated or not terminated. By default, all Base stations are shipped as *terminated*. Use the following guidelines to change the termination for your system:

- If the Base has multiple strings of relays radiating from it, the Base would **not** be terminated.
- If the Base is first in a string, (not in the middle or end of a string), set the 422 jumpers to **Base w/RS-422 termination**.
- The last Relay in each string should have its jumpers set as a **Relay w/RS-422 termination**.

## Channel Changes

To determine the current channel of a Base Station, power up the Base and watch the LED light on the front of the unit. On power UP, a Base LED will blink "channel +3" times. For example, a unit that blinks **5** times on power up is operating on **channel 2**. Channel 0 blinks 3 times, channel 5 blinks 8 times.

A Base Station jumpered to operate as a Base blinks green; a Base Station jumpered to operate as a Relay blinks yellow.

### Changing the Channel on a Base/Relay

The Base Station and its related Relays must have their frequencies set to the same channel as the R/F Terminals in their network. The channel is set on a Base /Relay by turning a rotary switch to the setting 0-F (10 different channels to choose from). Use a very small flat head screwdriver to turn the switch to the desired number. See the circuit board diagram on page A-1 for location of the rotary switch

### Setting the Relay ID


Each Relay must also have a unique ID, which is set by the RF Terminal Serial Configuration Utility.

# Adding Relays

## Connecting a Relay Station


### How it works...

A Relay station allows you to extend the area of your R/F coverage. Relays are connected by cable to the Base station, acting as a remote antenna. More than one Relay can be added by “multi-dropping” additional Relays. Using a Relay requires changing the setup on the Base station in addition to added cabling. The diagram below shows how Relays are added:

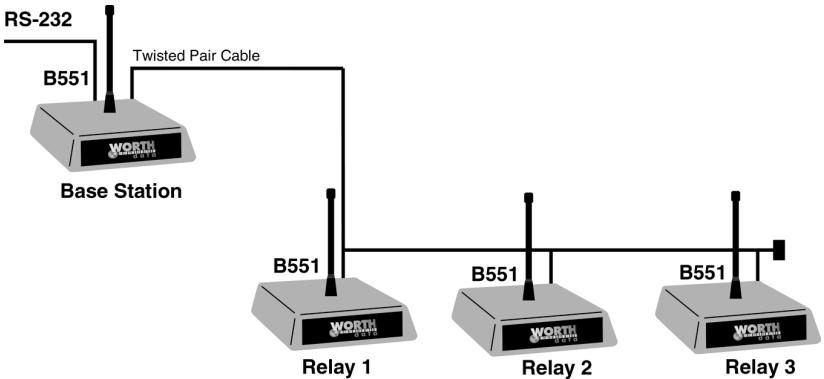

Although Relays will extend your R/F range, they do slightly slow down your response time. If response time is your problem, Relays may help *only* if the problem occurs on the *outer limits* of your range. Use **Site Testing** to help you determine if adding a Relay will help. If you are considering Relays, read **Chapter 4; Performance Issues** first.

If adding only one Relay, the cabling should run between the unlabeled port on the Base station and the unlabeled port on the Relay. In this example, both the Base Station and Relay should have jumpers set to “terminated”.

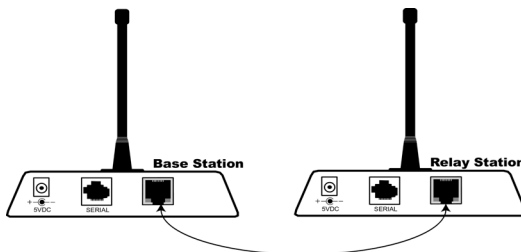


To add additional Relays, you must “multi-drop” them off a single bus line

running from the *unlabeled port* on the Base station. See the section below for cabling requirements and pin-outs. It is very important to follow the pin-out directions carefully and to use the suggested cable type. The majority of problems we see are the result of incorrect wiring.

Each Relay requires it's own power supply. There is no serial parameter setup required on a Relay as it is transmitting only to the Base station and not directly to a serial port.


## Routing the Wiring

The below diagram illustrates the **RIGHT** way to route your wiring and which units should be terminated. Notice this is the classical bus interface where the Base and Relays are connected to a “one-cable bus”. The bottom of the Y-Cables is connected into the unterminated base or relay(s). Notices that the two end units are terminated; the units in the middle are unterminated, including the Base in this example.

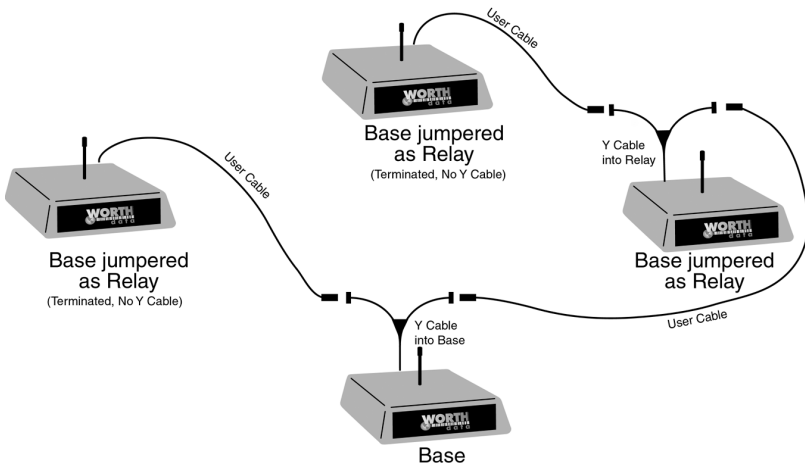

### Correct Routing for Wiring

The next diagram illustrates the **WRONG** way to route your wiring and use the Y-cables. Sometimes people try to route everything through a panel or wiring closet – this will not work properly; it will generate excessive data noise and drag down the responsiveness of the Base and application. (With too much noise, the Base will stop working and issue a “Base Station Reinitialized” message to the terminals. If used, such a radial interface as below might appear to work most of the time, but it would be very sluggish and crash several times per day. Terminating or not terminating will be of no help. Do **Not** cable as shown on the following page:

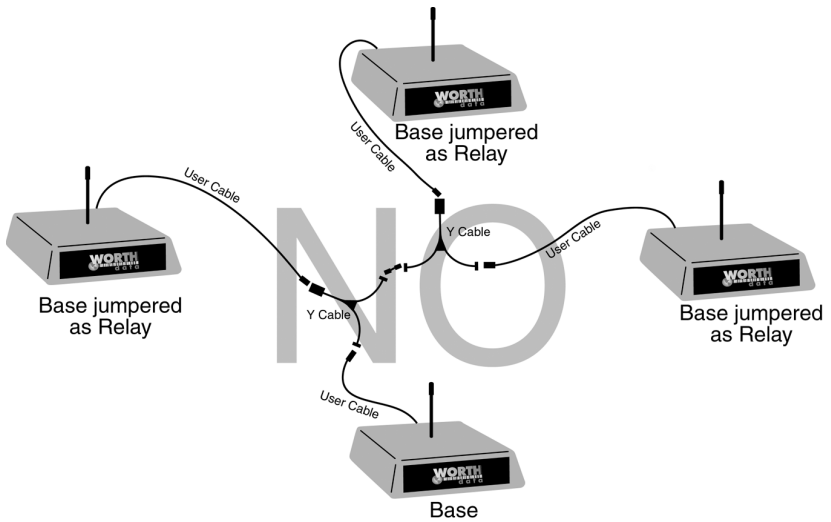

### Incorrect Routing for Wiring

## Relay Station RS422 Pin-outs

The **R/F Relay Stations** are connected by twisted pair wire -- use **Belden 1227A1, Cat 5 wire**, or equivalent. The *Unlabeled Port* on the **Base Station** and the *Unlabeled Port* on the **Relay Station** are connected with a straight cable using the following pin-outs:

Base Connector	Pin #	Relay Connector
Receive Data +	5	Transmit Data +
Receive Data -	6	Transmit Data -
Transmit Data +	2	Receive Data +
Transmit Data -	3	Receive Data -

Make a cable with 5-5, 6-6, 2-2, and 3-3 (a straight cable); but, be careful that you select wires so that the **2 wire is in the twisted pair with the 3 wire, and the 5 wire is in the twisted pair with the 6 wire.**

*For all RJ Cable pin numbers, number from left to right with the metal pin side of the connector facing you and the cable running to the down position*

## Relay Test Plan and Failures

### Relay Failure

Relay Station failures are often cable-related. If a Terminal puts out a "Who Can Hear Me?" message and a Relay that is for some reason *not* connected to the Base Station (bad cable, cut cable, broken connectors)

hears it, it answers with the message:

**Relay n Cannot Be  
Heard by the Base  
Notify Supervisor  
Press Any Key**

At this point, it is up to the operator to notify someone that the Relay is not communicating with the Base and to check the cabling *first*. There is no message sent to the host, so it is very important that the operator that receives this message notify someone immediately.

Because relay cabling is often troublesome, we supply a test cable for isolating the user-made cable from the process. This test cable is so short that it doesn't follow the rules of twists on the previous page – it is just a Ethernet patch cable for node, but adequate for testing the relay.

**HINT:** Use the suggested wire type, and if you're doing your own crimping, be sure to use the expensive metal crimpers (\$100) and not the cheap plastic crimpers (\$15). Get someone familiar with making network (Ethernet) cables, but be sure to tell them **not** to use the Ethernet pin outs for the Relay Stations, (it has been tried more than once!).

**Testing the Relay**


To test communication with a Relay, first check out the radio by doing a Site Test on the offending Relay with all other Relays and Bases OFF. To check if a Relay is working with a Base Station, set the Base to a *different* channel than the Relay and set the Terminal channel to match the Relay channel. Then cable-connect the Relay to the Base (unlabeled port to unlabeled port).

Start your application on the host or use one of our demo programs provided with the Terminal (it's a good way to test) - it takes 10 or more seconds for the Terminal to switch to the Relay. The delay is a result of the Terminal having to put out a "who can hear me" message when it doesn't get a response from the Base Station. The Relay responds to the Terminals "who can hear me" message and communication is established through the Relay. You will notice slightly slower throughput when working through the Relay.

**Relay ID and Channel...**

Relays should be set to the same channel as the Base station and R/F Terminals that you will be using in your system. Determining the current channel is the same as on the Base station; power up the Relay and count the number of times the LED flashes (channel + 3). The default setting is channel 0 (3 flashes). Each Relay also requires a unique Relay ID; the default ID is 0. A Relay will blink yellow; a Base blinks green.

To change the Relay channel, you must open the Relay case.

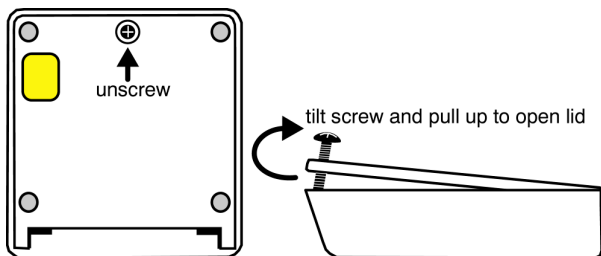


### **Changing a Relay back to a Base**

You can convert the Relay back to a Base Station by setting any of the 422 Termination jumpers to the Base position. You can check the outcome by simply powering up the unit - a Base blinks green; a Relay blinks yellow.

### **Changing the Channel on a Relay**

The Relay must have their channel set to the same channel as the R/F Terminals in their network. The channel is set on a Relay by turning a rotary switch to the setting 0-9 (10 Channels in the US.) or 0-5 (6 Channels in Europe). Use a very small flat head screwdriver to turn the switch to the desired number.

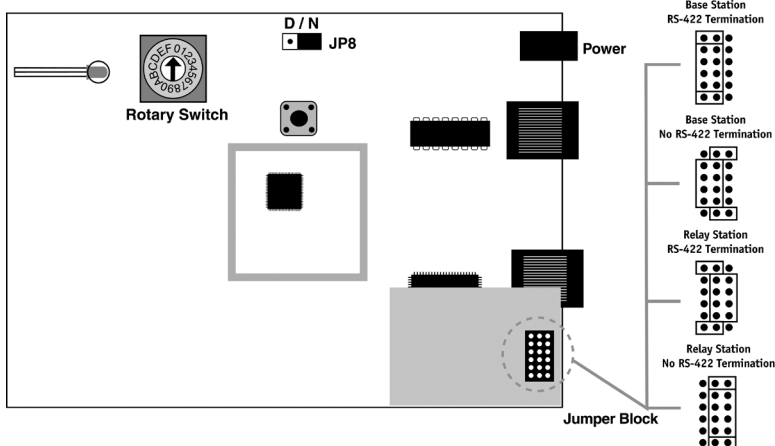

### **Setting the Relay ID**

If you only have one relay, there is no need to set the Relay ID which is shipped default as relay 1. If you need to change it or you have multiple relays, it must be changed using the *RF 700 Base Serial Configuration Utility*.

### **RS-422 Termination**

When adding Relays to a system, the last Relay(s) in the line(s) must be terminated. By default, all Base stations are shipped as terminated. Use



the following guidelines to change the termination for your system:

Refer to the circuit board diagram on the previous page for details.

- If the Base has multiple strings of relays radiating from it, the Base would **not** be terminated but each Relay would.
- If the Base is first in a string, (not in the middle or end of a string), set the 422 jumpers to **Base w/RS-422 termination**.
- The last Relay in each string should have its jumpers set as a **Relay w/RS-422 termination**. Any Relay that is *not* the last relay in the string would *not* be terminated.

**Relay Station failures are often cable-related. If a Terminal puts out a “Who Can Hear Me?” message and a Relay that is for some reason *not* connected to the Base Station (bad cable, cut cable, broken connectors) hears it, it answers with the message:**

**Relay *n* Cannot Be  
Heard by the Base  
Notify Supervisor  
Press Any Key**

At this point, it is up to the operator to notify someone that the Relay is not communicating with the Base and to check the cabling *first*. There is no message sent to the host, so it is very important that the operator that receives this message notify someone immediately.

# R/F Serial Pin-outs

## Base Station to Host Pin-outs

The Base Station is connected to a PC with one of the following cables:

### F34 DB25 Null Modem Cable

These are the pin-outs for Cable F34, a DB25 Female to 8 pin modular RJ45 with pins 2 and 3 crossed, used for a Base connected directly to a 25 pin male host serial port.

Mod 8 RJ45	Function	DB25 Female
1	Frame Ground	1
2	Transmit Data	3
3	Receive Data	2
4	Signal Ground	7

#### F34 Null Modem Cable

*\* Modular Pins 5-8 are connected to DB25 pins 5,6,8,4 but not used by the R/F Base.*

If you are planning to use a serial extension cable of 80 feet or more, you need to open the DB25 shell of our cable and be sure that only pins 1,3,2, and 7 are connected. All others should be cut. This is necessary to keep Windows from following noise transitions as handshaking transitions that can severely degrade the application or even crash Windows.

### F36 DB9 Straight Cable


These are the pin-outs for Cable F36, a DB9 Female to 8 pin modular RJ45. This cable is used to connect the Base to a 9 pin Male host serial port.

Mod 8 RJ45	Function	DB 9 Female
1	Shell (chassis ground)	Shell
2	Transmit Data	2
3	Receive Data	3
4	Signal Ground	5

#### F36 9 pin cable

If you plan on building your own extension cables, you **must** use well shielded cable and you **cannot** use twisted -pair cable. You can order custom length RS-232 extension cables from Global Computer Supplies - ph. 800-845-6225, part number ZCC4912X. Many other companies sell 10 ft., 25 ft., and 50 ft. DB9 Extension Cables including Radio Shack.

*For all RJ Cable pin numbers, number from left to right with the metal pin side of the connector facing you and the cable running to the down position*

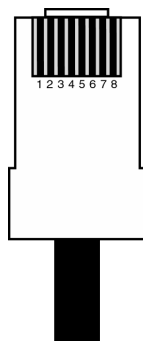

## Relay Station RS422 Pin-outs

The **R/F Relay Stations** are connected by twisted pair wire -- use Belden 1227A1, Cat 5 wire or equivalent. The *Relay Port* on the **Base Station** and the *Relay Port* on the **Relay Station** are connected with a straight cable using the following pin-outs:


Base Connector	Pin #	Relay Connector
Receive Data +	5	Transmit Data +
Receive Data -	6	Transmit Data -
Transmit Data +	2	Receive Data +
Transmit Data -	3	Receive Data -

Make a cable with 5-5, 6-6, 2-2, and 3-3 (a straight cable); but, be careful that you select wires so that the 2 wire is in the twisted pair with the 3 wire, and the 5 wire is in the twisted pair with the 6 wire.

*For all RJ Cable pin numbers, number from left to right with the metal pin side of the connector facing you and the cable running to the down position*

## Zebra Cameo/QL 3 Printers

These are the pin-outs for the cable needed to connect the Zebra Cameo or QL 3 Printer to a Worth Data R/F Terminal. You can order our **C12** cable for \$30, or if you already have a cable from Zebra and feel confident in your cable-making abilities, you can simply clip off the connector end that should connect to the RF Terminal (**not** the 8 pin din end) and replace the clipped-off connector with an RJ45 connector according to the pin-outs on the next page:

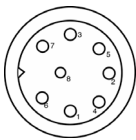

Cameo  
Connector



RJ45  
connector for  
RF Terminal

Function	Printer 8 pin	RF Terminal RJ45	Function
Receive	1	2	Transmit
Transmit	2	3	Receive
CTS	3	not connected	none
RTS	4	7	CTS
Ground	5	4	Ground
DSR	7	8	DTR
DTR	8	not connected	none

**Zebra Cameo/ QL 3 - to - RF Terminal Pin-outs**

## Laser and CCD

The laser and CCD TTL pin-outs are:

Pin	Function
1	5 volts
2	Data
3	Phase
4	LED
5	Trigger
6	Enable
7	Shield(drain)
8	Ground

**Laser and CCD Pin-outs**

### Remember:

*If you make your own cables, you are on your own. We accept **NO RESPONSIBILITY** for damages resulting from incorrect wiring.*



# Firmware Upgrades

Occasionally it is necessary to get firmware fixes for problems discovered with the *R/F Terminal System*.

## R/F Terminal Firmware Upgrades

The R/F Terminal firmware can be upgraded by downloading new firmware into the R/F Terminal from your computer.


### Normal Firmware Download for a Terminal

The RF Terminal firmware can also be upgraded by downloading a file with the current firmware into the RF Terminal's flash EPROM using the LOADER.EXE program or the RF Terminal EPROM Loader Windows program found on the R/F Terminal Utilities Disk.

If you have received a disk with the latest firmware or have downloaded the firmware from our website, [www.barcodehq.com](http://www.barcodehq.com), download the firmware into the R/F Terminal by following the instructions on the screens of the program for a normal Terminal firmware update.

### Failsafe Firmware Download for a Terminal

If the firmware gets completely wiped out, you will get a blank screen or a blank screen with a cursor in the upper left. There is a failsafe download still possible, but you will need to open up the RF Terminal case and move a jumper to the FDL position as shown below.

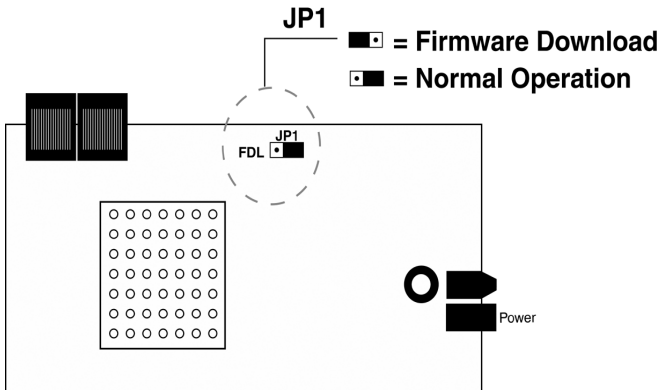


After moving the jumper, reassemble the case, plug the power into the RF Terminal, and connect the F36 Serial Cable to the host computer and proceed to download firmware using the 700 RF Terminal EPROM

Loader program. Specify a failsafe terminal firmware update and follow the program's directions.

## Base Station Firmware upgrades

You can download the latest firmware for the B551 Base Station from our website [www.barcodehq.com](http://www.barcodehq.com). Go to the downloads page and select the B551 Base Station.

- After unplugging the power supply, remove the cover to the **Base Station** (see Appendix A for diagrams and details)
- Move JP4 to the FDL setting as show below:

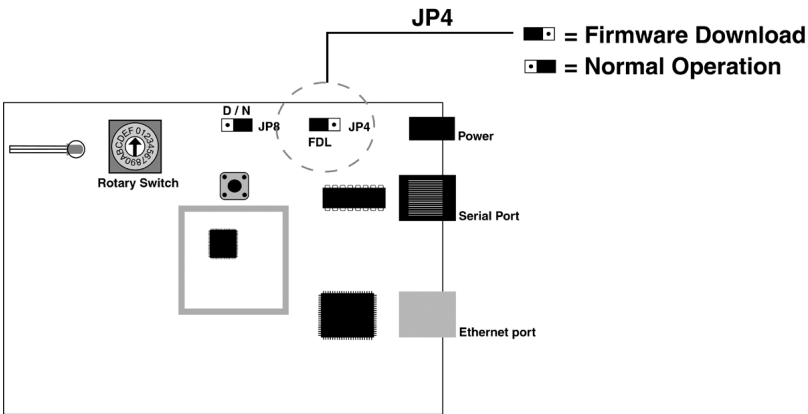


- Now apply power to the board, and plug the serial cable into the serial port of the board.
- Now run the 700 RF Terminal EPROM Loader Program. Specify base firmware and follow the directions of the program.

## Appendix E

# Code 39 Specifications

---

Code 39 (or Code 3 of 9) is the de facto standard of non-retail American industry. It is widely used in the automotive industry (AIAG specifications) as well as in government and military applications (LOGMARS specifications). Code 39 is flexible, features a large character set, variable data length and density, and bi-directional readability. Code 39 is extremely accurate; substitution errors are almost nonexistent. Its character set consists of numbers **0** through **9**, upper case **A-Z**, and characters *Space*, **\$**, **%**, **.** **/** **+** and **-**.

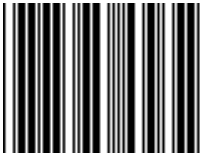

**\*C39\***

The name "Code 39" comes from both the fact that its character set originally contained 39 characters (it now has 43) and from its structure. Each character is formed of three wide and six narrow elements, made up of five bars and four spaces. Code 39's density can vary from a low of .75 characters per inch (cpi) to a high of 9.4 cpi. There should be a ¼" "*quiet zone*" (white space) to the left and right of the bar code.

Code 39 uses an asterisk (\*) as a start and stop character. This character must precede and follow the data in the bar code. The RF Terminal gives you the option of transmitting or not transmitting these characters when the bar code is read.

Exact specifications for Code 39 and other bar code symbologies can be obtained from ANSI at the address below:

**American National Standards Institute  
Customer Service  
11 West 42<sup>nd</sup> St.  
New York, NY 10036  
<http://web.ansi.org>**

***document ANSI/AIM BC1-1995***

Code 39 has several advanced features and functions that are discussed further in this appendix.



# Code 39 Advanced Features and Functions

## Mod 43 Check Character

Standard Code 39 can be printed with a "Mod 43 Check Character". This Mod 43 check character *cannot* be used with **Full ASCII Code 39**. Assigning a value to each character in the data to be bar coded from the table as follows derives the check character:

Char	value	Char	value	Char	value	Char	value
0	0	B	11	M	22	X	33
1	1	C	12	N	23	Y	34
2	2	D	13	O	24	Z	35
3	3	E	14	P	25	-	36
4	4	F	15	Q	26	.	37
5	5	G	16	R	27	space	38
6	6	H	17	S	28	\$	39
7	7	I	18	T	29	/	40
8	8	J	19	U	30	+	41
9	9	K	20	V	31	%	42
A	10	L	21	W	32		

### Mod 43 Check character calculation for Code 39

Here is an example to illustrate how the check character is calculated for bar code data of **123XYZ**:

1. Take the sum of the values assigned to each character:

$$1 + 2 + 3 + 33 + 34 + 35 = 108$$

$$I \quad 2 \quad 3 \quad X \quad Y \quad Z$$

2. Divide the sum by **43**: (thus the name modulus 43)

$$108/43 = 2 \text{ with a Remainder of } 22$$

3. Find the character corresponding with the remainder.

**M (value 22) is the CHECK CHARACTER**

The data becomes **123XYZM**, with **M** added as the Mod-43 check character.

## Full ASCII Extension to Code 39

"Full-ASCII Code 39" expands the Code 39 character set to include all 128 ASCII characters. Symbols 0-9, A-Z and punctuation characters and are identical to their Code 39 representations. Lower-case letters, additional punctuation characters, and control characters are represented by sequences of *two Code 39* characters.

This table depicts the Full ASCII character set as a function of Code 39 characters:

ASCII	Code 39	ASCII	Code 39	ASCII	Code 39	ASCII	Code 39
NUL	%U	SP	Space	@	%V	'	%W
SOH	\$A	!	/A	A	A	a	+A
STX	\$B	"	/B	B	B	b	+B
ETX	\$C	#	/C	C	C	c	+C
EOT	\$D	\$	/D	D	D	d	+D
ENQ	\$E	%	/E	E	E	e	+E
ACK	\$F	&	/F	F	F	f	+F
BEL	\$G	'	/G	G	G	g	+G
BS	\$H	(	/H	H	H	h	+H
HT	\$I	)	/I	I	I	i	+I
LF	\$J	*	/J	J	J	j	+J
VT	\$K	+	/K	K	K	k	+K
FF	\$L	,	/L	L	L	l	+L
CR*	\$M	-	- or /M	M	M	m	+M
SO	\$N	.	. or /N	N	N	n	+N
SI	\$O	/	/O	O	O	o	+O
DLE	\$P	0	0 or /P	P	P	p	+P
DC1	\$Q	1	1 or /Q	Q	Q	q	+Q
DC2	\$R	2	2 or /R	R	R	r	+R
DC3	\$S	3	3 or /S	S	S	s	+S
DC4	\$T	4	4 or /T	T	T	t	+T
NAK	\$U	5	5 or /U	U	U	u	+U
SYN	\$V	6	6 or /V	V	V	v	+V
ETB	\$W	7	7 or /W	W	W	w	+W
CAN	\$X	8	8 or /X	X	X	x	+X
EM	\$Y	9	9 or /Y	Y	Y	y	+Y
SUB	\$Z	:	/Z	Z	Z	z	+Z
ESC	%A	;	%F	[	%K	{	%P
FS	%B	<	%G	\	%L		%Q
GS	%C	=	%H	]	%M	}	%R
RS	%D	>	%I	^	%N	~	%S
US	%E	?	%J	_	%O	DEL	%T, %X

Full ASCII Table

# Accumulate Mode

*Accumulate Mode* is an option allowing the RF Terminal to accumulate multiple bar codes in its buffer, then transmit them to the computer as if they had been a single bar code. This is useful for entering quantities and other variable data.

*Accumulate Mode* works with Code 39, Code 93 and Code 128 only and can't be used with a check digit. When the RF Terminal reads a bar code with a **space as the first character**, it beeps and buffers the data without transmission. It continues to read and buffer bar codes (up to 40 characters) until it reads a bar code **without a leading space**. Once it reads this last bar code, the entire buffer (including that last code) is transmitted as one long bar code. A "double-minus" sign (--) bar code clears the buffer. The **ENTER** code on this Barpad is a Code 39 *Start/Stop Character* only.

*Accumulate Mode* must be turned on using the bar coded Setup Menu or by using the keypad. *Accumulate Mode* is located in the Code 39 parameters. Choose **4** to *Enable* or **5** to *Disable* this feature.

This numeric Code 39 "Barpad" illustrates ACCUMULATE Mode. Scan **5, 3, 8,** and **Enter**. The RF Terminal transmits a single message of "538".



0



1



2



3



4



5



6



7



8



9



Clear



Enter

## Code 93 Specifications

---

Code 93 is variable length, continuous, bi-directional, compact code. Code 93 is an alphanumeric bar code which consists of *43 data characters* (**0-9,A-Z,\$/+%.- and Space**), *4 control characters*, and a *unique start/stop character*. The entire set of 128 ASCII characters is represented in Code 93 using combinations of *control characters* and *data characters*.

The control characters are  $\text{\textcircled{\$}}$ ,  $\text{\textcircled{\%}}$ ,  $\text{\textcircled{/}}$ , and  $\text{\textcircled{+}}$ . Pairing these control characters with normal data characters creates full ASCII 93. It is almost identical to the pairings for Code 39; Code 39 uses \$M to produce a

Carriage Return (ASCII 13) character -- Code 93 uses  $\text{\textcircled{\$}}$ M to produce the Carriage Return.

Code 93's two built-in check digits greatly minimize the possibility of reader substitution errors. The bar code reader never transmits digits the check digits. Code 93's Start and Stop characters are also never transmitted.


If you have not decided which bar code type to use for your application and are considering using Code 93, while we agree that Code 93 is an excellent code, we believe that Code 128 is generally preferable because:

1. Code 93 **does not** have the numeric compression capability that 128 does, and
2. Code 93 requires pairings to make all Full ASCII characters while 128 does not.



# Codabar Specifications

---

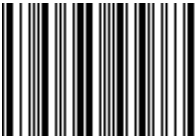

**a12345b**

Codabar is widely used in libraries, blood banks, the cotton industry and transportation industries. Its' character set consists of numbers **0** through **9**, and punctuation characters **+** **.** **-** **/** **:** and **\$**. Symbols **a**, **b**, **c**, **d**, **t**, **n**, **\*** and **e** are used as start and stop characters. Characters are constructed of four bars and three spaces.

Codabar is a numeric-only code, but different combinations of start and stop characters can be used to identify different types of labels. Codabar's variable data length and extremely low error rate make for a versatile bar code.

## **Codabar start/stop transmission**

The Codabar section on the RF Terminal Setup Menu lets you determine whether Codabar start/stop characters are transmitted or not. If you are varying start/stop characters with different types of labels, you'll want to "**Enable Stop/Start character Transmission**". Start/stop character transmission can also be helpful if you want your program to differentiate between data coming from the RF Terminal and data coming from the keyboard. If neither of these situations apply, you'll probably want to disable it.




## Appendix H

# Code 128 Specifications

---

Code 128 is a very powerful bar code, combining an extensive character set and variable length with compactness and error checking. The character set contains all 128 ASCII characters with each character made up of three bars and three spaces. Each element (bar or space) varies from one to four units in width, totaling 11 units of width per character. Code 128 contains two levels of error checking:

- Each character is checked for internal parity, **and**
- The last character is a checksum.

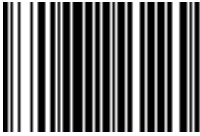

12345

Code 128 has three subsets, A, B and C. Subset A contains alphanumeric characters and unprintable control characters, subset B contains alphanumeric characters plus printable control characters and subset C contains only numeric characters and uses a 2-character encoding scheme to create a more compact bar code. Code 128 uses an internal Mod 103 check

character that is not displayed by the bar code reader. Code 128 bar codes can be made up of only one subset or may be a combination of several.

The Code 39 features of **Accumulate Mode**, **Caps Lock ON** and **Caps lock OFF** also apply to Code 128.

## UCC-128/ EAN-128

UCC-128/EAN-128 Code is a subset of Code 128 adopted by the UCC and EAN council's for use as a shipping label symbology. UCC/EAN-128 bar codes always start with a Function Code 1 character. In addition, a Function Code 1 character terminates all variable length fields unless they are the last field in the bar code.

The RF Terminal outputs the following for the special function codes and start sequences:

**]C1** Start C/Function Code 1

**^]** (GS) Function Code 1 as a variable string terminator

If **UCC/EAN 128** is *enabled*, the reader looks for the Start C/Function Code 1 to indicate a UCC/EAN 128 bar code.

The **UCC Serial Shipping Container Code** specification calls for a 19 digit UCC/EAN 128 code with an additional Mod 10 Check digit (20 digits in all). The Mod 10 Check digit is calculated the same as the *Interleaved 2 of 5* example in **Appendix D**. It is the data length as well as the MOD 10 check digit that distinguishes the **UCC Serial Shipping Container Code** from other UCC /EAN 128 bar codes.



Scanning the appropriate bar codes on the RF Terminal Setup Menu enables **UCC/EAN 128**; or you can use the keypad in the PROGRAMMING MODE “Change Setup” option. If UCC/EAN 128 is *enabled*, you will be able to read both standard Code 128 bar codes as well as the UCC/EAN 128 bar codes with the *Function 1* character and the Mod 10 check character.



### *UCC-128 Shipping Container Code*

If UCC/EAN-128 is enabled on the R/F Terminal reader, all Function 1 codes are transmitted as JCI. In addition, should you be reading a 20 digit Shipping Serial Container code, the Mod 10 check digit is also compared with the computed Mod 10 value to give further assurance of no substitutions. The UCC/EAN-128 Shipping Serial Container Code is a subset of UCC-128 or EAN-128 adopted for voluntary marking of shipping boxes with the exact serial number of the box, (used with EDI typically to identify a specific boxes contents. The code consists of the following format:

Start C	<i>not transmitted</i>
Function Code 1	<i>transmitted</i>
2 Digit Qualifier	<i>transmitted</i>
7 Digit Data Portion	<i>transmitted</i>
1 Digit Mod 10 Check Digit*	<i>transmitted-</i>
1 Digit Modulus 103	<i>not transmitted</i>
Stop Code	<i>not transmitted</i>

*\*Calculated using 19digits-UPC method*

The UCC 128 specification is used extensively by the retail industry. If you have a requirement for a **UCC 128 Serial Shipping Container** bar code, be sure to follow the specification as closely as possible as many vendors will impose fines for non-conformance. For more information on UCC 128, contact the Uniform Code Council at:

**Uniform Code Council, Inc.**  
**7887 Washington Village Drive, Suite 300**  
**Dayton, OH 45459**  
**937-435-3870**  
**937-435-7317**  
**info@uc-council.org**  
**8:00 a.m. to 6 p.m. EST**

Many of the specifications are available online at:

**<http://www.uc-council.org>**

# Interleaved 2 of 5 Code Specifications

---



123456

Interleaved 2 of 5 Code is a numeric-only, even-number-of-digits bar code. It is widely used in warehouse and industrial applications. A combination of five elements, two wide and three narrow represent each character. Odd-number position digits are encoded in the bars, even-number positions in the spaces.

Interleaved 2 of 5 Code is so susceptible to partial scans being interpreted as valid reads that we recommend at least one of the following safeguards:

- **Use one length of I 2 of 5 code.** Using one length of data allows you to tell the RF Terminal to look for one length of I 2 of 5 code only. By default, the RF Terminal is set to look for a 6 digit I 2 of 5 code but you can set the length to something different using the RF Terminal Setup Menu. Setting the length to **00** digits allows variable length bar codes scanning. If you must use the **00** setting, we recommend that you then use the “*Minimum/Maximum*” data length field when creating a program in the RF Terminal to check each field for the proper length.
- **Use a check digit.** Worth Data's **LabelRIGHT** printing program automatically calculates and prints a check digit upon request using the method below:

## Interleaved 2 of 5 Mod 10 check digit calculation

1. Assume that the bar code data is **1987**.
2. Starting with the least significant digit (in this case, a 7), label the digits alternatively even and odd.

**7 - even**

**8 - odd**

**9 - even**

**1 - odd**

3. Take the sum of the odd digits:

$$8 + 1 = 9$$

4. Multiply the sum of the even digits by 3:

$$(7 + 9) \times 3 = 48$$

5. Add the results of steps 3 and 4:

$$9 + 48 = 57$$

6. Subtract the result of step 5 from the next highest multiple of 10:

$$60 - 57 = 3$$

7. The checksum becomes the low-order digit:

$$19873$$

8. Because the data now has an odd length, a leading zero is added, for the final result of

$$019873$$

# UPC / EAN Specifications

---



UPC symbols are found on almost all grocery products and many other retail items. The UPC code most people are familiar with (UPC-A) is a fixed-length (12 digits) numeric only code, with the first digit controlled by UPC coding assignments and the last digit a checksum. UPC-E and UPC-E1 are variations of the standard UPC-A code. Each digit is constructed of two bars and two spaces. UPC has very precise standards of code size, structure, and numbers to be used.



EAN is an international superset of UPC. EAN-13 has 13 digits, with the first two digits representing a country code. The final digit is, as with UPC, a check digit. EAN-8 is a shorter version on the EAN-13 code containing seven data digits and ending again with a checksum.

The exact UPC/EAN symbol specifications are available from:

**Uniform Code Council, Inc.**  
**7887 Washington Village Drive, Suite 300**  
**Dayton, OH 45459**  
**937-435-3870**

Specifications are also available via the internet at:

**<http://www.uc-council.org>**

Keep the following guidelines in mind when printing UPC bar codes:

- If you plan to use a "supermarket-type" in-counter scanner to read the codes, specify a bar code height of at least .9" for an optimal first read rate.
- Make it an early practice to observe the numbering conventions of the UPC Council. Do not label unmarked merchandise with a bar code whose numbers may conflict with those already assigned. If products with these numbers are not in your store now, they are likely to be in the future, causing conflicts in your inventory system.

- The leading Number System Character, (the first number of the 11 digits to be entered) should conform to these UPC assignments:
  - 0,6,7,8** Regular UPC 12 digit codes with numbers assigned by the UPC Council. (Do not use **0** as the leading number for in-store marking).
  - 2** Store-marked random weight items of meat and produce.
  - 3** Reserved for National Drug Code and Health Related Items.
  - 4** Use this leading digit for in-store marking of non-food items.
  - 5** Reserved for coupons. Do not use this today, or you will not be able to process coupons through your system tomorrow.

## Supplemental codes



The UPC standards include the addition of a 2 or 5-character supplemental code as well as the Extended Coupon Code. To read the supplements, you must first enable them using the RF Terminal Setup Menu.

**NOTE:** *Enabling the supplements disallows the reading of UPC codes from right to left to assure that the 2 and 5 digit supplements are not get missed. Coupon codes can be read from right to left or left to right.*

## ISBN Specifications

ISBN (International Standard Book Numbering) bar codes are essentially EAN-13 with a 5 digit supplement, where the first 3 digits are the Bookland country codes of **978** for books and **977** for periodicals. Although the bar code contains 18 characters, the ISBN format uses only 9 of them, along with a newly calculated Mod-11 check digit. For example, a bar code containing the numbers 978055337062153495 would transmit as 0553370626 in the ISBN format.

The RF Terminal has the option of transmitting in the ISBN format.



ISBN specifications are available from:

**American National Standards Institute  
Customer Service  
11 West 42<sup>nd</sup> St.  
New York, NY 10036  
<http://web.ansi.org>  
*document ISO 2108:1992***

## The UPC/EAN checksum character

The last character in a UPC-A, UPC-E, UPC-E1, EAN-13 or EAN-8 bar code is the checksum. For reference, these are the methods of calculation:

### Checksum calculation for UPC-A, EAN-13 and EAN-8

Use Worth Data's phone number (it's not a real UPC-A code) as sample data:

**18314589938**

Assign even and odd positions, starting at the right and moving left:

<b>8</b>	<b>3</b>	<b>9</b>	<b>9</b>	<b>8</b>	<b>5</b>	<b>4</b>	<b>1</b>	<b>3</b>	<b>8</b>	<b>1</b>
odd	even	odd	even	odd	even	odd	even	odd	even	odd

- Starting with the leading digit, 8, take the sum of all the characters in the odd positions.

$$8 + 9 + 8 + 4 + 3 + 1 = 33$$

- Multiply the result of step 1 by 3.

$$33 \times 3 = 99$$

- Now take the sum of all the even-position characters.

$$3 + 9 + 5 + 1 + 8 = 26$$

- Add the result in Step 2 to the result in Step 3.

$$99 + 26 = 125$$

5. Subtract the result from the next higher multiple of 10.

*Next higher multiple of 10 over 125 = 130*

$$130 - 125 = 5$$

**5** is the *Modulo-10* check character. The data to be printed becomes:

**183145899385.**

This same formula is used for EAN-13 (using the 1-12 digits) and EAN-8 (using the 1-7 digits).

### UPC-E Checksum Calculation

Use the sample data of 123456 to demonstrate the UPC-E checksum calculation:

1. The 6 digit UPC-E code is converted to a 10-digit code, using an expansion scheme based on the sixth digit:

If the code ends in:	UPC-E Data	Insertion Digits	Insertion Position	10 digit code
0	abcde0	<b>0000</b>	3	ab <b>0000</b> cde
1	abcde1	<b>1000</b>	3	ab <b>1000</b> cde
2	abcde2	<b>2000</b>	3	ab <b>2000</b> cde
3	abcde3	<b>0000</b>	4	abc <b>0000</b> de
4	abcde4	<b>0000</b>	5	abcd <b>0000</b> e
5	abcde5	<b>0000</b>	6	abcde <b>0000</b> 5
6	abcde6	<b>0000</b>	6	abcde <b>0000</b> 6
7	abcde7	<b>0000</b>	6	abcde <b>0000</b> 7
8	abcde8	<b>0000</b>	6	abcde <b>0000</b> 8
9	abcde9	<b>0000</b>	6	abcde <b>0000</b> 9

Because the sample UPC-E code ends in a **6**, the insertion digits **0000** are inserted at the **sixth digit** (insertion position 6):

1234500006

2. Add the **Number System Character** of 0 to the sample data:

01234500006

3. Use the UPC-A check digit calculation described in the previous section to produce a check digit as if it were a UPC-A code. The check digit for the sample data is:

5

4. The complete 8 digit code consists of the *Number System Character*, the *original 6 digit code* and the *check digit*:

01234565

## Appendix K

# MSI/Plessey Specifications

---

**Plessey** is a variable length numeric only bar code. **MSI Bar Code** is a variable length, numeric-only code with an automatically appended Modulus 10 check digit. MSI is sometimes called *Modified Plessey Code*. If the user specifies an additional check digit, the MSI code can be 14 digits long, otherwise it has a maximum length of 13 characters. This is how the MSI check digit(s) are calculated:

The MSI **Mod 10** check digit is calculated as follows:

The example bar code data is:

82345

1. Form a number from the odd positions, starting in the units position.

835

2. Multiply the new number by 2

$$(835) \times 2 = 1670$$

3. Add the digits of product

$$1 + 6 + 7 + 0 = 14$$

4. Add the even digits of the original number to the result in 3

$$2 + 4 + 14 = 20$$

5. Subtract the result from the next highest multiple of 10

$$20 - 20 = 0$$

6. New Check Digit

0

7. Data with check digit is:

823450



The MSI **Mod 11** check digit is calculated as follows:

The example bar code data is:

**943457842**

1. Assign a checking factor to each number, starting with the units position of the number (in this example, the **2**) up to the highest order position (the **9**). Use checking factors of:

**2,3,4,5,6,7,2,3,4,5,6,7...**

2. Multiply the checking factor with its assigned number and add the products:

$$4 + 12 + 32 + 35 + 30 + 28 + 6 + 12 + 36 = 195$$

3. Divide the sum by 11

$$195/11 = 17 \text{ remainder } 8$$

4. Subtract remainder from 11

$$11 - 8 = 3$$

5. New Check Digit

**3**

*(If the remainder is 10, no check digit is added.)*

6. Data with check digit is:

**943457823**

# How to scan a bar code

The RF Terminal can be used with either a laser or a CCD scanner. Which one you choose is dependent upon your application and the quality and density of your bar codes. This section will include information on different scanners as well as how to use each one.

## Laser and CCD Scanners

If you are using a laser or CCD scanner, technique is not critical. The scanners are “point-and-shoot”; you can’t miss. Upon triggering the beam, the laser and CCD scans the bar code multiple times (36 scans per second) until it has a good read, at which point it automatically shuts off. These scanners are more expensive, but virtually foolproof. They read from a distance, so they are much more convenient for distance shelf scanning or scanning in tight spots. Different laser scanners have different distance capabilities. **Table M-1** shows the comparison of all the laser and CCD scanners available from Worth Data.

Scanner	Hi Density Code 39	UPC 100%	40 mil Code 39	Paper 100 mil Code39	Retro-Reflective 100 mil Code 39
LI50 CCD	0.5" – 4"	0.5 - 7"	1" – 12"	na	20" – 40"
LZ300 Laser	0 – 6"	0 – 12"	2" – 41"	7" – 41"	28" – 7.5 ft.
LZ400 Laser	0.5" – 9"	0 – 17"	3" – 44"	9" – 50"	18" – 9.5 ft.
Integrated Laser in Terminal	1" – 7"	0 – 10"	4" – 29"	10" – 32"	18" – 6.5 ft.
PSC Long Range	7" – 11"	7" - 31"	11" – 9 ft.	24" – 15 ft.	48" – 17 ft.

**Table M-1. Scanner Comparison Chart**

6 mil = high density    40 mil = low density    100 mil = very low density (with paper and retro-reflective label stock)

To scan a bar code using your laser or CCD scanner, (whether it be a handheld or integrated)

1. put your RF Terminal in One-Way mode with the host computer program not running; or even unplug the serial cable,
2. point the laser scanner at the bar code at about 6" away.
3. Pull the trigger (or push the button on an integrated model) and line up the beam on the bar code. If you don't get a read, vary the distance of the scanner from the bar code by pulling up or moving down. The idea is to scan through the center of the bar code.

## Laser Options

Several options are applicable to all laser and CCD Scanners that are used with the RF Terminal. These options are: 1) Longer timeout on the laser reading, and 2) Double decode required.

**Longer Laser Reading:** A temporary solution to problem bar codes is sometimes to increase the length of the time the scanner attempts to read, from the default 2-second beam to a 4-second beam. To select the 4-second beam:

Scan **Start Setup**  
Scan **Laser Options**  
Scan **3** to select the 4-second beam  
Scan **End Setup**

*To return to the default 2-second beam, scan 2.*

**Double Decode:** The default setting for the RF Terminal is one successful decode results in a “good read”. If you are getting incorrect reads, (due to defective bar codes), a temporary solution is to turn on make the RF Terminal perform two straight identical decodes before beeping, outputting data, and completing a “good read” read.

To activate the double decode:

Scan **Start Setup**  
Scan **Laser Options**  
Scan **1** to select double decode  
Scan **End Setup**

*To return to the single decode beam, scan 0.*

There are two **Setup Options** that do not apply to the LZ300. The two options are:

1. “**Aiming Laser Dot**” for a predetermined time before the laser beam expands into a “line” for reading. The RF terminal requires a no charge feature to be added to it before shipping for the Aiming Dot to be used. This feature applies to the LT70x models of the RF Terminal with its built-in laser and the external tethered LZ400 Laser Scanner.
2. “**Difficult Code 39 Reading**” for reading Vehicle Identification Numbers (VIN) through the automobile windshield. This applies only to the external tethered LZ400 Laser Scanner.

### Aiming the Laser Dot:

Sometimes it is difficult to see the laser beam and know you are on the bar code, especially if you are attempting to read outdoors in direct

sunlight. The laser can be outputted as a brighter dot for a few seconds, allowing the user to place the dot in the middle of the bar code; then the laser beam starts sweeping for the read. As shipped, the laser beam never forms an aiming dot, but you can program a number of seconds that you wish the aiming dot to appear before the sweeping beam by scanning the following:

From the Keypad, go to **RF Terminal Setup**. Choose "**Other**". Press Enter repeatedly until you get to the parameter labeled "**AIMING DOT**". The default is **00**. Enter the time in 1/10s of a second you wish the dot to appear before the laser beam spreads, (i.e. enter 30 for 3 seconds).

**"Difficult Code 39 Reading":**

This setting facilitates reading of difficult Code 39 bar codes such as the Vehicle Identification Number (VIN number) on automobiles, especially reading through a windshield. VIN numbers are long, often weathered, often dirty, and challenging to read.

To enable the more aggressive Code 39 algorithms necessary to read windshield VINs with a LZ400:

Scan **Start Setup**

Scan **2 of 5 Code**

Scan **D** for windshield reading

Scan **End Setup**

*To return to the default Code 39 decode algorithms, scan **B** instead of **D**.*

Don't forget the common sense things you can do to facilitate reading the VIN:

1. Be sure the window on the laser scanner is clean.
2. Be sure the windshield itself is wiped clean before reading



## Appendix M

# Using the Scan Stand


---

Stand mode allows the operator to use an LZ300 laser in “hands free” mode while attached to an RF Terminal. This is useful in shipping applications or any application where the operator requires both hands to perform their function.

Stand Mode is actually a fast cycling laser looking for a bar code (many transitions between black and white). The user scans the bar code on the Stand to activate it. A scan of the same bar code while in "Stand Mode" will deactivate it. The "Stand Mode" on the RF Terminal only supports the external LZ300 Scanner, not the internal scanner and not the LZ400 Scanner. When the scanner detects a suspect bar code, the beam spreads wider and stays on for 2 1/2 second or until a bar code is successfully read. If successfully read, the scanner turns off until the next prompt. If no read occurred, it resumes the cycling looking for a prospective bar code.

When in Stand Mode, if a key is pressed, we assume the user wants to key data instead of scan data, so the scanner is turned off; at this point the scanner can be used if triggered. Once the data entry is finished and transmitted and the next prompt is received from the host program requesting either 1) scanner only input, or 2) scanner/keyboard input; the "Stand Mode" operation is resumed.

The Stand itself is available in two models, one with a weighted base (if you need to move the stand from site to site) or a gooseneck-only model that must be permanently mounted to a surface.

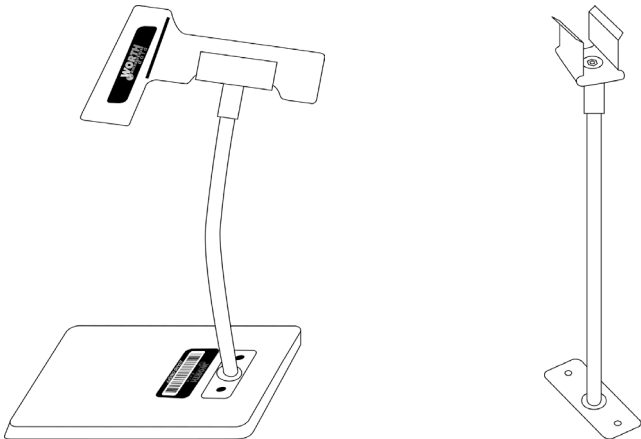



## Appendix N

# Optional Features

The following are the features available for the RF Terminal:

Item #	Description
F10	5V/110V Power Supply
F11	5V/220V Euro/South American Power Supply
F14	5V/220V UK Power Supply
F13	5V/240V Australian/New Zealand Power Supply
F34	RS-232 Null Modem 8 Pin Modular to 25Pin Female
F36	RS-232 Straight 8 Pin Modular to 9 Pin Female
F44	422 Multi-drop "T" Cable
F38	RF Terminal Cloning Cable
T15	Voice Cloning Cable
T12	Headphone for Version 9
T12	Microphone for Version 9
B12	Rubber Boot for RF Terminal
F41	RF Terminal Carrying Case
T46	Holster for RF Terminal using Rubber Boot
F88	Belt Holster for tethered Laser Scanner Gun
H11	Laser Holder for LZxx
LZ300	Worth Data Laser Scanner
LZ400	Worth Data Laser Scanner
PSC LR	PSC Long Range Laser Scanner
LI50	Long Range CCD Scanner

## CCD Scanners

### LI50 Linear Imager Scanner

This CCD scanner reads typical UPC codes from a 0.5" to 7" distance. It acts just like a laser scanner, except the beam is fuzzier than the lasers sharp line across the bar code. The cable (rated for 1,000,000 bends). The warranty is 2 years.

## Laser Scanners

The LT7x model RF Terminal is available with an integrated laser scanner for one-handed scanning. This laser uses the Symbol SE900 Scan Engine with a lifetime warranty on the scan element. We also offer cabled laser scanners (the **LZ300**, **LZ400** and **PSC Long Range**) as an add-on, plugging directly into the **SCANNER** port of the RF Terminal.



### **LZ300 Laser Scanner**

This laser scanner uses the Symbol 1200WA Scan Engine with a lifetime warranty on the scan element. The 10 ft. cable is durability rated for 1,000,000 bends. It reads all densities of bar codes down to a 3 mil narrow bar and reads a typical UPC code at about 12". The warranty on the LZ300 is 2 years.

### **LZ400 Laser Scanner**

This laser scanner is the equivalent of the lasers used in the integrated models of the RF Terminal. The LZ400 uses the Symbol 1200HP Scan Engine with a lifetime warranty on the scan element. It can read a 10 mil bar code at 17", a 40 mil bar code at 44 " ft., and a reflective 100 mil bar code at 9.5 ft. It can read high density code down to a 3 mil narrow bar width.

This scanner supports the aiming dot mode, useful for difficult aiming and scanning in bright sunlight.

Durability features include a cable tested to withstand 1,000,000 bends of operation, as well as a scan engine tested to withstand 2000 G's of force. It is an extremely rugged product, made to withstand harsh treatment including repeated drops.


### **PSC Long Range Laser**

This laser is a long-range laser (it reads a 100 mil reflective bar code from up to 17 ft.), but it also reads normal codes. This makes it ideal for reading shelves so high you can't even reach them, (i.e. a forklift operator can scan the shelves without getting up); but it can still read desktop bar codes at close range. It actually has two lasers built-in; one for close up reading, and one for distance reading. It has a two position trigger; the first position stop is an aiming spot, the second position stop triggers the beam. Warranty is 2 year.

## **Laser Accessories**

### **H11 Laser Holder**

The H11 Laser Holder is for the LZ300 and LZ400 laser scanners. The H11 Laser Holder can be mounted vertically (wall) or horizontally (table top). Double-sided tape is included to use for mounting, or you can use wood or metal screws (not provided) to mount the holder.

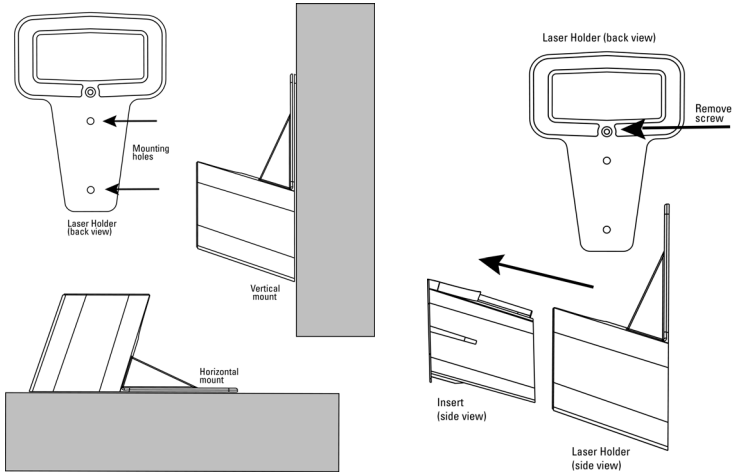

# RF Terminal Cases and Holsters

The RF Terminal has a variety of carrying cases and holsters available for use, depending upon the configuration and function of your RF Terminal. Choosing the correct carrying case or holster can increase productivity by making the RF Terminal more accessible and portable.

The RF Terminal can use the following carrying cases and holsters:



## **F41 Leather RF Terminal Carrying Case**

The F41 Leather Carrying Case features either a shoulder strap or belt loop attachment. The RF Terminal is worn upside down to make it easier for

the operator to simply lift the RF Terminal up and view the display and keypad in

the correct orientation. The case has openings for all cable and scanner attachments, making it unnecessary to remove the case for uploading. This case has a clear plastic keypad window to protect the RF Terminal keypad from the elements.



## **T46 Holster for RF Terminal**

The T46 RF Terminal holster is worn on a belt and provides a convenient way to store and carry the RF Terminal during use.

The holster can accommodate all 700 RF Terminal models with a boot included. It provides quick extraction and insertion.



## **Rubber Boot for RF Terminal**

The B12 Rubber Boot is shipped standard with every RF Terminal ordered. It is a rugged, protective rubber boots intended to protect the RF Terminal in the most hostile environments.

This boot doesn't have to be removed to change batteries or connect any of the cables or recharging power supply.



## Appendix O

# ASCII Code Equivalent Table

The 128 ASCII codes, their 3-digit decimal equivalents and 2-digit hex equivalents are detailed in the below table.

char	hex	3 digit ASCII	char	hex	3 digit ASCII	char	hex	3 digit ASCII	char	hex	3 digit ASCII
NUL	00	000	SP	20	032	@	40	064	'	60	096
SOH	01	001	!	21	033	A	41	065	a	61	097
STX	02	002	"	22	034	B	42	066	b	62	098
ETX	03	003	#	23	035	C	43	067	c	63	099
EOT	04	004	\$	24	036	D	44	068	d	64	100
ENQ	05	005	%	25	037	E	45	069	e	65	101
ACK	06	006	&	26	038	F	46	070	f	66	102
BEL	07	007	'	27	039	G	47	071	g	67	103
BS	08	008	(	28	040	H	48	072	h	68	104
HT	09	009	)	29	041	I	49	073	i	69	105
LF	0A	010	*	2A	042	J	4A	074	j	6A	106
VT	0B	011	+	2B	043	K	4B	075	k	6B	107
FF	0C	012	,	2C	044	L	4C	076	l	6C	108
CR	0D	013	-	2D	045	M	4D	077	m	6D	109
SO	0E	014	.	2E	046	N	4E	078	n	6E	110
SI	0F	015	/	2F	047	O	4F	079	o	6F	111
DLE	10	016	0	30	048	P	50	080	p	70	112
DC1	11	017	1	31	049	Q	51	081	q	71	113
DC2	12	018	2	32	050	R	52	082	r	72	114
DC3	13	019	3	33	051	S	53	083	s	73	115
DC4	14	020	4	34	052	T	54	084	t	74	116
NAK	15	021	5	35	053	U	55	085	u	75	117
SYN	16	022	6	36	054	V	56	086	v	76	118
ETB	17	023	7	37	055	W	57	087	w	77	119
CAN	18	024	8	38	056	X	58	088	x	78	120
EM	19	025	9	39	057	Y	59	089	y	79	121
SUB	1A	026	:	3A	058	Z	5A	090	z	7A	122
ESC	1B	027	;	3B	059	[	5B	091	{	7B	123
FS	1C	028	<	3C	060	\	5C	092		7C	124
GS	1D	029	=	3D	061	]	5D	093	}	7D	125
RS	1E	030	>	3E	062	^	5E	094	~	7E	126
US	1F	031	?	3F	063	_	5F	095	DEL	7F	127

Full ASCII Equivalent Table

# Index

- 1**
  - 1 second voice messages..... 7-2
  - 1/2 second voice messages..... 7-2
- 2**
  - 2 of 5 Code ..... 2-13
    - default length setting ..... 2-14
    - enabling check digit ..... 2-13
    - susceptible to mis-reads..... 2-14
  - 2 of 5 Codes
    - reading variable length bar codes ..... 2-14
  - 2 of 5 Length ..... 2-14
- 4**
  - 4 digit year option ..... 2-19
  - 4 second laser beam..... 2-20
  - 422 Cable pin-outs ..... B-3, C-2
  - 422 jumpers..... A-2, B-6
- 5**
  - 5v power supply
    - needed for Site Testing ..... 4-2
- 6**
  - 6 beeps on power up..... 8-6
- A**
  - Accumulate Mode .....E-4
    - numeric barpad table .....E-4
  - ActiveX programming ..... 6-13
  - Addressing a Terminal not SIGNed ON
    - base to host programming ..... 6-9
  - Advanced Features/Functions for Code 39.....E-2
  - AIAG.....E-1
  - aiming dot .....L-2
  - aiming dot enabling.....L-3
  - Area of coverage ..... 4-5
  - ASCII Code Equivalent Table ..... O-1
  - Assigning Error Messages ..... 7-4
  - automatic check back ..... 2-9, 3-3
  - Automatic Check Back ..... 6-11
  - Automobile ID reading .....L-3
  - Automobile windshield reading .....L-3
  - Avoiding substitutions in scanning..... 2-20
- B**
  - B11 Rubber Boot for Integrated Laser RF TerminalN-4
  - Backlight Display ..... 2-7
  - Bar code data length checking ..... 2-15
  - Bar Code ID's ..... 2-12
  - Bar Code Menu Only setup parameters ..... 2-1
  - bar code symbol ..... 2-4
  - Bar Code Type identification ..... 2-12
  - Bar Codes
    - Accumulate Mode.....E-4
    - character substitution ..... 2-17
    - default settings ..... 2-2
    - ID character prefix ..... 2-12
    - preambles and postambles ..... 2-12
    - trimming characters ..... 2-16
    - using Postamble to add terminator character..... 2-16
  - Base and relay blink "channel" on power up..... 1-3
  - Base and Relay Setup ..... 2-22
  - Base Reinitialized ..... 8-3
  - Base Reinitialized message..... 6-12, 8-3
  - Base Shut Down..... 6-9, 8-3
  - Base Station and Relay cover removal ..... A-1
  - Base station channel..... 1-3
  - Base Station failures ..... 5-3
  - Base Station Firmware upgrades ..... D-2
  - Base station handshaking..... 5-1
  - Base Station Initialized Message ..... 6-11
  - Base Station installation..... 1-2
  - Base Station location..... 4-1
  - Base Station Shut Down to Host Logic ..... 8-3
  - Base Station to Host Pin-outs ..... C-1
  - Base Station to Host Programming Formats ..... 6-7
  - Base to host programming
    - addressing a terminal not signed on ..... 6-9
    - Base Station Initialized message ..... 6-11
    - Illegal Commands ..... 6-10, 6-11
    - Sequence Error Message..... 6-10
    - Serial Reply ..... 6-7
    - SIGN ON ..... 6-8
    - SIGN OUT ..... 6-9
  - Basic architecture of host-terminal dialog..... 6-1
  - Basic command format ..... 6-1
  - Basic RF System communications ..... 3-1
  - Batteries ..... 2-18
  - battery charging ..... 1-6
  - Battery Life indicator..... 1-5
  - Battery Status indicator..... 2-18
  - Baud Rate for serial printer..... 2-21
  - Beep Tone ..... 2-18
  - Beeping
    - and Accumulate Mode ..... E-4
    - changing the tone or pitch ..... 2-18
    - during setup configuration ..... 2-2
  - Before you begin programming..... 5-1
  - BEGIN key
    - transmitting ASCII 23 to host..... 6-12
  - Belden 1227A1 wire for 422 cables ..... B-3, C-2
  - Blocking unauthorized listening..... 2-6
  - bright light problems
    - aiming dot .....L-3
  - Buffer Reinitialized..... 8-3
- C**
  - Cable pin-outs ..... C-1
  - Cables
    - for relays ..... B-3, C-2
    - needed for voice message cloning ..... 7-5
    - types ..... 1-2
  - Cables for Zebra Cameo Printer ..... C-3
  - Cameo magstripe ..... 6-4
  - Cameo Printer ..... 6-33
  - Cameo Printer Pin-outs ..... C-3
  - Caps Lock ON
    - Code 39 setup parameter ..... 2-10
  - CCD pin-outs ..... C-3
  - Change Batteries ..... 8-3
  - CHANGE BATTERIES ..... 1-5
  - Changing a base station to operate as a Relay ..... A-1
  - changing a host prompt already sent ..... 2-9

Changing a Relay back to a Base .....	B-5	Code 93 .....	2-15
Changing ASCII characters used to accommodate XON/XOFF .....	6-11	Com port communication problems.....	2-24, 8-5
Changing Base or Relay setup .....	2-22	Com port problems on host.....	8-6
Changing character output .....	2-17	Combining multiple commands .....	6-4
Changing more than one setup parameter at a time using the bar coded setup menu .....	2-3	Command format from host to terminal .....	6-1
Changing the AA batteries on the RF Terminal.....	1-5	Command section of a programming message .....	6-2
Changing the default voice messages.....	7-5	Components included with your RF system .....	1-1
Changing the frequency on a Base or Relay ....	A-2, B-5	components of a basic RF system .....	3-1
Changing the RF Terminal channel .....	2-5	Configuring 2 of 5 to look for fixed length data only ..	2-14
Changing the RF Terminal ID.....	2-5	Configuring the Base station .....	1-3
Changing the RF Terminals automatic shut-off time .....	2-20	Connecting a Relay Station .....	B-1
Changing the voice message partitions .....	7-2	Connecting the Base Station to a serial port .....	1-2
Channel How to find out what your is on RF Terminal.....	1-7	Conserving batteries .....	3-3
Channel of RF Terminal default .....	2-5	continual beeping on power up .....	8-6
Channels US/ Canada/ Mexico .....	2-6	Control Keys for Possible Programming .....	6-12
Character codes reassigning .....	2-17	Control Keys Only .....	2-6
Characters.....	2-17	Controlling terminals from a remote computer .....	6-23
charging batteries in RF Terminal.....	1-6	Correct Routing for Wiring.....	B-2
Check Character Code 39.....	E-2	Cover removal on Base or Relay .....	A-1
Check digits / Checksums and Accumulate Mode .....	E-4	Coverage.....	4-5
Check Digits / Checksums Code 128 .....	H-1	creating programs for the RF System .....	6-1
Code 39.....	E-2	credit card.....	6-4
Code 93.....	F-1	crimper for building Relay cables .....	B-4
Interleaved 2 of 5.....	I-1	Custom extension cables .....	C-1
MSI / Plessey.....	K-1	<b>D</b>	
UPC/EAN .....	J-3	Data Bits setting for serial printer .....	2-21
Checking channel for Site Test .....	4-2	Data Cloning Cable #F38.....	7-5
Clearing lines on a 6 line display .....	6-2	Data Received Was prompt.....	3-4
Clearing lines on terminal 4 line vs. 6 line display.....	6-6	DATA XMIT ERROR .....	7-6
Clearing lines on terminal screen .....	6-2	Date and Time Setting .....	2-19
Clearing terminal screen.....	6-2	Date Format .....	2-18
cloning Terminal setup to other terminals.....	7-5	Date set .....	2-19
Cloning voice messages .....	7-5	DB9 Straight Cable pin-outs .....	C-1
cables for .....	7-5	Dealing with radio traffic contention .....	4-6
Cloning Voice Messages from RF Terminal to RF Terminal .....	7-5	Default settings returning RF Terminal to .....	2-1
CLSI format for Codabar .....	2-13	RF Terminal .....	2-1
CLSI format of Codabar.....	2-13	Default voice message partitions .....	7-2
Codabar.....	2-13	Default Voice Messages .....	7-5
CLSI format.....	2-13	Default voice messages and numbers .....	7-5
Start/Stop transmission.....	G-1	Delete key using .....	1-4
transmitting start and stop characters .....	2-13	deleting display data.....	1-4
Codabar Specifications.....	G-1	Detecting low batteries on RF Terminal .....	1-5
Code 128 .....	2-12	Determining coverage areas for Base Stations and Relays .....	4-5
Code 128 Specifications .....	H-1	Determining the channel on a Base/Relay .....	1-3
Code 128 subsets .....	H-1	determining the frequency of a base or relay .....	A-2
Code 3 of 9 setting up .....	2-10	Determining when the terminal checks the Base .....	3-3
Code 39 about Accumulate mode.....	E-4	Dialog architecture .....	6-1
enabling the Mod 43 check character .....	2-10	difficult Code 39 codes .....	L-2
transmitting start and stop characters.....	2-10	Difficult Code 39 Reading .....	L-3
using Caps Lock ON .....	2-10	Display Backlight Setup .....	2-7
Code 39 Advanced Features/Functions.....	E-2	Display of Year .....	2-19
Code 39 Specifications.....	E-1	displaying date and time on terminal .....	6-2
Code 93 Specifications.....	F-1	displaying the date during operation .....	2-19
		Displaying the year in a 2 digit or 4 digit format....	2-19
		Double Decode .....	2-20
		double decode option .....	L-2
		Double-scan checking .....	2-20, L-3
		DOWN ARROW key transmitting ASCII 29 to host .....	6-12
		Downloading firmware from your computer to the terminal.....	D-1

<b>E</b>		Headphone Volume .....	2-9
EDI		Host Logic Error .....	6-9, 8-3
UCC -128 bar code .....	H-2	Host programming guidelines.....	6-1
Enabling 2 of 5 check digit.....	2-13	Host to Terminal Programming .....	6-1
Enabling transmission of NSC character .....	2-11	How many terminals per base? .....	4-6
Enabling UPC/EAN check digits.....	2-11	How Relay Stations work .....	See
Encore Printer .....	6-34	How Site Testing works .....	3-5
END key		How the Two-Way RF System works.....	3-1
transmitting ASCII 24 to host.....	6-12	How to change the batteries.....	1-5, 1-6
End of Cloning Hit Any Key .....	7-5	How to reach Worthington Data Solutions.....	8-8
End Setup		How to record voice messages .....	7-4
scanning to exit Setup mode .....	2-2	How to replace the EPROM .....	D-1
ENTER key		How to scan a bar code .....	L-1
eliminating for Arrow Keys.....	2-7		
ENTER key elimination		<b>I</b>	
for Control Keys .....	2-6	I can't communicate at all.....	8-5
Entering a Security Code on an RF Terminal.....	2-6	ID assignment for Relay .....	A-2
EPROM changes .....	D-2	ID's for bar code type .....	2-12
Eprom version identification.....	1-7	Identifying the type of bar code read.....	2-12
Eprom versions		If you are not connecting to a PC serial port .....	1-2
Australia/New Zealand .....	2-6	Illegal Command	
US/Canada/Mexico .....	2-6	Base to host programming .....	6-10, 6-11
Error messages		illegal statements	
Base Reinitialized .....	8-3	how RF Terminal handles.....	2-22
voice messages .....	7-4	Improving results from Site Test .....	4-3
Establishing communication with a Relay.....	4-4	Incorrect reading .....	L-3
Evaluating your areas range.....	3-5	Incorrect Routing for Wiring .....	B-3
examples		Input data from external keyboard.....	6-3
valid commands from host to terminal .....	6-2	Installation.....	1-1
Exiting One-Way mode .....	3-5	installing base - not on PC.....	1-2
Extension cables on base station.....	1-2	installing base on PC serial port .....	1-2
extra characters at beginning or end of data.....	8-7	Installation Summary .....	1-1
		Installing the R/F Terminal Utilities Software .....	1-8
<b>F</b>		Interleaved 2 of 5	
F1 as "escape" key .....	1-8	check digit calculation .....	I-1
F1 to exit modes.....	1-8	data length.....	2-14, I-1
F34 DB25 Null Modem Cable Pin-outs .....	C-1	default settings .....	2-13
F36 DB9 Straight Cable Pin-outs .....	C-1	Interleaved 2 of 5 Code Specifications.....	I-1
factors to consider before you begin programming..	5-1	ISBN bar codes	
Failure planning .....	5-1	transmitting in ISBN format .....	2-11
Failure Planning .....	5-2	ISBN format output .....	2-11
Firmware Download for Terminal		ISBN Specifications.....	J-2
Failsafe .....	D-1		
Normal .....	D-1	<b>J</b>	
Firmware revision		Jumpers	
how to find our what yours is .....	1-7	RS-422 termination.....	A-2
Firmware Upgrades.....	D-1		
first screen keeps showing up .....	8-6	<b>K</b>	
Fixing substitution - laser read.....	L-3	key symbol .....	2-4
Forcing "shifted" cursor entry.....	6-3	Keypad Only setup parameters .....	2-1
Forgetting your Security Code .....	2-6	Keypad Setup Menu	
Frequency and Jumper Changes .....	A-1	parameter groups .....	2-4
Frequency Changes .....	A-2		
Full ASCII Extension to Code 39.....	E-3	<b>L</b>	
Function Code 1 transmission.....	H-1	Label Code 4 and 5	
Function keys .....	6-12	enabling reading of .....	2-14
		Language problems during data collection.....	7-1
<b>G</b>		Laser and CCD Scanners .....	L-1
Getting into Site Test Mode.....	4-2	Laser Comparison Chart .....	L-1
Global Computer Supplies.....	C-1	Laser pin-outs.....	C-3
GREEN LED.....	8-4	Laser Scanner options .....	L-2
		Laser Scanner Options .....	2-20
<b>H</b>		Laser Scanners .....	N-1
H11 Laser Holder.....	N-2	LCD	
hands free laser scanning .....	M-1	Backlight Setup.....	2-7
Hardware Failures .....	5-2	LCD Backlight Display Mode .....	2-7





**Q**

quiet zone ..... 8-7

**R**

R/F Serial Pin-outs .....C-1

R/F Terminal Firmware Upgrades .....D-1

R/F Terminal Menu Functions

    ONE-WAY ..... 1-6

    SETUP MODE ..... 1-6

    SIGN ON ..... 1-6

    SITE TESTING ..... 1-6

Radio traffic contention ..... 4-6

Raising the Base station to increase range ..... 4-1

Range problems ..... 8-5

Reader doesn't beep when reading bar codes ..... 8-7

reading credit cards ..... 6-4

reading magstripe ..... 6-4

reading through a windshield ..... L-3

Reading through a windshield ..... L-3

rearing in sunlight using aiming dot ..... L-3

Re-assigning character codes ..... 2-17

rechargeable batteries ..... 2-18

recharging battery procedure ..... 1-6

Recording a voice message using the microphone... 7-3

Recording and Playback of Voice Messages ..... 7-3

Recording time allotted for voice messages ..... 7-2

Recovering from hardware failures ..... 5-2

Recv Setup/Voice Please Wait ..... 7-5

Red LED ..... 8-4

Reduced Space Symbology code ..... 2-14

Re-initializing terminals ..... 6-2

Reinitialization

    of Base Station with Terminal Signed-On ..... 6-12

Re-initialize command ..... 6-3

Relay Cannot be Heard ..... 8-4

Relay Existence setup parameter

    how to set for Relays ..... 4-4

Relay ID - configuring ..... 2-23

Relay ID and Frequency ..... B-4

Relay n Cannot Be Heard by the Base ..... B-4, B-6

RELAY n CANNOT BE HEARD BY THE BASE. 4-4

Relay Setup ..... 2-22

Relay Station failures ..... B-3, B-6

Relay Station RS422 Pin-outs ..... B-3, C-2

Relay stations cable failures ..... B-3, B-6

Relay Stations

    changing a Base to operate as a Relay ..... A-1

    connecting ..... B-1

    multi-dropping additional ..... B-1

    no serial parameters needed ..... B-2

    troubleshooting unconnected relay ..... B-4, B-6

    using to extend RF range ..... B-1

Relay test cable ..... B-4

relay wiring ..... B-2

Relays

    overlapping area with Base ..... 4-5

    RS-422 termination ..... A-2, B-6

resending prompts after a sign-out ..... 5-3

Reset ..... 2-21

response time is poor ..... 8-5

Restrictions on bar code data length ..... 2-15

Restrictions on using arrow keys to transmit special characters ..... 6-12

Results of Site Test ..... 4-2

retransmission ..... 3-3

returns to 1st screen ..... 8-6

RF 700 Configuration Utility ..... 2-22

RF link test ..... 2-23

RF System

    Base Station failures ..... 5-3

    before you begin programming ..... 5-1

    creating programs to prompt the terminal ..... 6-1

    operator errors ..... 5-3

    planning for expansion ..... 5-2

    planning for failures ..... 5-1

    planning for hardware failures ..... 5-2

    Relay station failures ..... B-3, B-6

    using Demo programs to test system ..... 5-2

RF System Setup ..... 2-1

RF Terminal

    how it finds a Relay ..... 4-4

    installation ..... 1-4

    opening screen ..... 1-6

    sleep mode and wake up intervals ..... 3-3

    system components ..... 1-1

RF Terminal Cases and Holsters ..... N-4

RF Terminal Channel ..... 2-5

RF Terminal Default Settings ..... 2-1

RF Terminal ID ..... 2-5

    in programing message from host to terminal ..... 6-1

RF Terminal Problems ..... 8-6

RF Terminal setup

    using keypad to setup ..... 2-3

    using the bar coded setup menu ..... 2-2

RF Terminal Setup ..... 2-1

    2 of 5 Code ..... 2-13

    2 of 5 Length ..... 2-14

    Batteries ..... 2-18

    Baud Rate for serial printer ..... 2-21

    Beep Tone ..... 2-18

    Characters ..... 2-17

    Code 3 of 9 ..... 2-10

    Data Bits setting for serial printer ..... 2-21

    Date Format ..... 2-18

    Display of Year ..... 2-19

    ENTER key elimination for Control Keys Only .. 2-6

    Laser Scanner Options ..... 2-20

    LCD Backlight Display Mode ..... 2-7

    LCD Display Mode ..... 2-7

    MSI/Plessey ..... 2-14

    Parity for serial printer ..... 2-21

    Preamble ..... 2-15

    Protocol setting for serial printer ..... 2-21

    Reset ..... 2-21

    RF Terminal Channel ..... 2-5

    RF Terminal ID ..... 2-5

    RSS-14 code ..... 2-14

    Security Code ..... 2-6

    Set Date ..... 2-19

    Set Time ..... 2-19

    Shut Down Time ..... 2-20

    Skip Opening Screens ..... 2-8

    Stop Bits setting for serial printer ..... 2-21

    Voice Message Partitions ..... 2-19, 2-20

RF Terminal Setup

    Codabar ..... 2-13

    Code 128 ..... 2-12

    Code 93 ..... 2-15

    UPC/EAN ..... 2-11

RF Terminal Setup Menu on keypad ..... 2-3

RF Terminal Setup Parameters ..... 2-5

RIGHT ARROW key

    transmitting ASCII 31 to host ..... 6-12

RMA's ..... 8-8

Routing the Wiring .....	B-2
RS-232 Cable Pin-outs .....	C-1
RS-232 Extension cables .....	C-1
RS232 problems .....	8-6
RS-422 Termination Jumpers .....	A-2
RSS-14 code .....	2-14

## S

Scanner input only - breaking out of .....	6-3
scanning through a windshield .....	L-3
SEARCH key	
transmitting ASCII 11 to host .....	6-12
Security Code - setting on Terminal .....	2-6
Security Code for Base or Relay .....	2-23
Selective data trimming by bar code type .....	2-16, 2-17
Sequence Error .....	8-3
Sequence Error Message .....	6-10
Serial cables	
"noise" problems .....	4-4
serial device attachment .....	6-3
serial input on Terminal .....	6-3
Serial keyboard input .....	6-3
Serial output command for terminal .....	6-4
Serial pin-outs .....	C-1
Serial printer setup paramters on terminal .....	2-21
Serial Reply - Base to host programming .....	6-7
Set Date .....	2-19
Set Time .....	2-19
Setting serial parameters on your Base or Relay .....	2-23
Setting the Relay ID .....	A-2
Setup	
RF Terminal .....	2-5
Setup Cloning to other terminals .....	7-5
Setup Menu	
"Reset" bar code .....	2-21
Baud Rate .....	2-21
Data Bits .....	2-21
Parity .....	2-21
RF Terminal Channel .....	2-5
RF Terminal parameters .....	2-5
Stop Bits .....	2-21
Terminal ID .....	2-5
SETUP MODE	
using to program voice messages .....	7-2
Setup or playback voice messages .....	7-3
shelf label printing .....	6-34
Shut Down Time .....	2-20
Shut Down Time feature .....	1-4
SIGN ON Base to host programming .....	6-8
SIGN OUT	
Base to host programming .....	6-9
missing the message .....	5-3
Signing out in mid-transaction .....	5-2
Site survey .....	3-5
Site Test Mode - brief description of .....	3-1
Site Testing	
channel changes .....	4-2
getting into .....	1-7
how it works .....	3-5
Site Testing in Progress message .....	4-2
Six beeps on power-up .....	8-6
Skip Opening Screens .....	2-8
sleep mode for RF Terminal .....	3-3
SPEAKER VOLUME .....	2-9
Stand mode .....	See hands free laser scanning
Start Setup	
scanning to enter Setup mode .....	2-2

Start/stop characters	
transmitting for Codabar .....	2-13
transmitting for Code 39 .....	2-10
STATUS key	
reserved for date/time only .....	6-12
using to determine battery life .....	1-5, 2-8, 8-2
Steps for installation .....	1-1
STK bar code .....	2-12
Stop Bits for serial printer .....	2-21
Storage Tek bar code .....	2-12
Storage Tek Tape Label code .....	2-12
substitution errors .....	L-2
Substitutions of data .....	L-3
sunlight problems, using aiming dot .....	L-3
Surveying a site .....	4-1

## T

T49 Holster for RF Terminal .....	N-4
Tape library bar code .....	2-12
TCP/IP Terminal Programming .....	6-23
Terminal ID	
how to find out what yours is .....	1-7
use in Two-Way mode .....	3-2
Terminal ID in One Way mode .....	3-5
Terminal keys	
transmitting ASCII values .....	2-6
Terminal setup	
Security Code .....	2-6
Terminal Setup Cloning	
to other terminals .....	7-5
Terminating a programming message .....	6-2
Terminator character .....	2-16
Testing Base Station communications .....	2-23, 8-5
Testing communication with a Relay .....	B-4
Testing the Relay .....	B-4
Thru-put considerations .....	4-6
Time Set .....	2-19
time stamping in Terminal .....	6-3
Tips for Using Voice Prompts .....	7-1
Trailing character trimming .....	2-17
TRANSMISSION FAILED .....	3-3, 3-4
Transmitting Bar Code ID's .....	2-12
Transmitting characters before or after	
bar code data .....	2-15
Transmitting Codabar start and stop characters .....	2-13
Transmitting EAN-8/UPC-E in original formats .....	2-12
Transmitting through walls .....	4-1
Trimming by bar code type	
using bar code ID and postamble .....	2-17
using bar code ID and preamble/postamble .....	2-16
Trimming characters from data .....	2-15, 2-17
Trimming leading characters using Preamble .....	2-15
Trimming trailing characters using Postamble .....	2-16
TriOptic Code 39 .....	2-12
Troubleshooting .....	8-1
electrical noise problems with Relays .....	4-4
wiring problems with Relays .....	4-4
Troubleshooting new installation .....	8-2
Turning on the R/F Terminal .....	1-4
turns off and on by itself .....	8-6
Two-Way Mode	
brief description of .....	3-1
in depth description of how it works .....	3-2
Typical coverage .....	4-5

## U

UCC 128 Serial Shipping Container bar code .....	H-2
--	-----

UCC/EAN Code 128	
enabling/disabling .....	2-12
UCC-128/ EAN-128 .....	H-1
UNIX requirements and problems .....	2-24, 8-5
UP ARROW key	
transmitting ASCII 28 to host .....	6-12
UPC 2 and 5-character supplemental codes .....	J-2
UPC/EAN .....	2-11
about .....	J-1
Check digit .....	J-1
compressed format .....	2-12
default settings .....	2-11
guidelines for use .....	J-2
NSC and check digit .....	2-11
NSC's and check digits .....	2-11
numbering conventions .....	J-2
supplemental codes .....	2-11
UPC-A - adding a country code .....	2-11
UPC-A in 13 digit EAN format .....	2-11
UPC/EAN check digits - enabling transmission of .....	2-11
UPC/EAN checksum character .....	J-3
UPC/EAN Specifications .....	J-1
UPC/EAN Supplements - enabling/disabling .....	2-11
UPC-E Checksum Calculation .....	J-4
UPC-E0 and UPC-E1 .....	2-12
UPC-E1 - enabling reading of .....	2-13
Upgrading firmware in Base,Relay or Terminal .....	D-1
US Date Format .....	2-18
USA/Canada/Mexico	
EPROM version identification .....	2-6
Using Arrow Keys to transmit characters .....	2-7
Using the bar code RF Terminal Setup Menu .....	2-2
Using the Demo Programs before programming .....	5-2
Using the keypad to setup the RF Terminal .....	2-3
Using the Relay instead of the Base to communicate .....	4-4
Using the RF Terminal keypad .....	1-4
Using the Scan Stand .....	M-1
Utilities CD .....	1-8
 <b>V</b>	
Vehicle ID reading .....	L-3
Version	
9075 .....	6-6
VIN reading .....	L-3
Voice Cloning Cable #T15 .....	7-5
Voice message "command" .....	6-2
Voice message mapping .....	7-2
Voice Message Operations .....	7-1
Voice message partitions - changing .....	7-2
Voice Message Partitions .....	2-19, 2-20
Voice messages	
cloning from RF Terminal to RF Terminal .....	7-5
error conditions .....	7-5
playback .....	7-3
record error messages for all situations .....	7-2
Voice Messages	
changing the time allotments .....	2-19
Voice Operations selection on SETUP Menu .....	7-2
Voice Prompts	
helping to limit mistakes .....	7-1
 <b>W</b>	
Waiting for Base to Acknowledge .....	8-3
Waiting on Host Prompt .....	8-3
WAITING ON HOST PROMPT .....	3-2
Waiting on Host Prompt problems .....	8-2
Waiting on Host Prompt" .....	8-3
Wand vs. keypad entry .....	6-3
wandering variable data .....	E-4
Wandering variable data .....	E-4
WDTRI password .....	2-3
What to do with data after a failure .....	5-2
What to do with data after an operator error .....	5-3
Why recharging doesn't work .....	2-18
Why Use Voice Messages and Prompts? .....	7-1
Windows 95 com port setup .....	8-6
Windows ActiveX programming .....	6-13
Windows RF Loader program .....	D-1
Windows TCP/IP terminal programming .....	6-23
Windshield Reading .....	L-3
Wrong data .....	L-3
 <b>X</b>	
Xmit Setup/Voice Please Wait .....	7-5
XON/XOFF	
changing ASCII characters to avoid conflict .....	6-11
XP - caution with connection pooling .....	8-2
 <b>Y</b>	
Year	
2000 compliance .....	2-19
displaying 4 digits .....	2-19
YELLOW LED .....	8-4
YES/NO entry while scanning .....	6-3
 <b>Z</b>	
Zebra Cameo Magstripe input .....	6-3
Zebra Cameo Printer .....	6-33, C-3
setup for use with RF Terminal .....	6-33
Zebra Encore Printer .....	6-34
Zebra magstripe .....	6-4

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>