



MOTOROLA

User's Guide

MBP20

Baby Monitor

The features described in this user's guide are subject to modifications without prior notice.

Welcome...

to your new Motorola Baby Monitor!

Thank you for purchasing the MBP20. Now you can see and hear your baby sleeping in the other room or you can monitor your older children in their play room.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product-related questions, please call:

UK	0845 218 0890
ROI	08187 62092
On the Web: www.motorola.com	


This User's Guide provides you with all the information you need to get the most from your product.

Before you can use the baby monitor, we recommend you insert and fully charge the battery in the parent unit, so that it continues to work if you disconnect it from the mains power to carry it to another location. Please read the Safety Instructions on page 8 before you install the units.

Got everything?

- 1 x Parent unit
- 1 x Baby unit
- 1 x Rechargeable Ni-MH battery pack for the Parent unit
- 1 x Belt clip for parent unit
- 1 x Battery door for parent unit
- 1 x Power adapter for the parent unit
- 1 x Power adapter for the baby unit

Overview of your Parent unit

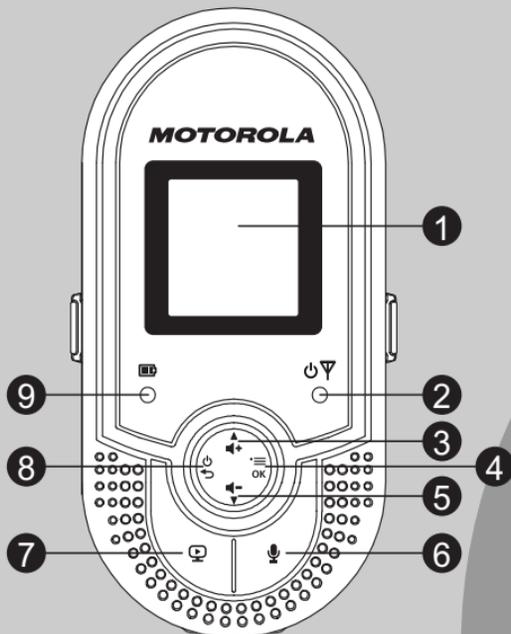

1 LCD Display

2 Link Indicator

On when the parent unit is powered on and linked to the baby unit.

Flashes when the parent unit is out of range from baby unit.

Off when the parent unit is powered off.

3 UP / Volume +

In idle mode: Press to increase the speaker volume.

In menu mode: Press to view the previous menu item.

4 Menu / OK

In idle mode: Press to access the main menu.

In menu mode: Press to access the sub-menu, or confirm the settings.

5 DOWN / Volume -

In idle mode: Press to decrease the speaker volume.

In menu mode: Press to view the next menu item.

6 Talk

In idle or menu mode: Press and hold to talk back with baby unit. Release to quit the talk mode.

7 Video On / Off

In monitoring mode: Press to deactivate/activate the video feed or turn on/off the LCD display.

In menu mode: Press to go to the monitoring mode.

8 Power / Back

In idle or menu mode: Press and hold to power on/off the parent unit.

In menu mode: Press to cancel settings and back to the previous level.

9 Charging Indicator

On steadily when in charging mode.

Flashes when low battery is detected.

NOTE

Off even if connected with power adapter but without battery pack installed.

Parent Unit Display

Icons	Behaviors Description
	Indicates the signal strength between baby unit and parent unit. The more blocks, the stronger connection signal.
	Flashes when parent unit is out of range.
	Indicates no connection between the baby unit and parent unit.

	Indicates when speaker of parent unit is muted.
	Indicates the speaker volume level of parent unit.
	Indicates when parent unit or baby unit is playing lullaby.
	Indicates when timer alarm is activated.
	Indicates when the sound alert is set on.
	Low battery, needs charging.
	1/2 battery level. More internal bars mean high battery level.
	Full battery level.
	Animation in cycle. Battery is in charging.

Menu Structure of Parent Unit

MAIN MENU

SUB MENU

LANGUAGE

English
Français
Español
Deutsch
Italiano
Português

TIMER

Activation
Set Timer

BRIGHTNESS

Level 1 ~ 5

SOUND ALERT


On
Off

ALERT TONES

Low Battery
No Link

RESET

Overview of your Baby unit

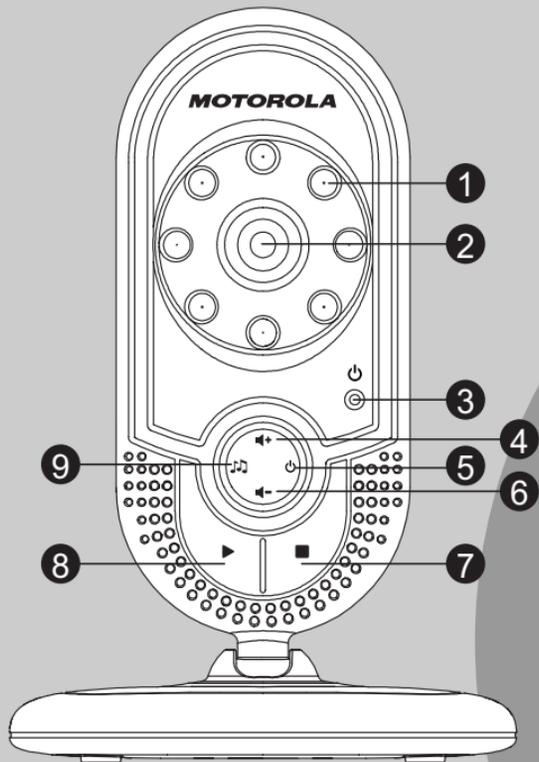

1 Infrared Light

2 Camera

3 Power Indicator

On when the baby unit is switched on.
Off when the baby unit is switched off.

4 UP / Volume +

Press to increase the speaker volume.

5 Power

Press and hold to power on/off the baby unit.

6 DOWN / Volume -

Press to decrease the speaker volume.

7 Stop

Press to stop the lullaby playing.

8 Play

Press to play the lullaby.


9 Lullaby

Press to select the lullaby and start playing the selected lullaby.

During lullaby playing, press to select and play the other lullabies.

Important guidelines for installing our Baby Monitor

- To use your baby unit and parent unit together, you must be able to establish a radio link between them, and the range will be affected by environmental conditions.
- Any large metal object, like a refrigerator, a mirror, a filing cabinet, a metallic doors or reinforced concrete, between the baby and parent unit may block the radio signal.
- The signal strength may also be reduced by other solid structures, like walls, or by radio or electrical equipment, such as TV's, computers, cordless or mobile phones, fluorescent lights or dimmer switches.
- If the signal is poor, try moving the parent and/or the baby unit to different positions in the rooms.

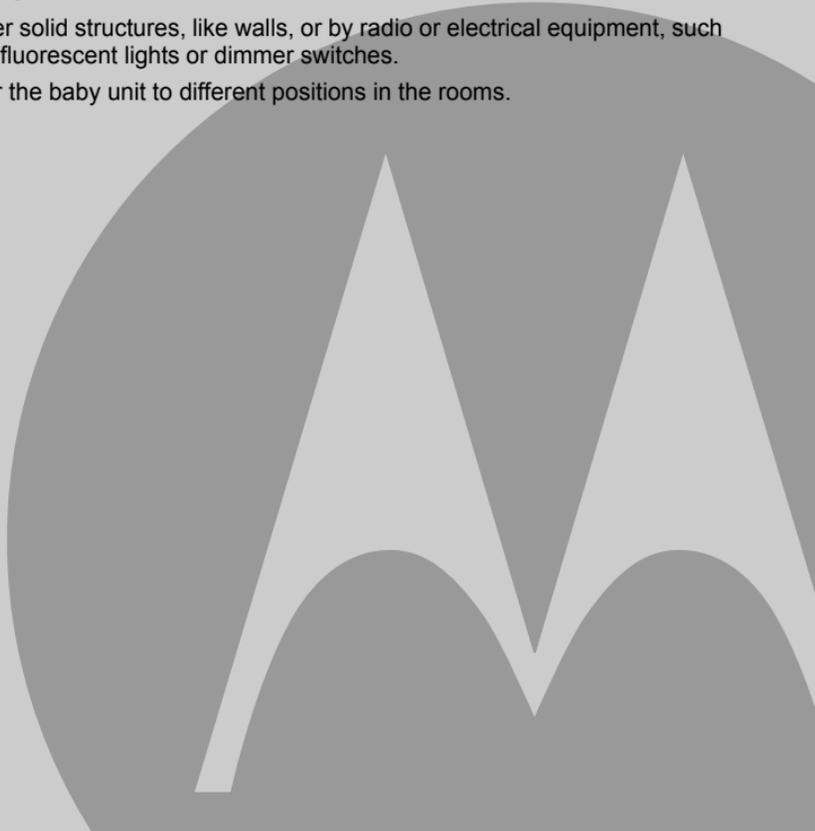



1. SAFETY INSTRUCTIONS	8	5. DISPOSAL OF THE DEVICE (ENVIRONMENT) ..	15
2. GETTING STARTED.....	9	6. CLEANING.....	16
2.1 Baby unit power supply	9	7. TROUBLESHOOTING.....	16
2.2 Parent unit battery installation.....	9	8. GENERAL INFORMATION.....	18
2.3 Belt clip on parent unit	10	9. TECHNICAL SPECIFICATIONS.....	21
3. USING YOUR BABY MONITOR.....	11	EC DECLARATION OF CONFORMITY	22
3.1 Power on/off the parent unit.....	11		
3.2 Power on/off the baby unit	11		
3.3 Adjust speaker volume of parent unit and baby unit	11		
3.4 Talk Back	11		
3.4.1 Adjust talk back volume	12		
3.5 Temperature	12		
3.6 Lullaby.....	12		
3.7 Monitoring management for multi-parent system.....	12		
4. Parent unit settings.....	13		
4.1 Set the language.....	13		
4.2 Timer.....	13		
4.2.1 Turn on the timer	13		
4.2.2 Set the timer	14		
4.3 Set the brightness	14		
4.4 Sound alert.....	14		
4.5 Alert tones.....	14		
4.6 Reset.....	15		

1. SAFETY INSTRUCTIONS



WARNING:

STRANGULATION HAZARD - Keep the adapter cord out of baby's reach.

NEVER place the baby monitor or its cord within the cot. Secure the cord some distance away from baby's reach. Never use extension cords with AC Adapters. Only use the AC Adapters provided.

CAMERA SET UP & USE:

- Determine a location for the CAMERA that will provide the best view of your baby in his cot.
- Place the CAMERA on a flat surface, such as a dresser, bureau, or shelf.
- NEVER place camera or cords within cot.
- Secure the cord to the wall to keep cord away from the baby's reach.

This baby monitor is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User's Guide, safe to use. Therefore, always read the instructions in this User's Guide carefully before using the device.

- Adult assembly is required. Keep small parts away from children when assembling.


- This product is not a toy. Don't allow children to play with it.
- This baby monitor is not a substitute for responsible adult supervision.
- Keep this User's Guide for future reference.
- Do not cover the baby monitor with a towel or blanket.
- Never use extension cords with power adapters. Only use the power adapters provided.
- Test this monitor and all its functions so that you are familiar with it prior to actual use.
- Do not use the baby monitor near water.
- Do not install the baby monitor near a heat source.
- Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device and battery pack.
- Only insert battery pack of the same type.
- Do not touch the plug contacts with sharp or metal objects.

CAUTION

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions. Use only battery pack with rating: 2.4V 600mAh.

2. GETTING STARTED

2.1 Baby unit power supply

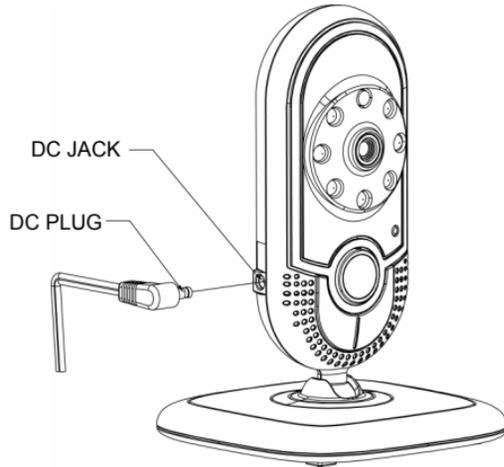


1. Insert the power adapter with smaller pin plug into the side of the baby unit, as shown.
2. Connect the other end of the power adapter to the power outlet.

NOTE

Only use the provided power adapter.

2.2 Parent unit battery installation

The parent unit comes with a battery pack. Charge the parent unit before you use it for the first time or when the parent unit indicates that the battery is low.

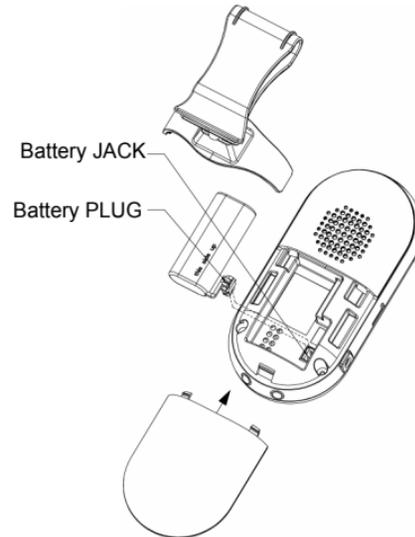


1. Take off the belt clip.
2. Slide off the battery compartment cover.

3. Insert the supplied battery pack, and fit the battery pack into the compartment.
4. Reattach the battery compartment cover, and reinstall the belt clip (refer to section 2.3).
5. Insert the power adapter with bigger pin plug into the side of the parent unit.
6. Connect the other end of the power adapter to the power outlet.
7. The **Charging Indicator** comes on.

NOTE

Only use the provided power adapter.

2.3 Belt clip on parent unit

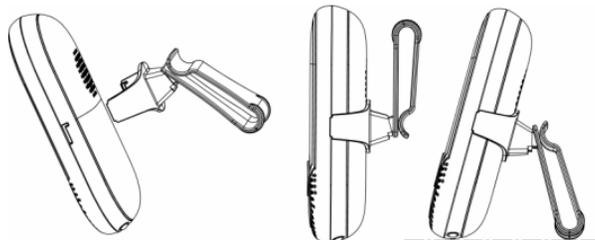

1. Attach the belt clip to the lock slots on the back sides.
2. The accessory comes with the unit at belt clip mode.
3. You can convert into stand mode by lifting up the belt clip and rotating by half turn.



3. USING YOUR BABY MONITOR

Please read these instructions carefully, and be reminded that this baby monitor is just intended as an aid. It is not a substitute for responsible, correct parental supervision.

3.1 Power on/off the parent unit

1. Provided the parent unit is off, press and hold  until the **Link Indicator** is on. The parent unit is now powered on and the parent unit will search for and link itself to the baby unit.
2. Provided the parent unit is on, press and hold  until the **Link Indicator** is off. The parent unit is now powered off.

3.2 Power on/off the baby unit

1. Provided the baby unit is off, press and hold  until the **Power Indicator** is on. The baby unit is now powered on.
2. Provided the baby unit is on, press and hold  until the **Power Indicator** is off. The baby unit is now powered off.

NOTE

If you place the parent and baby units too close together, you will hear a high pitched noise, this is normal. The units are designed to be located at a distance from one another, e.g. in separate rooms.

3.3 Adjust speaker volume of parent unit and baby unit

There are 5 volume levels on the baby unit, and 6 levels on the parent unit, including **VOLUME OFF**. The volume level of parent unit will be shown on the status bar when you adjust the volume.

1. Press  or  on the parent unit or  or  on baby unit to access the current volume level.
2. Press / to increase or / to decrease the volume of the parent unit or baby unit respectively. The  will be displayed if the volume is turn off on parent unit. An audible alert will emit when you reach the highest or lowest volume level.

Changing the volume setting on the baby unit affects the volume when you use the Talk Back feature or when playing a lullaby.

3.4 Talk Back

You can use the Talk Back feature to comfort and reassure your baby.

Whilst using Talk Back you will not be able to hear your baby until you release the button.

1. Press and hold  on the parent unit to speak to baby. The  will be displayed on the status bar of parent unit.
2. Release to hear your baby again.

3.4.1 Adjust talk back volume

The baby unit has 5 volume levels from Level 1 to Level 5.

During Talk Back, press  or  on the baby unit to increase or decrease the volume respectively.

NOTE

The lullaby will stop playing back when talk back is activated.

3.5 Temperature

The baby unit constantly monitors the temperature in your baby's room and alerts you if it gets lower than 14°C (or 57°F), screen of parent unit will show the alert message "Too cold!", or when higher than 39°C (or 102°F), will show "Too hot!". Please check your baby immediately when such alert message is triggered.

3.6 Lullaby

There are 3 lullabies available for playing to soothe your baby to sleep.

1. Press  on the baby unit key to select the lullaby and start playing.
2. During playback, press  to toggle between different lullabies.
OR
Press  on the baby unit to start playing the selected lullaby. Press  to stop playing.

3.7 Monitoring management for multi-parent system

The system allows pairing up to two parent units to a baby unit. However, only one parent unit can receive video image at a time. You can switch the video feed between these two parent units.

The first powered up parent unit will connect to the baby unit automatically, and the next powered up parent unit will turn up on screen ANOTHER PU IS VIDEO MONITORING! for around 30 seconds and then goes blank. Press once the  to turn off the screen.

**NOTE**

The parent unit still carries on audio monitoring even if the video capture is turned off.

To switch the video feed from the current monitoring parent unit to the other parent unit which is not in video monitoring mode:

1. Press  on the current video monitoring parent unit, the screen will be blank without video image received.
2. Press  on the other parent unit which is NOT in video monitoring mode, the video feed will be transferred to that parent unit.

4. Parent unit settings

4.1 Set the language

1. Press  to access main menu.
2. Press  or  to select LANGUAGE.
3. Press  to enter the sub-menu.
4. Press  or  to select the desired language.
5. Press  to confirm.

4.2 Timer

The timer function serves as an alarm reminding you things-to-do for the baby such as typically milk feeding, checking up appointment and medication.

4.2.1 Turn on the timer

1. Press  to access main menu.
2. Press  or  to select TIMER.
3. Press  to enter the sub-menu.
4. Press  or  to select ACTIVATION.
5. Press  and then  or  to select ON or OFF.
6. If you select ON, you will be prompted to select the alarm frequency from ONCE or REPEATED.
7. Press  to confirm.

4.2.2 Set the timer

1. Repeat steps 1 to 3 in section 4.2.1.
2. Press + or  to select SET TIMER.
3. Press  and then set the hour and minute continuously.
4. Press  to confirm.

NOTE

Once the time reaches, the unit will emit alert beep and show 00:00 counter on the screen. You can press any button to stop the beep.

4.3 Set the brightness

1. Press  to access main menu.
2. Press + or  to select BRIGHTNESS.
3. Press  to enter the sub-menu to set the brightness level.
4. Press + or  to select from LEVEL 1 to LEVEL 5. You can preview the brightness when scrolling the menu list.
5. Press  to confirm.

NOTE

Lower brightness level can help to save the power.

4.4 Sound alert

When the sound alert is set ON, the baby unit monitors continuously and the sound* can be heard on the parent unit even its speaker volume is off.

1. Press  to access main menu.
2. Press + or  to select SOUND ALERT.
3. Press  to enter the sub-menu.
4. Press + or  to turn on or off the sound alert.
5. Press  to confirm.

** The sound is audible only if the sound level at baby side reaches preset typical sensitivity level.*

4.5 Alert tones

If you turn on the alert tone, when the respective event happens, an alert screen will be displayed on the parent unit with an alert tone emitted simultaneously.

1. Press  to access main menu.
2. Press + or  to select ALERT TONES.
3. Press  and + or  to select LOW BATTERY or NO LINK.
4. Press  and + or  to turn on or off the alert tone.
5. Press  to confirm.



4.6 Reset

You can restore all the adjustable settings back to their original factory settings.

1. Press  to access main menu.
2. Press  or  to select RESET.
3. Press  and display will show CONFIRM?.
4. Press  to confirm. The unit will be reset and then back to idle state.

5. DISPOSAL OF THE DEVICE (ENVIRONMENT)

At the end of the product lifecycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user's guide and/or box indicates this.



Some of the product materials can be re-used if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area.

Dispose of the battery pack in an environmentally-friendly manner according to your local regulations.

6. CLEANING

Clean MBP20 with a slightly damp cloth or with an anti-static cloth. Never use cleaning agents or abrasive solvents.

Cleaning and care

- Do not clean any part of the product with thinners or other solvents and chemicals - this may cause permanent damage to the product which is not covered by the warranty.
- Keep your MBP20 away from hot, humid areas or strong sunlight, and do not let it get wet.
- Every effort has been made to ensure high standards of reliability for your MBP20. However, if something does go wrong, please do not try to repair it yourself - contact Customer Service for assistance.

7. TROUBLESHOOTING

Link light on the parent unit does not come on

- Check whether the parent unit is powered on.
- Check whether the supplied battery pack is correctly installed and that they are not drained.
- Recharge the parent unit by connecting it to the power supply.

Link light on the parent unit flashes

- The parent unit and the baby unit may be out of range with each other. Reduce the distance between the units, but not closer than 5 feet.
- The baby unit may be switched off. Press and hold  key to switch on the baby unit.

Low battery light or on the parent unit screen flashes

- Battery pack in the parent unit is running low. Connect the parent unit to the mains power with the supplied power adaptor for recharging.

The parent unit beeps

- Lost connection with the baby unit. Reduce the distance between the parent unit and the baby unit, but not closer than 5 feet.
- The baby unit may be switched off. Press and hold  key to switch on the baby unit.



- Battery pack in parent unit may be running low. Connect the parent unit to the mains power with the supplied power adaptor for recharging.

Cannot view the video image of baby from the parent unit

- Video feed maybe turned off. Activate the video feed by pressing .
- The parent unit and the baby unit may be out of range with each other. Reduce the distance between the units, but not closer than 5 feet.
- Battery pack in parent unit may be drained. Connect the parent unit to the mains power with the supplied power adaptor for recharging.

Cannot hear sound or baby cry from the parent unit

- The volume level in the parent unit may be set too low, increase the volume level of the parent unit. Refer to section 3.3 for volume level settings.
- The parent unit and the baby unit may be out of range with each other. Reduce the distance between the units, but not closer than 5 feet.

The baby monitor system produces a high-pitched noise

- The parent unit and the baby unit are too close to each other. Make sure the parent unit and baby unit is at least 5 feet away from each other.
- The speaker volume of the parent unit maybe set too high. Decrease the volume of the parent unit.

Battery pack in the parent unit is running low quickly

- The volume level of the parent unit may be set too high which consumes power. Decrease the volume level of the parent unit. Refer to section 3.3 for volume level settings.

Talk back feature is not working

- Make sure baby unit is powered on, and link between parent unit and baby unit is normal.
- Check that the volume is loud enough at the baby unit, refer to section 3.4.

8. GENERAL INFORMATION

If your product is not working properly...

1. Read this User's Guide.
2. Visit our website: www.motorola.com
3. Contact Customer Service at

UK	0845 218 0890
ROI	08187 62092

To order a replacement battery pack for parent unit, contact customer service.

Consumer Products and Accessories Limited Warranty ("Warranty")

Thank you for purchasing this Motorola branded product manufactured under license by Binatone Electronics International LTD ("BINATONE").

What Does this Warranty Cover?

Subject to the exclusions contained below, BINATONE warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is not transferable.

Who is covered?

This Warranty extends only to the first consumer purchaser, and is not transferable.

What will BINATONE do?

BINATONE or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that does not conform to this Warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OF IMPLIED. IN NO EVENT SHALL MOTOROLA OR BINATONE BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR



ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	One (1) year from the date of the products original purchase by the first consumer purchaser of the product.
Consumer Accessories	Ninety (90) days from the date of the accessories original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this Warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of MOTOROLA or BINATONE, are excluded from coverage.

Use of Non-Motorola branded Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than MOTOROLA, BINATONE or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please call:

UK **0845 218 0890**

ROI **08187 62092**

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a BINATONE Authorized Repair Center.

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and BINATONE regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by BINATONE or representations made by any agent employee or staff of BINATONE, that may have been made in connection with the said purchase.



9. TECHNICAL SPECIFICATIONS

Baby Unit:

Frequency	1881.792 MHz - 1897.344 MHz
Channels	10
Operating temperature	5°C - 45°C
Image sensor	Colour CMOS 30M Pixels
Lens	f 3.6mm, F 2.4
IR LED	4 pcs
Baby unit voltage (Adapter rating)	Input 100-240VAC 50/60Hz 150mA; Output 6VDC @600mA < Tenpao S004LV0600060 / S004LB0600060 EU / UK>

Parent Unit :

Frequency	1881.792 MHz - 1897.344 MHz
Channels	10
Operating temperature	5°C - 45°C
Display	1.5" CSTN LCD
Display colour	65K colour LCD
Brightness control	5 steps
Parent unit voltage	2.4V 600mAh Ni-MH battery pack <BYD H-AAA600Bx2-LE23; GPI VTRHC063N011>
Parent unit voltage (Adapter rating)	Input 100-240VAC 50/60Hz 150mA; Output 6VDC @600mA <Tenpao S004LV0600060 / S004LB0600060 EU / UK>

EC Declaration of Conformity

We the manufacturer / Importer : Binatone Telecom Plc
1 Apsley Way London
NW2 7HF, United Kingdom.

Declare under our sole responsibility that the following product

Type of equipment: Digital Baby Monitor
Model Name: MBP 20
Country of Origin: China
Brand: Motorola

complies with the essential protection requirements of R&TTE Directive 1999/5/EC on the approximation of the laws of the Member States relating to **Radio Spectrum Matters**, the Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to **electromagnetic compatibility (EMC)** and the European Community Directive 2006/95/EC relating to **Electrical Safety**. Assessment of compliance of the product with the requirements relating to the essential requirements according to Article 3 R&TTE was based on Annex III of the Directive 1999/5/EC and the following standard:

Radio Spectrum: EN301406 V2.1.1 (2009-07)
EMC: EN301489-6 V1.3.1 (2008-08)
EN301489-1 V1.8.1 (2008-04)
Electrical Safety: EN60950-1:2006+A11:2009+A1:2010

The product is labelled with the European Approval Marking CE as show. Any Unauthorized modification of the product voids this Declaration.



Manufacturer / Importer
(Signature of authorized person)



London, 10 Jun 11

Signature: (Paul Tsui/ Product Operation
Director)

Place & Date :



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners.

© 2011 Motorola Mobility, Inc. All rights reserved.



Version 1.0

Printed in China



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>