

Professional UHF Wireless Systems

ATW-A62P UHF Powered Dipole Antennas, 656-668 MHz

ATW-A72P UHF Powered Dipole Antennas, 728-740 MHz

Installation and Operation



UHF Powered Dipole Antennas

Installation and Operation



Warning: To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

Attention: Pour prévenir feu ou choc électrique, ne pas exposer l'appareil à la pluie ou à l'humidité.

CAUTION! The circuits and wiring inside the antennas are adjusted for optimum performance. Do not attempt to alter circuitry or wiring to affect output. To do so will void the warranty and may cause improper operation or system degradation.

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

This device complies with INDUSTRY CANADA R.S.S. 210, en conformité avec IC: RSS-210/CNR210. Operation is subject to the following conditions: 1) This device may not cause harmful interference and 2) this device must accept any interference received, including interference which may cause undesired operation.

CAUTION! To prevent electrical shock and possible damage to the antenna, use caution when connecting 12V power from the receiver or antenna distribution system.

Introduction

Audio-Technica ATW-A62P and ATW-A72P powered dipole antennas provide effective and reliable signal pickup for UHF wireless systems. Supplied in pairs, these antennas are intended to improve performance of diversity wireless receiving systems with dual antenna inputs.

Designed for temporary or permanent installation, these antennas are powered by 12 volts DC provided on the antenna cable by the associated receiver or antenna distribution system. Power is required for antenna operation; an indicator on each housing lights when power is applied. An internal gain-setting switch permits selection of +10, +4 or -2 dB operation, to compensate for cable losses or other operating conditions.

The ATW-A62P and ATW-A72P are designed for particular UHF frequency bands:

ATW-A62P: 656-668 MHz (TV channels 45-47)

ATW-A72P: 728-740 MHz (TV channels 57-59)

The ATW-A62P and ATW-A72P are designed for interior use. Do not install them outdoors, or where condensation or extremely high humidity is present. Both models permit several means of mounting for temporary use or permanent installation. Included AT8667 brackets with BNC connectors and $\frac{5}{8}$ "-27 threaded mounts permit convenient use with conventional microphone stands or other $\frac{5}{8}$ "-27 threaded fixtures. The antennas may also be permanently secured directly to walls or other vertical structures, or they may be attached to single-gang electrical boxes. The RF cables may be totally hidden by exiting behind the antenna housings, or they may exit through an opening at the bottom of each housing to be routed along the wall or mounting structure.


Audio-Technica offers several optional RF extension cables: A 12' (3.6 m) RG58-type, plus 25', 50' and 100' (7.6, 15.2 and 30.5 m) RG8-type cables. All have BNC-to-BNC connectors.

Antenna Location & Orientation

For best operation, the antennas should be mounted on a line-of-sight to the most likely location(s) of the transmitter, while also considering the shortest length of cable required to reach the receiver. Usually this means placing the antennas well up on a wall, above head height, and above the level at which they might be hit or obstructed. The two antenna housings should be mounted at the same height, oriented vertically, and with at least 12" (30 cm) between them (Fig. A). As much as possible, keep the antennas away from noise sources such as digital equipment, motors and neon lights, as well as away from large metal objects.

When determining a location for a permanent installation, it is often a good idea to try the selected location temporarily with the wireless system (and any other RF or computer equipment) in full operation to confirm optimum system performance.

Fig. A

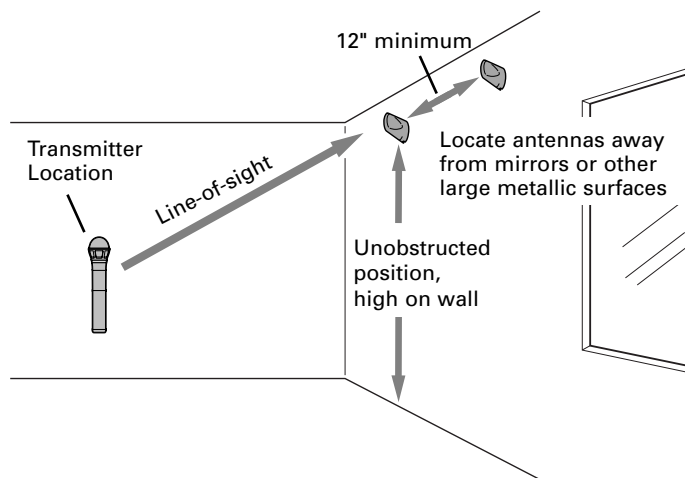

Antenna Mounting


The attractive molded housings are easily removable for installation or adjustment. Simply remove the two silver-color screws located at the rear of each housing and gently pull the housing forward, away from the black metal rear plate (Fig. B).

For portable or temporary use, install the included AT8667 brackets with BNC connectors and $\frac{5}{16}$ "-27 threaded mounts. Attach each bracket to an antenna using two small, black machine screws (included). Direct the screws from *inside* the antenna's rear plate through the inner pair of small holes, and screw them into the tapped holes in the bracket. Prepare the free ends of the short cables as shown in Figure C.

For permanent installation, the antennas may be attached to a wall or other vertical support with appropriate fasteners. They also may be mounted to a single-gang electrical box, via the outer pair of small holes on the rear plate (using #6-32 screws, not included). When installing, position the units so the gain switches and screw terminals face to the *right*.

The PC board may be removed for safety or convenience while installing the metal rear plate, if desired. Simply remove the two screws indicated in Figure B. When re-mounting the PC board, note that the board goes on the "outside" of the rear plate's mounting ears.

Fig. B

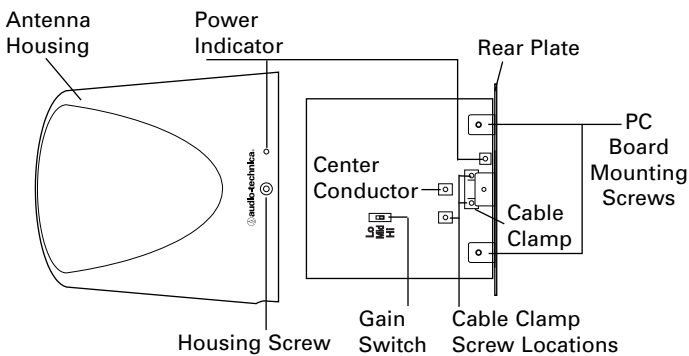

Internal Connections

Cable Selection

Screw-terminal connections in the antennas are designed for use with RG58-type or RG8-type RF transmission cables, or with Asian RF cable types 3D or 5D. Make certain the cable selected is intended for UHF operation and has a full braided copper shield, not just a metalized foil shield. For runs of 25' (8 m) or more, a low-loss cable such as RG8 should be used.

Cable Stripping

RG58: Observing the dimensions in Figure C, remove a section of the outer jacket and a portion of the inner coax insulation, being careful not to cut or nick the shield or center wires (C1).

Note: If the cable jacket's outer diameter is less than $\frac{7}{32}$ " (0.21", 5.3 mm), wrap the jacket with electrical tape to build up its diameter before folding back the braid over the jacket (C2). Trim the shield wires to $\frac{9}{16}$ " (15 mm).

RG8: When using RG8-type cable, more jacket material needs to be removed and partially replaced with shrink tubing. When installing the tubing, heat the tubing and cable only enough to shrink the tubing. Allow the cable to cool fully before manipulating it further. The drawings in Figures D and E are actual-size; the shrink-tubing indications show the actual length of pieces to be cut, and their correct placement on the cable. Cut the required pieces from the included shrink tubing.

RG8 / Rear exit: When connecting antennas from the rear, follow the cable-stripping dimensions in Figure D. Then install a 1"-long (25 mm) piece of shrink tubing as indicated. Remove the cable clamp and carefully insert the cable end into position through the rear plate.

RG8 / Bottom exit: When connecting antennas through the opening in the antenna housing, follow the cable-stripping dimensions in Figure E. Then install a 2.5"-long (63 mm) piece of shrink tubing as indicated. Remove the cable clamp and carefully position the cable to exit at the bottom edge of the rear plate. The end of the cable's jacket must be located about $\frac{1}{4}$ " (6 mm) beyond the end of the rear plate to clear the bottom of the housing. Then secure the clamp and center conductor.

Fig. C RG58, 3D, 5D Cables

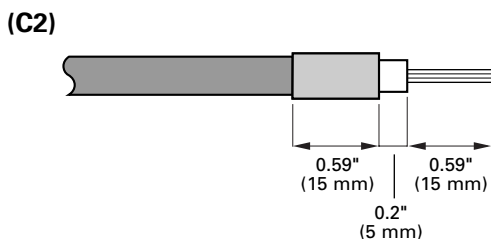
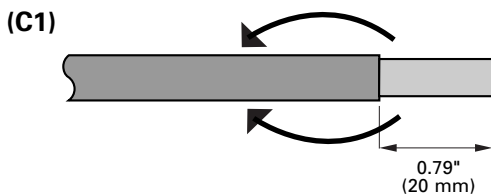


Fig. D RG8 Cable - Rear Exit


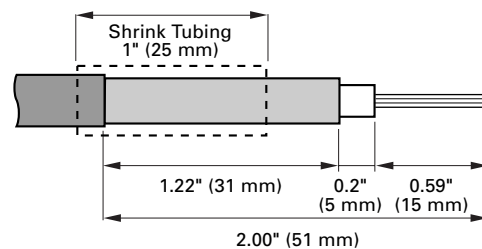


Fig. E RG8 Cable - Bottom Exit

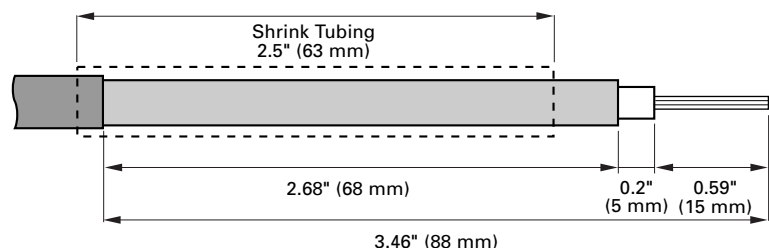

Cable Connections

Refer to Figure F (cable rear exit) or Figure G (bottom exit) for connecting positions. When using a screwdriver on the antenna terminals, always support the PC board.

Center Conductor: Wrap the center conductor(s) clockwise around its screw and tighten snugly. (If using RG8, it is good practice to bend its center conductors using pliers, not force them around the screw terminal.)

Shield: It's most effective to remove the cable clamp entirely, properly position the shield portion of the cable, and then carefully reinstall the cable clamp over the shield. Make certain that the shield (and cable) are firmly clamped, and that no shield wires are loose or touching the center conductor.

Especially when using RG8 or other large, stiff cable, it's a good idea to provide some form of clamping of the cable near the antenna's cable entrance for strain relief.

Fig. F Rear Cable Exit


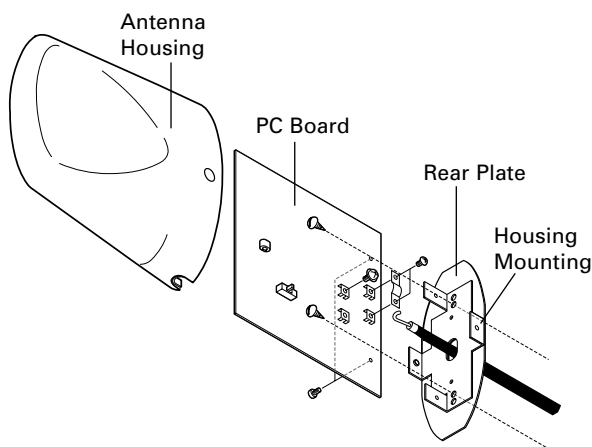


Fig. G Bottom Cable Exit

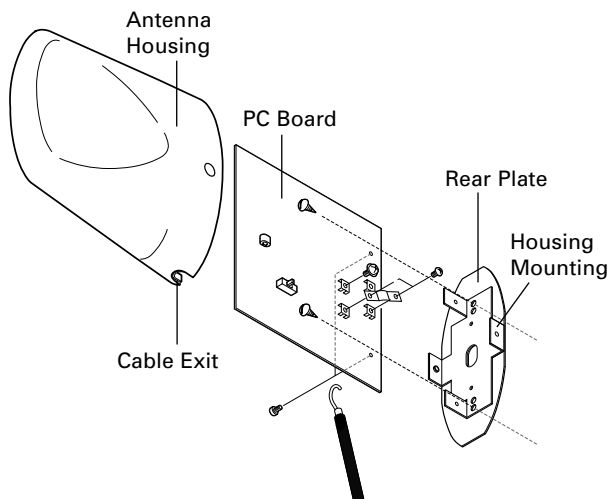

Setting Gain

The gain switch on the PC board is intended only to compensate for signal lost in the antenna cable. Using "extra" gain is not necessarily better! Observe the following chart for proper gain switch setting:

Gain Setting	RG58-Type Cable	RG8-Type Cable
Hi (+10 dB)	20-50' (6-15 m)	50-150' (15-50 m)
Mid (+4 dB)	Up to 20' (6 m)	Up to 50' (15 m)
Lo (-2 dB)	This setting may work best when many channels are in use in the room, or when external RF noise is a problem.	

Both antennas in a diversity system should be set to the same gain position. Other than setting the gain switches, do not make any adjustments to the circuitry.

After stripping the cables, making cable connections and setting gain, replace the antenna housings. When re-installing the housing, be careful to avoid hitting the clear plastic "light pipe" for the LED power indicator. Once the housings are secured with the silver screws, connect the antenna cables to the diversity receiver or antenna distribution system and turn on the system. Then check for power indications at the antennas and proper operation of the overall wireless system.

Specifications

Antenna Type	Half-wavelength dipole with RF amplifier
Operating Frequencies	ATW-A62P 656-668 MHz ATW-A72P 728-740 MHz
Output Impedance	50 ohms
Nominal Amplifier Gain	+10 dB (Hi), +4 dB (Mid), -2 dB (Lo), switch selected
Power Required	+12V DC on RF cable center conductor, 14 mA per antenna
Dimensions	2.44" (62 mm) W x 5.51" (140 mm) H x 5.91" (150 mm) D
Weight	9.7 oz (275 g) each
Accessories Furnished	2 AT8667 mounting brackets; shrink tubing (for use with RG8-type cable); 4 each of wood screws, 3.0 mm and 3.5 mm machine screws

One-Year Limited Warranty

Audio-Technica professional wireless systems purchased in the U.S.A. are warranted for one year from date of purchase by Audio-Technica U.S., Inc. (A.T.U.S.) to be free of defects in materials and workmanship. In event of such defect, product will be repaired promptly without charge or, at our option, replaced with a new product of equal or superior value if delivered to A.T.U.S. or an Authorized Service Center, pre-paid, together with the sales slip or other proof of purchase date. **Prior approval from A.T.U.S. is required for return.** This warranty excludes defects due to normal wear, abuse, shipping damage, or failure to use product in accordance with the instructions. This warranty is void in the event of unauthorized repair or modification, or removal or defacing of the product labeling.

For return approval and shipping information, contact the Service Dept., Audio-Technica U.S., Inc., 1221 Commerce Drive, Stow, Ohio 44224.

Except to the extent precluded by applicable state law, **A.T.U.S. will have no liability for any consequential, incidental, or special damages; any warranty of merchantability or fitness for particular purpose expires when this warranty expires.**

This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Outside the U.S.A., please contact your local dealer for warranty details.



Audio-Technica U.S., Inc., 1221 Commerce Drive, Stow, Ohio 44224 330/686-2600 www.audio-technica.com

P51398-B/W P#232302730 ©2001 Audio-Technica U.S., Inc. Printed in U.S.A.
Download from www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>