

System 300

Home Theater Speaker System



This system contains: ④ LS 300 Compact Speakers (front left, front right, back left & back right speakers);
① LS 300/C Center Speaker; ① SW 300 Powered Subwoofer

Congratulations on your purchase and welcome to the AudioSource family of satisfied customers. Please take a few moments to read this manual before you get started. Also, be sure to retain this document should you need to refer to it in the future.

The AudioSource System 300 Home Theater Speaker System is designed to accurately reproduce high fidelity music, including digital signals. Movies and stereo TV broadcasts will sound more realistic, putting you in the center of the action. The LS 300/C center channel speaker is video-shielded, allowing placement on top of your television. LS 300 speakers are provided for both the front and surround channels, to provide a theater-like experience.

This manual is divided into two sections. The first provides information about the LS 300 speakers and the LS 300/C center speaker. The next section concerns the SW 300 Powered Subwoofer.

LS 300 & LS 300/C

Hooking Them Up

The five-way binding posts accommodate nearly any type of connector and up to 14-gauge wire. For bare wire, press the binding post *in* to reveal the *eye*, thread the wire into the *eye*, and release the *spring-loaded connector*. For banana plugs, simply insert the plug into the end of the connector.

When connecting the speakers, be sure to retain the correct polarity. Attach the wire from the +, red, or positive terminal on one component to the +, red, or positive terminal on the corresponding component's speaker output terminals. The -, black or negative terminals must connect to the respective -, black or negative terminals. This is easy to do by observing the color, stripe, or ribbing that appears on the wire.

Please note: If any parts of this system are missing or damaged, do not return to the store where you purchased this system. Please call AudioSource directly at 800-HELP-115 (800-435-7115).


Speaker Placement

The center channel speaker should be placed as close as possible to the TV, preferably either directly on top of or below it. This locks the sound to the picture. Place the front speakers near the front corners of the room, either on a bookshelf or wall-mounted. Positioning near a corner enhances bass performance. Place the surround speakers either to the side of, or behind, your listening position. Typical placement is on the side walls, slightly above ear level, about two-thirds of the way back from the front of the room. This allows the surround speakers to aim directly at the listener, placing you in the middle of a five-speaker sound field.

Speaker Mounting

The LS 300 speakers include *U-shaped* brackets to mount the speakers to the wall. For safety, always mount these speakers on a wall that is reinforced from behind. *Never mount a speaker on a wall made of unreinforced drywall or plasterboard.* If you are unsure, consult a professional contractor. These speakers can also be placed on bookshelves and most types of speaker stands.

Set-Up Diagram

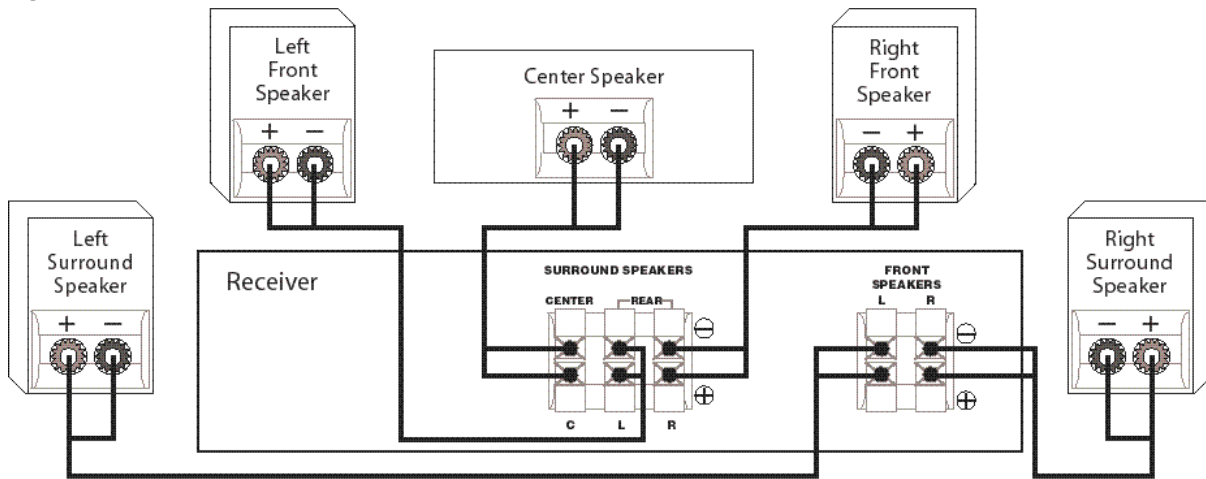

1. Connect the left front speaker terminals (+ & -) of your receiver to the left LS 300 front speaker.
2. Connect the right front speaker terminals (+ & -) of your receiver to the right LS 300 front speaker.
3. Connect the left surround speaker terminals (+ & -) of your receiver to the left LS 300 rear surround speaker.
4. Connect the right surround speaker terminals (+ & -) of your receiver to the right LS 300 rear surround speaker.
5. Connect the center channel speaker terminals (+ & -) of your receiver to the LS 300/C center channel speaker.

Note: If you are using an outboard Dolby® Surround Processor, the speaker terminals for the center and rear/surround speakers will be found on this component, not on your receiver.

SW 300 Powered Subwoofer

About Subwoofers

Subwoofers are designed to extend the bass response of your system beyond the limitations of most speakers. They are used in conjunction with, not in place of, your existing left and right speakers. A subwoofer can dramatically enhance a stereo TV, a stereo system, or a full fledged home theater.


Features of the SW 300

The AudioSource SW 300 features a highly efficient ported enclosure, a rugged 6.5-inch reinforced driver and a fifty-watt amplifier with a passive low frequency crossover network. Line level inputs and speaker inputs and outputs are provided for fast and easy connection to virtually any system.

Using the Controls

Power

The power switch has two positions: off and on. When the power LED is lit, the power is on.

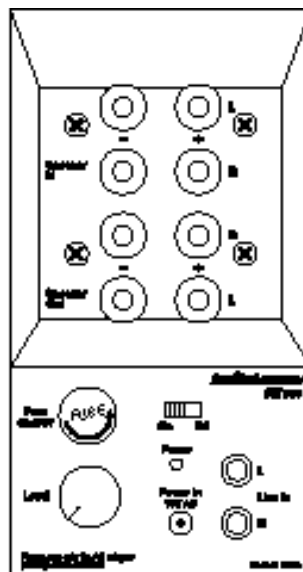

Level

The level control adjusts the volume of the SW 300. Once set, the level control should not require further adjustment. Begin with the level control at the minimum position. Slowly increase the level until you can hear the subwoofer. A subwoofer playing too loud can give your system a muddy sound, so be sure to balance the subwoofer carefully with your other speakers.

Note: Output level is relative and can be different from location to location. Always return to the normal listening location to evaluate any setting changes.

Placement Guidelines

Prior to installing your new subwoofer, please consider the following guidelines. Placing the subwoofer near a wall or in a corner will greatly increase its bass response. As frequencies reproduced by subwoofers are long and need room to propagate, a subwoofer placed near the listening position will not sound as full as one placed farther away. Please be careful about placing anything directly on top of your subwoofer, as the vibrations of the speaker cabinet could cause these items to shake loose or fall.

Connecting the SW 300

The following diagrams show three of the most common types of subwoofer connections. It may be easier to run long distances with speaker wire, although RCA-type connectors will likely produce better sound. Use only the AC adapter provided with this unit.



Speaker/Hi Level Inputs and Outputs

The inputs are designed to accept an amplified signal from the speaker outputs of a receiver, power amp, television or other device not equipped with line level outputs. The speaker outputs are meant to connect to the inputs of your main left and right speakers. These are only used when the speaker inputs of the SW 300 are used.

Line In

The RCA-type jacks of your SW 300 are designed to accept a line level signal from a receiver, pre-amp, surround sound decoder, television or similar device. When using a single line level output from another unit, a Y connector (not included) should be used to send the signal to both the left and right inputs.

Please note that only one of these connection options should be used at any one time.

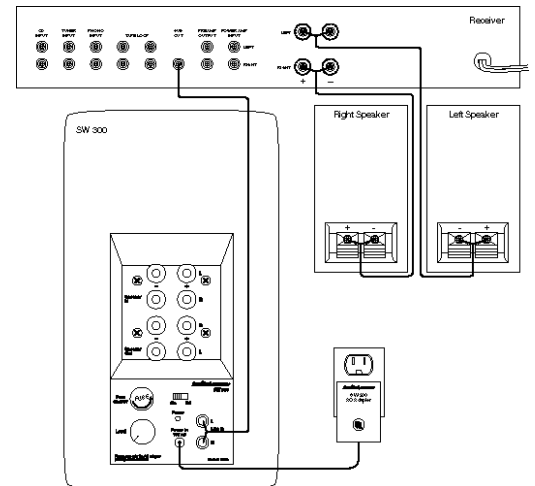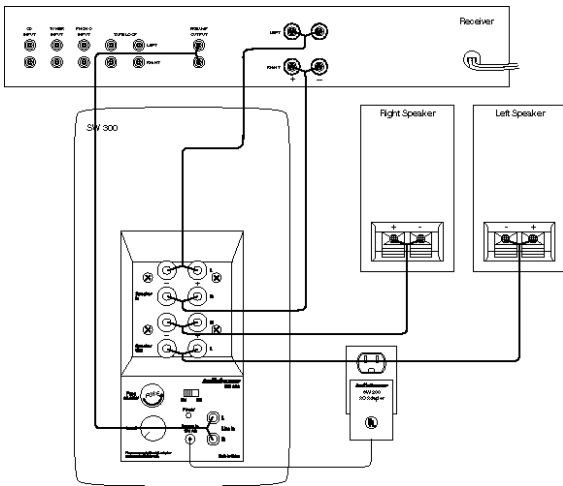


Hi Level Connections

In this example, the receiver has no subwoofer output. The SW 300 is connected between the front speakers and the receiver via the speaker inputs and outputs.

Dedicated Subwoofer Connections

Many surround sound decoders, home theater processors and audio/video receivers are equipped with a dedicated subwoofer line output. Connect this line output to the line inputs of the SW 300. A Y connector (not included) may be necessary to feed this single output to both the left and the right line inputs.

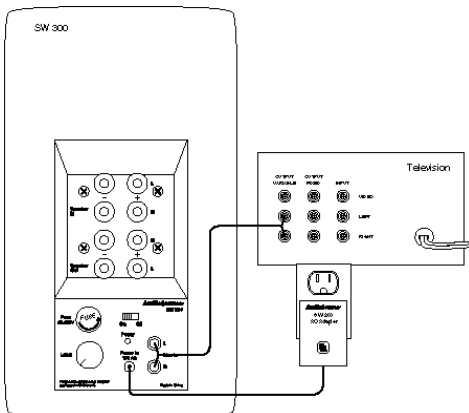

Television Enhancement

Many newer television sets are equipped with variable stereo outputs. The signal available at these outputs varies with the TV volume. In this situation, these variable audio outputs can be connected directly to the SW 300 line inputs to enhance the bass response of the television's built-in speakers.

If you need more information, we offer friendly, toll-free assistance.

1.800.HELP.115

Safety Instructions



Warning: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

Caution: To reduce the risk of electric shock, do not remove cover (or back); no user serviceable parts inside. Refer servicing to qualified service personnel.

Caution: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Attention: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock to persons. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Read Instructions

All the safety and operating instructions should be read before the appliance is operated.

Retain Instructions

The safety and operating instructions should be adhered to.

Heed Warnings

All warnings on the appliance and in the operating instructions should be adhered to.

Follow Instructions

All operating and use instructions should be followed.

Water and Moisture

The appliance should not be used near water. For example, near a bathtub, wash-bowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.

Ventilation

The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in situation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.

Heat

The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.

Power Sources

The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.

Grounding or Polarization

Precautions should be taken so that the grounding or polarization means of an appliance is not defeated.

Power Cord Protection

Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed on or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

Cleaning

The speaker should be cleaned only as recommended by the manufacturer.

Power Lines

An outdoor antenna should be located away from power lines.

Non-Use Periods

The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

Object and Liquid Entry

Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

Damage Requiring Service

The appliance should be serviced by qualified service personnel when: a) the power supply cord or the plug has been damaged; b) objects have fallen, or liquid has been spilled into the appliance; c) the appliance has been exposed to rain; d) the appliance does not appear to operate normally or exhibits a marked change in performance; or e) the appliance has been dropped, or the enclosure damaged.

Servicing

The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

Product Servicing

In the event your System 300 fails to operated properly, please contact the dealer where you purchased the unit. Or you may contact AudioSource directly for further assistance.

SW 300 Powered Subwoofer Specifications

Amplifier Power Output	.50 Watts
Frequency Response	.38 Hz to 150 Hz
Driver	.6.5" Reinforced
Functions	.Power (On, Off)

Inputs	.Hi Level (Speaker), Line (RCA)
Output	.Hi Level (Speaker)
Dimensions	.13.75" x 8.125" x 8.125"
Weight	.11 lbs.

LS 300 Front and Surround Speaker Specifications

Frequency Response	.80 Hz - 20 kHz
Power Handling	.100 watts
Impedance	.8 ohms
Tweeter	.3/4" polycarbonate dome
Woofer	.4" polypropylene
Dimensions	.8.5" x 5.875" x 5.5"

LS 300/C Center Speaker Specifications

Frequency Response	.80 Hz - 20 kHz
Power Handling	.100 watts
Impedance	.8 ohms
Tweeter	.3/4" polycarbonate dome
Woofer	.Two 4" polypropylene
Video Shielded	.Yes
Dimensions	.15.5" x 6" x 6"

Design and specifications are subject to change without notice.

AudioSource®

9300 North Decatur
Portland, Or 97203
Tel. 503.286.9300
Fax 503.978.3302
audiosource@phoenixgold.com
www.audiosource.net

Printed in China
© 2000 AudioSource, Inc.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>