


GENERAL GUIDE

- Press **(C)** to change from mode to mode.
- Pressing **(E)** in any mode besides the Alarm Mode illuminates the display for about three seconds. The backlight is disabled while a setting screen is on the display.
- If you do not perform any operation for a few minutes while a setting screen (with flashing digits) is on the display, the watch automatically exits the setting screen.
- If you do not perform any operation for a few minutes in any mode besides stopwatch mode, the watch automatically reverts to the normal timekeeping screen.

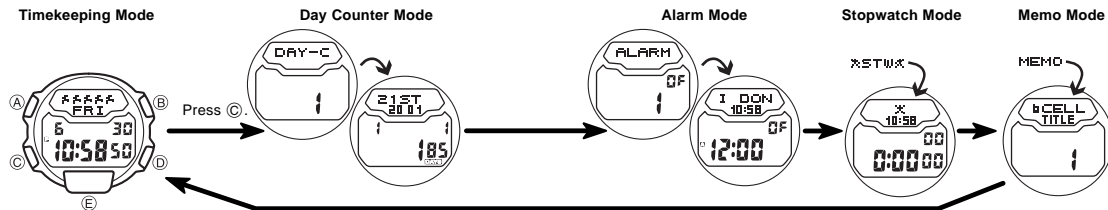

TIMEKEEPING MODE

Press **(D)** to toggle between 12-hour and 24-hour timekeeping.


- With 12-hour timekeeping, times between midnight and noon are indicated by **A** (am), while times between noon and midnight are indicated by **P** (pm).
- The **A** and **P** indicators do not appear for 24-hour timekeeping.
- Pressing **(B)** plays a melody. To stop a playing melody, press any button besides **(E)**.
- Special melodies play each year on January 1 and December 25.
- Pressing **(E)** while a melody is playing toggles the display between an animated character and the name of the melody.
- *See the "MELODY LIST" for the names of melodies.
- Press **(E)** to illuminate the display for about three seconds.

Timekeeping Mode Settings

In addition to settings for the current time and date, the Timekeeping Mode setting screen also lets you turn button tones and melody play on and off, adjust tones and melody volume, and adjust display contrast.

To make Timekeeping Mode settings

1. While in the Timekeeping Mode, hold down **(A)** until the seconds digits flash on the display, indicating the setting screen.
2. Press **(C)** to move the flashing in the sequence shown below. Press **(E)** to move the flashing in the opposite direction.

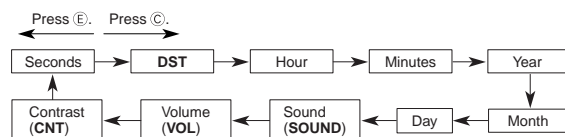


3. While the seconds setting is selected (flashing), press **(D)** or **(B)** to reset it to 00.


- If you press **(D)** or **(B)** while the seconds setting is in the range of 30 to 59, the seconds are reset to 00 and 1 is added to the minutes.
- While the **DST*** (Daylight Saving Time) setting is selected, press **(D)** or **(B)** to toggle it on and off.
- **DST** indicator 1 is displayed in the Timekeeping Mode setting screen only when the **DST** setting is selected. It shows **ON** when the **DST** setting is on, and **OFF** when the **DST** setting is off.
- **DST** indicator 2 is displayed in the Timekeeping Mode, Day Counter Mode and Alarm Mode when the **DST** setting is turned on.

*Daylight Saving Time (**DST**), which is also sometimes called "summer time" advances the time for one hour, as is the custom in some areas during the summer. Remember that not all countries or even local areas use Daylight Saving Time.

- While the **SOUND** (button tones) setting is selected, press **(D)** or **(B)** to turn the beep and musical tone on and off, as shown below.
- Changing the **SOUND** also changes the Hourly Time Signal tones.

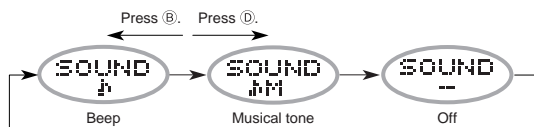

- While the **VOL** setting is selected, press **(D)** or **(B)** to toggle it between loud and soft.




- While the **CNT** setting is selected, press **(D)** to make the display darker, or **(B)** to make it lighter.
- While any other setting is selected (flashing), press **(D)** to increase it or **(B)** to decrease it. Holding down either button changes the setting at high speed.

4. After you make the settings you want, press **(A)** to exit the setting screen.
- The day of the week is automatically set in accordance with the date.
 - The date can be set within the range of January 1, 2000 to December 31, 2039.
 - The watch's built-in full automatic calendar automatically makes allowances for different month lengths and leap years. Once you set the date, there should be no reason to change it except after the replacement of the watch's battery.

ABOUT THE BACKLIGHT

About the Auto Light Switch Function

When the auto light switch function is turned on, the backlight automatically turns on for two seconds under the conditions described below. Avoid wearing the watch on the inside of your wrist. Doing so causes the auto light switch to operate when not needed, which shortens battery life.

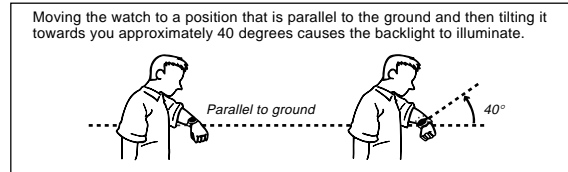


- The backlight may not illuminate if the face of the watch is more than 15 degrees off parallel to the left or right. Make sure that the back of your hand is parallel to the ground.



- Static electricity or magnetic force can interfere with proper operation of the auto light switch function. If the auto backlight does not illuminate, try moving the watch back to the starting position (parallel with the ground) and then tilt it back toward you again. If this does not work, drop your arm all the way down so it hangs at your side, and then bring it back up again.
- Under certain conditions the backlight may not light until about one second or less after turning the face of the watch towards you. This does not necessarily indicate malfunction of the backlight.

To switch the auto light switch function on and off

In the Timekeeping Mode, hold down **(D)** for two seconds to turn the auto light switch function on and off.

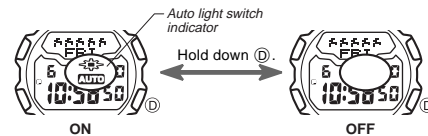

- The auto light switch indicator is shown on the display in all modes while the auto light switch function is on.
- In order to protect against running down the battery, the auto light switch function is automatically turned off approximately three hours after you turn it on. Repeat the above procedure to turn the auto light switch function back on if you want.
- Pressing **(E)** in any mode besides the Alarm Mode illuminates the display for about three seconds, regardless of the auto light switch's on/off setting.

Caution


- The backlight of this watch employs an electro-luminescent (EL) light, which loses its illuminating power after very long term use.
- Frequent use of the backlight shortens the battery life.
- The watch emits an audible sound whenever the display is illuminated. This is because the EL light vibrates slightly when lit. It does not indicate malfunction of the watch.

Warning!

- Never try to read your watch when mountain climbing or hiking in areas that are dark or in areas with poor footing. Doing so is dangerous and can result in serious personal injury.
- Never try to read your watch when running where there is the danger of accidents, especially in locations where there might be vehicular or pedestrian traffic. Doing so is dangerous and can result in serious personal injury.
- Never try to read your watch when riding on a bicycle or when operating a motorcycle or any other motor vehicle. Doing so is dangerous and can result in a traffic accident and serious personal injury.
- When you are wearing the watch, make sure that its auto light switch function is turned off before riding on a bicycle or operating a motorcycle or any other motor vehicle. Sudden and unintended operation of the auto light switch can create a distraction, which can result in a traffic accident and serious personal injury.

ABOUT THE ANIMATED CHARACTER

An animated character appears on the display of the watch any time you turn on the EL backlight after December 25, 2000. No animated character appears before then.

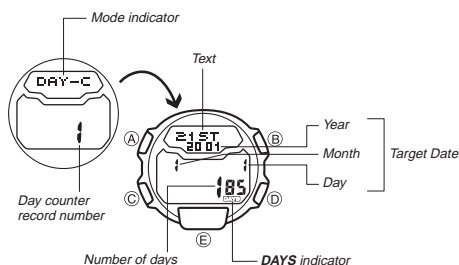DAY COUNTER MODE

The Day Counter Mode lets you count the number of days from the Timekeeping Mode's current date to a specific target date.


- There are five Day Counter records, each of which can be assigned up to 12 characters of text and a target date.
- When a target date is reached, the **DAYS** indicator flashes on the display in the Timekeeping Mode. The **DAYS** indicator also flashes in the Day Counter Mode when the screen for the target date is on the display.
- The **DAYS** indicator flashes on the target date each year, regardless of the year setting of the target date.
- The initial default date for a Day Counter record is 2001/1/1, and the text area contains All spaces. (All spaces for the text display a series of hyphens "-----".)

Recalling Day Counter Data


- In the Day Counter Mode, press **(D)** to scroll through the Day Counter record screens.
- The day count is a negative value whenever the target date comes before the current date.
 - The display can show only five characters at a time. Longer text scrolls continuously from right to left. The symbol "4" indicates that the character or digit to the left is the last, and the character or digit to the right is the first.

To set the target date

1. In the Day Counter Mode, press **(D)** to display a record number you want to set.
2. Hold down **(A)** until the first (leftmost) text character starts to flash on the display. This indicates the input screen.
3. Press **(C)** to move the flashing in the sequence shown below. Press **(E)** to move the flashing in the opposite direction.




4. While the flashing is located within the text area, use **(D)** or **(B)** to scroll through characters at the current location of the flashing. Holding down either button scrolls through characters at high speed.



*See the "CHARACTER LIST" for details.

5. While any other setting is selected, press **(D)** to increase it or **(B)** to decrease it. Holding down either button changes the setting at high speed.
- Pressing **(D)** and **(B)** at the same time while the flashing is located within the text area clears any input text and resets the date setting to the current date. At this time the message "CLEAR" appears on the display.
- Pressing **(D)** and **(B)** at the same time while the flashing is located within the date area resets the date setting to the current date without affecting the text.
6. After you make the settings you want, press **(A)** to exit the input screen.
- The date can be set within the range of January 1, 1940 to December 31, 2039.

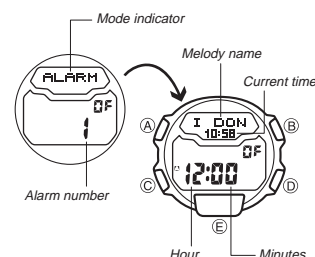ALARM MODE

You can set up to five melody alarms. When a Daily Alarm is turned on, its melody alarm sounds for about 20 seconds at the preset time each day. In the Timekeeping Mode, press any button (except **(E)**) to stop the melody alarm after it starts to sound. Pressing **(E)** while a melody is playing toggles the display between an animated character and the name of the melody that is playing. When the Hourly Time Signal is turned on, the watch beeps every hour on the hour. Special melodies play on January 1 and December 25, regardless of the current alarm sound setting (beep or melody), and cannot be played by setting the watch ahead or back to these dates.

Normally, the following events occur at midnight on January 1 and December 25, your local time. Note however that these events do not occur in area or countries (for example, parts of Australia) located in time zones that come before (east of) Japan's time zone.


- The time signal sounds, regardless of whether the hourly time signal is turned on or off.
- The backlight lights for three seconds.
- The special melodies play automatically. There is no way to disable play of the special melodies. To stop a melody when it starts to play, press any button besides **(E)**.

To set the alarm time for January 1 and December 25

1. While in the alarm Mode, press **(D)** to display the alarm number you want to set.



2. Hold down **(A)** until the hour digits start to flash on the display, indicating the setting screen. The alarm is automatically turned on at this time.
3. Press **(C)** to change the selection in the sequence shown below.




4. Press **(D)** to increase it or **(B)** to decrease it. Holding down either button changes the setting at high speed.
5. After you make the settings you want, press **(A)** to exit the setting screen.

To set the alarm time for other days


1. While in the alarm Mode, press **(D)** to display the alarm number you want to set.



2. Hold down **(A)** until the melody setting starts to flash on the display, indicating the setting screen. The alarm is automatically turned on at this time.
3. Press **(C)** to change the selection in the sequence shown below.



4. While melody setting is selected, press **(D)** or **(B)** to toggle it between BEEP and melody.



*See the "MELODY LIST" for the names of melodies.

*Some melody alarms tune names may be displayed in abbreviated format.

- While any other setting is selected, press **(D)** to increase it or **(B)** to decrease it. Holding down either button changes the setting at high speed.
- 5. After you make the settings you want, press **(A)** to exit the setting screen.
- The format (12-hour and 24-hour) of the alarm time matches the format you select for normal timekeeping.
- When setting the alarm time using the 12-hour format, take care to set the time correctly as morning or afternoon.

To stop the alarm

- Press any button to stop the alarm after it starts to sound. Pressing **(E)** while in the Timekeeping Mode displays the name of the melody, alternating with animated characters.

To turn a daily Alarm or the Hourly Time Signal on and off


1. Use **(D)** to display the alarm you want to turn on or off, or the screen for turning the Hourly Time Signal on or off.



Alarm indicator 1

2. Press **(B)** to toggle the displayed alarm or Hourly Time Signal on and off.

- Alarm indicator 1 is displayed in all modes when any of the five alarms is turned on.
- Alarm indicator 2 is displayed in the Alarm Mode only. It shows **on** when the currently displayed alarm is on, and **OF** when the currently displayed alarm is off.

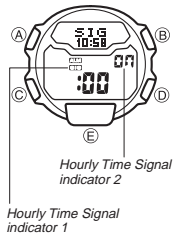

- Hourly Time Signal indicator 1 is displayed in all modes when the Hourly Time Signal is turned on.
- Hourly Time Signal indicator 2 is displayed in the Alarm Mode only. It shows **on** when the Hourly Time Signal is on, and **off** when the Hourly Time Signal is off.

To test the alarm

In the Alarm Mode, display the alarm you want to sound, and then press (E) to play its melody or beep. You can also press (E) to play an alarm's melody while setting the alarm time.

- To stop a playing melody or beep, press any button.

About the harmony

Paired G-Shock and Baby-G models play the melodies in harmony.


MELODY LIST

January 1	?????
December 25	?????
Other days	I don't want to miss a thing



CHARACTER LIST

(space)	A	B	C	D	E	F	G	H	I	J	K	L	M
N	O	P	Q	R	S	T	U	V	W	X	Y	Z	&
@	/	.	!	?	ア	イ	ウ	エ	オ	カ	キ	ク	ケ
コ	サ	シ	ス	セ	ソ	タ	チ	ツ	テ	ト	ナ	ニ	ヌ
ネ	ノ	ハ	ヒ	フ	ヘ	ホ	マ	ミ	ム	メ	モ	ヤ	ユ
ヨ	ラ	リ	ル	レ	ロ	ワ	ヲ	ン	ァ	ィ	ゥ	ェ	ォ
ツ	ャ	ュ	ョ	・	。	、	。	：	’	・	…	()
<	>	<	>	★	♥	☺	☹	☑	☒	☐	☜	☞	#
1	2	3	4	5	6	7	8	9	0	-			+

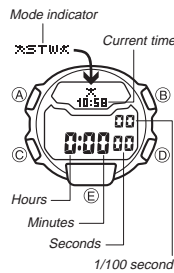

STOPWATCH MODE

The stopwatch Mode lets you measure elapsed time, split times, and two finishes. The range of the stopwatch is 23 hours, 59 minutes, 59.99 seconds. You can use the EL backlight by pressing (E) at any time while the stopwatch is operating.

Elapsed time measurement




Split time measurement



Split time and 1st-2nd place times



MEMO MODE

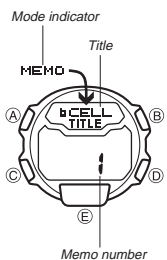

The Memo Mode lets you store up to five memos, each with an eight-character title and 16 characters of data.


Recalling a Memo

In the Memo Mode, press (D) to scroll through the Memo titles. When you find the title you want, press (B), and the screen alternates between the title and data.


- The display can show only five characters at a time. Longer text scrolls continuously from right to left. The symbol "4" indicates that the character or digit to the left is the last, and the character or digit to the right is the first.
- A series of hyphens "-----" is displayed for a memo that does not contain any data.

To input a memo

1. In the Memo Mode, press (D) to display the memo number you want to set.
2. Hold down (A) until the first (leftmost) character of the memo title starts to flash on the display. This indicates the input screen.
3. Press (C) to move the flashing in the sequence shown below. Press (E) to move the flashing in the opposite direction.



4. Use (D) or (B) to scroll through characters at the current location of the flashing. Holding down either button scrolls at high speed.



*See the "CHARACTER LIST" for details.

- Pressing (D) and (B) at the same time while inputting memo title or data clears all title and data. At this time the message "CLEAR" appears on the display.
- 5. After you input the data you want, press (A) to exit the input screen.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>