

Dialogic® DI0408LSAR2 Switching Board

Quick Install Card for Universal PCI

Dialogic®

Part number 64-0039-02
Copyright © 2002-2007
Dialogic Corporation.
All Rights Reserved..

Before You Begin

Protecting the Board from Damage

Caution! All computer boards are sensitive to electrostatic discharge (“ESD”). Handle all static-sensitive boards and components at a static-safe work area, and observe anti-static precautions at all times.

If you are not familiar with ESD safety precautions, visit <http://www.dialogic.com/support/hwinstall> to learn more.

Unpacking the Board



Unpack the Dialogic® DI0408LSAR2 Switching Board (“board”) according to the following steps:

1. Prepare a static-safeguarded work area.
2. Carefully remove the board from the shipping carton and anti-static packaging. Handle the board by the edges and avoid touching the board’s components.
3. Lay the board on the static-dissipative work surface.

Note: Place boards in static-shielding bags when carrying boards from station to station.

CAUTION: Do not remove the board from the anti-static packaging until you are ready to install it. Observe proper anti-static precautions at all times.

Physical Description

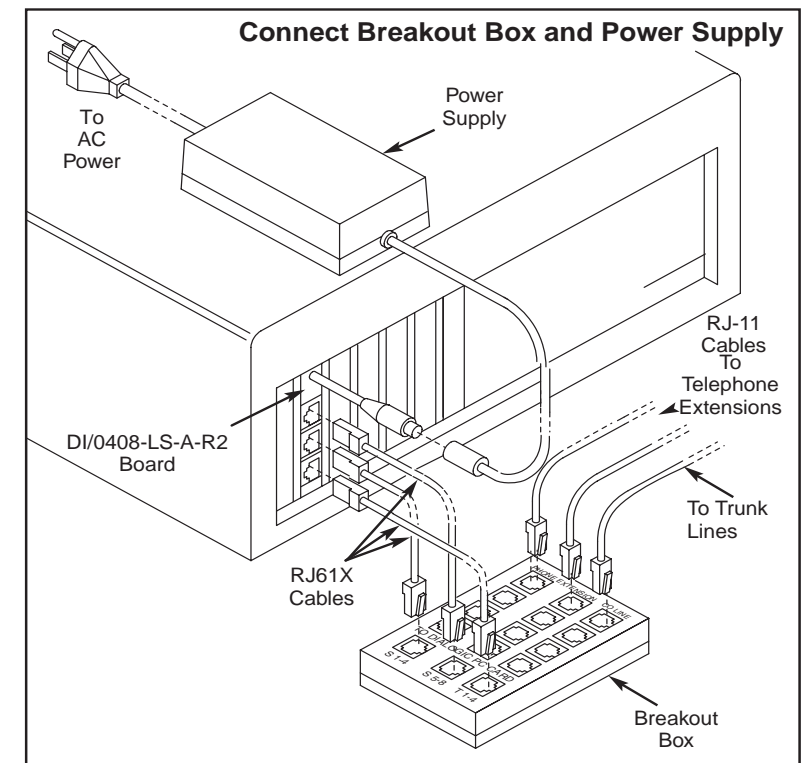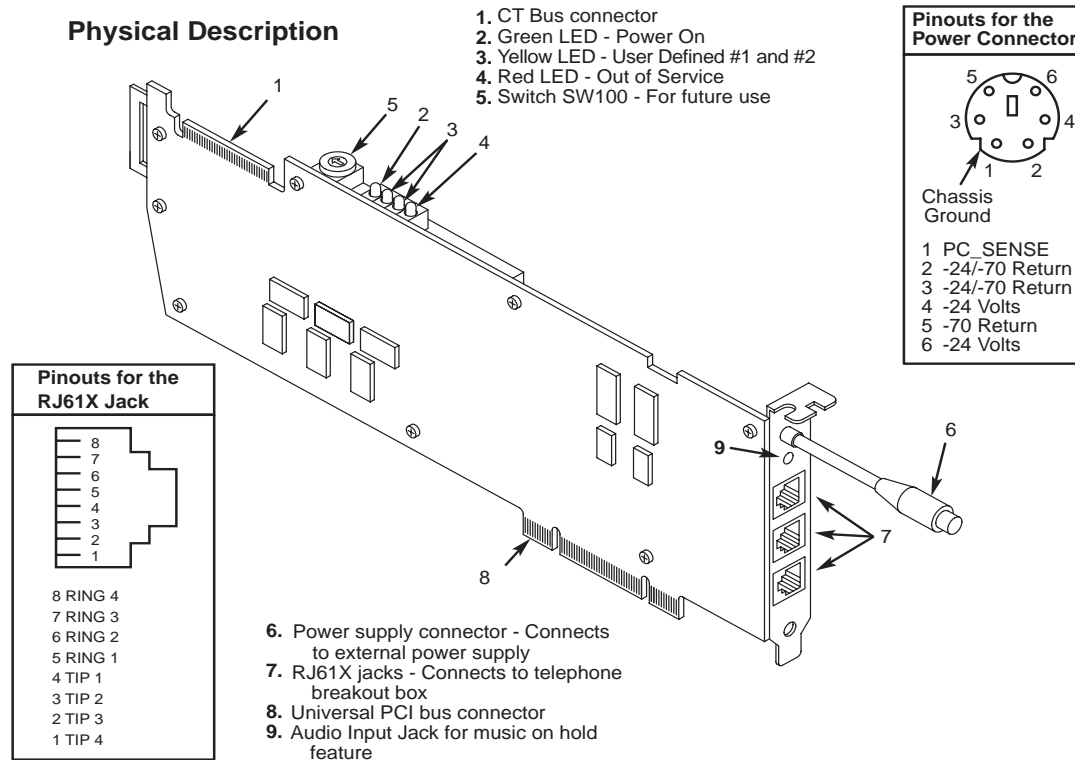

NOTE: The figure shows a North American-compliant power supply cord for connecting to AC power. Use the appropriate power supply cord for your location.

Hardware Configuration

The device driver, part of the system software, assigns board identification (ID) numbers in ascending order (beginning with 0) as it detects each board in the system. The board identification number is used by the system software to recognize the board. **NOTE:** If you add a board to the system, the existing board ID numbers may change, depending upon the PCI bus and slot number where the new board is installed.

Windows System

After the hardware and the system software are installed, refer to the Dialogic® Configuration Manager (DCM) utility to retrieve the board instance (ID) number(s) assigned to the board(s) in your system and see online help for more details.

Install the Hardware

With the computer on the static-safe work area and your static-dissipative wrist strap connected to you and the work area, ensure that the power is OFF and disconnect all power cords from the electrical outlets.

1. Remove the cover, select an empty PCI bus slot and remove the slot’s retaining screw and access coverplate.
2. Install the board into the chassis. Press firmly until the board is securely seated in the slot.
3. Replace and tighten the retaining screw to secure the board.
4. Replace the computer cover and reconnect the power cords.

Set CT Bus Jumpers (optional)

The Computer Telephony bus (CT Bus) provides communication and flexible resource sharing among the boards connected to the bus. This board has a CT Bus connector that complies with the ECTF H.100 specification, and as such can be connected to the CT Bus with a CT Bus cable.

You can connect the board to the CT Bus or use it without the CT Bus in stand-alone mode.


- **Stand-Alone Mode (CT Bus Jumpers Ignored):** For applications that do not require media sharing or switching across the CT Bus, use the board in stand-alone mode. No CT Bus cable is required. In addition, you may skip the instructions in this section when you use the board in SCbus mode without a CT Bus master board; that is, using only SCbus master/slave boards.
- **CT Bus Mode (CT Bus Jumpers Needed):** To connect the boards to the CT Bus, set the

CT Bus jumpers according to instructions in this section.

Note: If these boards are operating in SCbus mode, CT Bus (H.100) termination is not required.

The following instructions only apply to the boards at each end of the CT Bus cable. Only boards at each end of the CT Bus cable must be terminated.

P6 provides the jumpers location for the termination. P6 pins 1 and 2 are used to terminate the CT Bus, ensuring that proper electrical characteristics exist on the CT Bus. By factory default, this jumper is not terminated on the board.

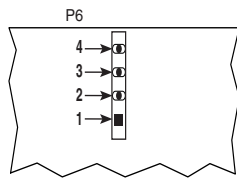

To use the CT Bus: Install the jumper on P6 pins 1 and 2 to terminate the CT Bus at that board.

- Only terminate the first and last boards (**the boards located at each end**) on the CT Bus cable.
- **Do not** install a shunt across the pins of P6 pins 1 and 2 on boards located between the end boards on the CT Bus cable (the shunt must be disconnected on the P6 pins 1 and 2 jumper to disable termination).

The P6 pins 1 and 2 jumper terminates the H.100 signals listed in the following table.

Shunt	H.100 signal terminated
P6, pins 1 and 2 (used on boards at each end of CT Bus cable only)	CT_FRAME_(A&B) CT_C8_(A&B)

P6 pins 3 and 4 terminate the MVIP bus signal when the corresponding jumper clip is installed. The signal must be terminated only on boards at each end of the CT Bus cable.

When pins 1 and 2 are used, use pins 3 and 4 as well.

Connect to External Power Supply

The Power Module generates -24 volts to power the station interface loop and -70 volts for ringing. One Power Module is required per DI0408LSAR2 board when station modules are used. The Power

Module connects to a pre-wired power cable attached to the DI0408LSAR2 board. See the *Connect Breakout Box and Power Supply* figure on side 1.

NOTE: The figure shows a North American-compliant power supply cord for connecting to AC power. Use the appropriate power supply cord for your location.

Connect to the Breakout Box

1. Open the back of the breakout box and remove the adhesive pads from the housing. See the *Connect Breakout Box and Power Supply* figure on side 1.
2. Mount the back of the breakout box to the desired location in one of two ways:
 - Apply double-sided tape to the side of the rear panel that touches the mounting surface and press the tape against the mounting surface.
 - Hold the rear panel against the mounting surface. Insert screws through the screw holes and fasten the panel to the surface.
3. Insert the front panel into the back panel.
4. Connect the breakout box to the DI0408LSAR2 board. Refer to the *Connect Breakout Box and Power Supply* figure on side 1.

After Installing the Hardware

Install the software as described in the installation instructions included with the system software.

For technical specifications and product information go to: <http://www.dialogic.com/products.htm>.

Warranty and Return Information

Warranty Period

For specific warranty information for this board, refer to the Warranty section of the Products page, located at this URL: <http://www.dialogic.com/warranties/>.

Contacting Technical Support

Dialogic provides technical support for its products through a network of value added distributors who are

trained to answer technical questions on installing and configuring Dialogic® products. If you are unsure how to contact your support channel, please call Dialogic in the United States at 973-967-6600 (9am-5pm EST) and we will assist in obtaining the appropriate support channel. Outside the United States please refer to <http://www.dialogic.com/support/contact> to obtain local contact information.

Dialogic also provides direct support via Dialogic® Pro™ Services agreements. For more details of direct support from Dialogic please refer to: <http://www.dialogic.com/support/DialogicPro>.

Returning a Product

To return a board for warranty repair or any other returns, please refer to the following: <http://www.dialogic.com/support/hwfaults>. To return a board for warranty repair, please refer to the following: <http://www.dialogic.com/support/hwfaults>. For all other returns, contact your vendor or Dialogic Customer Support (for more information, see <http://www.dialogic.com/support/contact/>).

Sales Assistance

Sales Assistance

If you have a sales question, please contact your local Sales Representative or the Regional Sales Office for your area. Address, telephone and fax numbers, are available at the Dialogic website located at: <http://www.dialogic.com/contact.htm>.

To purchase Dialogic® products, please refer to the following website to locate the appropriate supplier. <http://www.dialogic.com/purchase.htm>.

All contents of this document are furnished for informational use only and are subject to change without notice and do not represent a commitment on the part of Dialogic Corporation or its subsidiaries ("Dialogic"). Reasonable effort is made to ensure the accuracy of the information contained in the document. However, Dialogic does not warrant the accuracy of this information and cannot accept responsibility for errors, inaccuracies or omissions that may be contained in this document.

INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH DIALOGIC® PRODUCTS. NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. EXCEPT AS PROVIDED IN A SIGNED AGREEMENT BETWEEN YOU AND DIALOGIC, DIALOGIC ASSUMES NO LIABILITY WHATSOEVER, AND DIALOGIC DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATING TO SALE AND/OR USE OF DIALOGIC PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY INTELLECTUAL PROPERTY RIGHT OF A THIRD PARTY.

Dialogic products are not intended for use in medical, life saving, life sustaining, critical control or safety systems, or in nuclear facility applications.

It is possible that the use or implementation of any one of the concepts, applications, or ideas described in this document, in marketing collateral produced by or on web pages maintained by Dialogic may infringe one or more patents or other intellectual property rights owned by third parties. Dialogic does not provide any intellectual property licenses with the sale of Dialogic products other than a license to use such product in accordance with intellectual property owned or validly licensed by Dialogic and no such licenses are provided except pursuant to a signed agreement with Dialogic. More detailed information about such intellectual property is available from Dialogic's legal department at 9800 Cavendish Blvd., 5th Floor, Montreal, Quebec, Canada H4M 2V9. **Dialogic encourages all users of its products to procure all necessary intellectual property licenses required to implement any concepts or applications and does not condone or encourage any intellectual property infringement and disclaims any responsibility related thereto. These intellectual property licenses may differ from country to country and it is the responsibility of those who develop the concepts or applications to be aware of and comply with different national license requirements.**

Dialogic, Diva, Eicon, Eicon Networks, Eiconcard, Dialogic Pro and SIPcontrol, among others, are either registered trademarks or trademarks of Dialogic. Dialogic's trademarks may be used publicly only with permission from Dialogic. Such permission may only be granted by Dialogic's legal department at 9800 Cavendish Blvd., 5th Floor, Montreal, Quebec, Canada H4M 2V9. Any authorized use of Dialogic's trademarks will be subject to full respect of the trademark guidelines published by Dialogic from time to time and any use of Dialogic's trademarks requires proper acknowledgement. The names of actual companies and products mentioned herein are the trademarks of their respective owners.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>