



What you will need

Power cord (PortServer TS 16 families only)

DB-9 -RJ-45 adapter



Ethernet cable not included

Quick Start Guide

PortServer® TS Family Series



PortServer TS 1 MEI (shown)



PortServer TS 16 MEI (shown)

Wall and brick power supply (PortServer TS families 1/2/4/8 only)



PN:(1P) 90000687-88 B

PortServer TS
PortServer TS MEI
PortServer TS P MEI
PortServer TS H MEI


1 Set serial DIP switch (MEI versions only) according to your serial device requirements. Pinout information available on back of quick start.

Switch Settings	EIA-232	EIA-422/485 Full-Duplex	EIA-485 Half-Duplex
Up/On			
Down/Off			



*If switch 4 is up, termination resistor is connected.
If switch 4 is down, termination resistor is not connected.

INSTALL
1, 2, or 4 Port


Note for PortServer TS P MEI series only -
In EIA-232 mode, If switch 3 is down, 9V power is provided on pin 9 (DTR). If switch 3 is up, power on pin 9 is disabled and 5V power can be enabled on pin 1 (RI) through the software interface.

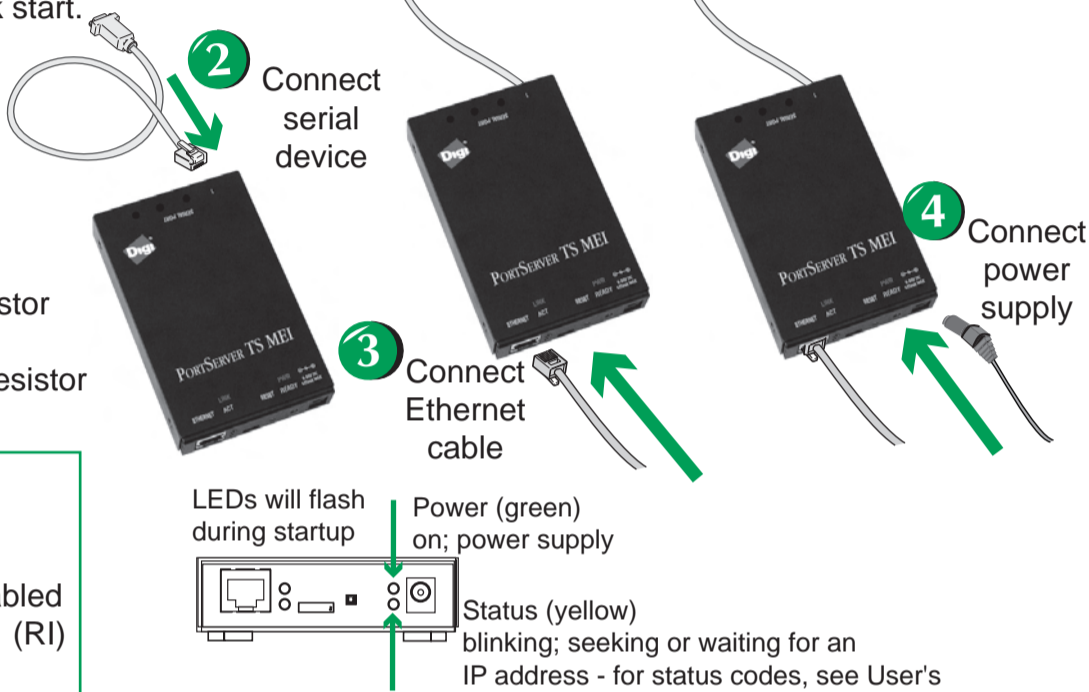

INSTALL
8 or 16 Port

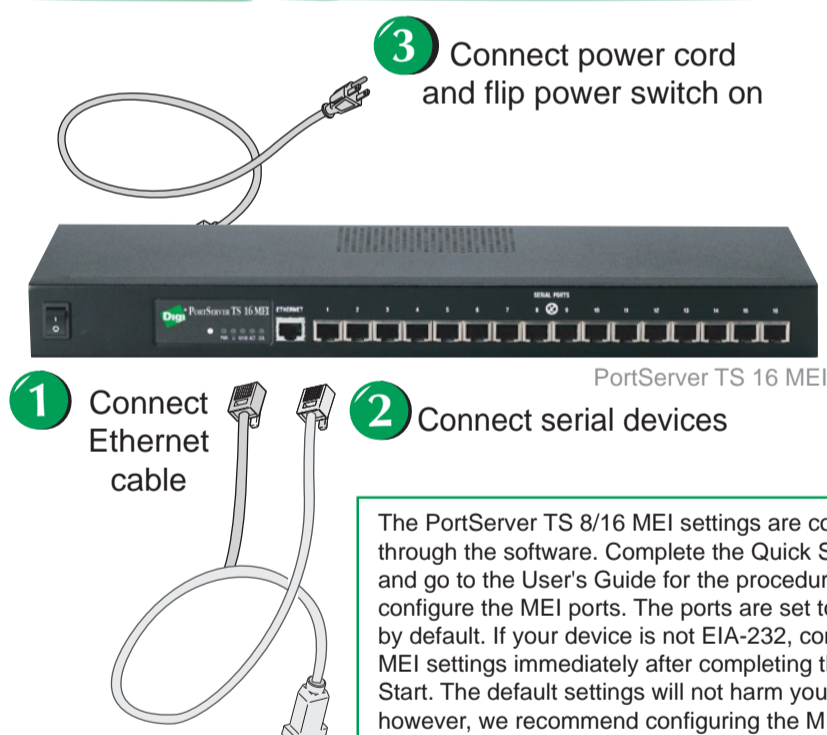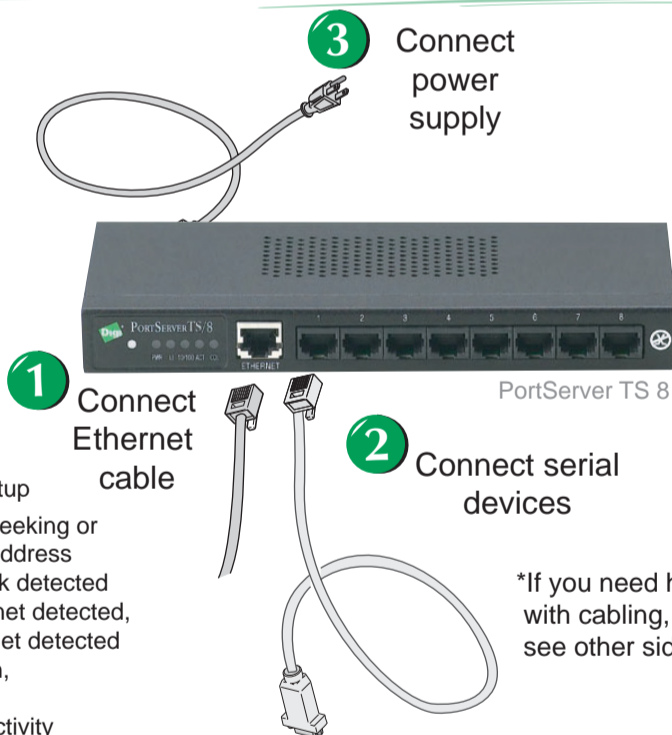

RUN WIZARD

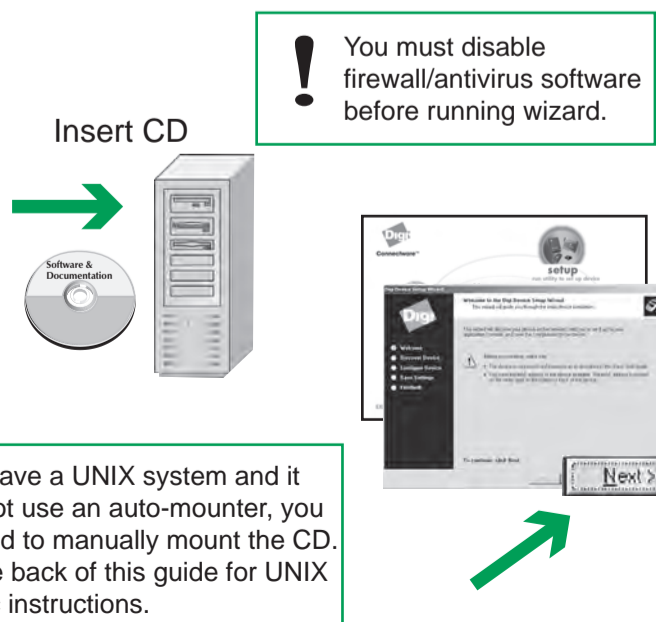


If you have a UNIX system and it does not use an auto-mounter, you will need to manually mount the CD. See the back of this guide for UNIX specific instructions.

Congratulations!
Configuration is complete. Go to the User's Guide on the CD for more information.

Be sure to check Digi Support for the latest firmware updates at: <http://support.digi.com>

Accessing the CD from a UNIX System

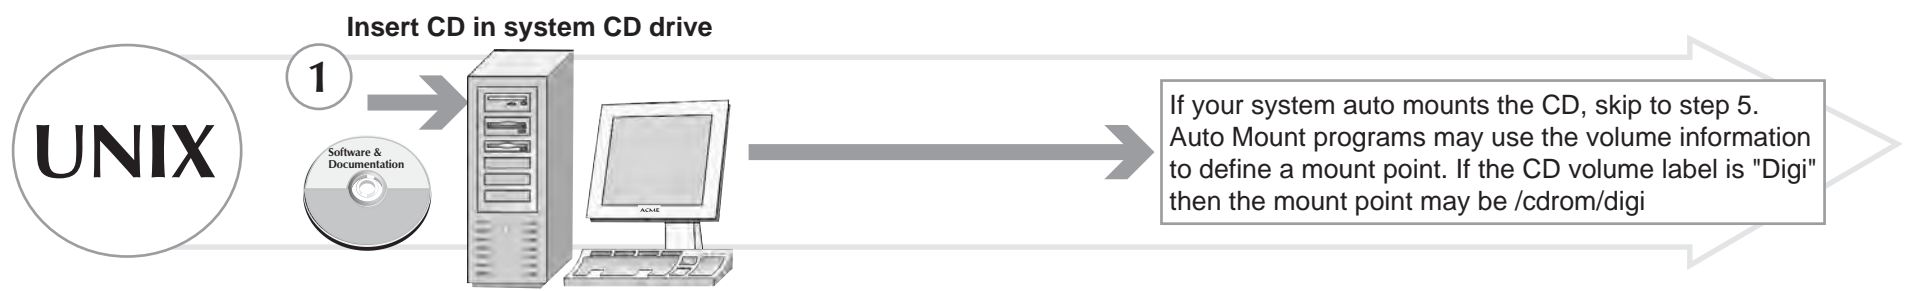

2 Determine your CD device

Common names for CD-ROM devices:

NAME	EXAMPLE
/dev/cdrom	/dev/cdrom
/dev/cdrom/cdromn	/dev/cdrom/cdrom1
/dev/cdn	/dev/cd0
/dev/dsk/cktmdn	/dev/clt2d0

To list descriptions of devices:
 AIX: lscfg
 HPUX: - Make sure you have administrator privileges and your PATH includes /usr/sbin
 ioscan -funC disk
 Solaris: Most Solaris systems use an auto-mounter.
 See the man page on vold: man vold

3 Identify the mount-directory.

Some common pre-existing mount points:
 /mnt/cdrom /cdrom

Or create your own:
 mkdir /mnt/mycdrom

HPUX - Check to see if pfs is running
 ps -ef | grep pfs

If not, start the daemons:
 pfs_mountd& pfsd&

4 Mount the CD by entering one of the commands from the following table:

Operating System	Command
AIX	mount -r -v cdrfs device mount-directory
*HPUX	do not use mount, it will not operate correctly pfs_mount device mount-directory See man pages for pfs and pfs_mount for more information.
Linux	mount device mount-directory
SCO UnixWare	mount -r -F cdfs device mount-directory
SCO OpenServer	mount -r -f ISO9660 device mount-directory
Solaris (Intel & SPARC)	mount -F hsfs device mount-directory Most systems use an auto-mounter. See the man page on vold: man vold

device is the path to the device file assigned to the cdrom drive, mount-directory is the directory where the Digi CD is mounted

*HPUX When finished, leave the CD directory and pfs_umount cd
 pfs_umount mount-directory
 (If you inadvertently use umount instead of pfs_umount, kill the pfs daemons to remove the CD-ROM.)

5 Navigate to mounted CD directory, enter: ./setup

If you see DISPLAY permission errors when running the CD, you may want to verify your DISPLAY variable is set. To set the DISPLAY variable:
 DISPLAY=localhost:0.0; export DISPLAY
 AND/OR
 xhost +localhost

Pinouts

				PortServer TS 8/16 ONLY
RJ-45 Pin	EIA-232	EIA-422/485 Full-Duplex	EIA-485 Half-Duplex	Optional 8-pin EIA-422 (Alt-4 Wire)
1	RI	TXD-	TXD-	
2	DSR	RxD-	RxD-	RxD- (B)
3	RTS	RTS+	n/a	TxD+ (A)
4	GND	GND	GND	CGND
5	TxD	TxD+	TxD+	no connection
6	RxD	RxD+	RxD+	RxD+ (A)
7	SG	SG	SG	SGND
8	CTS	CTS+	n/a	no connection
9	DTR	RTS-	n/a	TxD- (B)
10	DCD	CTS-	n/a	

Need help with cabling?

Digi TS EIA-232 Cable Adapter Reference

Cabling your serial devices to a Digi Product is now simpler than ever with a Digi Cable Adapter. While many custom cabling solutions can leave you with a cable that is either too long or too short for your application, the Digi Cable Adapters are used with commercially available CAT 5 cable of any length. Simply plug standard CAT 5 cable into your Digi Product, connect a Cable Adapter to the other end and plug the adapter into your device. Whether you need a crossover or straight-through connection, or require a DB-9 or DB-25 connector, there is a Digi Cable Adapter solution. For additional cabling information, see the Cabling guide under Documentation on your CD. If you prefer to order cables, see our website at <http://support.digi.com> and select Cabling.

Part number	Adapter	Application
76000697	Digi TS DB-9F Console Adapter (4-pack)	Bay Accelar, Nortel and other DB-9 DTE devices
76000698	Digi TS DB-25M Console Adapter (4-pack)	Sun Sparc, Sun Ultra, terminals, printers and other DTE devices with DB-25 Female ports
76000699	Digi TS DB-25F Console Adapter (4-pack)	Cisco, IBM and other DTE devices with DB-25 Male ports
76000700	Digi TS DB-25M Modem Adapter (4-pack)	Modems and other DCE devices with DB-25 Female Ports
76000701	Digi TS DB-9M Modem Adapter (4-pack)	Modems and other DCE devices with DB-9 Female Ports
76000692	Digi TS DB-25M Printer Adapter (4-pack)	For use with Printers. This adapter differs from a Console Adapter in that it utilizes the DTR signal (instead of RTS) for hardware flow control
76000631	Digi TS to Sun Netra / Cisco Cable (single pack)	For use with Cisco and Sun RJ-45 Console ports. Also available in 8-pack and 16-pack quantities.
63000042-01	RJ-45 to RJ-45 Straight Through Ethernet Cable	Can be used as a networking cable or combined with one of the adapters as a serial cable.

All RJ-45 cables and connectors are 8-pin. When using these adapters with modems or other applications that require DCD on pin 1, you must turn on altpin. If altpin is turned off, the hardware signal on pin 1 becomes DSR instead of DCD. This alternative can be used if DCD is not required, and DSR is needed instead. Configure the altpin through the web interface or the command line. See the User's Guide, MEI chapter or the set flow command in the Command Reference on the Digi Adapter. www.semantics.com Manuals Search and Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>