




MIL-4711H

Manageable Hub

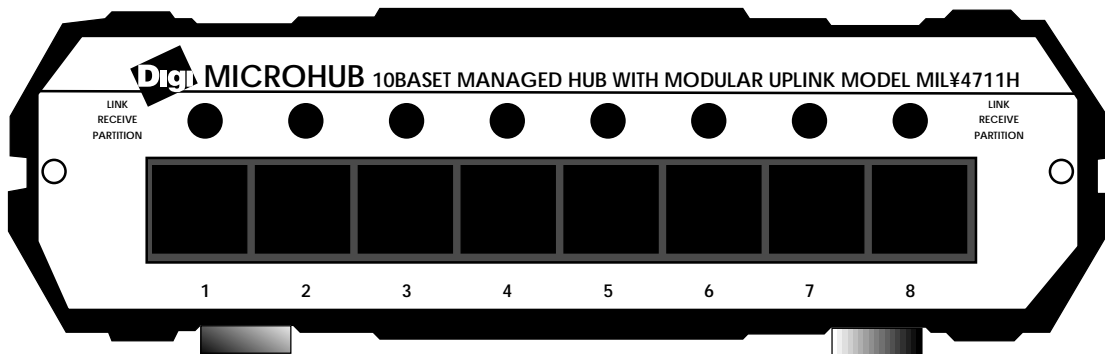

User's Guide

This guide includes the following information:

[“Description of Hardware” on page 2](#)

[“Description of the LEDs” on page 3](#)

[“Description of Dip Switches” on page 3](#)

[“The DB-9 Serial Port” on page 4](#)

[“Installation Procedure” on page 4](#)

[“Assigning an IP Address” on page 5](#)

[“Setting the IP Address with Telnet” on page 5](#)

[“Setting the IP Address with RARP” on page 6](#)

[“Setting the IP Address with BOOTP” on page 7](#)

[“Verifying the IP Address is Set Properly” on page 8](#)

[“Legal” on page 9](#)

Micro Modules used with the MIL-4711H:

- MIL-4310M
- MIL-4320M
- MIL-4330M
- MIL-4340M
- MIL-4350M
- MIL-4360M
- MIL-4370M

For instructions on configuring the micro modules, see the *MIL-4300M Series Micro Module Installation Guide*.

Description of Hardware

The MIL-4711H is an 8-port, 10BASE-T managed hub with a modular uplink port supporting 10BASE-T, 10BASE2, 10BASE-FL or AUI connectivity, and an RS-232 port for out-of-band management. The MIL-4711H supports standard MIB-II, Digi's private MIBs, and hub MIBs using the SNMP protocol with both in-band management (over TCP/IP and IPX protocols) and out-of-band management through an RS-232 port.

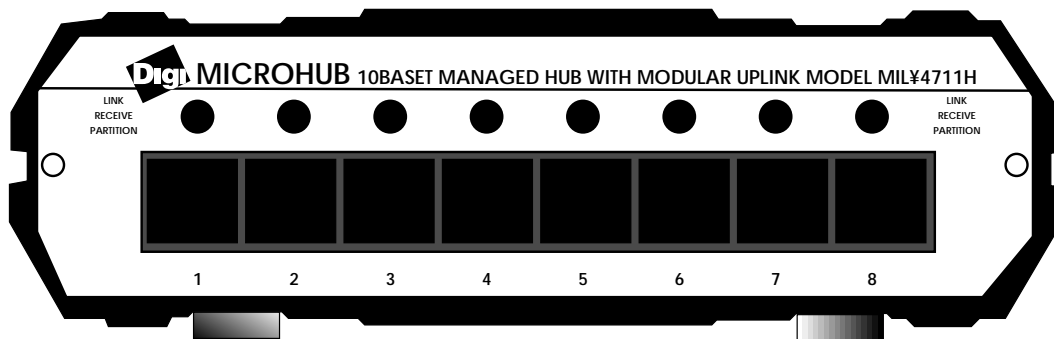


Figure 1. MIL-4711 (Front View)

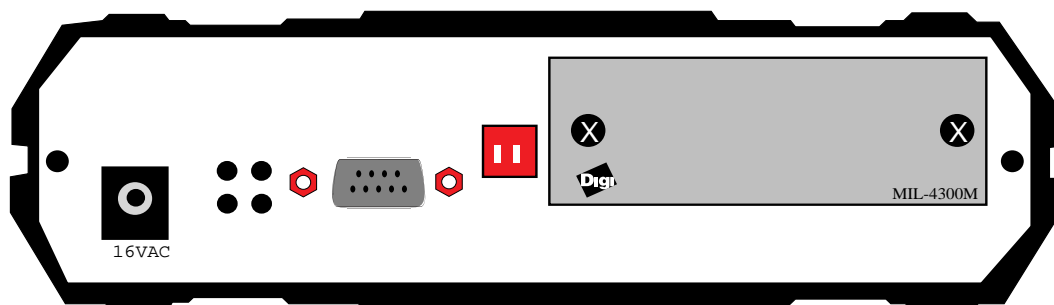


Figure 2. MIL-4711 (Rear View)

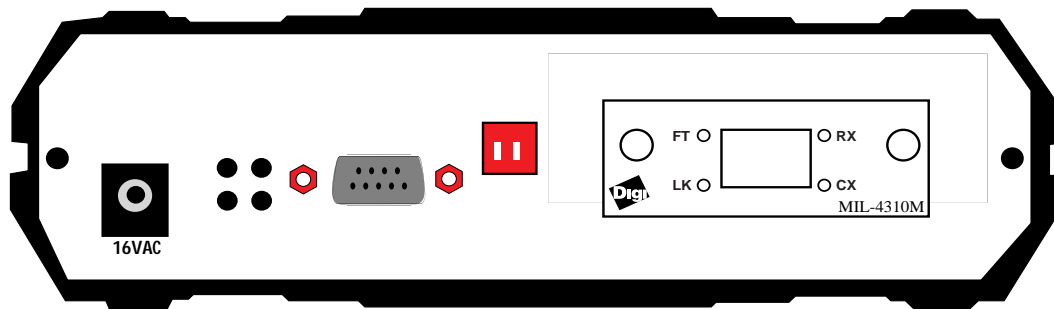


Figure 3.MIL-4711 (Rear View w/ the MIL-4310 Module)

Description of the LEDs

On the front panel of the MIL-4711H, there is one LED above each of the eight, 10BASE-T ports. If the port is in use, the LED will change to one of three colors to indicate the following functions:

- Green indicates *link* present
- Red indicates that the port is partitioned
- Orange indicates that the port is receiving data

There are four LEDs located between the power plug and the DB-9 serial port on the rear panel. The following gives the rear panel LEDs' function:

- Green LED in the upper-left corner is the system LED (SYS)
- Green LED in the lower-left corner is the power LED (PWR)
- Yellow LED in the upper-right corner is the network LED (NET)
- Red LED in the lower-right corner is the collision LED (COL)

Note: The SYS and COL LEDs blink when the unit is operational.

Description of Dip Switches

To the right of the DB-9 serial port (on the rear of the hub) are two DIP switches. The switch to the left and closest to the DB-9 is Switch 2, and the switch to the right is Switch 1. The following table gives the function of these DIP switches:

Switch 2	Switch 1	FUNCTION
Off (Down)	Off (Down)	Normal Mode (Telnet Disabled)
Off (Down)	On (Up)	Normal Mode (Telnet Enabled)
On (Up)	On (Up)	Monitor Mode, SNMP (Agent not Operational)

The DB-9 Serial Port

DB-9

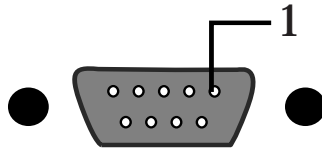


Figure 4.RS-232C Serial Port Pin Assignments

DB-Male Pin #	Function
1	N/C
2	RXD
3	TXD
4	DTR
5	GND
6	N/C
7	DTR
8	CTR
9	N/C

Note: N/C=No Connect

Installation Procedure

Follow these steps to connect the MIL-4711H to your network:

1. Remove the MIL-4700H, power adapter, and cord from its shipping box.
2. Select the appropriate AC voltage (120VAC or 220VAC) on the power adapter. **The voltage in use is visible.**

Warning:The factory setting is 120VAC.

3. If you have optional micro module, connect their cabling from the media to the network. Refer to the *MIL-4300M Installation Guide*.
4. Connect the 10BASE-T UTP cabling to the front ports.
5. Plug the power cord into the 4711H and into an AC outlet.
6. Apply power to the unit. The power LED located on the left rear of the unit next to the power connector should light up.

Note: To get the network connectivity, cascade the MIL-4711H to another hub using a swap cable at the front ports.

The MIL-4711H is now ready for use on the network.



Assigning an IP Address

Every device on a TCP/IP network is identified by two addresses:

- The address is a 6-byte address assigned to the 4711H by the manufacturer.
- The IP address is a 4-byte address assigned by the system admin. Set this.

The MIL-4711H stores its IP address in its NVRAM (default: 0.0.0.0).

Caution: When the address is 0.0.0.0, the 4711H uses RARP or BOOTP to acquire an address.

The following are ways to assign an IP address to the hub:

- Make a telnet connection via port 2002, or connect serially and set the IP address manually.
- Use a RARP server to set the address each time the MIL-4711H powers up.
- Use BOOTP to set the address each time the MIL-4711H powers up. This is the preferred method in larger networks as BOOTP can work through routers.

Note: Neither telnet nor RARP work if the server is connected through a router on a different subnet from the MIL-4711H. To assign an IP address, put the MIL-4711H on the same subnet as the host, set-up an ARP entry with an IP address that is valid for that subnet, telnet to the unit, and assign an appropriate IP address.

Setting the IP Address with Telnet

The following only works if the MIL-4711H is on the same subnet as the host from which you want to telnet. In this example, you are to add a MIL-4711H called *alpha* with an IP address *192.185.2.3* and an Ethernet address of *0040c800012B*.

To set the IP Address using Telnet:

1. Use a text editor to open the `/etc/hosts` file.
2. Add the following line and save the file:

```
192.185.2.3 alpha
```

3. Use this to set the static ARP entry for a host on the same subnet as the 4711H:

```
arp -s alpha 00:40:c8:00:01:2B
```

4. Set the rear panel DIP switches D2 up and D1 down and power cycle the unit.
5. Make a telnet connection to maintenance port 2002:
telnet alpha 2002, or connect an ANSI compatible terminal to the RS-232 port
6. Type `[!]` to enter the monitor menu.



7. If prompted with a message like **Warning: Entering monitor will lock out other Ethernet access and force reset**, type [Y] to get the command prompt.
8. Type [N] to enter the network protocols menu.
9. Type [T] to enter the TCP/IP menu.
10. Change the settings for the TCP/IP engine options as prompted.
11. Return to the main menu and reboot the MIL-4711H with the [R] command.

Note: On IBM RS-6000 systems, use the following command instead of the command given in step 3 to specify that the connection is Ethernet II:

```
arp -s ether alpha 0:40:c8:0:01:2B
```

On AT&T Star servers and NCR systems, use this command:

```
arpbypass set alpha 0x00.0x40.0xc8.0x00.0x01.0x2B
```

On Windows 95/98 or NT with TCP/IP systems, use this command:

```
arp -s alpha 00-40-C8-00-01-2B
```

The MIL-4711H is now configured on the network.

Setting the IP Address with RARP

RARP provides a way for devices on the network to query a server for their IP address at start-up. This only works if the 4711H is on the same subnet as the host running the RARP daemon. However, it will RARP if its address is set to 0.0.0.0.

To set the IP Address with RARP:

1. Verify that you have RARP (usually located in the /usr/etc directory).
2. Find the hardware address of the MIL-4711H (on the bottom of the unit).
3. Add the address to the /etc/ethers file, or the NIS master ethers database. For example, if a device named *alpha* has an address of *0040C802ABCD*, then add:

```
00:40:c8:02:ab:cd:alpha
```

4. Add the IP address and the host name to the /etc/hosts file. For example, a device named *alpha* with an address *192.185.2.3*, add the following line:

```
192.185.2.3 alpha
```

Note: For hosts using NIS and ethers databases, rebuild the databases at this time. Change to the YP directory and type make at the command prompt. Then continue this procedure:

5. Power on the MIL-4711H.



6. Verify that the RARP daemon is running:

```
ps-ax | grep RARP (for BSD UNIX) or
ps-ef | grep RARP (for System V UNIX)
```

Otherwise, start the RARP daemon by typing:

```
/usr/etc/rarpd-a or /etc/rarpd-a
```

If successful, the SYS LED flashes five times per second until the 4711H resolves its IP address. Then it flashes once per second after address resolution.

Note: The IP address in this case is stored in RAM. Hence, if the MIL-4711H is powered off, the address will be lost and when the unit is powered on, the MIL-4711H will RARP again.

Setting the IP Address with BOOTP

BOOTP allows a diskless client machine to discover its own IP address. Unlike RARP, BOOTP is IP/UPD based and it can pass through routers.

To set the IP Address with BOOTP on a Sun system:

1. Verify that you have BOOTP (usually located in the /usr/etc directory).
2. Use a text editor to open the /etc/hosts file.
3. Add the host name and address, and then save the file. For example, for a MIL-4711H called *alpha* with an IP address *192.185.2.3*, add this line:

```
192.185.2.3 alpha
```

4. Edit BOOTP in the /etc directory containing the hostname of the MIL-4711H, hardware type, hardware address, and the IP address. Format the entry:

```
<hostname of MIL-4711H>:ht=1:ha=<hardware address>:ip=<ip address>
```

For example, an entry named *alpha*, with a hardware address of *0040c8010203* and an IP address of *199.86.12.183*:

```
alpha:ht=1:ha=0040c8010203:ip=199.86.12.183:
```

5. Start the BOOTP daemon by typing the command /usr/etc/BOOTPd. The MIL-4711H will broadcast BOOTP packets and will obtain a response from the server and will use the IP address specified in /etc/BOOTP file.

To set the IP Address with BOOTP on a HP/UX system:

1. Login as root on the system and start SAM, the System Administration Tool, by entering *sam* at the command line.



2. Use a text editor to open the `/etc/hosts` file and add the following line:

```
192.185.2.3 alpha
```

3. Use the following menu sequence in sam:

```
Networking--> Communications--> Device Connectivity-->
Boot Protocol--> Actions--> Add
```

4. In response to the program prompts, add the following information:

```
BOOTP Device Name: <specify the hostname of the MIL-4711H>
Internet address: <specify the IP address of the MIL-4711H>
Subnet address: <specify the subnet mask of the MIL-4711H>
Station address (hex): <specify the hardware address of the MIL-4711H>
Boot file name: <specify the full path of this file> (e.g.: /etc/BOOTPtab)
```

5. Answer the prompt for *BOOTP Device Adapter Type* by clicking first on **Ethernet** and then click on **Apply**.
6. Exit out of SAM.
7. Start BOOTP.

The MIL-4711H will broadcast BOOTP packets and will obtain a response from the server using the IP address specified in `/etc/BOOTPtab` file.

If the BOOTP process is successful, the SYS LED flashes five times per second until the MIL-4711H resolves its IP address. It flashes once per second after address resolution.

Note: The IP address in this case is stored in RAM. When the MIL-4711H is powered off, the address will be lost and when the unit is powered on, the MIL-4711H will RARP again.

Verifying the IP Address is Set Properly

To see if the 4711H is up and responding on the network, use the ping command:

```
ping <hostname>
```

It should respond with a message that the host is alive. For example, if the MIL-4711H alpha is responding on the network, the response from ping will be:

```
alpha is alive
```

If there is a problem resolving the MIL-4711H name, try using ping with the IP address for the MIL-4711H:

```
ping <ip-address>
```


Legal

Regulatory Approvals

- FCC Class A
- UL 1950
- CSA 22 No. 950
- EN60950
- CE
 - EN55022 Class B
 - EN50082-1

Canadian EMI Notice

This Class A digital apparatus meets all the requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

European Notice

Products with the CE Marking comply with both the EMC Directive (89/336/EEC) and the Low Voltage Directive (73/23/EEC) issued by the commission of the European Community. Compliance with these directives implies conformity to the following European Norms:

- EN55022 (CISPR 22) - Radio Frequency Interference
- EN50082-1 (IEC801-2, IEC801-3, IEC801-4) - Electromagnetic Immunity
- EN60950 (IEC950) - Product Safety

Five-Year Limited Warranty

Digi International warrants to the original consumer or purchaser that each of its products, and all components thereof, will be free from defects in material and/or workmanship for a period of five years from the original factory shipment date. Any warranty hereunder is extended to the original consumer or purchaser and is not assignable.

Digi makes no express or implied warranties including, but not limited to, any implied warranty of merchantability or fitness for a particular purpose, except as expressly set forth in this warranty. In no event shall Digi be liable for incidental or consequential damages, costs, or expenses arising out of or in connection with the performance of the product delivered hereunder. Digi will in no case cover damages arising out of the product being used in a negligent fashion or manner.

To Contact Digi

For prompt response when calling for service information, have the following information ready:

- Product serial number and rev.
- Date of purchase
- Vendor or place of purchase

Reach Digi Technical Support at 408/744-2751
Or E-mail at "sun-tech@dgii.com"

Address: 1299 Orleans Drive
Sunnyvale, CA 94089

Voice: 408/744-2775

Fax: 408/744-2793

E-mail: info@dgii.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>