

GARMIN

nüvi® 3400 series owner's manual

models: 3410, 3450, 3460, 3490



© 2011 Garmin Ltd. or its subsidiaries

All rights reserved. Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express prior written consent of Garmin. Garmin hereby grants permission to download a single copy of this manual onto a hard drive or other electronic storage medium to be viewed and to print one copy of this manual or of any revision hereto, provided that such electronic or printed copy of this manual must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Information in this document is subject to change without notice. Garmin reserves the right to change or improve its products and to make changes in the content without obligation to notify any person or organization of such changes or improvements. Go to the Garmin Web site (www.garmin.com) for current updates and supplemental information concerning the use and operation of this and other Garmin products.

Table of Contents

Getting Started.....	1		
Connecting the Device to Vehicle Power.....	1	Saving Locations	14
About myDashboard.....	2	Voice Command.....	16
About Sleep Mode.....	4	About Voice Command.....	16
Adjusting the Screen Brightness	4	Navigation	19
Adjusting the Volume.....	4	Starting a Route.....	19
About Automatic Volume	4	Following an Automobile Route.....	20
Status Bar Icons	5	About Exit Services	22
Satellite Signals.....	5	Avoiding Road Features	23
Using the On-screen Buttons	6	About Custom Avoidances	23
Using the On-screen Keyboard	7	Pedestrian Routes.....	25
Finding Locations.....	8	Map Pages.....	27
About Locations.....	8	Customizing the Map.....	27
About Search Tools	11	Viewing Turns.....	28
Saving a Home Location	13	Viewing Current Location Information	31
Finding Recently Found Places.....	14	Hands-Free Phone Calls	31
Finding Parking.....	14	About Hands-Free Calling.....	31
Setting a Simulated Location.....	14	Placing a Call.....	33
		Using In-Call Options	34
		Saving a Home Phone Number.....	34

Using the Apps	35	Understanding Traffic Data.....	48
Using Help.....	35	Data Management.....	48
About ecoRoute	35	File Types	48
About Audiobooks.....	38	About Memory Cards.....	49
Planning a Trip.....	40	Transferring Files from Your Computer	49
Using the Media Player	41	Deleting Files	50
Viewing Pictures	42	Customizing the Device.....	50
Viewing Previous Routes and Destinations	42	Map and Vehicle Settings	50
Using the World Clock	43	Navigation Settings.....	51
Setting an Alarm	43	Display Settings.....	52
Finding Your Last Parking Spot	43	Bluetooth Settings	53
Using the Calculator	43	Traffic Settings.....	53
Converting Units	43	Units and Time Settings.....	54
Using the Language Guide.....	44	Language and Keyboard Settings	54
Traffic.....	45	Proximity Alerts Settings.....	55
Enabling Traffic.....	45	About Device and Privacy	55
Traffic Data	46	Restoring Settings	55
Traffic Receiver	46	Appendix	56
Traffic on Your Route.....	47	Power Cables	56
Traffic in Your Area	48		

Caring for Your Device.....	56
Erasing User Data	57
Changing the Fuse in the Vehicle Power Cable	58
Mounting on Your Dashboard	58
Removing the Device, Cradle, and Mount.....	59
Updating Maps	59
Purchasing Additional Maps	60
Safety Cameras.....	60
Custom Points of Interest	60
Purchasing Accessories	61
Troubleshooting	62
Index	64

Getting Started

WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

- 1 Connect the device to vehicle power (page 1).
- 2 Mount the device (page 1).
- 3 Register the device (page 2).
- 4 Check for updates.
 - Software updates (page 3).
 - Free map update (page 3).

Connecting the Device to Vehicle Power

WARNING

This product contains a lithium-ion battery. To prevent the possibility of personal injury or product damage caused by battery exposure to extreme heat, remove the device from the vehicle when exiting or store it out of direct sunlight.

Before you use your device on battery power, you should charge it.

- 1 Plug the vehicle power cable ① into the USB port ② on the device.



- 2 Snap the mount onto the suction cup ③.
- 3 Press the suction cup to the windshield, and flip the lever ④ back toward the windshield.
- 4 Fit the bottom of your device into the mount.
- 5 Tilt your device back until it snaps into place.
- 6 Plug the other end of the vehicle power cable into a power outlet in your vehicle.
- 7 If necessary, connect the external antenna to the traffic receiver and secure it to the windshield using the suction cups.

About myDashboard

Use myDashboard to register your device, check for software and map updates, access product manuals and support, and more.

Setting Up myDashboard

- 1 Connect the USB cable to the USB port on the device.
- 2 Connect the USB cable to the USB port on your computer.
- 3 Go to www.garmin.com/dashboard.
- 4 Follow the on-screen instructions.

Registering the Device

- 1 From myDashboard, click **Register Now**.
- 2 Follow on-screen instructions.

Updating the Software

- 1 Open myDashboard ([page 2](#)).
- 2 Under Software Updates, click **Update Now**.
- 3 Follow the on-screen instructions.

nüMaps Guarantee™

If you register through myDashboard, your device is eligible for one free map update within 90 days of acquiring satellites while you drive.

Go to www.garmin.com/numaps.

Updating Maps

- 1 Open myDashboard ([page 2](#)).
- 2 Register the device ([page 2](#)).
- 3 Under Map Updates, click **Update Now**.
- 4 Follow the on-screen instructions.

Turning Off the Device

You can power off the device completely.

- 1 Hold the **Power** key **1** for 3 seconds.



NOTE: If you hold the Power key for less than 4 seconds, the device enters sleep mode.

- 2 Select **Off**.

Resetting the Device

You can reset your device if it stops functioning

Hold the **Power** key for 10 seconds.


About Sleep Mode

Use sleep mode to conserve battery power when your device is not in use. Sleep mode uses very little power, and a battery charge lasts for weeks when your device is in sleep mode.

Entering Sleep Mode

Press the **Power** key.



Exiting Sleep Mode

While the device is in sleep mode, press the **Power** key and double-tap .

Adjusting the Screen Brightness

- 1 Select **Settings** > **Display** > **Brightness**.
- 2 Use the slider bar to adjust the brightness.

Adjusting the Volume

- 1 Select **Volume**.
- 2 Select an option:
 - Use the slider bar to adjust the volume.
 - Select  to mute the device.
 - Select  > **Audio Mixer** and use the slider bars to adjust the volume for navigation prompts, phone, and media.

About Automatic Volume

Automatic volume allows the device to adjust the volume level based on the background noise in the vehicle. Automatic volume control lowers the volume of the device when background noise is low and raises the volume level when background noise increases.






Enabling Automatic Volume

Your device can increase or decrease the volume automatically based on the level of background noise.


- 1 Select **Volume** >  > **Automatic Volume**.
- 2 Select **Enabled** > **Save**.

Status Bar Icons

The status bar is located at the top of the main menu. The status bar icons display information about features on the device. You can select some icons to change settings or view additional information.

	GPS signal status.
	Bluetooth® technology status (appears when connected to a compatible device).
	Transportation mode indicator.
	Current time.
	Battery status.

Satellite Signals



After the device is turned on, it begins acquiring satellite signals. The device may need a clear view of the sky to acquire satellite signals. When at least one of the  bars is green, your device has acquired satellite signals.

Viewing GPS Satellite Signals

For more information about GPS, go to www.garmin.com/aboutGPS.

Hold .

Transportation Modes

	Automobile mode
	Pedestrian mode

Routing and navigation are calculated differently based on your transportation mode.

For example, in Automobile mode, the estimated time of arrival is calculated using the speed limit of the roads on the route. Pedestrian mode calculates time of arrival based on walking speed.


NOTE: Pedestrian routes do not include highways. If you have cityXplorer™ maps loaded on your device, pedestrian routes may include public transit ([page 25](#)).

Choosing a Transportation Mode








Select .

Battery Information

After the device is connected to power, it begins to charge.







The  icon in the status bar indicates the status of the internal battery. To increase the accuracy of the battery gauge, you should fully discharge the battery and then fully charge it. Do not unplug the device until it is fully charged.

Using the On-screen Buttons

- Select  to return to the main menu.
- Hold  to quickly return to the main menu.
- Select  or  to see more choices.
- Hold  or  to scroll faster.
- Select  to see a menu of options for the current screen.

Using the On-screen Keyboard

See “Language and Keyboard Settings” to change the keyboard layout ([page 54](#)). Select a character on the keyboard to enter a letter or number.

- Select  to add a space.
- Hold  to delete a character.
- Select  to erase the entire entry.
- Select  to select the keyboard language mode.
- Select  to enter special characters, such as punctuation marks.
- Select  to change character capitalization.

About Shortcuts


You can add shortcuts to the Where To? menu. A shortcut can point to a location, a category, or a search tool.

Adding a Shortcut Icon

The Where To? menu can contain up to 36 shortcut icons.

- 1 Select **Where To? > Add Shortcut**.
- 2 Select an item.

Removing a Shortcut

- 1 Select **Where To >  > Remove Shortcut(s)**.
- 2 Select the shortcut to remove.
- 3 Select the shortcut again to confirm.

Finding Locations

The device offers many methods for finding locations.

- By category ([page 8](#))
- Near another location ([page 10](#))
- By spelling the name ([page 11](#))
- By address ([page 11](#))
- Using the map ([page 21](#))
- Using recently found locations ([page 14](#))
- Using coordinates ([page 12](#))
- Using saved locations ([page 14](#))

About Locations

The detailed maps loaded in your device contain locations, such as restaurants, hotels, and auto services. You can use categories to browse for nearby businesses and attractions.

Finding a Location by Category


- 1 Select **Where To?** > **Categories**.
- 2 Select a category, or select **Categories**.
- 3 If necessary, select a subcategory.
- 4 Select a location.

Searching Within a Category

To narrow your search results, you can search within some categories.

- 1 Select **Where To?**.
- 2 Select a category, or select **Categories**.
- 3 If necessary, select a subcategory.
- 4 Select the search bar **1**.



- 5 Enter all or part of the name.
- 6 Select .


Finding a Location Using the Search Bar

You can use the search bar to search for locations by entering a category, brand name, address, or city name.

- 1 Select **Where To?**.
- 2 Select the search bar.
- 3 Enter a search term.

Suggested search terms appear below the search bar as you type.

- To search for a type of business, enter a category name, such as “movie theaters” or “coffee shops.”
- To search for a business by name, enter all or part of the name.
- To search for an address near you, enter the street number and street name.
- To search for an address in another city, enter the street number, street name, city, and state.

- To search for a city, enter the city and state.
 - To search for coordinates, enter latitude and longitude coordinates.
- 4 Select an option:
 - To search using a suggested search term, select the term.
 - To search using the text you entered, select .

- 5 If necessary, select a location.



Changing the Search Area

By default, your device finds locations closest to your current location. You can find a location near another city or location.

- 1 Select **Where To? > Searching Near**.
- 2 Select an option.
- 3 If necessary, select a location.

Reporting a Closed or Missing Location



If your search results include an outdated or incorrect location, you can report the error to Garmin and remove the location from future searches.

- 1 Find a location ([page 8](#)).
- 2 Select a location from the list.
- 3 Select .
- 4 Select  > **Edit**.
- 5 Select **Report as Closed** or **Report as Missing**.

This information is sent to Garmin when you connect your device to myGarmin™ using your computer.


Editing Location Information

You can change the address or phone number for a location that appears in the search results.

- 1 Find a location.
- 2 Select a location from the list.
- 3 Select .
- 4 Select  > **Edit**.
- 5 Select **Address** or **Phone Number**, and enter the new information.

Rating a Point of Interest

You can assign a star rating to a point of interest.

- 1 Find a location.
- 2 Select a location from the list.
- 3 Select .

- 4 Select the stars to rate the point of interest.
The star rating updates on your device.

About Search Tools

You can search for locations by using the on-screen keyboard or by entering the location's address or coordinates.

Finding an Address

Before you can find an address, you must add a shortcut to the address search tool ([page 7](#)).

NOTE: The order of the steps may change depending on the map data loaded on your device.

- 1 Select **Where To? > Address**.
- 2 Enter the address number, and select **Next**.
- 3 Enter the street name, and select **Next**.
- 4 If necessary, select **Searching In** to change the city, state, or province.

- 5 If necessary, select the city, the state, or the province.
- 6 If necessary, select the address.


Finding an Intersection

Before you can find an intersection, you must add a shortcut to the intersection search tool ([page 7](#)).

- 1 Select **Where To? > Intersections**.
- 2 Select a state or province.
NOTE: If necessary, select **State or Country** to change the country, state, or province.
- 3 Enter the first street name, and select **Next**.
- 4 If necessary, select the street.
- 5 Enter the second street name, and select **Next**.
- 6 If necessary, select the street.
- 7 If necessary, select the intersection.

Finding a City


Before you can find a city, you must add a shortcut to the cities search tool ([page 7](#)).

- 1 Select **Where To? > Cities**.
- 2 If necessary, enter a city name in search bar and select .
- 3 If necessary, select a city from the list.

Finding a Location Using Coordinates

Before you can find a location using coordinates, you must add a shortcut to the coordinates search tool ([page 7](#)).

You can find a location using latitude and longitude coordinates. This can be helpful when geocaching.

- 1 Select **Where To? > Coordinates**.
- 2 If necessary, select  **> Format**, select the correct coordinate format for the type of map you are using, and select **Save**.
- 3 Select the latitude coordinate.


- 4 Enter the new coordinate, and select **Done**.
- 5 Select the longitude coordinate.
- 6 Enter the new coordinate, and select **Done**.
- 7 Select **View on Map**.

Finding a Location by Browsing the Map

Before you can find places included in the map data, such as restaurants, hospitals, and fuel stations, you must enable the map layer for places along the road ([page 27](#)).

- 1 Select **View Map**.
- 2 Drag and zoom the map to display the area to search.

Location markers appear on the map for places along the road.

- 3 If necessary, select , and select a category icon to view only a specific category of places.
- 4 Select an option:

- Select a location marker.
 - Select a point, such as a street, intersection, or address location.
- 5 If necessary, select the location description to view additional information.

Finding a Location Using Quick Search

After you have performed a search for a point of interest, certain categories may display a Quick Search list that displays the last four destinations you selected.

- 1 Select **Where To?**.
- 2 Select a category, or select **Categories**.
- 3 If applicable, select a destination from the Quick Search list.
- 4 If necessary, select the appropriate destination.

Saving a Home Location

You can set your home location for the location you return to most often.


- 1 Select **Where To?** >  > **Set Home Location**.
- 2 Select **Enter My Address, Use My Current Location**, or **Recently Found**.

The location is saved as "Home" in the Saved folder ([page 14](#)).

Going Home

Select **Where To?** > **Go Home**.

Editing Your Home Location Information


- 1 Select **Where To?** > **Saved** > **Home**.
- 2 Select  > **Edit**.
- 3 Enter your changes.
- 4 Select **Done**.

Finding Recently Found Places

Your device stores the last 50 locations you have found.

- 1 Select **Where To?** > **Recent**.
- 2 Select a location.

Clearing the List of Recently Found Places

Select **Where To?** > **Recent** >  > **Clear** > **Yes**.

Finding Parking

- 1 Select **Where To?** > **Categories** > **Parking**.
- 2 Select a parking location.

Setting a Simulated Location

If you are indoors or not receiving satellite signals, you can use the GPS to set a simulated location.

- 1 Select **Settings** > **Navigation**.

- 2 Select **GPS Simulator**.

- 3 Select **View Map**.

- 4 Select an area on the map.

The address of the location appears at the bottom of the screen.

- 5 Select the address.

- 6 Select **Set Location**.

Saving Locations

You can save locations so you can quickly find them and create routes to them.

Saving a Location

- 1 Find a location ([page 8](#)).

- 2 Select a location from the list.

- 3 Select .

- 4 Select  > **Save**.

- 5 If necessary, enter a name, and select **Done**.



Saving Your Current Location

- 1 From the map, select the vehicle icon.
- 2 Select **Save**.
- 3 Enter a name, and select **Done**.
- 4 Select **OK**.

Starting a Route to a Saved Location

- 1 Select **Where To? > Saved**.
- 2 If necessary, select a category, or select **All Categories**.
- 3 Select a location.
- 4 Select **Go!**.



Editing a Saved Location

- 1 Select **Where To? > Saved**.
- 2 If necessary, select a category.
- 3 Select a location.
- 4 Select .
- 5 Select  **> Edit**.
- 6 Select an option:
 - Select **Name**.
 - Select **Phone Number**.
 - To assign categories to the Favorite, select **Categories**.
 - To save a photo with the Favorite, select **Assign Photo** ([page 42](#)).
 - To change the symbol used to mark the Favorite on a map, select **Change Map Symbol**.
- 7 Edit the information.
- 8 Select **Done**.

Assigning Categories to a Saved Location

You can add custom categories to organize your saved locations.

NOTE: Categories appear in the saved locations menu after you have saved more than 12 locations.


- 1 Select **Where To?** > **Saved**.
- 2 Select a location.
- 3 Select .
- 4 Select  > **Edit** > **Categories**.
- 5 Enter one or more category names, separated by commas.

Suggested categories appear below the text bar as you type. You can select a suggested word to use the suggestion.

- 6 Select **Done**.

Deleting a Saved Location

NOTE: Deleted locations cannot be recovered.

- 1 Select **Where To?** > **Saved**.
- 2 Select  > **Delete Saved Places**.
- 3 Select the box next to the saved locations to delete, and select **Delete**.

Voice Command

About Voice Command

NOTE: Voice Command is not available for all languages and regions, and may not be available on all models.

Voice Command allows you to use your device by saying words and commands. The Voice Command menu provides voice prompts and a list of available commands.

Setting Your Wakeup Phrase

The wakeup phrase is a word or phrase you can say to activate Voice Command. The default wakeup phrase is **Voice Command**.

TIP: You can reduce the chance of accidental Voice Command activation by using a strong wakeup phrase.

1 Select **Apps > Voice Command > Customize Phrase**.

2 Enter a new wakeup phrase.

The device indicates the strength of the wakeup phrase as you enter the phrase.

3 Select **Done**.

Activating Voice Command

Say your wakeup phrase.

The Voice Command menu appears.

Voice Command Tips

- Speak in a normal voice directed at the device.
- Reduce background noise, such as voices or the radio, to increase the accuracy of the voice recognition.
- Speak commands as they appear on the screen.
- Respond to voice prompts from the device as needed.
- Increase the length of your wakeup phrase to reduce the chance of accidental Voice Command activation.
- Listen for two tones to confirm when the device enters and exits Voice Command mode.

Starting a Route Using Voice Command

You can say the names of popular, well-known locations.

- 1 Say your wakeup phrase.
- 2 Say **Find Place**.



- 3 Listen for the voice prompt, and speak the name of the location.

A list of locations appears.



- 4 Say the line number.



- 5 Say **Navigate**.

Finding an Address

- 1 Say **Voice Command**.
- 2 Say **Find Address**.
- 3 Speak the entire address.

Muting Instructions

You can disable the voice prompts for Voice Command without muting the device.

- 1 Select **Apps > Voice Command >** .
- 2 Select **Mute Instructions > Enabled**.

Disabling Voice Command

You can disable Voice Command, which prevents you from accidentally activating Voice Command while speaking.

- 1 Select **Apps > Voice Command >** .
- 2 Select **Voice Command > Disabled**.

Navigation

Starting a Route

- 1 Search for a location ([page 9](#)).
- 2 Select a location.
- 3 Select **Go!**.
- 4 If necessary, select an option.
 - Select **Drive**.
 - Select **Walk**.
 - Select **Public Transit** to calculate a route that combines public transit and walking.

NOTE: You must have cityXplorer™ maps loaded to navigate using public transit ([page 25](#)).

- 5 If necessary, select a route.

Starting a Route to a Saved Location

- 1 Select **Where To? > Saved**.
- 2 If necessary, select a category, or select **All Saved Places**.
- 3 Select a location.
- 4 Select **Go!**.

Using Multiple Route Preview

- 1 Find a location ([page 9](#)).
- 2 Select **Routes**.
- 3 Use the on-screen buttons to select a route.
- 4 Select **Go!**.

Previewing a Route

- 1 Find a location ([page 9](#)).
- 2 Select **Routes**.

Following an Automobile Route







The route is marked with a magenta line. A checkered flag marks your destination.

As you travel, the device guides you to the destination with voice prompts, arrows on the map, and directions at the top of the map. If you depart from the original route, the device recalculates the route and provides new directions.




Using the Automobile Navigation Map

While navigating in Automobile mode, you can select map features.

- 1 Select and drag the map.
Map icons appear.
- 2 Select an option:
 - To view different parts of the map, drag the screen.
 - To zoom in and out, select  or .
 - To rotate the map view, select .
 - To switch from North Up to 3-D view, select .
 - To add or remove map layers, select .
 - To center the map on your current location in pedestrian mode, select .

Adding a Point to a Route

Before you can add a stop to a route, you must be navigating a route in Automobile mode.

- 1 While navigating a route, select  to return to the main menu.
- 2 Select **Where To?**.
- 3 Search for the location ([page 8](#))
- 4 Select **Go!**.
- 5 Select **Add to Active Route**.

Taking a Detour

While navigating an automobile route, you can use detours to avoid obstacles ahead of you, such as construction zones.

NOTE: If the route you are currently navigating is the only reasonable option, your device might not calculate a detour.

While navigating an automobile route, from the map, select  > **Detour**.

Stopping the Route




While navigating a route, select .

Updating Speed Limits

NOTICE

The speed limit icon feature is for information only and does not replace the driver's responsibility to abide by all posted speed limit signs and to use safe driving judgment at all times. Garmin will not be responsible for any traffic fines or citations that you may receive for failing to follow all applicable traffic laws and signs.

An icon displaying the current speed limit may appear as you travel on major roadways.

- 1 From the map, select  > **Set Speed Limit**.
- 2 Select  and  to set the speed limit.

Using Suggested Routes

Before you can use this feature, you must save at least one location and enable the travel history feature (page 55).




Using the trafficTrends™ feature, your device predicts your destination based on your travel history, the day of the week, and the time of day. After you have driven to a saved location several times, the location may appear in the navigation bar on the map, along with the estimated time of travel, and traffic information.

Select the navigation bar to view a suggested route to the location.


About Exit Services

While you navigate a route, you can find gas, food, lodging, and rest rooms near upcoming exits.



Services are listed under tabs by category.

	Gas
	Food
	Lodging
	Restrooms

Finding Exit Services

- 1 From the map, select  > **Exit Services**.
- 2 Use the arrows to select an upcoming exit.
- 3 Select an exit service tab.
- 4 Select a point of interest.

Navigating to an Exit

- 1 From the map, select  > **Exit Services** > .
- 2 Select **Go!**.

Avoiding Road Features

- 1 Select **Settings > Navigation > Avoidances**.
- 2 Select the road features to avoid on your routes, and select **Save**.

Avoiding Transit Types

NOTE: Transit types are available when cityXplorer maps are loaded ([page 25](#)).

- 1 Select **Settings > Navigation > Public Transit**.
- 2 Select the transit type to avoid on your routes.
- 3 Select **Save**.

About Custom Avoidances

Custom avoidances allow you to avoid specific areas and sections of road. You can enable and disable custom avoidances as needed.

Avoiding an Area


- 1 Select **Settings > Navigation > Custom Avoidances**.
- 2 If necessary, select **Add New Custom Avoidance**.
- 3 Select **Add Avoid Area**.
- 4 Select the upper-left corner of the area to avoid, and select **Next**.
- 5 Select the lower-right corner of the area to avoid, and select **Next**.
The selected area is shaded on the map.
- 6 Select **Done**.

Avoiding a Road



- 1 Select **Settings** > **Navigation** > **Custom Avoidances**.
- 2 Select **Add Avoid Road**.
- 3 Select the starting point of the section of road to avoid, and select **Next**.
- 4 Select the ending point of the road section, and select **Next**.
- 5 Select **Done**.

Disabling a Custom Avoidance

You can disable a custom avoidance without deleting it.

- 1 Select **Settings** > **Navigation** > **Custom Avoidances**.
- 2 Select an avoidance.
- 3 Select  > **Disable**.

Deleting Custom Avoidances


- 1 Select **Settings** > **Navigation** > **Custom Avoidances**.
- 2 Select an option:
 - To delete all custom avoidances, select .
 - To delete one custom avoidance, select the avoidance, and select  > **Delete**.

Enabling Advanced Detours

Select **Settings** > **Navigation** > **Advanced Detours**.

Using Advanced Detours

Use this feature to detour around a specific section of your trip while you navigate.

- 1 Select a destination, and select **Go!** ([page 8](#)).
- 2 From the map, select  > **Detour**

- 3 Select a detour option:
 - **Next .5mi on Route.**
 - **Next 2mi on Route.**
 - **Next 5mi on Route.**
 - **Detour by Road(s) on Route.**
- 4 If necessary, select a road to detour around.

Navigating Off Road

If you are not following roadways as you navigate, you can use Off Road mode.

- 1 Select **Settings > Navigation.**
- 2 Select **Calculation Mode > Off Road > Save.**

The route will be calculated as a straight line to the location.

Pedestrian Routes

Following a Pedestrian Route

In Pedestrian mode, your route is displayed on a two-dimensional map.


If you have cityXplorer maps installed, the device calculates a route that uses a combination of public transit options, such as riding a bus or subway, and walking.

NOTE: cityXplorer maps are not included with the device. See <http://my.garmin.com> to purchase cityXplorer maps.

NOTE: You can change the types of public transit and limit the distance spent walking during a pedestrian route ([page 51](#)).


Using the Pedestrian Navigation Map

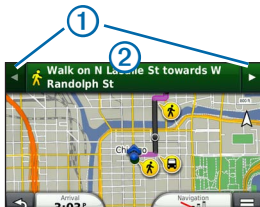

See [page 20](#) for more map functions.



- Select ① to switch between sections of the route.
- Select ② to view the route itinerary.

About Map Icons

- When you are navigating in Pedestrian mode,  indicates your approximate position and your direction of travel on the map.

- The circle around  indicates the accuracy of your position on the map. A smaller circle means the displayed position is more accurate.
- The yellow icons indicate the transportation method used in each section of the route. For example, when you see , board a bus at that point in the route.
- The black dots on the map show public transit stops along your route.

Enabling Transit Types

NOTE: Transit types are available when cityXplorer maps are loaded ([page 25](#)).


- 1 Select **Settings > Navigation > Public Transit**.
- 2 Select the transit type to include in your routes, and select **Save**.

Map Pages

Customizing the Map

Customizing the Map Layers

You can customize which data appear on the map, such as icons for points of interest and road conditions.

- 1 From the map, select .
- 2 Select **Map Layers**.
- 3 Select which layers you want to include on the map, and select **Save**.

Viewing the Trip Log

Your device keeps a trip log, which is a record of the path you have traveled.

- 1 Select **Settings > Map and Vehicle > Map Layers**.
- 2 Select the **Trip Log** check box.

Changing the Map Data Field


- 1 From the map, select the data field in the lower left-hand corner.
- 2 Select a type of data to display.
- 3 Select **Save**.

Changing the Map Perspective

- 1 Select **Settings > Map and Vehicle > Driving Map View**.
- 2 Select an option:
 - Select **Track Up** to display the map in two dimensions (2-D), with your direction of travel at the top.
 - Select **North Up** to display the map in 2-D with North at the top.
 - Select **3-D** to display the map in three dimensions.

Customizing Map Buttons

You can include up to three icons on the right side of the main map.

- 1 Select **Settings > Map and Vehicle > Map Buttons**.
- 2 Select an icon, and select **OK**.
- 3 Select .
- 4 Select a different icon.

Removing Buttons from the Map

You can remove all buttons from the right side of the map.

- 1 Select **Settings > Map and Vehicle > Map Buttons**.
- 2 Select an icon, and touch **OK**.
- 3 Select **Save**.

Changing the Map Dashboard


- 1 Select **Settings > Map and Vehicle > Dashboards**.
- 2 Use the arrows to select a dashboard.
- 3 Select **Save**.

Viewing Turns

Viewing a List of Turns

When you are navigating a route, you can view all of the turns and maneuvers for your entire route and the distance between turns.


- 1 Select the text bar on the top of the map.

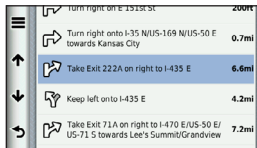

- 2 Select a turn.


The details for the turn appear. If available, an image of the junction appears for junction on major roadways.


Viewing the Entire Route on the Map

- 1 While navigating an automobile route, select the navigation bar at the top of the map.
- 2 Select  > Map.

Viewing the Next Turn


While navigating an automobile route, a preview of the next turn, lane change, or other maneuver appears in the upper-left corner of the map. The preview includes the distance to the turn or maneuver and the lane in which you should be traveling, if available.


From the map, select  to view the next turn on the map.

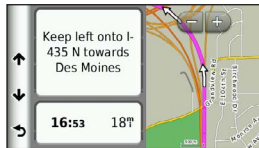

Viewing Junctions

While navigating an automobile route, you can view the junctions on major roadways. When you approach a junction in a route, the image of that junction appears briefly, if available.

From the map, select  to view the junction, if available.

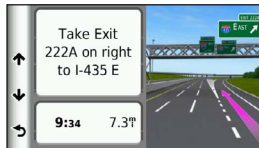

Viewing Traffic Alerts

While you navigate an automobile route, a traffic alert may appear.


Select the alert to view more information.

Viewing Trip Information


The trip information page displays your present speed and provides statistics about your trip.

TIP: If you make frequent stops, leave the device turned on so it can accurately measure elapsed time during the trip.

From the map, select  > **Trip Computer**.

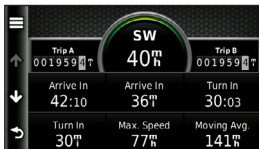

Resetting Trip Information


- 1 From the map, select  > **Trip Computer**.
- 2 Select an option:
 - When not navigating a route, select **Reset All** to reset every data field, except the speedometer, on the page.
 - Select **Reset Trip Data** to reset the information on the trip computer.
 - Select **Reset Max. Speed** to reset the maximum speed.
 - Select **Reset Trip B** to reset the odometer.

Viewing Current Location Information

You can use the Where Am I? page to view information about your current location. This feature is helpful if you need to tell emergency personnel your location.


From the map, select  > **Where Am I?**.

Finding Nearby Services

- 1 From the map, select  > **Where Am I?**
- 2 Select **Hospitals, Police Stations, or Fuel** to view the nearest locations in that category.

Getting Directions to Your Current Location

If you need to tell another person how to get to your current location, your device can give you a list of directions.

Select **Apps > Where Am I? >  > Directions to Me.**

Hands-Free Phone Calls

About Hands-Free Calling

Using Bluetooth® wireless technology, your device can connect to your mobile phone to become a hands-free device. To determine whether your mobile phone with Bluetooth technology is compatible with your device, go to www.garmin.com/bluetooth.

Your phone may not support all of the hands-free phone features your device provides.

Enabling Bluetooth Wireless Technology

- 1 Select **Settings > Bluetooth.**
- 2 Select **Bluetooth.**

Pairing Your Phone

Before you can use hands-free calling, you must pair your device with a compatible mobile phone. Pairing your phone with your device allows your phone and device to recognize each other and connect quickly.

- 1 Place your phone and your device within 33 ft. (10 m) of each other.
- 2 On your device, enable Bluetooth wireless technology ([page 31](#)).
- 3 Select an option:
 - Select **Add Phone**.
 - If you have already paired a different phone, select **Phone** > **+**.
- 4 On your phone, enable Bluetooth wireless technology.
- 5 On your device, select **OK**.
A list of nearby Bluetooth devices appears.

- 6 Select your phone from the list, and select **OK**.
- 7 If necessary, on your phone, confirm that the device is allowed to connect.
- 8 If necessary, enter the device Bluetooth PIN (**1234**) into your phone.

Disconnecting Your Phone

- 1 Select **Settings** > **Bluetooth**.
- 2 Select **Phone** > **None** > **Save**.

Your phone is disconnected from your device but remains paired with your device.

Tips After Pairing the Devices

- After the initial pairing, the two devices can connect automatically each time you turn them on.
- When your phone is connected to your device, you are ready to make phone calls.

- When you turn on the device, it tries to connect to the last phone to which it was connected.
- You might have to set your mobile phone to connect to the device automatically when it is turned on.

Receiving a Call

When you receive a call, select an option:

- Select **Answer**.
- Select **Ignore** to ignore the call.

Placing a Call

Dialing a Number

- 1 Select **Phone > Dial**.
- 2 Enter the number.
- 3 Select **Dial**.

Calling a Contact in Your Phone Book

Your phone book is loaded from your phone to the device each time your phone and the device connect. It may take a few minutes for the phone book to be available. Some phones do not support this feature.

1. Select **Phone > Phone Book**.
2. Select a contact.
3. Select **Call**.

Calling a Point of Interest

- 1 Select **Phone > Points of Interest**.
- 2 Select a point of interest ([page 8](#)).
- 3 Select **Call**.

Using the Call History

Your call history is loaded from your phone to the device each time your phone and the device connect. It may take a few minutes for the call history to be available. Some phones do not support this feature.

1 Select **Phone** > **Call History**.

2 Select a category.

A list of calls appears, with the most recent calls at the top.

3 Select a call.

Using In-Call Options

1 While on a call, select .

2 Select an option:

- To transfer audio to your phone, select **Handset**.

TIP: You can use this feature if you want to turn off your device and remain on the call, or if you need privacy.

- To display a keypad, select **Keypad**.

TIP: You can use this feature to use automated systems, such as voice mail.

- To mute the microphone, select **Mute**.
- To hang up, select **End Call**.

Saving a Home Phone Number

TIP: After you save a home number, you can edit the home number by editing “Home” in Saved ([page 14](#)).

Select **Phone** >  > **Set Home Number**, enter your phone number, and select **Done**.

Calling Home

Before you can call home using the Call Home button, you must enter a phone number for your home location.

Select **Phone > Call Home**.

Using the Apps

Using Help

Select **Apps > Help** to view information about using the device.

Searching Help Topics

Select **Apps > Help > **.

About ecoRoute

The ecoRoute™ feature calculates the fuel economy and the fuel price of navigating to a

destination, and offers tools for improving fuel efficiency.

The data provided by the ecoRoute feature is an estimate only. The data is not actually read from the vehicle, unless you are using the ecoRoute HD accessory. To receive more-accurate fuel reports for your specific vehicle and driving habits, calibrate the fuel economy ([page 36](#)).

In some areas, an ecoRoute HD accessory is required to use ecoRoute features.

ecoRoute HD Accessory

When connected to the ecoRoute HD accessory, your device can receive real-time vehicle information, such as error messages, RPM, and battery voltage. Your device includes data read from the vehicle by the ecoRoute HD accessory when calculating ecoRoute data.

Go to www.garmin.com/ecoroute for compatibility and purchasing information.

Setting up the Vehicle Profile

The first time you use the ecoRoute features, you must enter vehicle information.

- 1 Select **Apps > ecoRoute™**.
- 2 Enter fuel and mileage information.

Changing the Fuel Price

- 1 Select **Apps > ecoRoute™ > At the Pump**.
- 2 Enter the current price of fuel, and select **Next**.
- 3 Select **Yes**.

Calibrating the Fuel Economy

You can calibrate the fuel economy to receive more-accurate fuel reports for your specific vehicle and driving habits. You should calibrate when you fill up your fuel tank.



- 1 Select **Apps > ecoRoute™ > At the Pump**.
- 2 Enter the current fuel price.

- 3 Enter the amount of fuel the vehicle has used since the last time the fuel tank was filled.
- 4 Enter the distance you have travelled since the last time the fuel tank was filled.
- 5 Select **Next**.
The device calculates the average vehicle fuel economy.
- 6 Select **Save**.

About the ecoChallenge

ecoChallenge helps you maximize the vehicle fuel economy by scoring your driving habits. The higher your ecoChallenge scores, the more fuel you have saved. The ecoChallenge collects data and calculates a score whenever your device is moving and in Automobile transportation mode.

Viewing ecoChallenge Scores

- View your current score in the  ecoChallenge icon on the map.
- Select  to view detailed scores.

About the ecoChallenge Score

- **Current**—displays the score for your current driving activity.
- **Overall**—displays an average of the speed, acceleration, and braking score.
- **Speed**—displays your score for driving your vehicle at the optimal speed for conserving fuel (45–60 mph for most vehicles).
- **Acceleration**—displays your score for smooth and gradual acceleration. You lose points for rapid acceleration.
- **Braking**—displays your score for smooth and gradual braking. You lose points for hard braking.

Removing the ecoChallenge Score From the Map

Select  >  > **Settings** > **Hide** > **Save**.

Resetting the ecoChallenge Scores

Select  >  > **Reset**.

Viewing Fuel Economy Information

You can view your fuel consumption, your total fuel cost, and your average fuel economy.

- 1 Select **Apps** > **ecoRoute** > **Fuel Economy**.
- 2 Select a section of the graph to zoom in.

Mileage Reports

Mileage reports provide the distance, the time, the average fuel economy, and the fuel cost of navigating to a destination.

A mileage report is created for every route that you drive. If you stop a route on the device, a mileage report is created for the distance you traveled.

Viewing a Mileage Report

You can view saved mileage reports on the device.

TIP: You can access mileage reports in the Reports folder on the device drive/volume ([page 49](#)).

- 1 Select **Apps > ecoRoute™ > Mileage Report**.
- 2 Select a report.

Resetting ecoRoute Information

- 1 Select **Apps > ecoRoute™ > Vehicle Profile**.
- 2 Select  **> Reset**.

About Audiobooks








The device can play audiobooks from Audible.com. This feature requires a subscription to Audible.com. Go to www.audible.com/garmin to activate a free 30-day trial subscription.

Loading Audiobooks onto Your Device

Before you can load audiobooks onto your device, you must subscribe to Audible.com. Go to www.audible.com/garmin for more information.


- 1 Connect your device to your computer ([page 2](#)).
- 2 On your computer, log in your Audible.com account.
- 3 Follow the instructions from Audible.com to load audiobooks onto your device.

Playing an Audiobook


- 1 Select **Apps > Audible**.
- 2 Select **Browse**.
- 3 Select an **Titles, Authors, Narrators, or Bookmarks**.
- 4 Select a book.
- 5 Select an option to control playback.
 - To add a bookmark, select .
 - To pause playback, select .
 - To resume playback, select .
 - To move quickly forward or backward in the book, use the slider bar at the top of the page.
 - To go to the next chapter, select .
 - To go to the previous chapter, select .
 - To fast forward, hold .
 - To rewind, hold .

Adding a Bookmark

When you play an audiobook, the player automatically resumes the audiobook from the point where you last stopped. You can add a bookmark to mark a certain spot in the audiobook.



While playing an audiobook, select  > **Add Bookmark**.

Resuming Playback from a Bookmark

- 1 While playing an audiobook, select .
- 2 Select a bookmark.



Renaming a Bookmark

By default, the device names a bookmark using the time stamp of the bookmark. You can rename a bookmark.

- 1 While playing an audiobook, select  >  > **Rename Bookmarks**.
- 2 Select a bookmark.



3 Enter a name, and select **Done**.

Deleting a Bookmark

- 1 While playing an audiobook, select  >  > **Delete Bookmarks**.
- 2 Select a bookmark.

Planning a Trip

You can use the trip planner to create and save a trip with multiple destinations.

- 1 Select **Apps > Trip Planner**.
- 2 Select .
- 3 Select **Select Start Location**.
- 4 Search for a location ([page 8](#)).
- 5 Select **Select**.
- 6 To add additional locations, select .
- 7 Select **Next**.
- 8 Enter a name, and select **Done**.


Editing a Trip Itinerary

- 1 Select **Apps > Trip Planner**.
- 2 Select a saved trip.
- 3 Select an option:
 - Select a location in the trip to change the arrival or departure time.
 - Select a location in the trip, and then select **Duration** to record how long you will stay at a location.
 - Select a travel time to change the transportation mode or route preference for that portion of the trip.
 - Select **Map** to view the trip on the map.

Navigating to a Saved Trip

- 1 Select **Apps > Trip Planner**.
- 2 Select a saved trip.
- 3 Select **Go!**.
- 4 If prompted, select a route ([page 19](#)).








Editing a Saved Trip

- 1 Select **Apps > Trip Planner**.
- 2 Select a saved trip.
- 3 Select .
- 4 Select an option:
 - Select **Rename Trip**.
 - Select **Edit Destinations** to add and delete locations, or to change the order of locations.
 - Select **Delete Trip**.
 - Select **Optimize Order** to arrange the stops on your trip in the most-efficient order.

Using the Media Player

The media player may not be available on all models.

The device can play mp3 files. Some models can play mp4 files. See [page 49](#) to add files to your device.

- 1 Select **Apps > Media Player**.
- 2 Select an option:
 - To play a song, select .
 - To adjust the volume, select .
 - To toggle between songs, select  and .
 - To shuffle songs, select .
 - To repeat the playlist, select .
 - To repeat a song, select .

Browsing Music Files

You can browse to find other songs you have loaded on the device.

- 1 Select **Apps > Media Player**.
- 2 Select **Browse**.
- 3 Select an option.

Viewing Pictures

View pictures that you have stored in the device or on a memory card. See [page 48](#) for more information about loading pictures on the device.


- 1 Select **Apps > Picture Viewer**.
- 2 Use the arrows to scroll through the images.
- 3 Select a picture.

Viewing a Slideshow

- 1 Select **Apps > Picture Viewer**.
- 2 Select .

While a slideshow is playing, you can select the screen to stop the slideshow.


Setting a Picture as Wallpaper

- 1 Select **Apps > Picture Viewer**.
- 2 Select a picture.
- 3 Select  > **Set as Wallpaper**.

- 4 Use the on-screen buttons to adjust the wallpaper.

- 5 Select **Save**.

Deleting Pictures

- 1 Select **Apps > Picture Viewer**.
- 2 Select a picture.
- 3 Select  > **Delete > Yes**.

Viewing Previous Routes and Destinations

Before you can use this feature, you must enable the travel history feature ([page 54](#)).

You can view your previous routes and places you have stopped on the map.

Select **Apps > Where I've Been**.

Using the World Clock

- 1 Select **Apps** > **World Clock**.
- 2 If necessary, select a city, enter a city name, and select **Done**.

Viewing the World Map

Select **Apps** > **World Clock** > .

Nighttime hours appear in the shaded area of the map.

Setting an Alarm


- 1 Select **Apps** > **Alarm Clock**.
- 2 Set a time.
- 3 Select the **Alarm On** check box.

Finding Your Last Parking Spot

When you remove your device from the vehicle mount while the device is on, your current location is saved as a parking spot.

Select **Apps** > **Last Spot**.

Saving a Parking Spot

- 1 Select **Apps** > **Last Spot**.
- 2 Select **Parking** or **Last Spot**.
- 3 Select  > **Save**.
- 4 If necessary, enter a name.

Using the Calculator

Select **Apps** > **Calculator**.

Converting Units

- 1 Select **Apps** > **Unit Converter**.
- 2 If necessary, select the button next to **Convert**, select a measurement category, and select **Save**.
- 3 If necessary, select a unit button, select a unit of measurement, and select **Save**.

- 4 Select the field below the unit you want to convert.
- 5 Enter the number, and select **Done**.

Setting Currency Conversion Rates Manually

You can update the currency conversion rates manually so that you are always using the most-current rates.

- 1 Select **Apps > Unit Converter**.
- 2 Select the button next to **Convert**.
- 3 Select **Currency**, then select **Save**.
- 4 If necessary, select a currency button, select a different currency, and select **Save**.
- 5 Select the button at the bottom of the screen that displays the currency conversion rate.
- 6 Select the box next to a currency.
- 7 Enter a value, and select **Done**.
- 8 Select **OK**.


Using the Language Guide

Use the Language Guide to look up and translate words or phrases.



Select **Apps > Language Guide**.

Selecting Languages in a Language Guide

You can select the languages you want to translate when translating words and phrases.

- 1 Select **Apps > Language Guide > Words and Phrases**.
- 2 Select  **> Language**.
- 3 Select **From**, select the language to translate from, and select **Save**.
- 4 Select **To**, select the language to translate to, and select **Save**.

Translating Words and Phrases

- 1 Select **Apps** > **Language Guide** > **Words and Phrases**.
- 2 Select a category and subcategories.
- 3 If necessary, select , enter a keyword, and select **Done**.
- 4 Select a word or a phrase.
- 5 Select  to listen to the translation.

Using the Bilingual Dictionary

- 1 Select **Apps** > **Language Guide** > **Bilingual Dictionaries**.
- 2 Select a dictionary.
- 3 If necessary, select , enter a word, and select **Done**.
- 4 Select a word.
- 5 Select  to listen to the translation.

Traffic

NOTICE

Garmin is not responsible for the accuracy or timeliness of the traffic information.

Traffic information may not be available in all areas or countries.

A traffic receiver is included in some packages. It is built into the vehicle power cable. The traffic receiver and device must be powered and in data range of a station transmitting traffic data to receive traffic information. You do not need to activate the subscription included with your traffic receiver.

For information about traffic receivers and coverage areas, go to www.garmin.com/traffic.

Enabling Traffic


- 1 Select **Settings** > **Traffic**.
- 2 Select **Live Traffic**.

Traffic Data

- 1 Connect the traffic receiver to an external power source.
- 2 Connect the traffic receiver to the device.

NOTE: Heated (metallized) windshields could degrade the performance of the traffic receiver.

Traffic Receiver

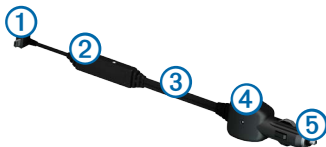

①	Mini-USB connector
②	External antenna connector
③	Internal antenna
④	Power LED
⑤	Vehicle power adapter


About the Traffic Icon

When you are receiving traffic information, a traffic icon appears on the map. The traffic icon changes color to indicate the severity of traffic conditions.

Color	Severity	Meaning
Green	Low	Traffic is flowing freely.
Yellow	Medium	Traffic is moving but there is a delay. There is moderate traffic congestion.
Red	High	Traffic is not moving or moving slowly. There is a severe delay.


Traffic on Your Route

When calculating your route, the device examines the current traffic and automatically optimizes the route for the shortest time. If a severe traffic delay occurs on your route while you are navigating, your device automatically recalculates the route.

The traffic icon  changes color to indicate the severity of traffic conditions on your route or on the road you are currently traveling.

Your device may route you through a traffic delay if a better alternative route does not exist. The delay time is added into your estimated time of arrival automatically.



Viewing Traffic on Your Route

- 1 While navigating a route, select .
- 2 Select **Traffic on Route**.


A list of traffic events appears, organized by their location on the route.

- 3 Select an event.

Manually Avoiding Traffic on Your Route

- 1 From the map, select .
- 2 Select **Traffic On Route**.
- 3 If necessary, use the arrows to view other traffic delays on your route.
- 4 Select  > **Avoid**.

Taking an Alternate Route

- 1 While navigating an automobile route, select .
- 2 Select **Alternate Route**.
- 3 Select a route.



Viewing Traffic on the Map

The traffic map shows color-coded traffic flow and delays on nearby roads.


- 1 From the map, select .
- 2 Select **Traffic Conditions**.

Traffic in Your Area

Searching for Traffic Delays


- 1 From the map page, select .
- 2 Select **Traffic Conditions** > .
- 3 Select an item in the list to view delays on the road.
- 4 If there is more than one delay, use the arrows to view additional delays.

Viewing a Traffic Incident on the Map

- 1 From the map, select .
- 2 Select **Traffic Conditions**.
- 3 Select a traffic icon.

Understanding Traffic Data

The traffic legend explains the icons and colors used on the traffic map.

- 1 From the map, select .
- 2 Select **Traffic Legend**.

Data Management

You can store files, such as JPEG image files, on your device. The device has a memory card slot for additional data storage.

NOTE: The device is not compatible with Windows® 95, 98, Me, Windows NT®, and Mac® OS 10.3 and earlier.

File Types

The device supports the following file types:

- JPEG and JPG image files ([page 42](#))
- Maps and GPX waypoint files from MapSource® ([page 59](#))
- GPI custom POI files from Garmin POI Loader ([page 60](#))

About Memory Cards

You can purchase memory cards from an electronics supplier, or purchase pre-loaded Garmin mapping software (www.garmin.com/trip_planning). In addition to map and data storage, the memory card can be used to store files such as maps, images, geocaches, routes, waypoints, and custom POIs.

Installing a Memory Card

The device supports microSD™ and microSDHC memory or data cards.

- 1 Insert a memory card into the slot on the device.
- 2 Press it in until it clicks.

Transferring Files from Your Computer

- 1 Connect the device to your computer ([page 2](#)).



Your device and memory card appear as removable drives in My Computer in Windows and as mounted volumes on Mac computers.

NOTE: Some computers with multiple network drives cannot display nüvi drives. See your operating system Help file to learn how to map the drives.

- 2 On your computer, open the file browser.
- 3 Select the file.
- 4 Select **Edit > Copy**.
- 5 Open the **Garmin** or memory card drive or volume.
- 6 Select **Edit > Paste**.

The file appears in the list of files in the device memory or on the memory card.

Disconnecting the USB Cable

- 1 Complete an action:
 - For Windows computers, click the eject icon  in your system tray.
 - For Mac computers, drag the volume icon to the **Trash** .
- 2 Disconnect the cable from your computer.

Deleting Files

NOTICE

If you do not know the purpose of a file, do not delete it. Your device memory contains important system files that should not be deleted.

- 1 Open the **Garmin** drive or volume.
- 2 If necessary, open a folder or volume.
- 3 Select a file.
- 4 Press the **Delete** key on your keyboard.

Customizing the Device

- 1 Select **Settings**.
- 2 Select a setting category.
- 3 Select the setting to change it.

Map and Vehicle Settings

Select **Settings** > **Map & Vehicle**.

- **Vehicle**—changes the icon to represent your position on the map. Go to www.garmin.com for more icons.
- **Driving Map View**—sets the perspective on the map.
- **Pedestrian Map View**—sets the perspective on the map.
- **Map Detail**—sets the level of detail on the map. More detail may cause the map to draw slower.
- **Map Theme**—changes the color of the map data.

- **Map Tools**—sets which icons are included on the map. Up to three icons can be included on the map.
- **Map Layers**—sets the data that appears on the map ([page 27](#)).
- **Dashboards**—sets the map dashboard layout.
- **myMaps**—sets which installed maps the device uses.
- **Avoidances**—sets road features to avoid on a route.
- **Custom Avoidances**—allows you to avoid specific roads or areas.
- **Advanced Detours**—sets the length of a detour.
- **Limit Walking**—controls the maximum walking distance included in a pedestrian route.
- **Public Transit**—enables or disables transit types.
- **Safe Mode**—disables all functions that require significant operator attention and could become a distraction while driving.
- **GPS Simulator**—stops the device from receiving a GPS signal, and saves battery power.

Enabling Maps

TIP: To purchase additional map products, go to www.garmin.com/maps.

- 1 Select **Settings > Map and Vehicle > myMaps**.
- 2 Select a map.

Navigation Settings

Select **Settings > Navigation**.

- **Calculation Mode**—sets route preference.

Route Preferences

Select **Settings > Navigation > Calculation Mode**.

The route calculation is based on road speeds and vehicle acceleration data for a given route.

- **Faster Time**—calculates routes that are faster to drive but can be longer in distance.
- **Shorter Distance**—calculates routes that are shorter in distance but can take more time to drive.
- **Less Fuel**—calculates routes that could use less fuel than other routes.
- **Off Road**—calculates a direct line from your location to your destination.

Display Settings

Select **Settings > Display**.

- **Color Mode**—sets a light background (**Day**), a dark background (**Night**), or automatically switches between the two based on the sunrise time and the sunset time for your current location (**Auto**).
- **Brightness**—changes the brightness of the screen. Decreasing the brightness can save battery power.
- **Display Timeout**—sets the amount of idle time before your device enters sleep mode.
- **Screenshot**—allows you to take a picture of the device screen. Screenshots are saved in the **Screenshot** folder of the device storage.

Bluetooth Settings

Select **Settings** > **Bluetooth**.

- **Bluetooth**—enables the Bluetooth component.
- **Add Phone** or **Phone**—manages connections between your device and mobile phones with Bluetooth wireless technology.
- **Friendly Name**—allows you to enter a friendly name that identifies your devices with Bluetooth technology.

Managing the Bluetooth Device List

You can add, disconnect, or delete phones that your device detects while Bluetooth is enabled.

- 1 Select **Settings** > **Bluetooth** > **Phone**.
- 2 Select an option:
 - Select a phone for your device to connect with.
 - Select **+** to add a phone to the menu.

- Select **X** to delete a phone from the device memory.
- Select **None** to drop your current connection

Disabling Bluetooth

- 1 Select **Settings** > **Bluetooth**.
- 2 Select **Bluetooth**.

Traffic Settings

Select **Settings** > **Traffic**.

- **Live Traffic**—enables traffic
- **Subscriptions**—lists current traffic subscriptions.
- **trafficTrends™**

Enabling Traffic

The traffic receiver is included in some device packages.

Select **Settings** > **Traffic** > **Live Traffic**.

About Traffic Subscriptions

You can purchase additional subscriptions or a renewal if your subscription expires. Go to www.garmin.com/traffic.

Viewing Traffic Subscriptions

Select **Settings** > **Traffic** > **Subscriptions**.

trafficTrends

When the trafficTrends feature is enabled, your device records historic traffic data and uses that data to calculate more-efficient routes. This information is sent to Garmin when you connect your device to myGarmin™ using your computer.

NOTE: Different routes may be calculated based on traffic trends for the day of the week or the time of day.

Disabling trafficTrends

To prevent your device from recording or sharing traffic data, you must disable trafficTrends.

Select **Settings** > **Traffic** > **trafficTrends**.

Units and Time Settings

Select **Settings** > **Units and Time**.

- **Current Time**—sets the device time.
- **Time Format**—allows you to select a 12-hour, 24-hour, or UTC display time.
- **Units**—sets the unit of measure used for distances.

Language and Keyboard Settings

Select **Settings** > **Language**.

- **Voice Language**—sets the language for voice prompts.
- **Text Language**—sets all on-screen text to the selected language.

NOTE: Changing the text language does not change the language of user-entered data or map data, such as street names.

- **Keyboard Language**—sets the language for your keyboard.
- **Keyboard Layout**—sets the keyboard layout.

Proximity Alerts Settings

Select **Settings** > **Proximity Alerts**.

- **Audio**—sets the tone of an alert.
- **Alerts**—alerts you when you approach custom safety cameras.

About Device and Privacy

Select **Settings** > **Device**.

- **About**—displays the software version number, the unit ID number, and information on several other software features.


- **EULAs**—displays the end-user license agreements that apply to your choice.

NOTE: You need this information when you update the system software or purchase additional map data ([page 60](#)).

- **Travel History**—allows the device to record information for the trafficTrends ([page 22](#)), Where I've Been ([page 42](#)), and Trip Log ([page 27](#)) features.
- **Clear Travel History**

Restoring Settings

You can restore a category of settings or all settings to the factory defaults.

- 1 Select **Settings**.
- 2 If necessary, select a settings category.
- 3 Select  > **Restore**

Appendix

Power Cables

Your device can be powered three ways.

- Vehicle power cable
- USB cable
- AC adapter (optional accessory)

Caring for Your Device

NOTICE

Avoid dropping your device and operating it in high-shock and high-vibration environments.

Do not expose the device to water.

Contact with water can cause this device to malfunction.

Do not store the device where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.

Never use a hard or sharp object to operate the touchscreen, or damage may result.

Cleaning the Outer Casing

NOTICE

Avoid chemical cleaners and solvents that can damage plastic components.

- 1 Clean the outer casing of the device (not the touchscreen) using a cloth dampened with a mild detergent solution.
- 2 Wipe the device dry.

Cleaning the Touchscreen

- 1 Use a soft, clean, lint-free cloth.
- 2 If necessary, use water, isopropyl alcohol, or eyeglass lens cleaner.
- 3 Apply the liquid to the cloth.
- 4 Gently wipe the screen with the cloth.

Avoiding Theft

- Remove the device and mount from sight when not in use.
- Remove the residue left on the windshield by the suction cup.
- Do not keep your unit in the glove compartment.
- Register your device at <http://my.garmin.com>.

Erasing User Data

- 1 Turn the device on.
- 2 Hold your finger on the lower-right corner of the device screen.
- 3 Keep your finger pressed until the pop-up window appears.
- 4 Select **Yes** to clear all user data.

All original settings are restored. Any items that you have saved are erased.

Extending the Battery Life

- Keep your device away from extreme temperatures.
- Put the device in sleep mode ([page 4](#)).
- Decrease the screen brightness ([page 4](#)).
- Do not leave your device in direct sunlight.
- Decrease the volume ([page 4](#)).
- Disable Bluetooth ([page 53](#)).
- Shorten the display timeout time ([page 52](#)).

Changing the Fuse in the Vehicle Power Cable

NOTICE

When replacing the fuse, do not lose any of the small pieces and make sure they are put back in the proper position. The vehicle power cable does not work unless it is assembled correctly.

If your device does not charge in your vehicle, you may need to replace the fuse located at the tip of the vehicle adapter.

- 1 Unscrew the end piece ①.

TIP: You may need to use a coin to remove the end piece.

- 2 Remove the end piece, the silver tip ②, and the fuse (glass and silver cylinder) ③.

- 3 Install an 2 A fast-blow fuse.

- 4 Place the silver tip in the end piece.



- 5 Screw the end piece back into the vehicle power cable.

Mounting on Your Dashboard

NOTICE

The permanent mounting adhesive is extremely difficult to remove after it is installed.

Use the enclosed mounting disk to mount your device to the dashboard and comply with certain state regulations.

- 1 Clean and dry the dashboard where you are placing the disk.
- 2 Remove the backing from the adhesive on the bottom of the disk.
- 3 Place the disk on the dashboard.
- 4 Remove the clear plastic cover from the top of the disk.
- 5 Place the suction cup mount on top of the disk.

- 6 Flip the lever down (toward the disk).

Removing the Device, Cradle, and Mount

Removing the Device from the Cradle

- 1 Press up on the tab on the top of the cradle.
- 2 Tilt the device forward.

Removing the Cradle from the Mount

- 1 Turn the cradle to the right or left.
- 2 Apply pressure until the socket on the cradle releases the ball on the mount.

Removing the Suction Cup Mount from the Windshield

- 1 Flip the lever on the suction cup mount toward you.
- 2 Pull the tab on the suction cup toward you.

Updating Maps

You can update the maps on your device. For more information, go to www.garmin.com/mapupdates, and select **Map Update User Guide**.

About nüMaps Lifetime

Some models include subscriptions nüMaps Lifetime, which provides quarterly map updates for the life of your device. For terms and conditions, see www.garmin.com/us/maps/numaps_lifetime.

LM	This model includes a nüMaps Lifetime subscription.
LMT	This model includes a lifetime traffic subscription, nüMaps Lifetime subscription, and a traffic receiver.

Purchasing Additional Maps

- 1 Go to your device product page on the Garmin Web site (www.garmin.com).
- 2 Click the **Maps** tab.
- 3 Follow the on-screen instructions.

Safety Cameras

CAUTION

Garmin is not responsible for the accuracy of, or the consequences of using, a custom POI or safety camera database.

Safety camera information is available in some locations. Check <http://my.garmin.com> for availability. For these locations, the nüvi includes the locations of hundreds of safety cameras. Your nüvi alerts you when you are approaching a safety camera and can warn you if you are driving too fast. The data is updated at least weekly, so you always have access to the most up-to-date information.

You can purchase a new region or extend an existing subscription at any time. Each region that you purchase has an expiration date.

Custom Points of Interest

Custom POIs are customized points on the map. They can contain alerts that let you know if you are near a designated point or if you are traveling faster than a specified speed.

Installing a POI Loader

You can create or download custom POI lists and install them on your device using POI Loader software.

- 1 Go to www.garmin.com/extras.
- 2 Click **Services > POI Loader**.
- 3 Install the POI Loader onto your computer.

Using the POI Loader Help Files

For more information on the POI Loader, refer to the Help file.

With the POI Loader open, click **Help**.

Finding Extras

- 1 Select **Where To? > Categories > Custom POIs**.
- 2 Select a category.

Purchasing Accessories

Go to <http://buy.garmin.com>.

Troubleshooting

Problem	Solution
My device is not acquiring satellite signals	<ul style="list-style-type: none">• Verify the GPS simulator is turned off (page 51).• From the main menu, select Tools > Settings > System > GPS Simulator > Off.• Take your device out of parking garages and away from tall buildings and trees.• Remain stationary for several minutes.
The suction cup will not stay on my windshield.	<ul style="list-style-type: none">• Clean the suction cup and windshield with rubbing alcohol.• Dry with a clean, dry cloth.• Mount the suction cup (page 1).
The device does not charge in my vehicle.	<ul style="list-style-type: none">• Check the fuse in the vehicle power cable (page 58).• Verify the vehicle is turned on and is supplying power to the power outlet.• Your device can only charge between 32°F and 113°F (between 0°C and 45°C). If the device is placed in direct sunlight or in a hot environment, it cannot charge.
My battery does not stay charged for very long.	To maximize the time between charges, turn down the backlight (page 52).
My battery gauge does not seem accurate.	Allow the unit to fully discharge, and fully charge it (without interrupting the charge cycle).

<p>How do I know my device is in USB mass storage mode?</p>	<p>When your device is in USB mass storage mode, a picture of a device connected to a computer is shown on the device screen. Also, you should see two new removable disk drives listed in My Computer.</p>
<p>The device is connected to the computer, but it will not go into mass storage mode.</p>	<ol style="list-style-type: none"> 1 Disconnect the USB cable from your computer. 2 Turn off the device. 3 Plug the USB cable into a USB port on your computer and into your device. The device automatically turns on and goes into USB mass storage mode. 4 Verify your device is connected to a USB port and not a USB hub.
<p>I cannot see any new removable drives in my list of drives.</p>	<p>If you have several network drives mapped on your computer, Windows can have trouble assigning drive letters to your device drives. Refer to your operating system Help file to learn how to map or assign drive letters.</p>
<p>My phone will not connect to the device.</p>	<ul style="list-style-type: none"> • From the main menu, select Tools > Settings > Bluetooth. The Bluetooth field must be set to Enabled. • Turn on your phone and bring it within 33 feet (10m) of the device. • Go to www.garmin.com/bluetooth for more help.

Index

Symbols

2-D, 3-D map view 27

A

accessories 61

adding a point 21

addresses 11

alerts

 safety camera 60

audiobook 38

 bookmark 39

 loading 38

 playing 39

automatic volume 4

 enabling 5

avoiding

 public transit types 23, 26

 roads 24

 theft 57

 traffic 47

B

battery 62

Bluetooth technology 31–70

 friendly name 53

 pairing with phone 32

 settings 53

brightness 52

C

calculator 43

calls

 answering 33

 hanging up 34

 home 35

 muting 34

caring for your device 56

category

 searching within 8

charging your device 1, 62

cityXplorer maps 19, 25

cleaning your device 56

computer, connecting 2

converting

 currency 44

 units 43

coordinates 12

current location, directions to 31

current location, saving 14

customizing the device 50–57

custom POIs 61

D

dashboard disk 58

deleting

 all user data 57

 character 7

 files 50

 pictures 42

 recent finds list 14

 saved locations 16

 trips 41

detailed maps 48, 51

detours 21

 advanced 24

diacritical characters 7

display settings 23, 26

display timeout **52**
driving directions **28**

E

ecoRoute **35–38**
 calibrate fuel economy **36**
 ecoChallenge score **37**
 fuel economy information **37**
 mileage report **37**
 vehicle profile **35**
editing
 change categories **15**
 change map symbol **15**
 destinations **41**
 home location **13**
 saved locations **15**
 saved trip **41**
extras **61**

F

feedback on POI's **10**
files
 deleting **50**
 supported types **48**

finding locations
 by address **11**
 by coordinates **12**
 recent selections **14**
 saved locations **15**
fuse, changing **58**

G

geocaching **12**
go home **13**
GPS
 settings **51**
 simulator **14**

H

Help **35**
home
 phone number **35**
 setting a location **13**

I

intersection, finding **11**

J

JPEG image files **48**
junction view **29**

K

keyboard **7**
 language mode **7, 55**

L

latitude and longitude **12**
locations **8, 10**
 report a closed location **10**
 report a missing location **10**

M

maps
 adding **60**
 data layout **27**
 detail level **50**
 errors **10**
 purchasing **59**
 theme **50**
 view **27**
MapSource **48, 60**

- mass storage mode **48**
- measurements, converting **43**
- memory card **49**
- mileage report **37**
- mounting the device
 - on dashboard **58**
 - on windshield **62**
 - removing from mount **59**
- mute
 - phone call **34**
- myDashboard **2**

N

- navigation **20**
 - off road **25**
 - pedestrian **25**
- nearby services **31**
- next turn **29**
- nüMaps Lifetime **59**

O

- off-road navigation **25, 52**
- on-screen buttons **6**

P

- pairing a mobile phone **32**
- parking **14**
 - last spot **43**
 - saving **43**
- pedestrian mode
 - settings **23, 26**
- picture viewer **42**
- PIN
 - Bluetooth **32**
- points of interest
 - finding **8**
 - POI loader **48**
- predictive routing **22**
- protecting your device **56**
- public transit
 - avoidances **23, 26**
 - city maps **25**

R

- recalculating routes **21**
- recently found locations **14**
- registering the device **2**

- removing the mount **59**
- renaming trips **41**
- resetting
 - home location **13**
 - the max speed **30**
 - trip data **30**
- routes
 - off road **25, 52**
 - stopping **21**

S

- safe mode **51**
- satellite signals **5**
- Saved Locations **14–15**
- saving
 - your current location **14**
- school zone database **61**
- screen
 - brightness **52**
- screenshots **52**
- search bar **9**
- settings **50–70**

- shortcuts
 - adding 7
 - removing 7
- software
 - version 55
- speech recognition 16
- speed limit
 - icon 21
- storing the device 56
- system settings 51

T

- text language 55
- time settings 54
- tools 35–40
- Track Up 27
- traffic 45–70
 - activating a subscription 54
 - adding traffic subscriptions 54
 - icons 46
 - incidents 46
 - receiver 46
 - trafficTrends 54
- traffic alerts 30

- transportation mode 6
- trip computer 30
 - resetting information 22
- trip log 27, 55
- trip planner 40
- troubleshooting 62
- turn-by-turn directions 28
- turn list 28

U

- unit converter 43
- unit ID 55
- updating
 - maps 3
 - software 3
- USB 63
- user data, deleting 57

V

- voice command
 - activating 17
 - icons and tones 17
 - navigating with 18
 - tips for using 17

- wakeup phrase 17
- voice language 54
- voice mail 34
- volume
 - adjusting 4
 - audio mixer 4
 - automatic 4

W

- Where Am I? 31
- Where I've Been
 - enabling 55
- Where To?
 - customization 7
- where to menu 7
 - customization
 - shortcut icon, adding 7
 - shortcut icon, removing 7
- world clock 43

www.garmin.com/support



913-397-8200
1-800-800-1020



00 32 2 672 52 54



0180 5 / 42 76 46 - 880



00800 4412 454
+44 2380 662 915



0808 2380000
+44 (0) 870.8501241



00 45 4810 5050



00 39 02 3669 9699



00 35 1214 447 460



1-866-429-9296



00 358 9 6937 9758



0800-0233937



00 34 902 007 097



43 (0) 3133 3181 0



00 331 55 69 33 99



815 69 555



00 46 7744 52020

Garmin International, Inc.

1200 East 151st Street,
Olathe, Kansas 66062, USA

Garmin (Europe) Ltd.

Liberty House, Hounsdown Business Park
Southampton, Hampshire, SO40 9LR UK

Garmin Corporation

No. 68, Zhangshu 2nd Road, Xizhi Dist.
New Taipei City, 221, Taiwan (R.O.C.)

Garmin®, the Garmin logo, nüvi®, and MapSource® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. cityXplorer™, ecoRoute™, nüMaps Guarantee™, nüMaps Lifetime™, myGarmin™, and trafficTrends™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such name by Garmin is under license. Windows® is a registered trademark of Microsoft Corporation in the United States and/or other countries. Mac® is a trademark of Apple Computer, Inc. microSD™ is a trademark of SD-3C, LLC. Audible.com® and AudibleReady® are registered trademarks of Audible, Inc. © 1997–2005 Audible. HD Radio™ is a proprietary trademark of iBiquity Digital Corporation.



© 2011 Garmin Ltd. or its subsidiaries

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>