




# Profile

## Microwave/Convection Oven

### Owner's Manual

	<b>Important Safety Information</b>	<b>2</b>
	<i>Precautions to Avoid Possible Exposure to Excessive Microwave Energy</i>	2
	<i>Special Notes About Microwaving</i>	6

	<b>Operating Instructions</b>	<b>11</b>
	<i>Features of Your Microwave</i>	11
	<i>The Controls on Your Microwave</i>	12
	<i>Time Cooking</i>	17
	<i>Temperature Cooking</i>	27
	<i>Automatic Cooking</i>	32
	<i>Other Features</i>	36

	<b>Helpful Information</b>	<b>41</b>
	<i>Care and Cleaning</i>	42

	<b>If Something Goes Wrong</b>	<b>47</b>
	<i>Before You Call For Service</i>	47
	<i>GE Service Numbers</i>	50
	<i>Warranty</i>	Back Cover

**GE Answer Center®**  
**800.626.2000**

*GE Appliances*

49-40002  
164D3370P003



## **Important Safety Information**

*Read All Safety Information  
Before Using*

### **For Your Safety**



#### *Precautions to Avoid Possible Exposure to Excessive Microwave Energy*

For your safety the information in this manual must be followed to minimize the risk of fire or explosion or to prevent property damage, personal injury or loss of life.

**Do Not Attempt** to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.

**Do Not Place** any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

**Do Not Operate** the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:

- 1** door (bent)
- 2** hinges and latches (broken or loosened)
- 3** door seals and sealing surfaces.

**The Oven Should Not** be adjusted or repaired by anyone except properly qualified service personnel.


## Welcome

Welcome to the GE family. We're proud of our quality products and we believe in dependable service.

You'll see it in this easy-to-use manual and you'll hear it in the friendly voices of our consumer service department.

Best of all, you'll experience these values each time you use your microwave. That's important, because your new microwave will be part of your family for a long time.

## Start Here!...Before using your Microwave

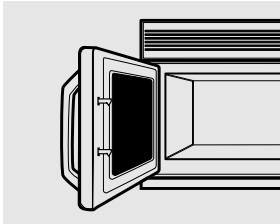

**Write down the model and serial numbers here.** They are on a label inside the oven.

**Staple your receipt to the inside back cover of this manual. You will need it to obtain service under warranty.**

---

**Model number**

---

**Serial number**

---

**Date of purchase**

## Need Help?

*Help us  
help you*

**800.626.2000**

Before you call for service, there are a few things you can do to help us serve you better.

**Read this manual.**

It contains instructions to help you use and maintain your microwave properly.

**If you received a damaged oven...**immediately contact the dealer (or builder) that sold you the oven.

**Save time and money.**

Check the section titled "If Something Goes Wrong" before calling. This section helps you solve common problems that might occur.

If you do need service, you can relax knowing help is only a phone call away. A list of toll-free customer service numbers is included in the back of this book. Or call the GE Answer Center® at 800.626.2000, 24 hours a day, 7 days a week.



## **Important Safety Information**

*Read All Safety Information  
Before Using*

### **⚠ WARNING**

***To reduce the risk of fire, burns, electric shock, injury to persons, or exposure to excessive microwave energy when using your appliance, follow basic precautions, including the following sections.***

## **Safety Precautions**

***This microwave oven is UL listed for installation over electric and gas ranges.***

***This microwave oven is not approved or tested for marine use.***

- Read and follow the specific “Precautions to Avoid Possible Exposure to Excessive Microwave Energy” on page 2.
- This appliance must be grounded. Connect only to properly grounded outlet. See Grounding Instructions section on page 10.
- Do not mount this appliance over a sink.
- Install or locate this appliance only in accordance with the provided Installation Instructions.
- This over-the-range oven was designed for use over ranges no wider than 42 inches. It may be installed over both gas and electric cooking equipment.
- Do not operate this appliance if it has a damaged power cord or plug, if it is not working properly, or if it has been damaged or dropped.
- Do not cover or block any openings on the appliance.
- Use this appliance only for its intended use as described in this guide. Do not use corrosive chemicals or vapors in this appliance. This microwave oven is specifically designed to heat, dry or cook food, and is not intended for laboratory or industrial use.



- Do not store this appliance outdoors. Do not use this product near water—for example, in a wet basement, near a swimming pool or near a sink.
- Keep power cord away from heated surfaces.
- Do not immerse power cord or plug in water.
- When using the convection or combination cooking functions, both the outside and inside of the oven will become hot. Always use hot pads to remove containers of food and accessories such as broiler pan, oven shelf and temperature probe.
- To reduce the risk of fire in the oven cavity:
  - Do not cover the shelf or any other part of the oven with metal foil. This will cause overheating of the microwave/convection oven.
  - Do not overcook food. Carefully attend appliance if paper, plastic or other combustible materials are placed inside the oven while cooking.
  - Remove wire twist-ties and metal handles from paper or plastic containers before placing them in the oven.
  - Do not use the oven for storage purposes. Do not leave paper products, cooking utensils or food in the oven when not in use.
  - If materials inside oven should ignite, keep the oven door closed, turn the oven off and disconnect the power cord, or shut off power at the fuse or circuit breaker panel. If the door is opened, the fire may spread.
- See door surface cleaning instructions in the Care and Cleaning section(s) of this guide.
- This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair or adjustment.
- As with any appliance, close supervision is necessary when used by children.

***SAVE THESE INSTRUCTIONS***



## Important Safety Information

### Special Notes About Microwaving

#### Arcing

**If you see arcing, press the CLEAR/OFF pad and correct the problem.**

Arcing is the microwave term for sparks in the oven. Arcing is caused by:

- The temperature probe in the microwave but not inserted in the food.
- The metal shelf not installed correctly so it touches the microwave wall.
- Metal or foil touching the side of the oven.
- Foil not molded to food (upturned edges act like antennas).
- Metal, such as twist-ties, poultry pins, or gold-rimmed dishes, in the microwave.
- Recycled paper towels containing small metal pieces being used in the microwave.

#### Foods

- Do not pop popcorn in your microwave oven unless in a special microwave popcorn accessory or unless you use popcorn labeled for use in microwave ovens.
- Some products such as whole eggs and sealed containers—for example, closed jars—will explode and should not be heated in this microwave oven. Such use of the microwave oven could result in injury.
- Do not boil eggs in a microwave oven. Pressure will build up inside egg yolk and will cause it to burst, possibly resulting in injury.
- Operating the microwave with no food inside for more than a minute or two may cause damage to the oven and could start a fire. It increases the heat around the magnetron and can shorten the life of the oven.
- Foods with unbroken outer “skin” such as potatoes, hot dogs, sausages, tomatoes, apples, chicken livers and other giblets, and egg yolks should be pierced to allow steam to escape during cooking.



## **SAFETY FACT**

### **SUPERHEATED WATER**

*Microwaved water and other liquids do not always bubble when they reach the boiling point. They can actually get superheated and not bubble at all.*

*Superheated liquid will bubble up out of the cup when it is moved or when something like a spoon or tea bag is put into it.*

*To prevent this from happening and causing injury, do not heat any liquid for more than 2 minutes per cup. After heating, let the cup stand in the microwave for 30 seconds before moving it or putting anything into it.*

- Avoid heating baby food in glass jars, even with the lid off. Make sure all infant food is thoroughly cooked. Stir food to distribute the heat evenly. Be careful to prevent scalding when warming formula or breast milk. The container may feel cooler than the milk really is. Always test the milk before feeding the baby.
- Spontaneous boiling— Under certain special circumstances, liquids may start to boil during or shortly after removal from the microwave oven. To prevent burns from splashing liquid, we recommend the following: before removing the container from the oven, allow the container to stand in the oven for 30 to 40 seconds after the oven has shut off. Do not boil liquids in narrow-necked containers such as soft drink bottles, wine flasks and especially narrow-necked coffee cups. Even if the container is opened, excessive steam can build up and cause it to burst or overflow.
- Don't defrost frozen beverages in narrow-necked bottles (especially carbonated beverages). Even if the container is opened, pressure can build up. This can cause the container to burst, possibly resulting in injury.
- Hot foods and steam can cause burns. Be careful when opening any containers of hot food, including popcorn bags, cooking pouches and boxes. To prevent possible injury, direct steam away from hands and face.
- Do not overcook potatoes. They could dehydrate and catch fire, causing damage to your oven.
- When cooking pork, follow the directions exactly and always cook the meat to an internal temperature of at least 170°F. This assures that, in the remote possibility that trichina may be present in the meat, it will be killed and meat will be safe to eat.



## Important Safety Information

### Special Notes About Microwaving

#### Microwave-Safe Cookware

Make sure all cookware used in your microwave oven is suitable for microwaving. Most glass casseroles, cooking dishes, measuring cups, custard cups, pottery or china dinnerware which does not have metallic trim or glaze with a metallic sheen can be used. Some cookware is labeled “suitable for microwaving.”



How to test for a microwave-safe dish.

- If you are not sure if a dish is microwave-safe, use this test: Place in the oven both the dish you are testing and a glass measuring cup filled with 1 cup of water—set the measuring cup either in or next to the dish. Microwave 1 minute at high. If the dish heats, it should not be used for microwaving. If the dish remains cool and only the water in the cup heats, then the dish is microwave-safe.
- If you use a meat thermometer while cooking, make sure it is safe for use in microwave ovens.
- Do not use recycled paper products. Recycled paper towels, napkins and waxed paper can contain metal flecks which may cause arcing or ignite. Paper products containing nylon or nylon filaments should be avoided, as they may also ignite.
- Some styrofoam trays (like those that meat is packaged on) have a thin strip of metal embedded in the bottom. When microwaved, the metal can burn the floor of the oven or ignite a paper towel.
- Do not use paper products when the microwave/convection oven is operated in the convection or combination mode.
- Do not use the microwave to dry newspapers.
- Not all plastic wrap is suitable for use in microwave ovens. Check the package for proper use.
- Paper towels, waxed paper and plastic wrap can be used to cover dishes in order to retain moisture and prevent spattering. Be sure to vent plastic wrap so steam can escape.
- Cookware may become hot because of heat transferred from the heated food. Pot holders may be needed to handle the cookware.
- “Boilable” cooking pouches and tightly closed plastic bags should be slit, pierced or vented as directed by package. If they are not, plastic could burst during or immediately after cooking, possibly resulting in injury. Also, plastic storage containers should be at least partially uncovered because they form a tight seal. When cooking with containers tightly covered with plastic wrap, remove covering carefully and direct steam away from hands and face.





- Use foil only as directed in this guide. TV dinners may be microwaved in foil trays less than 3/4" high; remove the top foil cover and return the tray to the box. When using foil in the microwave oven, keep the foil at least 1 inch away from the sides of the oven.

- Plastic cookware—Plastic cookware designed for microwave cooking is very useful, but should be used carefully. Even microwave-safe plastic may not be as tolerant of overcooking conditions as are glass or ceramic materials and may soften or char if subjected to short periods of overcooking. In longer exposures to overcooking, the food and cookware could ignite.

Follow these guidelines:

- 1** Use microwave-safe plastics only and use them in strict compliance with the cookware manufacturer's recommendations.
- 2** Do not microwave empty containers.
- 3** Do not permit children to use plastic cookware without complete supervision.

## The Vent Fan

The fan will operate automatically under certain conditions (see Automatic Fan feature). Take care to prevent the starting and spreading of accidental cooking fires while the vent fan is in use.

- Clean the underside of the microwave often. Do not allow grease to build up on the microwave or the fan filters.

- In the event of a grease fire on the surface units below the microwave oven, smother a flaming pan on the surface unit by covering the pan completely with a lid, a cookie sheet or a flat tray.

- Use care when cleaning the vent fan filters. Corrosive cleaning agents, such as lye-based oven cleaners, may damage the filters.

- When flaming foods under the microwave, turn the vent fan off. The fan, if operating, may spread the flame.


- Never leave surface units beneath your microwave oven unattended at high heat settings. Boilovers cause smoking and greasy spillovers that may ignite and spread if the microwave vent fan is operating. To minimize automatic fan operation, use adequate sized cookware and use high heat on surface units only when necessary.



## Important Safety Information

### Grounding Instructions/Optional Kits

#### Grounding Instructions

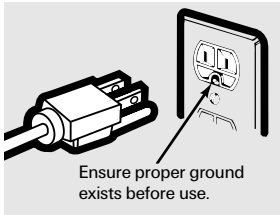

#### **⚠ WARNING**

***Improper use of the grounding plug can result in a risk of electric shock.***

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.

This appliance is equipped with a power cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or service technician if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

If the outlet is a standard 2-prong wall outlet, it is your personal responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet.

Do not under any circumstances cut or remove the third (ground) prong from the power cord.

Do not use an adapter plug with this appliance.

Do not use an extension cord with this appliance. If the power cord is too short, have a qualified electrician or service technician install an outlet near the appliance.

For best operation, plug this appliance into its own electrical outlet to prevent flickering of lights, blowing of fuse or tripping of circuit breaker.

#### Optional Kits

##### **Filler Panel Kits**

**JX40WH—White**

**JX41—Black**

**JX40AL—Almond**

When replacing a 36" or 42" range hood, filler panel kits fill in the additional width to provide a custom built-in appearance.

For installation between cabinets only; not for end-of-cabinet installation. Each kit contains two 3"-wide filler panels. Two kits are needed for a 42" opening.

##### **Filter Kits**

**JX81A—Recirculating Charcoal Filter Kit**

Filler kits are used when the microwave oven cannot be vented to the outside.

##### **Decorative Panel Kit**

**JX22SS—Stainless Steel**


When replacing a Hi/Low range, the decorative panel kit fills in the area between the microwave and the range left by the Hi/Low model.

Available at extra cost from your GE supplier.



# Operating Instructions

## Features of Your Microwave

(Throughout this manual, features and appearance may vary from your model.)

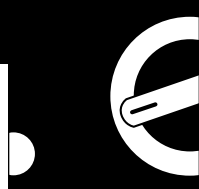

### Features

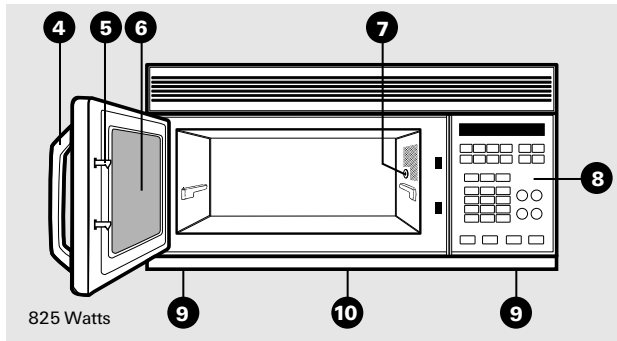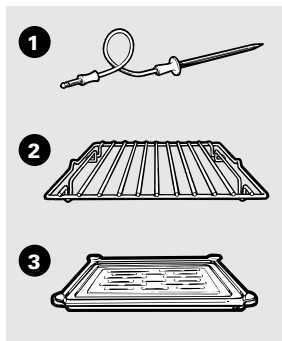

#### 1 **Temperature Probe.**

Use with Temp Cook/Hold, Convection Temperature Cook, Combination Temperature Cook, or Combination Roast.

**2 Shelf.** The metal shelf must be in place on the oven floor when convection or combination cooking. Remove the shelf for microwave-only cooking.

**3 Broiler Pan.** Consists of a drip pan and a spatter shield. See Convection Broiling section for instructions.

**4 Door Handle.** Pull to open the door. The door must be securely latched for the microwave to operate.

**5 Door Latches.**

**6 Window with Metal Shield.** Screen allows cooking to be viewed while keeping microwaves confined in the oven.

**7 Receptacle for Temperature Probe.**

Probe must be securely inserted into the receptacle before the oven will Temp Cook, Convection Temperature Cook, Combination Temperature Cook, or Combination Roast.

**8 Touch Control Panel Display.**

**9 Grease Filters.**

**10 Cooktop Light.**

**NOTE:** Rating plate, oven vent(s) and oven light are located on the inside walls of the microwave oven.




# Quick Start

## The Controls on Your Microwave Oven

(Throughout this manual, features and appearance may vary from your model.)

You can cook with convection heat, microwaves or a combination of both. You can cook by time or by temperature.

You can also let the microwave choose the settings automatically by using the sensor features.

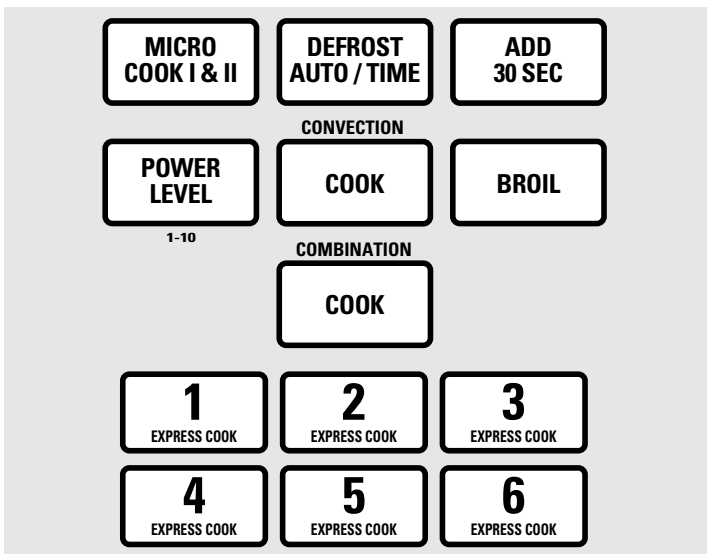

### 1

## Time and Auto Features

### Time Cooking

Press	Enter
MICRO COOK I & II (Press once or twice)	Amount of cooking time.
DEFROST AUTO/TIME (Press twice)	Amount of defrosting time.
Convection COOK	Oven temperature and amount of cooking time.
Combination COOK	Oven temperature and amount of cooking time.
Convection BROIL (Press once)	HIGH temperature automatically selected. Enter amount of broiling time.
Convection BROIL (Press twice)	LOW temperature automatically selected. Enter amount of broiling time.
EXPRESS COOK	Starts immediately!
ADD 30 SEC	Starts immediately!
POWER LEVEL	Power level 1-10.

### Defrosting by Weight


Press	Enter
DEFROST AUTO/TIME (Press once)	Food weight.

**HELP**

Press this pad and any feature pad for usage instructions and tips.

**GUIDES IN BOOK**

- Cooking
- Time Defrost
- Cooking Reference

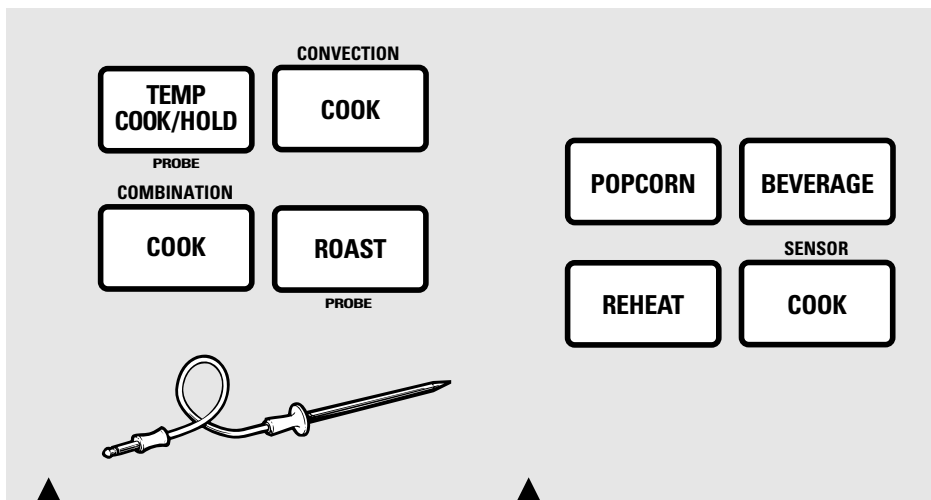**2****Temperature Features****3****Sensor Features****Probe Cooking**

<b>Press</b>	<b>Enter</b>
<b>TEMP COOK/HOLD</b>	Food temperature.
<b>Convection COOK</b>	Oven temperature and food temperature.
<b>Combination COOK</b>	Oven temperature and food temperature.
<b>Combination ROAST (Press once)</b>	MEDIUM automatically selected.
<b>Combination ROAST (Press twice)</b>	WELL automatically selected.

<b>Press</b>	<b>Enter</b>	<b>Option</b>
<b>POPCORN</b>	Starts immediately!	more/ less time
<b>BEVERAGE</b>	Starts immediately!	
<b>REHEAT</b>	Starts immediately!	more/ less time
<b>COOK</b>	Food type 1-7	



# Operating Instructions

## Microwave/Convection Cooking




### How It Works

Microwave cooking uses very short, high frequency radio waves. The movement of the microwaves through the food creates heat and cooks most foods faster than regular methods. Microwave cooking heats the food, not the cookware or the interior of the oven.

Convection cooking constantly circulates heated air around the food. It creates even browning and sealed-in flavor by the motion of hot air over the food surfaces. Using a combination of microwave and convection cooking is also an option.

You can cook by time or by temperature. When cooking by temperature, the temperature probe monitors the internal temperature of the food to let you know when it is ready.

### Comparison Guide

			
	<b>Microwave</b>	<b>Convection</b>	<b>Combination</b>
<b>Cooking Method</b>	Microwave energy is distributed evenly for fast, thorough cooking.	Hot air circulates around food to produce browned exteriors and seal in juices.	Microwave energy and convection heat combine to cook foods.
<b>Heat Source</b>	Microwave energy.	Circulating heated air.	Microwave energy and circulating heated air.
<b>Heat Conduction</b>	Heat produced within food by instant energy penetration.	Heat conducted from outside of food to inside.	Food heats from instant energy penetration and heat conducted from outside of food.
<b>Benefits</b>	Fast, high-efficiency cooking. Oven and surroundings do not get hot. Easy clean-up.	Aids in browning and seals in flavor. Cooks some foods faster than regular ovens.	Shortened cooking time from microwave energy, plus browning and crisping from convection heat.



## Cookware

<b>Cookware</b>	<b>Microwave</b>	<b>Convection</b>	<b>Combination</b>
<b>Heat-Resistant Glass, Glass-Ceramic (Pyrex®, Fire King®, Corning Ware®, etc.)</b>	YES	YES	YES
<b>Ceramic (cookware with no metal trim)</b>	YES	YES	YES
<b>Metal</b>	NO	YES	NO
<b>Non Heat-Resistant Glass</b>	NO	NO	NO
<b>Microwave-Safe Plastics</b>	YES	NO	SOMETIMES*
<b>Plastic Films and Wraps</b>	YES	NO	NO
<b>Paper Products</b>	YES	NO	NO
<b>Straw, Wicker and Wood</b>	YES	NO	NO

\*Use only microwave cookware that is safe to 400°F.

## Cookware Tips

### **Convection Cooking**

**Metal pans** are recommended for all types of baked products.

Dark or dull finish metal pans are best for breads and pies because they absorb heat and produce crisper crust.

Shiny aluminum pans are better for cakes, cookies or muffins because these pans reflect heat and help produce a light, tender crust.

Use **glass or glass-ceramic** casserole or baking dishes for egg and cheese recipes because they are easier to clean.

### **Combination Cooking**

Use **glass or glass-ceramic** baking containers. Do not use cookware with metal trim. It may cause arcing which can damage the cookware, the shelf or the oven.

**Heat-resistant plastic** microwave cookware (safe to 400°F.) may be used.



# Operating Instructions

## Changing Power Levels



### How to Change the Power Level

The power level may be entered or changed immediately after entering the feature time for MICRO COOK, TIME DEFROST or EXPRESS COOK. The power level may also be changed during time countdown.

- 1 Press **MICRO COOK I & II** or select **Time Defrost**.
- 2 Enter **cooking or defrosting time**.
- 3 Press **POWER LEVEL**.
- 4 Select **desired power level 1–10**.
- 5 Press **START**.

Variable power levels add flexibility to microwave cooking. The power levels on the microwave oven can be compared to the surface units on a range. High (power level 10) or full power is the fastest way to cook and gives you 100% power. Each power level gives you microwave energy a certain percent of the time. Power level 7 is microwave energy 70% of the time. Power level 3 is energy 30% of the time.

A high setting (10) will cook faster but food may need more frequent stirring, rotating or turning over. Most cooking will be done on High (power level 10). A lower setting will cook more evenly and need less stirring or rotating of the food.

Some foods may have better flavor, texture or appearance if one of the lower settings is used. Use a lower power level when cooking foods that have a tendency to boil over, such as scalloped potatoes.

Rest periods (when the microwave energy cycles off) give time for the food

to “equalize” or transfer heat to the inside of the food. An example of this is shown with power level 3—the defrost cycle. If microwave energy did not cycle off, the outside of the food would cook before the inside was defrosted.


Here are some examples of uses for various power levels:

Power Level	Best Uses
<b>High 10</b>	Fish, bacon, vegetables, boiling liquids.
<b>Med-High 7</b>	Gentle cooking of meat and poultry; baking casseroles and reheating.
<b>Medium 5</b>	Slow cooking and tenderizing such as stews and less tender cuts of meat.
<b>Low 3</b>	Defrosting without cooking; simmering; delicate sauces.
<b>Warm 1</b>	Keeping food warm without overcooking; softening butter.





## Micro Cook

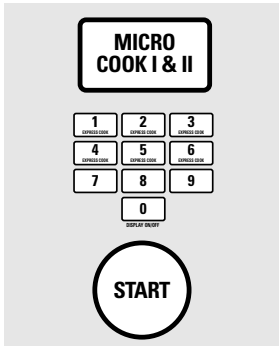

- 1 Press MICRO COOK I & II.**
- 2 Enter cooking time.**
- 3 Change power level if you don't want full power. (Press POWER LEVEL. Select a desired power level 1–10.)**
- 4 Press START.**

### Micro Cook I

Allows you to microwave for any time up to 99 minutes and 99 seconds.

Power level 10 (High) is automatically set, but you may change it for more flexibility.

You may open the door during Micro Cook to check the food. Close the door and press START to resume cooking.

### Micro Cook II

Lets you change power levels automatically during cooking. Here's how to do it:

- 1 Press MICRO COOK I & II.**
- 2 Enter the first cook time.**
- 3 Change the power level if you don't want full power. (Press POWER LEVEL. Select a desired power level 1–10.)**
- 4 Press MICRO COOK I & II again.**
- 5 Enter the second cook time.**
- 6 Change the power level if you don't want full power. (Press POWER LEVEL. Select a power level 1–10.)**
- 7 Press START.**

At the end of Micro Cook I, Micro Cook II counts down.



# Operating Instructions

## Cooking Guide for Micro Cook I & II

**NOTE: Use power level High (10) unless otherwise noted.**

<b>Vegetable</b>	<b>Amount</b>	<b>Time</b>	<b>Comments</b>
<b>Asparagus</b> (fresh spears)	1 lb.	7 to 9 min., Med-High (7)	In 1½-qt. oblong glass baking dish, place 1/4 cup water. Rotate dish after half of time.
(frozen spears)	10-oz. package	5 to 7 min.	In 1-qt. casserole.
<b>Beans</b> (fresh green)	1 lb. cut in half	10 to 12 min.	In 1½-qt. casserole, place 1/2 cup water.
(frozen green)	10-oz. package	6 to 8 min.	In 1-qt. casserole, place 2 tablespoons water.
(frozen lima)	10-oz. package	6 to 8 min.	In 1-qt. casserole, place 1/4 cup water.
<b>Beets</b> (fresh, whole)	1 bunch	18 to 22 min.	In 2-qt. casserole, place 1/2 cup water.
<b>Broccoli</b> (fresh cut)	1 bunch (1¼ to 1½ lbs.)	8 to 10 min.	In 2-qt. casserole, place 1/2 cup water.
(fresh spears)	1 bunch (1¼ to 1½ lbs.)	10 to 13 min.	In 2-qt. oblong glass baking dish, place 1/4 cup water. Rotate dish after half of time.
(frozen, chopped)	10-oz. package	5 to 7 min.	In 1-qt. casserole.
(frozen spears)	10-oz. package	5 to 7 min.	In 1-qt. casserole, place 3 tablespoons water.
<b>Cabbage</b> (fresh)	1 medium head (about 2 lbs.)	9 to 11 min.	In 1½- or 2-qt. casserole, place 1/4 cup water.
(wedges)		8 to 10 min.	In 2- or 3-qt. casserole, place 1/4 cup water.
<b>Carrots</b> (fresh, sliced)	1 lb.	7 to 9 min.	In 1½-qt. casserole, place 1/4 cup water.
(frozen)	10-oz. package	5 to 7 min.	In 1-qt. casserole, place 2 tablespoons water.
<b>Cauliflower</b> (flowerets)	1 medium head	10 to 14 min.	In 2-qt. casserole, place 1/2 cup water.
(fresh, whole)	1 medium head	10 to 17 min.	In 2-qt. casserole, place 1/2 cup water.
(frozen)	10-oz. package	5 to 7 min.	In 1-qt. casserole, place 2 tablespoons water.



<b>Vegetable</b>	<b>Amount</b>	<b>Time</b>	<b>Comments</b>
<b>Corn</b> (frozen kernel)	10-oz. package	5 to 7 min.	In 1-qt. casserole, place 2 tablespoons water.
<b>Corn on the cob</b> (fresh)	1 to 5 ears	3 to 4 min. per ear	In 2-qt. oblong glass baking dish, place corn. If corn is in husk, use no water; if corn has been husked, add 1/4 cup water. Rearrange after half of time.
(frozen)	1 ear 2 to 6 ears	5 to 6 min. 3 to 4 min. per ear	Place in 2-qt. oblong glass baking dish. Cover with vented plastic wrap. Rearrange after half of time.
<b>Mixed vegetables</b> (frozen)	10-oz. package	5 to 7 min.	In 1-qt. casserole, place 3 tablespoons water.
<b>Peas</b> (fresh, shelled)	2 lbs. unshelled	10 to 12 min.	In 1-qt. casserole, place 1/4 cup water.
(frozen)	10-oz. package	5 to 7 min.	In 1-qt. casserole, place 2 tablespoons water.
<b>Potatoes</b> (fresh, cubed, white)	4 potatoes (6 to 8 oz. each)	10 to 12 min.	Peel and cut into 1 inch cubes. Place in 2-qt. casserole with 1/2 cup water. Stir after half of time.
(fresh, whole, sweet or white)	1 (6 to 8 oz.)	3 to 4 min.	Pierce with cooking fork. Place in center of the oven. Let stand 5 minutes.
<b>Spinach</b> (fresh)	10 to 16 oz.	5 to 7 min.	In 2-qt. casserole, place washed spinach.
(frozen, chopped and leaf)	10-oz. package	5 to 7 min.	In 1-qt. casserole, place 3 tablespoons water.
<b>Squash</b> (fresh, summer and yellow)	1 lb. sliced	5 to 7 min.	In 1½-qt. casserole, place 1/4 cup water.
(winter, acorn butternut)	1 to 2 squash (about 1 lb. each)	8 to 11 min.	Cut in half and remove fibrous membranes. In 2-qt. oblong glass baking dish, place squash cut-side-down. Turn cut-side-up after 4 minutes.



# Operating Instructions

## Time Features

### Time Defrost



**1 Press DEFROST AUTO/TIME twice.**

**2 Enter defrosting time.**

**3 Press START.**

**4 Turn food over when the oven signals.**

**5 Press START.**

*(Auto Defrost explained in the Auto Feature section.)*

Allows you to defrost for the length of time you select. See the Defrosting Guide for suggested times.

Power level 3 is automatically set, but you may change this for more flexibility. You may defrost small items more quickly by raising the power level after entering the time.

However, they will need more frequent attention than usual.

Power level 7 cuts the total defrosting time in about half; power level 10 cuts the total time to approximately 1/3. Rotate or stir food frequently.

At one half of selected defrosting time, the oven signals TURN. At this time, turn food over and break apart or rearrange pieces for more even defrosting. Shield any warm areas with small pieces of foil.

A dull thumping noise may be heard during defrosting. This sound is normal when the oven is not operating at High power.

### Defrosting Tips

- Foods frozen in paper or plastic can be defrosted in the package. Tightly closed packages should be slit, pierced or vented AFTER food has partially defrosted. Plastic storage containers should be at least partially uncovered.
- Family-size, prepackaged frozen dinners can be defrosted and microwaved. If the food is in a foil container, transfer it to a microwave-safe dish.
- Foods that spoil easily, such as milk, eggs, fish, stuffings, poultry and pork, should not be allowed to sit out for more than one hour after defrosting. Room temperature promotes the growth of harmful bacteria.
- For more even defrosting of larger foods, such as beef, lamb and veal roasts, use Auto Defrost.
- Be sure large meats are completely defrosted before cooking.
- When defrosted, food should be cool but softened in all areas. If still slightly icy, return to the microwave very briefly, or let it stand a few minutes.

# Defrosting Guide




<b>Food</b>	<b>Time</b>	<b>Comments</b>
<b>Breads, Cakes</b> <b>Bread, buns or rolls</b> (1 piece) <b>Sweet rolls</b> (approx. 12 oz.)	1 min. 3 to 5 min.	
<b>Fish and Seafood</b> <b>Filletts, frozen</b> (1 lb.) <b>Shellfish, small pieces</b> (1 lb.)	7 to 9 min. 5 to 7 min.	Place block in casserole. Turn over and break up after half the time.
<b>Fruit</b> <b>Plastic pouch—1 to 2</b> (10-oz. package)	3 to 6 min.	
<b>Meat</b> <b>Bacon</b> (1 lb.)  <b>Franks</b> (1 lb.)  <b>Ground meat</b> (1 lb.) <b>Roast: beef, lamb, veal, pork</b>  <b>Steaks, chops and cutlets</b>	3 to 5 min.  3 to 5 min.  5 to 7 min. 12 to 16 min. per lb. 6 to 8 min. per lb.	Place unopened package in oven. Let stand 5 minutes after defrosting.  Place unopened package in oven. Microwave just until franks can be separated. Let stand 5 minutes, if necessary, to complete defrosting.  Turn meat over after half the time. Use power level 1.  Place unwrapped meat in cooking dish. Turn over after half the time and shield warm areas with foil. When finished, separate pieces and let stand to complete defrosting.
<b>Poultry</b> <b>Chicken, broiler-fryer cut up</b> (2½ to 3 lbs.)  <b>Chicken, whole</b> (2½ to 3 lbs.)  <b>Cornish hen</b>  <b>Turkey breast</b> (4 to 6 lbs.)	16 to 20 min.  18 to 22 min.  8 to 14 min. per lb. 6 to 10 min. per lb.	Place wrapped chicken in dish. Unwrap and turn over after half the time. When finished, separate pieces and microwave 2 to 4 minutes more, if necessary. Let stand to finish defrosting.  Place wrapped chicken in dish. After half the time, unwrap and turn chicken over. Shield warm areas with foil. Finish defrosting. If necessary, run cold water in the cavity until giblets can be removed.  Place unwrapped hen in the oven breast-side-up. Turn over after half the time. Run cool water in the cavity until giblets can be removed.  Place unwrapped breast in dish breast-side-down. After half the time, turn over and shield warm areas with foil. Finish defrosting. Let stand 1 to 2 hours in refrigerator to complete defrosting.



# Operating Instructions


## Time Features

### Convection Cooking

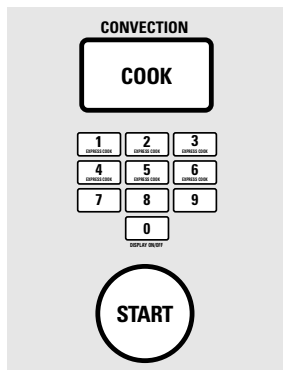

#### What happens when Convection Cooking...

During convection cooking a heating element is used to raise the temperature of the air inside the oven. Any oven temperature from 225°F. to 450°F. may be programmed. A fan circulates the heated air throughout the oven, over and around the food, producing golden brown exteriors and rich, moist interiors.

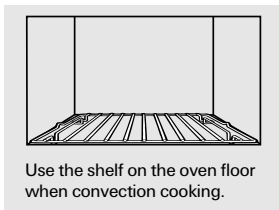

#### How to Convection Cook

- 1** Press Convection COOK.
- 2** Enter the desired oven temperature.
- 3** To preheat, press START. If you do not open the door within 30 minutes the oven will turn off automatically.
- 4** When the temperature is reached, the oven signals. Place the food in the oven.
- 5** Enter the desired cooking time.
- 6** Press START.

If you do not want to preheat, skip steps 3 and 4.

#### For Best Results

- Allow at least one inch between the pan and the walls of the oven.
- When converting your favorite recipe from regular oven cooking to convection cooking, lower the oven temperature 25–50°F. and check food at the minimum time.

#### Cooking Tip

Some foods cook faster using convection cooking than in regular oven cooking.

#### Resume Feature


If your foods are not quite done you can bake them for two more minutes at your previous settings using the Resume feature.

- 1** Press Convection COOK.
- 2** Press START.






## Combination Cooking

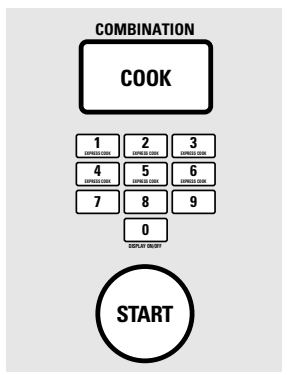

### What happens when Combination Cooking...

Combination cooking combines microwave cooking and convection cooking. The microwave energy cooks food quickly and convection circulation of heated air browns foods beautifully.

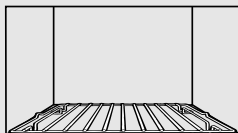

Use the shelf on the oven floor when combination cooking.

### How to Combination Cook

- 1** Press Combination COOK.
- 2** Enter the desired oven temperature.
- 3** To preheat, press START. If you do not open the door within 30 minutes the oven will turn off automatically.
- 4** When the temperature is reached, the oven signals. Place the food in the oven.
- 5** Enter the desired cooking time.
- 6** Press START.

If you do not want to preheat, skip steps 3 and 4.

### For Best Results

- Allow at least one inch between the pan and the walls of the oven.
- When converting your favorite recipe from regular oven cooking to convection cooking, lower the oven temperature 25–50°F. and check food at the minimum time.

### Cooking Tips


- Do not use metal cookware with Combination Cook.
- Check the Cookware and Accessories section for correct cookware when combination cooking.
- Place meat in a glass dish on a trivet to collect juices and prevent spattering.



# Operating Instructions

## Time Features


### Convection Broiling

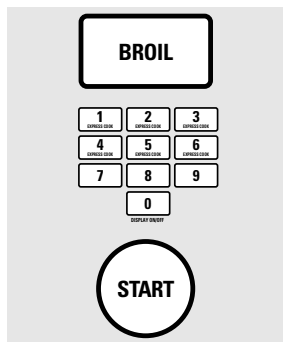

#### **What happens when Convection Broiling...**

Broiling is cooking by intense top heat. The metal shelf must be in place on the shelf supports when convection broiling. Most fish and tender cuts of meat can be broiled.

#### **How to Convection Broil**

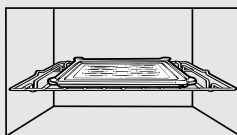

Convection Broil—Place the broiler pan (spatter shield and drip pan) on top of the shelf.

**1** Press Convection BROIL once for HIGH (450°F.) or twice for LOW (425°F.).

**2** To preheat, press START.

**3** When the temperature is reached, the oven signals. Place the food on the broiler pan and place it on the oven shelf. If the oven door remains closed, the oven will hold the temperature for 30 minutes and then shut off.

**4** Enter the desired broiling time.

**5** Press START.

If you do not want to preheat, skip steps 2 and 3.


#### **Cooking Tips**

- If meat has fat or gristle around the edge, cut vertical slashes through both about 2 inches apart. If desired, fat may be trimmed, leaving a layer about 1/8 inch thick. This will help keep spattering and smoking to a minimum.
- When using the broiler pan, be sure to use the spatter shield; otherwise, meat juices may become hot enough to catch fire.
- If you use aluminum foil to line the drip pan or spatter shield, you must mold the foil tightly to it. Cut slits in the spatter shield so fat and meat juices drain into the drip pan.





## Express Cook

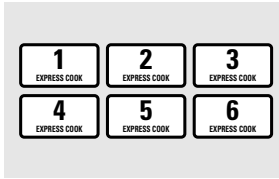

### ***This is a quick way to set cooking time for 1–6 minutes.***

Press one of the Express Cook pads (from 1 to 6) for 1 to 6 minutes of cooking at power level 10. For example, press the 2 pad for 2 minutes of cooking time.

The power level can be changed as time is counting down. Press POWER LEVEL and enter 1–10.

## Add 30 Seconds



### ***You can use this feature two ways:***


- It will add 30 seconds to the time counting down each time the pad is pressed.
- It can be used as a quick way to set 30 seconds of cooking time.



# Operating Instructions

## Auto Feature

### Auto Defrost

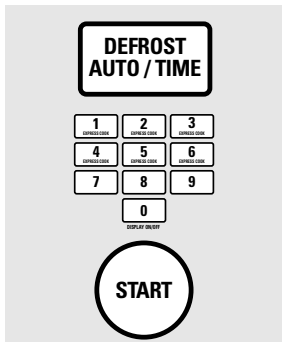

- 1 Press DEFROST AUTO/TIME once.**
- 2 Using the Conversion Guide at right, enter food weight. For example, press pads 1 and 2 for 1.2 pounds (1 pound, 3 ounces).**
- 3 Press START.**  
*(Time Defrost is explained in the Time Features section.)*

The Defrost Auto/Time feature gives you two ways to defrost frozen foods. Press DEFROST AUTO/TIME once for Auto Defrost or twice for Time Defrost.

Use Auto Defrost for meat, poultry and fish. Use Time Defrost for most other frozen foods.

Auto Defrost automatically sets the defrosting times and power levels to give even defrosting results for meats, poultry and fish.


**Conversion Guide**  
If the weight of food is stated in pounds and ounces, the ounces must be converted to tenths (.1) of a pound.

<b>Weight of Food in Ounces</b>	<b>Enter Food Weight (tenths of a pound)</b>
1-2	.1
3	.2
4-5	.3
6-7	.4
8	.5
9-10	.6
11	.7
12-13	.8
14-15	.9

- Remove meat from package and place on microwave-safe dish.
- Twice during defrost, the oven signals TURN. At each TURN signal, turn the food over. Remove defrosted meat or shield warm areas with small pieces of foil.
- After defrosting, most meats need to stand 5 minutes to complete defrosting. Large roasts should stand for about 30 minutes.



## Temperature Probe

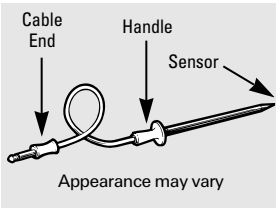

### ***What happens when you use the probe...***

Cooking with the probe allows you to heat food to a certain temperature. This is the best way to cook many foods.

### ***The Temperature Probe***

The temperature probe is a food thermometer that monitors the temperature of the food. The probe must be used when using Temp Cook/Hold, Convection Temperature Cook, Combination Temperature Cook, or Combination Roast.

The probe is not recommended for batters, doughs, frozen foods and foods which are difficult to cook precisely by temperature. Use the Micro Cook setting for these foods.

- Make sure the cable end is inserted all the way into the oven wall receptacle.
- Insert the probe into the center of the food. Make sure the handle does not touch the food or the top or sides of the oven.
- Do not leave the probe in the oven if it's not inserted in food. If it touches the oven wall, it may damage the oven.

### ***Cooking Tips***



- Do not twist, drop or bend the probe.
- Be sure frozen food has been completely defrosted before inserting the probe. The probe may break off if used in frozen foods.
- Cover foods loosely for moisture control and quick, even heating.
- Use a lower power level with the probe; foods will take longer to cook but they will heat more evenly.



# Operating Instructions

## Temperature Features

### Temp Cook/Hold

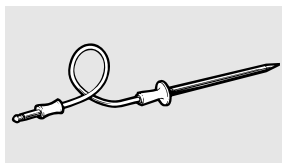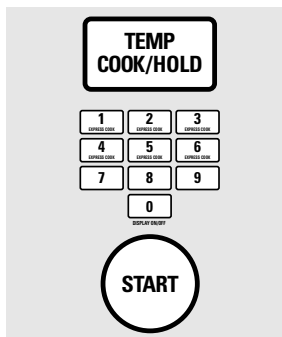



#### **How to Use the Probe to Temp Cook**

- 1** Insert the temperature probe in the center of the food and attach it securely in the oven wall.
- 2** Press TEMP COOK/HOLD.
- 3** Enter the desired food temperature.
- 4** Change power level if you don't want full power. (Press POWER LEVEL. Select a power level 1-10.)
- 5** Press START.
- 6** When the temperature is reached, the microwave will signal. Food will be held at this temperature for 60 minutes. The oven beeps when the hold time is complete.






## Convection Temperature Cooking

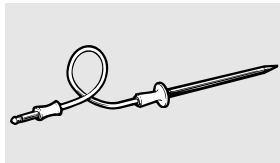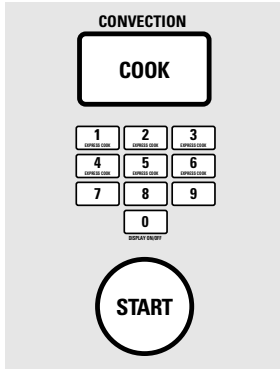

### Convection Cooking with the temperature probe...

Convection cooking with the temperature probe allows you to cook foods precisely to the degree of doneness desired, while the constantly circulating hot air assures even cooking and browning.

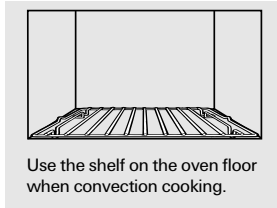

### How to Convection Cook with the Temperature Probe

- 1 Insert the probe in the food and attach it securely to the oven wall.
- 2 Press Convection COOK.
- 3 Enter the desired oven temperature.
- 4 Enter the desired food temperature. Any food temperature from 90°F. to 199°F. may be programmed.
- 5 Press START.

The temperature probe monitors the temperature of the food and turns the oven off automatically when the desired temperature is reached.

### For Best Results



- Allow at least one inch between the pan and the walls of the oven.
- When converting your favorite recipe from regular oven cooking to convection cooking, lower the oven temperature 25–50°F. and check food at minimum time.



# Operating Instructions


## Temperature Features

### Combination Temperature Cooking

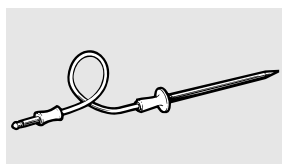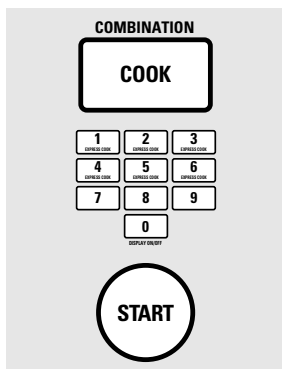

#### Combination Cooking with the temperature probe...

Combination cooking with the temperature probe allows you to enjoy the benefits of combination cooking with the precision of the temperature probe.

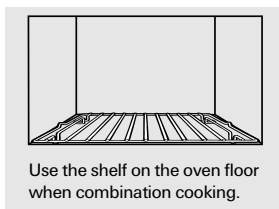

#### How to Combination Cook with the Temperature Probe

- 1 Insert the probe in the food and attach it securely to the oven wall.
- 2 Press Combination COOK.
- 3 Enter the desired oven temperature.
- 4 Enter the desired food temperature. Any food temperature from 90°F. to 199°F. may be programmed.
- 5 Press START.



The temperature probe monitors the temperature of the food and turns the oven off automatically when the desired temperature is reached.

#### For Best Results

- Allow at least one inch between the pan and the walls of the oven.
- When converting your favorite recipe from regular oven cooking to convection cooking, lower the oven temperature 25–50°F. and check food at minimum time.




## Combination Roast

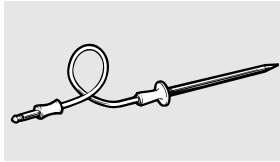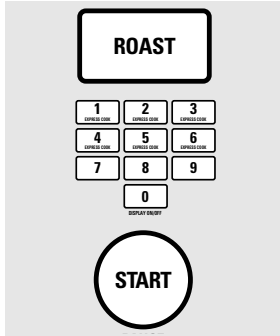

### What happens in Combination Roast...

Combination Roast is similar to Combination Temperature Cooking. It uses both microwave and convection cooking as well as the temperature probe.

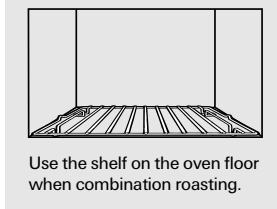

### How to Combination Roast

- 1 Insert the probe in the food and attach it securely to the oven wall.
- 2 Press Combination ROAST once for medium or twice for well done.
- 3 Press START.

When the programmed temperature is reached, the oven holds the food at that temperature for up to 1 hour.

### Cooking Tips

- The metal shelf must be on the oven floor during Combination Roast.
- Place food in a glass dish on a trivet.
- Just as in regular roasting, only tender roasts should be roasted by using the probe. Less tender roasts should be microwaved by time.
- Insert the probe horizontally into the center meaty area not touching bone or fat. Make sure the handle does not touch the food or the top or sides of the oven.




## Operating Instructions

### Sensor Features


#### Humidity Sensor

##### *What happens when using the Sensor Features...*

The Sensor Features detect the increasing humidity released during cooking. The oven automatically adjusts the cooking time to various types and amounts of food.

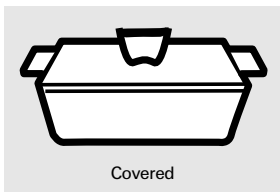

- The proper containers and covers are essential for best sensor cooking.

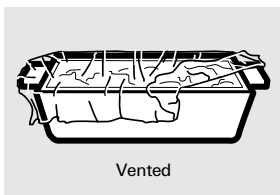

- Always use microwave-safe containers and cover them with lids or vented plastic wrap. Never use tight sealing plastic containers—they can prevent steam from escaping and cause food to overcook.



- Be sure the outside of the cooking containers and the inside of the microwave oven are dry before placing food in the oven. Beads of moisture turning into steam can mislead the sensor.





## Popcorn

POPCORN

1

EXPRESS COOK

(less time)

9

(more time)

Use only with prepackaged microwave popcorn weighing 1.75 to 3.5 ounces.

**NOTE: Do not use the metal shelf when cooking popcorn.**

### **How to Use the Popcorn Feature**

**1** Follow package instructions, using Micro Cook if the package is less than 1.75 ounces or larger than 3.5 ounces. Place the package of popcorn in the center of the microwave.

**2** Press POPCORN. The oven starts immediately.

If you open the door while “POPCORN” is displayed, “SENSOR ERROR” will appear. Close the door, press CLEAR/OFF and begin again.

### **How to Adjust the Popcorn Program to Provide a Shorter or Longer Cook Time**

If you find that the brand of popcorn you use underpops or overcooks consistently, you can add or subtract 20–30 seconds to the automatic popping time.

#### **To add time:**

After pressing POPCORN, press 9 immediately after the oven starts for an extra 20 seconds.

Press 9 again to add another 10 seconds (total 30 seconds additional time).

#### **To subtract time:**

After pressing POPCORN, press 1 immediately after the oven starts for 20 seconds less cooking time.

Press 1 again to reduce cooking time another 10 seconds (total 30 seconds less time).

## Beverage

BEVERAGE

Press BEVERAGE to heat a cup of coffee or other beverage.

**Drinks heated with the Beverage feature may be very hot. Remove the container with care.**



# Operating Instructions

## Sensor Features

### Reheat

#### REHEAT

For reheating single servings of previously cooked foods or a plate of leftovers.

**NOTE: Do not use the metal shelf when using the Reheat feature.**

#### **How to Use the Reheat Feature**

- 1** Place covered food in the oven. Press REHEAT. The oven starts immediately.
- 2** The oven signals when steam is sensed and the time remaining begins counting down.

Do not open the oven door until time is counting down. If the door is opened, close it and press START immediately.

**After removing food from the oven, stir, if possible, to even out the temperature. If food is not hot enough, use Micro Cook to reheat for more time. Reheated foods may have wide variations in temperature. Some areas may be extremely hot.**

#### **Some Foods Not Recommended For Use With Reheat**

It is best to use Micro Cook for these foods:

- Bread products.
- Foods that must be reheated uncovered.
- Foods that need to be stirred or rotated.
- Foods calling for a dry look or crisp surface after reheating.



## Cook

**COOK**

The Cook feature gives you easy, automatic results with a variety of foods.

**NOTE: Do not use the metal shelf when using the Cook feature.**

### How to Sensor Cook

**1** Place covered food in the oven. Press COOK and the desired food type. The oven will start immediately.

**NOTE:** You may also scroll through the food type list by tapping the COOK pad. When the desired food type appears, press START.

**2** The oven signals when steam is sensed and time remaining is counting down. Turn or stir the food if necessary.

Do not open the oven door until time is counting down. If the door is opened, close it and press START immediately.

**NOTE:** If the food is not done enough, use Micro Cook to cook for more time.

### Cooking Guide

Food Type	Amount	Comments
<b>1 Canned Vegetables</b>	4-16 oz.	Cover with lid or vented plastic wrap.
<b>2 Frozen Vegetables</b>	4-16 oz.	Follow package instructions for adding water. Cover with lid or vented plastic wrap.
<b>3 Fresh Vegetables</b>	4-16 oz.	Add 1/4 cup water per serving. Cover with lid or vented plastic wrap.
<b>4 Potatoes</b>	1/2-2 lbs.	Pierce skin with fork. Place potatoes on the oven floor.
<b>5 Fish Fillets</b>	4-16 oz.	Cover with vented plastic wrap.
<b>6 Chicken Pieces</b>	1-8 pieces	Cover with vented plastic wrap.
<b>7 Ground Meats (Beef, Pork, Turkey)</b>	1/2-3 lbs.	Use round casserole dish. Crumble meat into dish. Cover with lid or vented plastic wrap. Drain and stir at signal.



## Operating Instructions

### Other Features

#### Help



The HELP pad displays feature information and helpful hints. Press HELP, then select a feature pad.

#### Cooking Complete Reminder

To remind you that you have food in the oven, the oven will display “FOOD IS READY” and beep once a

minute until you either open the oven door or press CLEAR/OFF.

#### Shelf



- Never use the shelf for microwave-only cooking. Remove the shelf from the oven when microwave-only cooking.
- Always place the shelf on the floor of the oven for convection and combination cooking.
- Use potholders when handling the shelf and cookware. They will be hot.
- Do not use the broiler pan or spatter shield while microwaving.
- Place the shelf on the upper supports for convection broiling.

#### Display On/Off




DISPLAY ON/OFF

To turn the clock display off, press and hold 0 for about three seconds.

To redisplay the clock, repeat.




## Clock

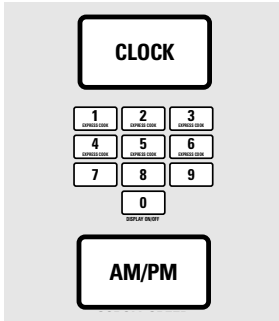

Press to enter the time of day or to check the time of day while microwaving.


- 1** Press CLOCK.
- 2** Enter time of day.
- 3** Select AM/PM.
- 4** Press START or CLOCK.

## Scroll Speed

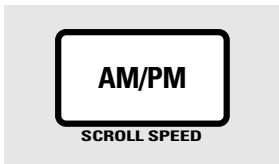

The scroll speed of the display can be changed. Press and hold the AM/PM pad about 3 seconds to bring up the display. Select 1-5 for slow to fast scroll speed.

## Delay Start

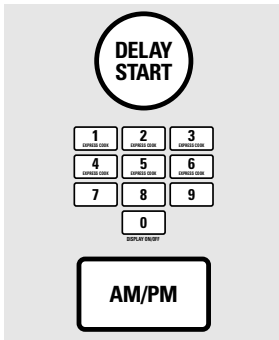

Delay Start allows you to set the microwave to delay cooking up to 24 hours.

- 1** Press DELAY START.
- 2** Enter the time you want the oven to start. (Be sure the microwave clock shows the correct time of day.)

- 3** Select any combination of Defrost Auto/Time, Micro Cook I & II, Temp Cook/Hold, or Combination Roast.

- 4** Press START.

The Delay Start time will be displayed plus "DS." The oven will automatically start at the delayed time.

The time of day may be displayed by pressing CLOCK.






# Operating Instructions

## Other Features

### Timer On/Off

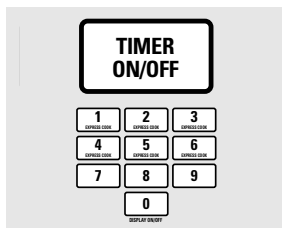


Timer On/Off operates as a minute timer and can be used at any time, even when the oven is operating.

- 1 Press TIMER ON/OFF.
- 2 Enter time you want to count down.
- 3 Press TIMER ON/OFF to start.

When time is up, the oven will signal. To turn off the timer signal, press TIMER ON/OFF.


**NOTE:** The timer indicator will be lit while the timer is operating.

### Start/Pause

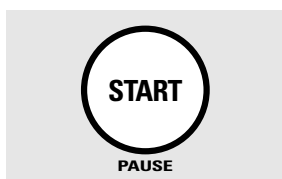

In addition to starting many functions, START/PAUSE allows you to stop cooking without opening the door or clearing the display.

### Reminder

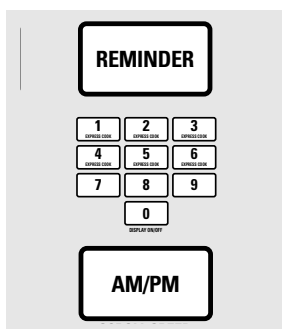

The Reminder feature can be used like an alarm clock and can be used at any time, even when the oven is operating. The Reminder time can be set up to 24 hours later.

- 1 Press REMINDER.
- 2 Enter the time you want the oven to remind you. (Be sure the microwave clock shows the correct time of day.)

3 Select AM or PM.

4 Press REMINDER. When Reminder signal occurs, press REMINDER to turn it off. The Reminder time may be displayed by pressing REMINDER.

**NOTE:** The REM indicator will remain lit to show that the Reminder is set. To clear the Reminder before it occurs, press REMINDER, then 0. The REM indicator will no longer be lit.



## Child Lock-Out



You may lock the control panel to prevent the microwave from being accidentally started or used by children.

To lock or unlock the controls, press and hold CLEAR/OFF for about three seconds. When the control panel is locked, an “L” will be displayed to the extreme right.

## Vent Fan



The vent fan removes steam and other vapors from surface cooking.

Press VENT FAN once for high fan speed, twice for low fan speed or a third time to turn the fan off.



## Automatic Fan

An automatic fan feature protects the microwave from too much heat rising from the cooktop below it. It automatically turns on at low speed if it senses too much heat.

If you have turned the fan on you may find that you cannot turn it off. The fan will automatically turn off when the internal parts are cool. It may stay on for 30 minutes or more after the cooktop and microwave controls are turned off.



## Operating Instructions

### Other Features

#### Surface Light



BRIGHT-NIGHT-OFF

Press SURFACE LIGHT **once** for bright light, **twice** for the night light or **three** times to turn the light off.

#### Sound Level



0-1-2-3

The beeper sound level can be adjusted. Press SOUND LEVEL. Choose 0-3 for mute to loud.

#### Auto Nite Light



You can set the night light to turn on and off automatically at any time you want.

- 1** Press AUTO NITE LIGHT.
- 2** Enter the time you want the light to turn on. Select AM or PM.
- 3** Press AUTO NITE LIGHT again and enter the time you want the light to turn off. Select AM or PM.
- 4** Press AUTO NITE LIGHT.

NITE will stay lit to remind you that the feature is set. You can review the auto nite light settings by pressing AUTO NITE LIGHT.

To erase your settings and turn off the automatic feature, press AUTO NITE LIGHT, then 0.





### *Microwave Terms*

<b>Term</b>	<b>Definition</b>
<b>Arcing</b>	<p>Arcing is the microwave term for sparks in the oven. Arcing is caused by:</p> <ul style="list-style-type: none"><li>• the temperature probe staying in the oven but not inserted in the food.</li><li>• the metal shelf being installed incorrectly and touching the microwave walls.</li><li>• metal or foil touching the side of the oven.</li><li>• foil that is not molded to food (upturned edges act like antennas).</li><li>• metal such as twist ties, poultry pins, gold-rimmed dishes.</li><li>• recycled paper towels containing small metal pieces.</li></ul>
<b>Covering</b>	<p>Covers hold in moisture, allow for more even heating and reduce cooking time. Venting plastic wrap or covering with wax paper allows excess steam to escape.</p>
<b>Shielding</b>	<p>In a regular oven, you shield chicken breasts or baked foods to prevent over-browning. When microwaving, you use small strips of foil to shield thin parts, such as the tips of wings and legs on poultry, which would cook before larger parts.</p>
<b>Standing Time</b>	<p>When you cook with regular ovens, foods such as roasts or cakes are allowed to stand to finish cooking or to set. Standing time is especially important in microwave cooking. Note that a microwaved cake is not placed on a cooling rack.</p>
<b>Venting</b>	<p>After covering a dish with plastic wrap, you vent the plastic wrap by turning back one corner so excess steam can escape.</p>



## Helpful Information

### Care and Cleaning

#### Helpful Hints




Open the oven door a few minutes after cooking to air out the inside. An occasional thorough wiping with a solution of baking soda and water keeps the inside fresh.

**NOTE: Be certain the power is off before cleaning any part of this oven.**

#### How to Clean the Inside

**Walls, Floor, Inside Window, Metal and Plastic Parts on the Door**

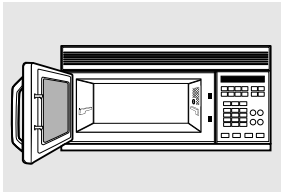

Some spatters can be removed with a paper towel, others may require a damp cloth. Remove greasy spatters with a sudsy cloth, then rinse with a damp cloth. Do not use abrasive cleaners or sharp utensils on oven walls.

**Never use a commercial oven cleaner on any part of your microwave.**

#### Temperature Probe


Clean immediately after using. To clean, wipe with sudsy cloth, then rub lightly with plastic scouring ball if necessary. Rinse and dry. The probe can also be washed in the dishwasher.

#### Shelf

Clean with mild soap and water or in the dishwasher. **Do not clean in a self-cleaning oven.**

#### Broiler Pan (Spatter Shield and Drip Pan)

Remove spatter shield from drip pan. Carefully pour grease from drip pan into proper container. Clean immediately after using. If necessary, scour with a soap-filled or plastic scouring pad in hot, soapy water. If food has burned on, sprinkle spatter shield while hot with detergent and cover with wet paper towels or a dish cloth to soak loose burned-on foods. The broiler pan can also be washed in the dishwasher.

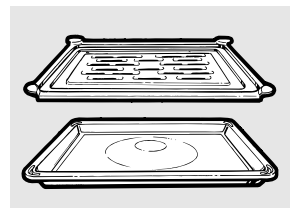

## How to Clean the Outside

**Do not use cleaners containing ammonia or alcohol on the microwave oven. Ammonia or alcohol can damage the appearance of the microwave.**

### **Case**

Clean the outside of the microwave with a sudsy cloth. Rinse and then dry. Wipe the window clean with a damp cloth.


### **Control Panel and Door**

Wipe with a damp cloth. Dry thoroughly. Do not use cleaning sprays, large amounts of soap and water, abrasives or sharp objects on the panel—they can damage it. Some paper towels can also scratch the control panel.

### **Door Surface**

It's important to keep the area clean where the door seals against the microwave. Use only mild, non-abrasive detergents applied with a clean sponge or soft cloth. Rinse well.

### **Bottom**

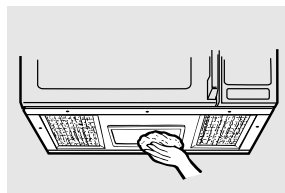

Clean off the grease and dust on the bottom often. Use a solution of warm water and detergent.




## Helpful Information

### Light Bulb Replacement


#### Cooktop Light/ Night Light

Replace with 40-watt incandescent bulbs. Order WB02X4253 from your GE supplier. High intensity 40-watt bulbs (40S11N/1), available in supermarkets and hardware stores, may also be used for replacements.

- 1 To replace combination cooktop light/night light, first **disconnect the power at the main fuse or circuit breaker panel or pull the plug.**
- 2 Remove the screw on the right side of the light compartment cover and lower the cover until it stops.

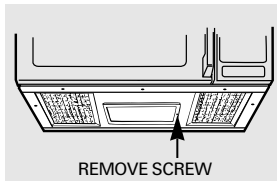


- 3 Be sure the bulb(s) to be replaced are cool before removing. Break the adhesive seal by gently unscrewing the bulbs.
- 4 Raise light compartment cover and replace the screw. Connect electrical power to the oven.

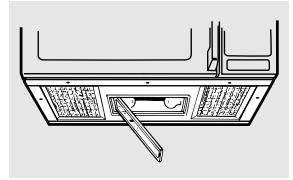


#### Oven Light

Replace the burned-out bulb with a 40-watt incandescent bulb (WB02X4253), available from your GE supplier.


- 1 To replace the oven light, first **disconnect the power at the main fuse or circuit breaker panel or pull the plug.**
- 2 Remove the top grille by taking out the 2 screws that hold it in place.

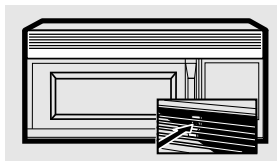

- 3 Next, remove the single screw located above the door near the center of the oven that secures the light housing.

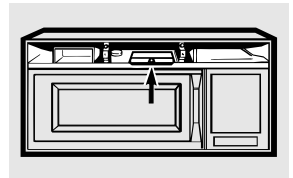

## The Vent Fan

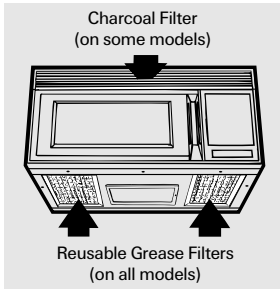

The vent fan has 2 metal reusable grease filters.


Models that recirculate air back into the room also use a charcoal filter.

## Reusable Grease Filters

The metal filters trap grease released by foods on the cooktop. They also prevent flames from foods on the cooktop from damaging the inside of the microwave.

For this reason, the filters must ALWAYS be in place when the hood is used. The grease filters should be cleaned once a month, or as needed.

## Removing and Cleaning the Filter

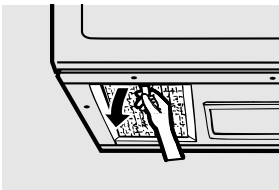

**To remove**, slide it to the rear using the tab. Pull it down and out.

**To clean the grease filter**, soak it and then swish it around in hot water and detergent. Don't use ammonia or ammonia products because they will darken the metal. Light brushing can be used to remove embedded dirt.

Rinse, shake and let it dry before replacing.

**To replace**, slide the filter in the frame slot on the back of the opening. Pull up and to the front to lock into place.



## Helpful Information

### *The Exhaust Feature*


#### **Charcoal Filter (on some models)**

***The charcoal filter cannot be cleaned. It must be replaced. Order Part No. WB02X9883 from your GE supplier.***

If the model is not vented to the outside, the air will be recirculated through a disposable charcoal filter that helps remove smoke and odors.

The charcoal filter should be replaced when it is noticeably dirty or discolored (usually after 6 to 12 months, depending on hood usage).

#### **To Remove Charcoal Filter**

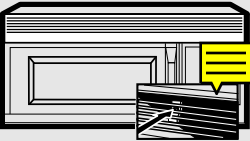


Remove 2 grille screws to remove the grille.

To remove the charcoal filter, disconnect power at the main fuse or circuit breaker panel or pull the plug.

Remove the top grille by removing the 2 screws that hold it in place. Slide the filter towards the front of the oven and remove it.

#### **To Install Charcoal Filter**

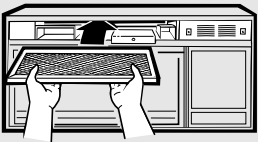

To install a new filter, remove plastic and other outer wrapping from the new filter.

Insert the filter into the top opening of the oven as shown. It will rest at an angle on 2 side support tabs and in front of the right rear tab. Replace the grille and 2 screws.

# If Something Goes Wrong

## Before You Call For Service



<b>Problem</b>	<b>Possible Cause</b>	<b>What to Do</b>
<b>Oven will not start</b>	<p>A fuse in your home may be blown or the circuit breaker tripped.</p> <p>Power surge.</p> <p>Plug not fully inserted into wall outlet.</p>	<ul style="list-style-type: none"><li>• Replace fuse or reset circuit breaker.</li><li>• Unplug the microwave oven, then plug it back in.</li><li>• Make sure the 3-prong plug on the oven is fully inserted into wall outlet.</li></ul>
<b>"PLEASE INSERT PROBE" appears on display</b>	<p>Probe has been forgotten or not inserted properly.</p>	<ul style="list-style-type: none"><li>• Insert the probe properly into the wall receptacle.</li></ul>
<b>"SENSOR ERROR" appears on display</b>	<p>When using a Sensor feature, the door was opened before steam could be detected.</p> <p>Steam was not detected in maximum amount of time.</p>	<ul style="list-style-type: none"><li>• Do not open door until steam is sensed and time is shown counting down on display.</li><li>• Use Micro Cook to heat for more time.</li></ul>
<b>Floor of the oven is warm, even when the oven has not been used</b>	<p>The cooktop light is located below the oven floor. When the light is on, the heat it produces may make the oven floor get warm.</p>	<ul style="list-style-type: none"><li>• This is normal.</li></ul>
<b>"BAD PROBE" appears on display</b>	<p>The probe has not been completely inserted into the wall receptacle.</p> <p>The probe is defective.</p>	<ul style="list-style-type: none"><li>• Insert the probe properly into the wall receptacle.</li><li>• Replace the probe.</li></ul>
<b>"LOCKED" appears on display</b>	<p>The control has been locked.</p>	<ul style="list-style-type: none"><li>• Press and hold CLEAR/OFF for about 3 seconds to unlock the control.</li></ul>
<b>Food amount too large for Sensor Reheat</b>	<p>Sensor Reheat is for single servings of recommended foods.</p>	<ul style="list-style-type: none"><li>• Use Micro Cook for large amounts of food.</li></ul>



## If Something Goes Wrong

### Before You Call For Service

<b>Problem</b>	<b>Possible Cause</b>	<b>What to Do</b>
<b>"HOT—OVEN IS HOT" appears on display</b>	<p>The temperature inside the oven is greater than 200°F.</p> <p>One of the sensor cooking pads was pressed when the temperature inside the oven was greater than 200°F.</p>	<ul style="list-style-type: none"> <li>• This is normal.</li> <li>• These features will not operate when the oven is hot.</li> </ul>
<b>You hear an unusual, low-tone beep</b>	<p>You have tried to start the Reminder without a valid time of day.</p> <p>You have tried to start the Auto Nite Light without a valid time of day entered for the on-time and off-time.</p> <p>You have tried to change the power level when it is not allowed.</p>	<ul style="list-style-type: none"> <li>• Start over and enter a valid time of day.</li> <li>• Start over and enter a valid time of day.</li> <li>• Many of the oven's features are preset and cannot be changed.</li> </ul>

### Things That Are Normal

- Steam or vapor escaping from around the door.
- Light reflection around door or outer case.
- Dimming oven light and change in the blower sound at power levels other than high.
- Dull thumping sound while oven is operating.
- TV-radio interference might be noticed while using the microwave. Similar to the interference caused by other small appliances, it does not indicate a problem with the microwave. Plug the microwave into a different electrical circuit, move the radio or TV as far away from the microwave as possible, or check the position and signal of the TV/radio antenna.





## GE Service Numbers



*We'll be there!*

---

### **GE Answer Center®**

**800.626.2000**

Open 24 hours a day,  
7 days a week.

---

### **In-Home Repair Service**

**800-GE-CARES  
(800-432-2737)**

We provide expert repair service, scheduled at a time that's convenient for you.

Our factory-trained technicians know your appliance inside and out—so most repairs can be handled in just one visit.

---

### **For Customers With Special Needs**

**800.626.2000**

**TDD  
800-833-4322**

GE will provide Braille controls for a variety of GE appliances, and a brochure to assist in planning a barrier-free kitchen for persons with limited mobility.

Consumers with impaired hearing or speech who have access to a TDD or a conventional tele-typewriter may call 800-833-4322 to request information or service.

---

### **Service Contracts**

**800-626-2224**

With a service contract GE Consumer Service will still be there after your warranty expires.

With a multiple-year contract, you're assured of future service at today's prices.



## **Parts and Accessories**

**800-626-2002**

Individuals qualified to service their own appliances can have parts or accessories sent directly to their home.

VISA, MasterCard and Discover cards are accepted.

## **Further Service**

If for some reason you are not happy with the service you receive, here are three steps to follow for further help.

**First**, contact the people who serviced your appliance. Explain why you are not pleased.

**Next**, if you are still not pleased, write all the details—including your phone number—to:

Consumer Relations  
GE Appliances  
Louisville, KY 40225

**Finally**, if your problem is still not resolved, write:

Major Appliance  
Consumer Action Program  
20 North Wacker Drive  
Chicago, IL 60606

## **Para los clientes de habla hispana**

**800.626.2000**

Para obtener la versión en español de este manual, llame a GE Answer Center<sup>®</sup>, servicio de información para el consumidor, teléfono 800.626.2000.

# MICROWAVE OVEN WARRANTY

Staple sales slip or cancelled check here. Proof of original purchase date is needed to obtain service under warranty.

## What Is Covered

### FULL ONE-YEAR WARRANTY

For one year from date of original purchase, we will provide, free of charge, parts and service labor in your home to repair or replace *any part of the microwave oven* that fails because of a manufacturing defect.

### LIMITED ADDITIONAL NINE-YEAR WARRANTY

For the second through the tenth year from the date of original purchase, we will provide, free of charge, a replacement *magnetron tube* if the magnetron tube fails because of a manufacturing defect. You pay for the service trip to your home and service labor charges.

\*\*\*\*\*

This warranty is extended to the original purchaser and any succeeding owner for products purchased for ordinary home use in the 48 mainland states, Hawaii and Washington, D.C. In Alaska the warranty is the same except that it is LIMITED because you must pay to ship the product to the service shop or for the service technician's travel costs to your home.

All warranty service will be provided by our Factory Service Centers or by our authorized Customer Care<sup>®</sup> servicers during normal working hours.

Should your appliance need service, during warranty period or beyond, call 800-GE-CARES (800-432-2737).

## What Is Not Covered

*Warrantor is not responsible for consequential damages.*

- Service trips to your home to teach you how to use the product.

**Read your Owner's Manual.** If you then have any questions about operating the product, please contact your dealer or our Consumer Affairs office at the address below, or call, toll free:

**GE Answer Center<sup>®</sup>**  
**800.626.2000**  
consumer information service

- Improper installation.

If you have an installation problem, contact your dealer or installer. You are responsible for providing adequate electrical, exhausting and other connecting facilities.

- Replacement of house fuses or resetting of circuit breakers.
- Failure of the product if it is misused, or used for other than the intended purpose or used commercially.
- Damage to product caused by accident, fire, floods or acts of God.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. To know what your legal rights are in your state, consult your local or state consumer affairs office or your state's Attorney General.

**Warrantor: General Electric Company** *If further help is needed concerning this warranty, write:  
Manager—Consumer Affairs, GE Appliances, Louisville, KY 40225*

Part No. 164D3370P003  
Pub. No. 49-40002

6-96 CG

Printed in Korea

JVM1090

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>