



T M 1 1 - 6 6 2 5 - 2 9 5 8 - 1 4 & P

TECHNICAL MANUAL

**OPERATOR'S, ORGANIZATIONAL,
DIRECT SUPPORT AND GENERAL SUPPORT**

**MAINTENANCE MANUAL
(INCLUDING REPAIR PARTS
AND SPECIAL TOOLS LIST)**

FOR

**POWER SUPPLY PP-7545/U
(HEWLETT-PACKARD MODEL 6269B)
(NSN 6130-00-148-1796)**

**HEADQUARTERS, DEPARTMENT OF THE ARMY
21 AUGUST 1980**



5

SAFETY STEPS TO FOLLOW IF SOMEONE IS THE VICTIM OF ELECTRICAL SHOCK

1

DO NOT TRY TO PULL OR GRAB THE INDIVIDUAL

2

IF POSSIBLE , TURN OFF THE ELECTRICAL POWER

3

IF YOU CANNOT TURN OFF THE ELECTRICAL POWER, PULL, PUSH, OR LIFT THE PERSON TO SAFETY USING A WOODEN POLE OR A ROPE OR SOME OTHER INSULATING MATERIAL

4

SEND FOR HELP AS SOON AS POSSIBLE

5

AFTER THE INJURED PERSON IS FREE OF CONTACT WITH THE SOURCE OF ELECTRICAL SHOCK, MOVE THE PERSON A SHORT DISTANCE AWAY AND IMMEDIATELY START ARTIFICIAL RESUSCITATION

This manual includes copyright material reproduced by permission of the HEWLETT-PACKARD Company.

TM 11-6625-2958-14&P

TECHNICAL MANUAL

No. 11-6625-2958-14&P

**HEADQUARTERS
DEPARTMENT OF THE ARMY**

Washington DC, 21 August 1980

**OPERATOR'S, ORGANIZATIONAL, DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE MANUAL
(INCLUDING REPAIR PARTS AND SPECIAL TOOLS LISTS)**

FOR

DC POWER SUPPLY PP-7545/U

(HEWLETT-PACKARD MODEL 6269B)

(NSN 6130-00-148-1796)

FOR SERIALS 1027A00101 AND ABOVE*

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Forms 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In either case a reply will be forwarded direct to you.

This manual is an authentication of the manufacturer's commercial literature which, through usage, has been found to cover the data required to operate and maintain this equipment. Since the manual was not prepared in accordance with military specifications and AR 310-3, the format has not been structured to consider levels of maintenance.

TABLE OF CONTENTS

| Section | Page No. | Section | Page No. |
|---------|--|---------|----------|
| 0 | INSTRUCTIONS | 6-1 | |
| 0-1 | Scope | 0-1 | |
| 0-2 | Indexes of Publications | 0-1 | |
| 0-3 | Forms and Records | 0-1 | |
| 0-4 | Reporting Equipment Improvement Recommendations (EIR) | 0-1 | |
| 0-5 | Administrative Storage | 0-1 | |
| 0-6 | Destruction of Army Electronics Materiel | 0-1 | |
| I | GENERAL INFORMATION. | 1-1 | |
| 1-1 | Description | 1-1 | |
| 1-7 | Specifications | 1-2 | |
| 1-9 | Options | 1-2 | |
| 1-11 | Instrument/Manual Identification | 1-2 | |
| 1-14 | Ordering Additional Manuals | 1-3 | |
| II | INSTALLATION | 2-1 | |
| 2-1 | Initial Inspection | 2-1 | |
| 2-3 | Mechanical Check | 2-1 | |
| 2-5 | Electrical Check | 2-1 | |
| 2-7 | Installation Data | 2-1 | |
| 2-9 | Location | 2-1 | |
| 2-11 | Outline Diagram | 2-1 | |
| 2-13 | Rack Mounting | 2-1 | |
| 2-15 | Input Power Requirements | 2-1 | |
| 2-17 | Connections for 208 Volt Operation (Model 6259B, 6261B, or 6268B) | 2-1 | |
| 2-19 | Connections for 208 Volt Operation (Model 6260B and 6269B) | 2-2 | |
| 2-21 | Connections for 115 Volt Operation (Model 6259B, 6261B, and 6268B) | 2-3 | |
| 2-23 | Connections for 115 Volt Operation (Model 6260B) | 2-3 | |
| 2-25 | Connections for 50Hz Operation | 2-4 | |
| 2-27 | Power Cable | 2-4 | |
| 2-29 | Repackaging for Shipment | 2-4 | |
| III | OPERATING INSTRUCTIONS | 3-1 | |
| 3-1 | Turn-On Checkout Procedure | 3-1 | |
| 3-3 | Operating Modes | 3-1 | |
| 3-5 | Normal Operating Mode | 3-1 | |
| 3-7 | Constant Voltage | 3-2 | |
| 3-9 | Constant Current | 3-2 | |
| 3-11 | Overvoltage Trip Point Adjustment | 3-2 | |
| 3-14 | Connecting Load | 3-2 | |
| 3-18 | No Load Operation | 3-2 | |
| 3-20 | Operation Beyond Rated Output | 3-3 | |
| 3-22 | Optional Operating Modes | 3-3 | |
| 3-23 | Remote Programming, Constant Voltage | 3-3 | |
| 3-32 | Remote Programming, Constant Current | 3-4 | |
| 3-41 | Remote Sensing | 3-5 | |
| 3-46 | Auto-Parallel Operation | 3-6 | |
| 3-50 | Auto-Series Operation | 3-7 | |
| 3-55 | Auto-Tracking Operation | 3-8 | |
| 3-59 | Special Operating Considerations | 3-8 | |
| 3-60 | Pulse Loading | 3-8 | |
| 3-62 | Output Capacitance | 3-9 | |
| 3-65 | Reverse Voltage Loading | 3-9 | |
| 3-67 | Reverse Current Loading | 3-9 | |
| IV | PRINCIPLES OF OPERATION. | 4-1 | |
| 4-1 | Overall Block Diagram Discussion | 4-1 | |
| 4-16 | Detailed Circuit Analysis | 4-3 | |
| 4-17 | Preregulator Control Circuit | 4-3 | |
| 4-27 | Series Regulator and Driver | 4-4 | |
| 4-29 | Short Circuit Protection | 4-4 | |
| 4-31 | Constant Voltage Comparator | 4-5 | |
| 4-38 | Constant Current Comparator | 4-5 | |
| 4-43 | Voltage Clamp Circuit | 4-6 | |
| 4-46 | Mixer and Error Amplifiers | 4-6 | |
| 4-50 | Overvoltage Protection Crowbar | 4-6 | |
| 4-56 | Turn-On Control Circuit | 4-7 | |
| 4-59 | Reference Regulator | 4-7 | |
| 4-64 | Meter Circuit | 4-7 | |
| 4-68 | Additional Protection Features | 4-8 | |
| v | MAINTENANCE | 5-1 | |
| 5-1 | Introduction | 5-1 | |
| 5-3 | Test Equipment Required | 5-1 | |
| 5-5 | performance Test | 5-2 | |
| 5-7 | Constant Voltage Tests | 5-2 | |
| 5-40 | Constant Current Tests | 5-7 | |
| 5-51 | Troubleshooting | 5-9 | |
| 5-56 | Overall Troubleshooting Procedure | 5-10 | |
| 5-62 | Disassembly Procedures | 5-15 | |
| 5-71 | Repair and Replacement | 5-16 | |
| 5-73 | Adjustment and Calibration | 5-18 | |
| 5-75 | Meter Zero | 5-18 | |
| 5-77 | Voltmeter Calibration | 5-18 | |
| 5-79 | Ammeter Calibration | 5-18 | |
| 5-81 | Constant Voltage Programming Current | 5-19 | |
| 5-90 | Constant Current Programming Current | 5-20 | |
| 5-99 | Transient Recovery Time | 5-20 | |
| 5-101 | Ripple Imbalance 150 and 60Hz Operation) | 5-20 | |

TABLE OF CONTENTS (Continued)

| Section | Page No. | Section | Page No. |
|---|----------|---|----------|
| V MAINTANCE . . . Continued | | 5-111 Crowbar Disablement | 5-22 |
| 5-103 Preregulator Tracking (5 O and 60Hz Operation) | 5-21 | VI REPLACEABLE PARTS | 6-1 |
| 5-105 50Hz Operation (Option 005) | 5-21 | 6-1 Introduction | 6-1 |
| 5-107 Crowbar Trip Voltage | 5-21 | 6-4 Ordering Information | 6-1 |
| 5-109 Maximum Crowbar Trip Voltage | 5-22 | VII CIRCUIT DIAGRAMS & COMPONENT LOCATION DIAGRAMS | 7-1 |

| | | | Page No. |
|----------|------|-------------------------------------|----------|
| APPENDIX | A. | References | A-1 |
| | B. | Components of End Item List | |
| Section | I. | Introduction | B-1 |
| | II. | Integral Components of End Item | B-2 |
| | III. | Basic Issue Items | B-2 |
| APPENDIX | c. | Additional Authorization List (N/A) | |
| | D. | Maintenance Allocation Chart | D-1 |
| Section | I. | Introduction | D-1 |
| | II. | Maintenance Allocation Chart | D-3 |
| | 111. | Tools and Test Equipment Required | D-4 |
| | IV. | Remarks | D-5 |

LIST OF TABLES

| Table | | Page No |
|-------|---|---------|
| 1-1 | Specifications | 1-3 |
| 5-1 | Test Equipment Required | 5-1 |
| 5-2 | Reference and Bias Voltages. | 5-10 |
| 5-3 | Overall Troubleshooting | 5-10 |
| 5-4 | Feedback Loop Isolation | 5-12 |
| 5-5 | Series Regulator Troubleshooting, High Voltage Condition | 5-13 |
| 5-6 | Series Regulator Troubleshooting, Low Voltage Condition. | 5-13 |
| 5-7 | Preregulator Troubleshooting | 5-14 |
| 5-8 | Checks and Adjustments After Replacement of Semiconductor Devices | 5-17 |
| 6-1 | Reference Designators. | 6-1 |
| 6-2 | Description Abbreviations | 6-1 |
| 6-3 | Code List of Manufacturers | 6-2 |
| 6-4 | Replaceable Parts. | 6-5 |
| 6-5 | Part Number-National Stock Number Cross Reference Index | 6-12 |

MANUAL CHANGES

Check the serial number of your power supply. Then refer to the manual changes at the rear of this technical manual and make changes as required so that your power supply can be correctly serviced.

LIST OF ILLUSTRATIONS

| Figure | Page No. |
|---|----------|
| 1-1 DC Power Supply, Model 6259B, 6260B, 6261B, 6268B, or 6269B | I-I |
| 2-1 Outline Diagram | 2-1 |
| 2-2 Bias Transformer Primary Connections for 208Vac and 115Vac Operation | 2-2 |
| 2-3 Power Transformer Primary Connections for 208Vac and 115Vac Operation | 2-2 |
| 2-4 Power Transformer T1 Primary Connections for 208Vac Operation. | 2-3 |
| 2-5 RF I Choke (A2L1A/A2L1B) Connections for 115Vac Operation | 2-3 |
| 3-1 Front Panel Controls and Indicators | 3-1 |
| 3-2 Normal Strapping Pattern | 3-2 |
| 3-3 Remote Resistance Programming (Constant Voltage) | 3-3 |
| 3-4 Remote Voltage Programming, Unity Gain (Constant Voltage) | 3-3 |
| 3-5 Remote Voltage Programming, Non-Unity Gain (Constant Voltage). | 3-4 |
| 3-6 Remote Resistance Programming (Constant Current) | 3-4 |
| 3-7 Remote Voltage Programming, Unity Gain (Constant Current) | 3-5 |
| 3-8 Remote Voltage Programming, Non-Unity Gain (Constant Current). | 3-5 |
| 3-9 Remote Sensing. | 3-5 |
| 3-10 Auto-Parallel Operation, Two and Three Units | 3-6 |
| 3-11 Auto-Series Operation, Two and Three Units | 3-7 |
| 3-12 Auto-Tracking, Two and Three Units | 3-8 |
| 4-1 Overall Block Diagram | 4-1 |
| 4-2 Operating Locus of a CV/CC Power Supply | 4-2 |
| 4-3 Triac Phase Control Over AC Input Amplitude | 4-3 |
| 4-4 Preregulator Control Circuit Waveforms | 4-4 |
| 5-1 Differential Voltmeter Substitute Test Setup | 5-2 |
| 5-2 Constant Voltage Load Regulation Test Setup | 5-3 |
| 5-3 Ripple Test Setup | 5-4 |
| 5-4 Noise Spike Measurement Test Setup | 5-5 |
| 5-5 Transient Recovery Time Test Setup | 5-6 |
| 5-6 Transient Recovery Time Waveforms | 5-6 |
| 5-7 Current Sampling Resistor Connections | 5-8 |
| 5-8 Constant Current Load Regulation Test Setup | 5-8 |
| 5-9 Constant Current Ripple and Noise Test Setup | 5-9 |
| 5-10 "ZERO ADJUST" Section of Main Circuit Board | 5-19 |
| 7-1 A2 RFI Assembly Component Location Diagram | 7-2 |
| 7-2 A3 Interconnection Circuit Board Assembly Component Location Diagram. | 7-2 |
| 7-3 Top Front Chassis Assembly Component Location Diagram | 7-3 |
| 7-4 Bottom Front Chassis Assembly Component Location Diagram | 7-4 |
| 7-5 Bottom Rear Chassis Assembly Component Location Diagram | 7-5 |
| 7-6 Series Regulator Emitter Resistor Assembly Component Location Diagram | 7-6 |
| 7-7 A4 Heat Sink Assembly Component Location Diagram (Top View) | 7-6 |
| 7-8 A4 Heat Sink Assembly Component Location Diagram (End View) | 7-7 |
| 7-9 Preregulator Control Circuit Waveforms | 7-7 |
| 7-10 A1 Main Printed Circuit Board Component Location Diagram. | 7-8 |
| 7-11 Schematic Diagram | Foldout |

SECTION O INTRODUCTION

0-1. SCOPE.

a. This manual describes DC Power Supply PP-7545/U (fig. 1-1) and provides maintenance instructions. Throughout this manual, PP-7545/U is referred to as the Hewlett-Packard (HP) Model 6269B DC Power supply.

0-2. INDEXES OF PUBLICATIONS.

a. *DA Pam 310-4*. Refer to the latest issue of DA Pam 310-4 to determine whether there are new editions, changes, additional publications pertaining to the equipment.

b. *DA Pam 310-7*: Refer to DA Pam 310-7 to determine whether there are modification work orders (MWO's) pertaining to the equipment.

0-3. FORMS AND RECORDS.

a. *Reports of Maintenance and Unsatisfactory Equipment*. Maintenance forms, records, and reports which are to be used by maintenance personnel at all maintenance levels are listed in and prescribed by TM 38-750.

b. *Report of Packaging and Handling Deficiencies*. Fill out and forward DD Form 6 (Packaging Improvement Report) as prescribed in AR 735-11-2/NAVUPINST4440.127E/AFR 400-54/MCO

4430.3E and DSAR 4140.55.

c. *Discrepancy in Shipment Report (DISREP) (SF 361)*. Fill out and forward Discrepancy in Shipment Report (DISREP) (SF 361) as prescribed in AR 55-38/NAVSUPINST 4610.33B/AFR 75-18\MCO P4610.19C and DLAR 4500.15.

0-4. REPORTING EQUIPMENT IMPROVEMENT RECOMMENDATIONS (EIR).

EIR's will be prepared using SF 368 (Quality Deficiency Report). Instructions for preparing EIR's are provided in TM 38-750, the Army Maintenance Management System. EIR's should be mailed direct to Commander, US Army Communication and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703. A reply will be furnished direct to you.

0-5. ADMINISTRATIVE STORAGE.

Administrative storage of equipment issued to and used by Army activities shall be in accordance with TM 740-90-1 and paragraph 2-8.

0-6. DESTRUCTION OF ARMY ELECTRONICS MATERIEL.

Destruction of Army electronics materiel to prevent enemy use shall be in accordance with TM 750-244-2.

SAFETY PRECAUTIONS.

A periodic review of safety precautions in TB 385-4 is recommended. When the equipment is operated with covers removed while performing maintenance, DO NOT TOUCH exposed connections or components. MAKE CERTAIN you are not grounded when making connections or adjusting components inside the power supply.

WARNING

HIGH VOLTAGE is used during the "performance of maintenance as instructed in this manual. DEATH ON CONTACT may result if personnel fail to observe safety precautions.

SECTION I GENERAL INFORMATION

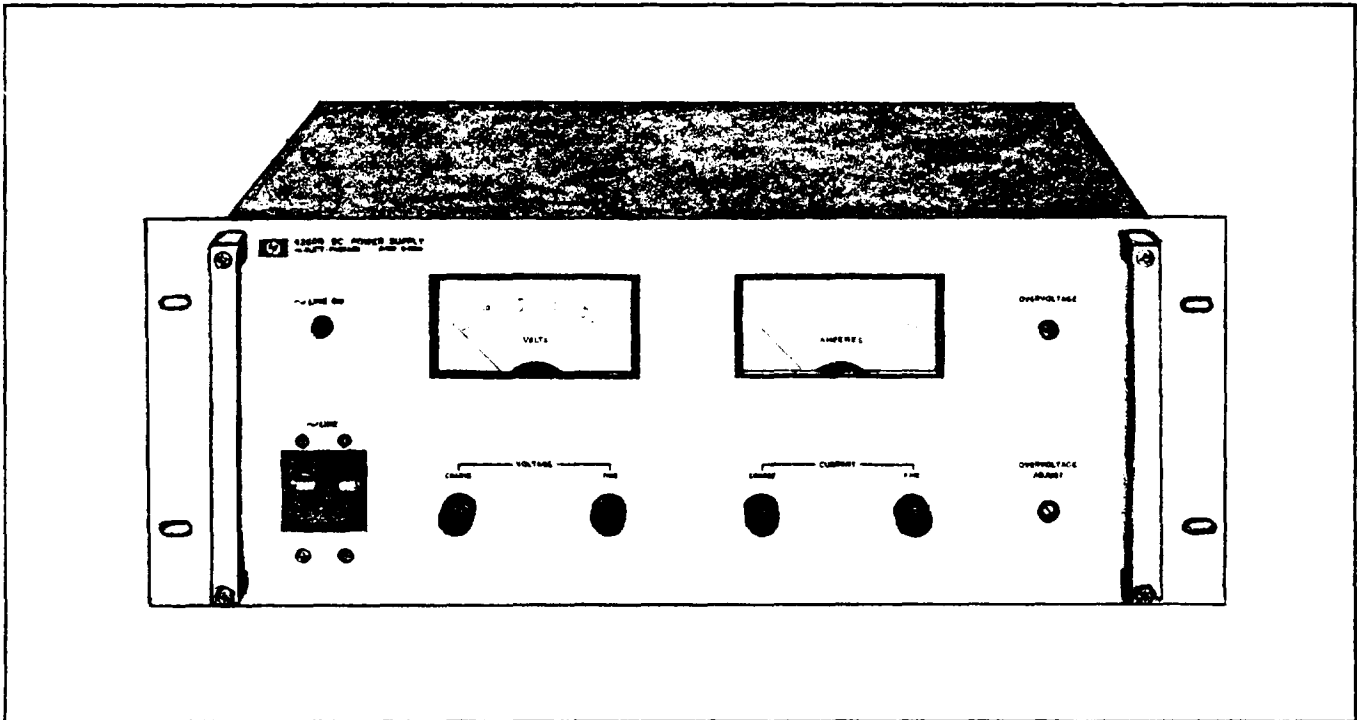


Figure 1-1. DC Power Supply, Model 6259B, 6260B, 6261B, 6268B, or 6269B

1-1 DESCRIPTION

1-2 This power supply, Figure 1-1, is completely transistorized and suitable for either bench or relay rack operation. It is a well-regulated, constant voltage/constant current supply that will furnish full rated output voltage at the maximum rated output current or can be continuously adjusted throughout the output range. The front panel CURRENT controls can be used to establish the output current limit (overload or short circuit) when the supply is used as a constant voltage source and the VOLTAGE controls can be used to establish the voltage limit (ceiling) when the supply is used as a constant current source. The supply will automatically cross over from constant voltage to constant current operation and vice versa if the output current or voltage exceeds these preset limits.

1-3 The power supply contains an added feature for protection of delicate loads. A limit can be set on the output voltage. If this limit is exceeded the output will automatically be shorted.

1-4 The power supply has rear output terminals. Either the positive or negative output terminal may be grounded or the power supply can be operated floating at up to a maximum of 300 volts above ground.

1-5 Output voltage and current are continuously monitored on two front panel meters.

1-6 Terminals located at the rear of the unit allow access to various control points within the unit to expand the operating capabilities of the power supply. A brief description of these capabilities is given below:

a. Remote Programming. The power supply output voltage or current may be programmed (controlled) from a remote location by means of an external voltage source or resistor.

b. Remote-Sensing. The degradation in regulation which occurs at the load due to voltage drop in the load leads can be reduced by using the power supply in the remote sensing mode of operation.

c. Auto-Series Operation. Power supplies

may be used in series when a higher output voltage is required in the constant voltage mode of operation or when greater voltage compliance is required in the constant current mode of operation. Auto-Series operation permits one-knob control of the total output voltage from a "master" supply.

d. Auto-Parallel Operation. The power supply may be operated in parallel with a similar unit when greater output current capability is required. Auto-Parallel operation permits one-knob control of the total output current from a "master" supply.

e. Auto-Tracking. The power supply may be used as a "master" supply controlling one or more "slave" supplies furnishing various voltages for a system.

1-7 SPECIFICATIONS

1-8 Detailed specifications for the power supply are given in Table 1-1 on Page 1-3.

1-9 OPTIONS

1-10 Options are customer-requested factory modifications of a standard instrument. The following options are available for the instrument covered by this manual. Where necessary, detailed coverage of the options is included throughout the manual.

| <u>Option No.</u> | <u>Description</u> |
|-------------------|--|
| 005 | <u>50Hz Regulator Realignment:</u> Standard instruments are designed for 57 to 63 Hz operation. Option 005 (factory realignment) is necessary when the instrument is to be operated from a 50Hz ac source. The option consists of changing a resistor in the preregulator circuit and adjusting the preregulator tracking. |
| 007 | <u>Ten-Turn Output Voltage Control:</u> A single control that replaces the coarse voltage control and allows greater resolution in setting the output voltage. |
| 008 | <u>Ten-Turn Output Current Control:</u> A single control that replaces the coarse current control and allows greater resolution in setting the output current. |
| 009 | <u>Ten-Turn Output Voltage and Current Controls:</u> Options 007 and 008 on the same instrument. |
| 010 | <u>Chassis Slides:</u> Enables convenient access to power supply interior for maintenance purposes. |
| 013 | <u>Three Digit Graduated Decadial Voltage Control:</u> A single control that replaces the coarse voltage control and allows accurate resetting of the output voltage. |

| <u>Option No.</u> | <u>Description</u> |
|-------------------|---|
| 014 | <u>Three Digit Graduated Decadial Current Control:</u> A single control that replaces the coarse current control and allows accurate resetting of the output current. <u>Rewire for 115Vac Input (6260B only):</u> Consists of replacing the input power transformer and circuit breaker, and reconnecting the bias transformer, RFI choke, and fans for 115Vac operation. |
| 020 | <u>Voltage Programming Adjustment:</u> Two rear panel mounted, screwdriver-adjustable controls that allow accurately setting the zero volt output and the constant voltage programming coefficient. |
| 021 | <u>Current Programming Adjustment:</u> Two rear panel mounted, screwdriver-adjustable controls that allow accurately setting the zero current output and the constant current programming coefficient. |
| 022 | <u>Voltage and Current Programming Adjustments:</u> Options 020 and 021 on the same instrument. <u>Rewire for 115Vac Input (6259B, 6261B, and 6268B only):</u> Consists of replacing the line circuit breaker, and reconnecting the input power transformer, bias transformer, RFI choke, and fans for 115Vac operation. |
| 027 | <u>Rewire for 208Vac Input:</u> Consists of reconnecting the input power transformer and bias transformer for 208V ac operation. |

1-11 INSTRUMENT/MANUAL IDENTIFICATION

1-12 Hewlett-Packard power supplies are identified by a two-part serial number. The first part is the serial number prefix, a number-letter combination that denotes the date of a significant design change and the country of manufacture. The first two digits indicate the year (10= 1970, 11= 1971, etc.), the second two digits indicate the week, and the letter "A" designates the U.S.A. as the country of manufacture. The second part is the power supply serial number; a different sequential number is assigned to each power supply, starting with 00101.

1-13 If the serial number on your instrument does not agree with those on the title page of the manual, Change Sheets supplied with the manual or Manual Backdating Changes in Appendix A define the differences between your instrument and the instrument described by this manual.

1-14 ORDERING ADDITIONAL MANUALS

1-15 One manual is shipped with each power supply. Additional manuals may be purchased from

your local Hewlett-Packard field office (see list at rear of this manual for addresses). Specify the model number, serial number prefix, and HP part number shown on the title page.

Table 1-1. Specifications

| | |
|---|---|
| <p>INPUT: 230Vac *10%, single phase, 57-63 Hz, 18A, 2500W @ 230V.</p> <p>OUTPUT : 0-40 volts @ 0-50 amperes.</p> <p>LOAD REGULATION: <u>Constant Voltage</u> - Less than 0.01% plus 200µV for a load current change equal to the current rating of the supply. <u>Constant Current</u> - Less than 0.02% plus 2mA for a load voltage change equal to the voltage rating of the supply.</p> <p>LINE REGULATION : <u>Constant Voltage</u> - Less than 0.01% plus 200µV for a change in line voltage from 207 to 253 volts at any output voltage and current within rating. <u>Constant Current</u> - Less than 0.02% plus 2mA for a change in line voltage from 207 to 253 volts at any output voltage and current within rating.</p> <p>RIPPLE AND NOISE: <u>Constant Voltage</u> - Less than 1mV rms, 5mV P-P (dc to 20MHz). <u>Constant Current</u> - Less than 25mA rms.</p> <p>TEMPERATURE RATINGS: Operating: 0 to 55°C. Storage: -40 to +75°C.</p> <p>TEMPERATURE COEFFICIENT: <u>Constant Voltage</u> - Less than 0.01% plus 200µV change in output per degree Centigrade change in ambient following 30 minutes warm-up. <u>Constant Current</u> - Less than 0.01% plus 4mA change in output per degree Centigrade change in ambient following 30 minutes warm-up.</p> <p>STABILITY : <u>Constant Voltage</u> - Less than 0.03% plus 2mV total drift for 8 hours following 30 minutes warm-up under constant ambient conditions. <u>Constant Current</u> - Less than 0.03% plus 10mA total drift for 8 hours following 30 minutes warm-up under constant ambient conditions.</p> <p>TRANSIENT RECOVERY TIME: Less than 50µsec is required for output voltage recovery (in constant voltage operation) to within 10mV of the nominal output voltage following a 5 ampere change in output current.</p> | <p>METERS: A front panel voltmeter (0-50V) and ammeter (0-60A) is provided. (Accurate within 2% of full scale.)</p> <p>OUTPUT CONTROLS: Single-turn coarse and fine voltage and current controls are included on the front panel.</p> <p>OUTPUT TERMINALS: Output bus bars are located on the rear of the chassis. Both bus bars are isolated from the chassis and either the positive or negative bus bar may be connected to the chassis through a separate, adjacent ground terminal.</p> <p>REMOTE VOLTAGE PROGRAMMING: All programming terminals are on a rear barrier strip. <u>Constant Voltage</u> - 1V/volt (accuracy: 1%). <u>Constant Current</u> - 10mV/amp (Accuracy 10%).</p> <p>REMOTE RESISTANCE PROGRAMMING: All programming terminals are on a rear barrier strip. <u>Constant Voltage</u> -200 ohms/volt (Accuracy: 1%). <u>Constant Current</u> -4 ohms/ampere (Accuracy 10%).</p> <p>OVERVOLTAGE PROTECTION CROWBAR: The minimum crowbar trip setting above the desired operating output voltage” to prevent false crowbar tripping is 5% of output voltage setting plus 2 volts. Range is 4 to 45Vdc.</p> <p>COOLING: Forced air cooling is employed. The supply has two cooling fans.</p> <p>WEIGHT: 95 lbs. (43.0 kg.) net. 120 lbs. (54.5 kg.) shipping.</p> <p>SIZE: 7.0” (17.8cm) H x 17.511 (44.4cm) D x 19.0” (48, 3 cm) W. The unit can be mounted in a standard 19” rack panel.</p> <p>FINISH: Light gray front panel with dark gray case.</p> |
|---|---|

SECTION II INSTALLATION

2-1 INITIAL INSPECTION

2-2 Before shipment, this instrument was inspected and found to be free of mechanical and electrical defects. As soon as the instrument is unpacked, inspect for any damage that may have occurred in transit. Save all packing materials until the inspection is completed. If damage is found, file a claim with the carrier immediately. Hewlett-Packard Sales and Service office should be notified.

2-3 MECHANICAL CHECK

2-4 This check should confirm that there are no broken knobs or connectors, that the cabinet and panel surfaces are free of dents and scratches, and that the meters are not scratched or cracked.

2-5 ELECTRICAL CHECK

2-6 The instrument should be checked against its electrical specifications. Section V includes a n "in-cabinet" performance check to verify proper instrument operation.

2-7 INSTALLATION DATA

2-8 The instrument is shipped ready for bench operation. It is necessary only to connect the instrument to a source of power and it is ready for operation.

2-9 LOCATION

2-10 This instrument is fan cooled. Sufficient space should be allotted so that a free flow of cooling air can reach the sides of the instrument when it is in operation. It should be used in an area where the ambient temperature does not exceed 55°C.

2-11 OUTLINE DIAGRAM

2-12 Figure 2-1 illustrates the outline shape and dimensions of Models 6259B, 6260B, 6261B, 6268B, and 6269B.

2-13 RACK MOUNTING

2-14 This instrument is full rack size and can be easily rack mounted in a conventional 19 inch rack panel using standard mounting screws,

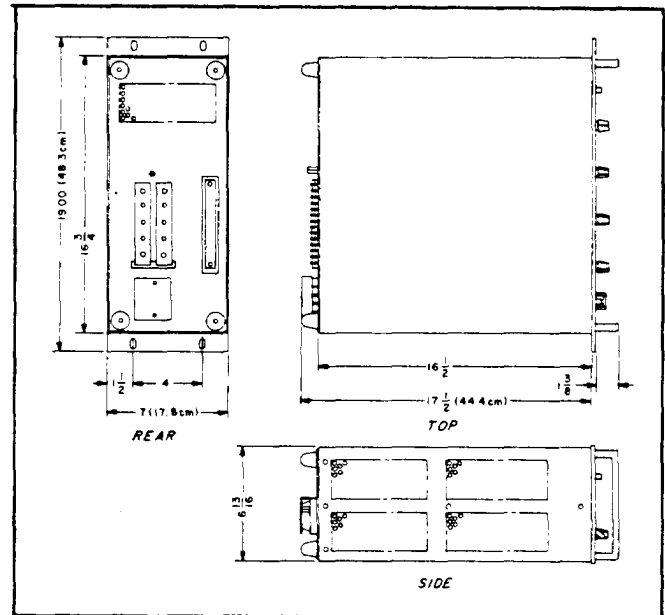


Figure 2-1. Outline Diagram

2-15 INPUT POWER REQUIREMENTS

2-16 Model 6259B, 6260B, 6261B, or 6268B power supply may be operated continuously from either a nominal 230 volt, 208 volt, or 115 volt 57-63Hz power source. Model 6269B may be operated from a 230 volt or 208 volt, 57-63Hz power source only. The instrument as shipped from the factory is wired for 230 volt operation. The input power when operated from a 230 volt power source at full load is:

| Model | Input Current | Input Power |
|-------|---------------|-------------|
| 6259B | 6A | 850W |
| 6260B | 12A | 1600W |
| 6261B | 11A | 1500W |
| 6268B | 11A | 1600W |
| 6269B | 18A | 2500W |

2-17 CONNECTIONS FOR 208 VOLT OPERATION

(Model 6259B, 6261B, or 6268B: Option 027)

2-18 To convert Model 6259B, 6261B, or 6268B to operation from a 208Vac source, taps on the power and bias transformers must be changed as follows:

- a. Remove RFI assembly as described in Steps (a) through (c) of Paragraph 5-67. Access is now provided to bias transformer A3T2. (See Figure 7-2.)

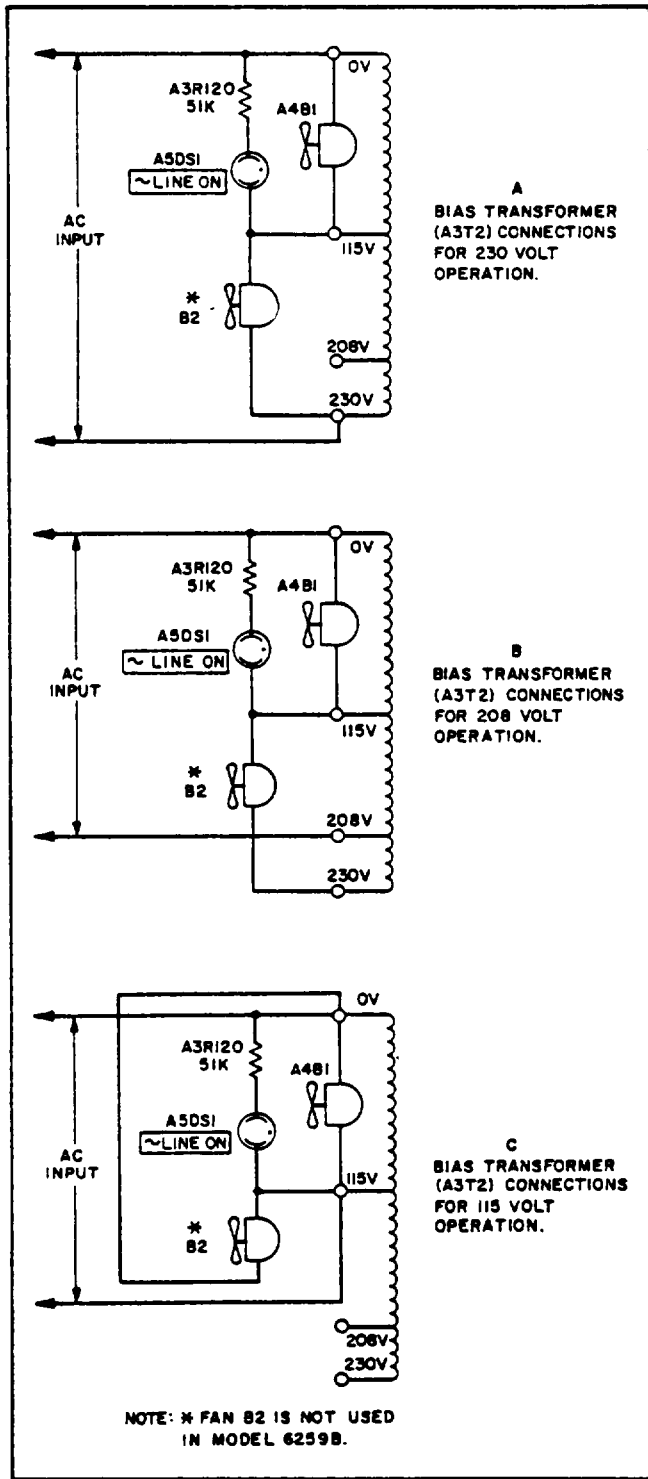


Figure 2-2. Bias Transformer Primary Connections for 208Vac Operation (Model 6259B, 6260B, 6261B, 6268B, and 6269B) and 115Vac Operation (Except Model 6269B)

b. Unsolder wire from circuit breaker A5CB1 connected to "230V" terminal of bias transformer A3T2 and solder it instead to "208V" terminal of

transformer (see Figure 2-2 B). Leave wire from fan B2 (not used in 62599) soldered to "230V" terminal.

c. Re-install RFI assembly by reversing procedure of Step (a).

d. Unsolder wire connected to terminal 5 of power transformer T1 (see Figure 7-4) and solder it instead to terminal 4 of transformer (see Figure 2-3 B).

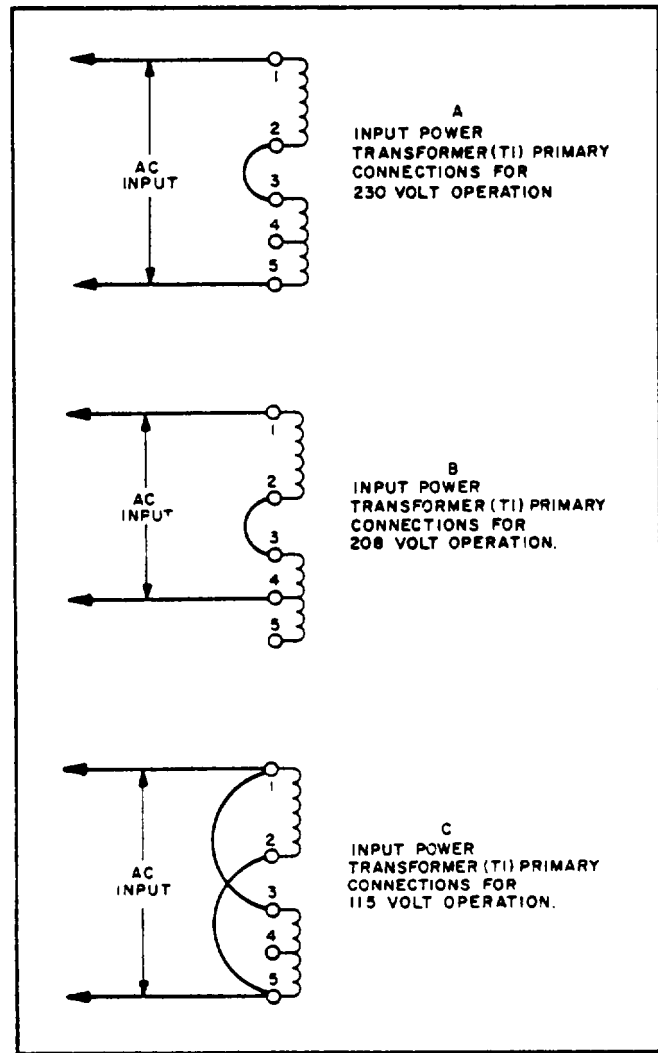


Figure 2-3. Power Transformer Primary Connections for 208Vac and 115Vac Operation (Model 6259B, 6261B, and 6268B)

2-19 CONNECTIONS FOR 208 VOLT OPERATION (Model 6260B and 6269B: Option 027)

2-20 To convert Model 6260B or 6269B to operation from a 208Vac source, taps on the power and bias transformers must be changed as follows:

- a. Perform Steps (a) through (c) of Paragraph 2-18.
- b. Unsolder wire connected to "230V" terminal

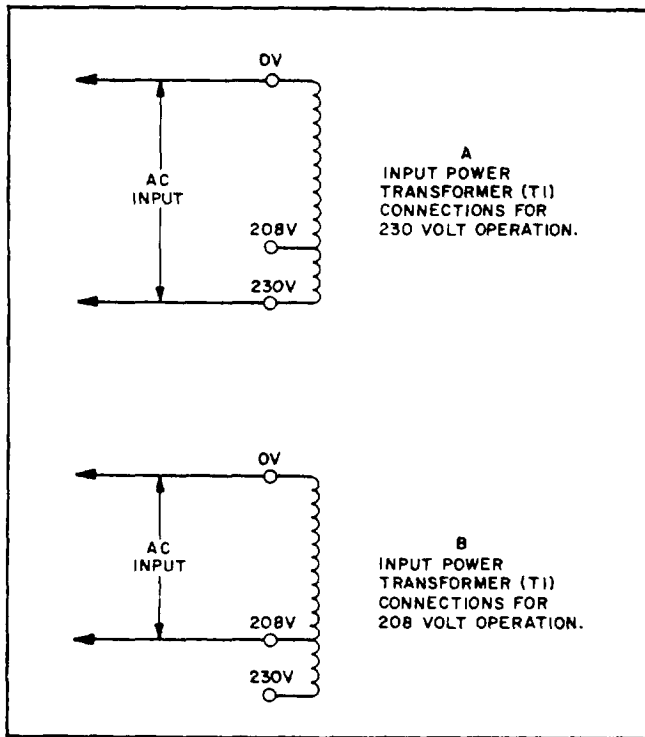


Figure 2-4. Power Transformer T1 Primary Connections for 208Vac Operation (Model 6260B and 6269B)

of power transformer T1 (see Figure 7-4) and solder it instead to "208V" terminal of transformer (see Figure 2-4 B).

2-21 CONNECTIONS FOR 115 VOLT OPERATION (Model -6259B, 6261B, and 6268B: Option 026)

2-22 To convert Model 6259B, 6261B, or 6268B to operation from a 115Vac source, a new circuit breaker must be installed and taps must be changed on the bias transformer, power transformer, and RFI choke as follows:

- Obtain and install new LINE circuit breaker (A5CB1). Connections to new circuit breaker are same as old connections. Refer to Option 026 in Table 6-4 (Replaceable Parts) for current rating and HP Part Number.
- Remove and partially disassemble RFI assembly as described in Steps (a) through (d) of Paragraph 5-67.
- Unsolder jumper between terminals 2 and 3 of RFI choke mounting board and solder jumpers between terminals 1 and 3, 2 and 4 (see Figure 2-5 B). Replace cover on RFI assembly.
- Unsolder wires from circuit breaker A5CB1 and fan B2 connected to "230V" terminal of bias transformer A3T2 (see Figure 7-2). Solder wire from circuit breaker to "115V" terminal of transformer, and solder wire from fan to "0V" terminal of transformer (see Figure 2-2 C). Note that

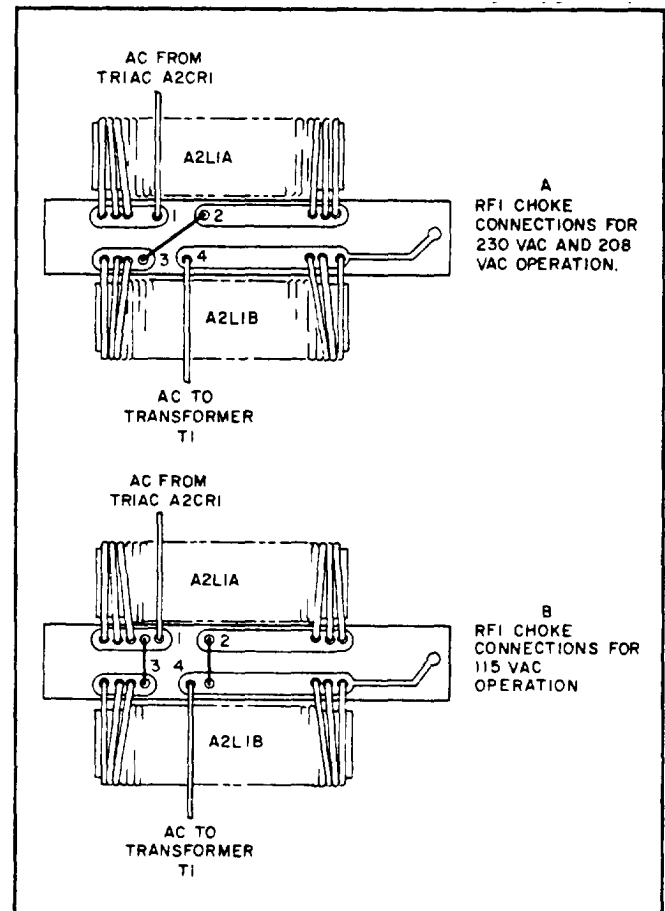


Figure 2-5. RFI Choke (A2L1A/A2L1B) Connections for 115Vac Operation (Model 6259B, 6260B, 6261B, and 6268B)

fan B2 is not used in Model 6259B.

e. Re-install RFI assembly by reversing procedure of Step (b).

f. Unsolder jumper connecting terminals 2 and 3 of power transformer T1 (see Figure 7-4) and solder jumpers between terminals 1 and 3, 2 and 5 (see Figure 2-3 C).

2-23 CONNECTIONS FOR 115 VOLT OPERATION (Model 6260B: Option 016)

2-24 To convert Model 6260B to operation from a 115Vac source, a new power transformer and circuit breaker must be installed and taps must be changed on the RFI choke and bias transformer as follows:

- Obtain and install new power transformer (T1) and new circuit breaker (A5CB1). Refer to Option 016 in Table 6-4 (Replaceable Parts) for power ratings and HP Part Numbers. New transformer has two primary terminals. Transfer wire from old transformer "0V" terminal to new transformer "0V" terminal, and wire from old transformer "230V" terminal to new transformer "115V" terminal. New circuit breaker connections are same as old.

b. Perform Steps (b) through (e) of Paragraph 2-22.

2-25 CONNECTIONS FOR 50Hz OPERATION

2-26 For operation from a 50Hz ac input, R82 must be replaced with a 240 Ω , $\pm 5\%$, $\frac{1}{2}$ watt resistor as specified under Option 005 in Table 6-4 (Replaceable Parts). In addition, it is necessary to readjust the voltage drop across the series regulator ("Preregulator Tracking", Paragraph 5-103) and to check the ripple imbalance as described in Steps (a) through (e) of Paragraph 5-101.

2-27 POWER CABLE

2-28 A power cable is not supplied with the instrument. It is recommended that the user-supplied power cable have three conductors (third conductor

grounded) and be of sufficient wire size to handle the input current drawn by the supply (see Paragraph 2-16). Note that when the supply is operated from a 115Vac source, the input current is approximately double that shown in Paragraph 2-16.

2-29 REPACKAGING FOR SHIPMENT

2-30 To insure safe shipment of the instrument, it is recommended that the package designed for the instrument be used. The original packaging material is reusable. If it is not available, contact your local Hewlett-Packard field office to obtain the materials. This office will also furnish the address of the nearest service center to which the instrument can be shipped. Be sure to attach a tag to the instrument specifying the owner, model number, full serial number, and service required, or a brief description of the trouble.

SECTION III OPERATING INSTRUCTIONS

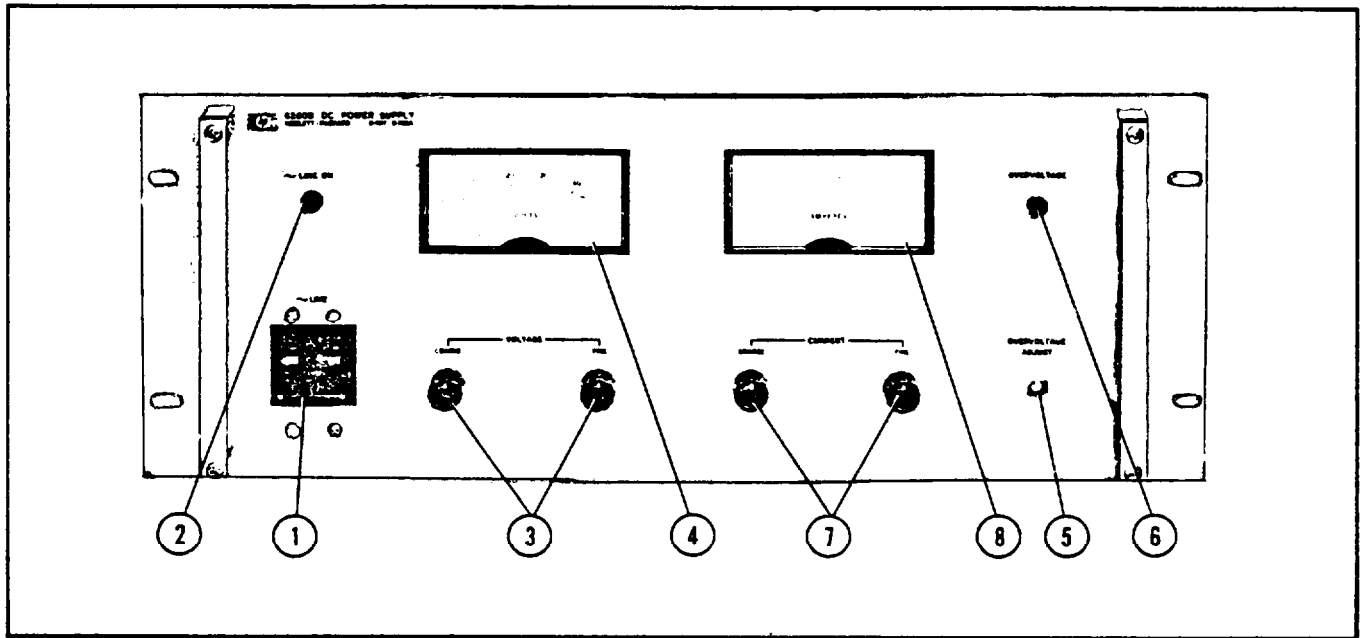


Figure 3-1. Front Panel Controls and Indicators, Modal 6259B, 6260B, 6261B, 6268B or 6269B

3-1 TURN-ON CHECKOUT PROCEDURE

3-2 The following checkout procedure describes the use of the front panel controls and indicators (Figure 3-1) and ensures that the supply is operational.

- a. Set LINE circuit breaker ① to ON, and observe that pilot light ② lights.
- b. Adjust VOLTAGE controls ③ until desired voltage is indicated on voltmeter ④.
- c. To ensure that overvoltage crowbar circuit is operational, rotate OVERVOLTAGE ADJUST control ⑤ (screwdriver adjust) counterclockwise until unit crowbars. Overvoltage lamp ⑥ will light and output voltage will fall to zero volts.
- d. To deactivate crowbar, return OVERVOLTAGE ADJUST control to its maximum clockwise position and turn off supply. Turn supply back on and voltage should again be value obtained in step (b).
- e. To check out constant current circuit, turn off supply. Short circuit rear output terminals and turn on supply.
- f. Adjust CURRENT controls ⑦ until desired output current is indicated on ammeter ⑧.
- g. Remove short circuit and read following paragraphs before connecting actual load to supply.

3-3 OPERATING MODES

3-4 The power supply is designed so that its mode of operation can be selected by making strapping connections between particular terminals on the terminal strip at the rear of the power supply. The terminal designations are stenciled in white on the power supply below their respective terminals. The following paragraphs describe the procedures for utilizing the various operational capabilities of the power supply. A more theoretical description concerning the operational features of this supply is contained in Application Note 90, Power Supply Handbook (available at no charge from your local Hewlett-Packard sales office). Sales office addresses appear at the rear of the manual.

3-5 NORMAL OPERATING MODE

3-6 The power supply is normally shipped with its rear terminal strapping connections arranged for constant voltage/constant current, local sensing, local programming, single unit mode of operation. This strapping pattern is illustrated in Figure 3-2. The operator selects either a constant voltage or a constant current output using the front panel controls (local programming; no strapping changes are necessary).

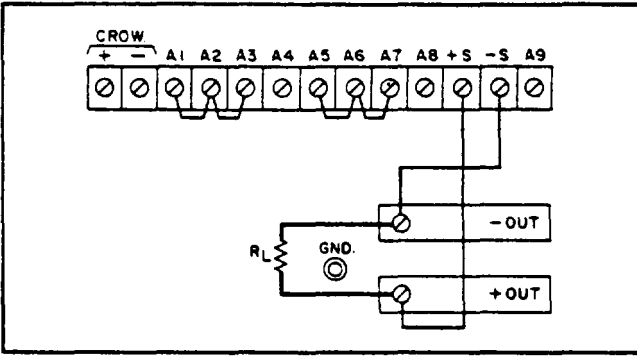


Figure 3-2. Normal Strapping Pattern

3-7 CONSTANT VOLTAGE

3-8 To select a constant voltage output, proceed as follows:

a. Turn on power supply and adjust VOLTAGE controls for desired output voltage with output terminals open.

b. Short circuit output terminals and adjust CURRENT controls for maximum output current allowable (current limit), as determined by load conditions. If a load change causes the current limit to be exceeded, the power supply will automatically cross over to constant current output at the preset current limit and the output voltage will drop proportionately. In setting the current limit, allowance must be made for high peak currents which can cause unwanted crossover. (Refer to Paragraph 3-60.)

3-9 CONSTANT CURRENT

3-10 To select a constant current output, proceed as follows:

a. Short circuit output terminals and adjust CURRENT controls for desired output current.

b. Open output terminals and adjust VOLTAGE controls for maximum output voltage allowable (voltage limit), as determined by load conditions. If a load change causes the voltage limit to be exceeded, the power supply will automatically cross over to constant voltage output at the preset voltage limit and the output current will drop proportionately. In setting the voltage limit, allowance must be made for high peak voltages which can cause unwanted crossover. (Refer to Paragraph 3-60.)

3-11 OVERVOLTAGE TRIP POINT ADJUSTMENT

3-12 The crowbar trip voltage can be adjusted by using the screwdriver control on the front panel.

The trip voltage range is as follows:

6259B, 6260B 6261B 6268B, 6269B

2 to 12Vdc 2 to 23Vdc 4 to 45Vdc

When the crowbar trips, the output is shorted and the amber indicator on the front panel lights.

Clockwise rotation of the control produces higher trip voltages. The factory sets the control fully clockwise. The crowbar may be disabled completely if desired. (Refer to Paragraph 5-11 1.)

3-13 False crowbar tripping must be considered when adjusting the trip point. If the trip voltage is set too close to the operating output voltage of the supply, a transient in the output will falsely trip the crowbar. It is recommended that the crowbar be set higher than the output voltage by 5% of the output voltage plus 2 volts. However, if occasional crowbar tripping on unloading can be tolerated, the crowbar trip point can be set much closer to the operating output voltage of the supply.

3-14 CONNECTING LOAD

3-15 Each load should be connected to the power supply output terminals using separate pairs of connecting wires. This will minimize mutual coupling effects between loads and will retain full advantage of the low output impedance of the power supply. Each pair of connecting wires should be as short as possible and twisted or shielded to reduce noise pickup. (If a shielded pair is used, connect one end of the shield to ground at the power supply and leave the other end unconnected.)

3-16 If load considerations require that the output power distribution terminals be remotely located from the power supply, then the power supply output terminals should be connected to the remote distribution terminals via a pair of twisted or shielded wires and each load should be separately connected to the remote distribution terminals. For this case, remote sensing should be used. (Refer to Paragraph 3-4 1.)

3-17 Positive or negative voltages can be obtained from this supply by grounding either one of the output terminals or one end of the load. Always use two leads to connect the load to the supply, regardless of where the setup is grounded. This will eliminate any possibility of output current return paths through the power source ground which would damage the line cord plug. This supply can also be operated up to 300Vdc above ground, if neither output terminal is grounded.

3-18 NO LOAD OPERATION

3-19 When the supply is operated without a load, down-programming speed is considerably slower than in normal loaded operation. This slower programming speed is evident when using any method of down-programming - either turning the VOLTAGE controls fully counterclockwise, activating the crowbar, or throwing the LINE circuit breaker to OFF. Under any of these conditions, the supply output will rapidly fall to approximately two volts,

then proceed at a slower rate towards zero. The actual time required for the output to fall from two volts to zero will vary from several seconds to several minutes, depending upon which down-programming method is used.

3-20 OPERATION BEYOND RATED OUTPUT

3-21 The shaded area on the front panel meter face indicates the approximate amount of output voltage or current that may be available in excess of the normal rated output. Although the supply can be operated in this shaded region without being damaged, it cannot be guaranteed to meet all of its performance specifications.

3-22 OPTIONAL OPERATING MODES

3-23 REMOTE PROGRAMMING, CONSTANT VOLTAGE

3-24 The constant voltage output of the power supply can be programmed (controlled) from a remote location if required. Either a resistance or voltage source can be used as the programming device. The wires connecting the programming terminals of the supply to the remote programming device should be twisted or shielded to reduce noise pickup. The VOLTAGE controls on the front panel are automatically disabled in the following procedures.

3-25 Resistance Programming (Figure 3-3). In this mode, the output voltage will vary at a rate determined by the voltage programming coefficient of 200 ohms/volt. The programming coefficient is determined by the programming current. This current is factory adjusted to within 1% of 5mA. If greater programming accuracy is required, it may be achieved by either adjusting R3 as discussed in Paragraph 5-88, or, if the instrument is equipped with Option 020, by adjusting potentiometer R112 as discussed in Paragraph 5-89.

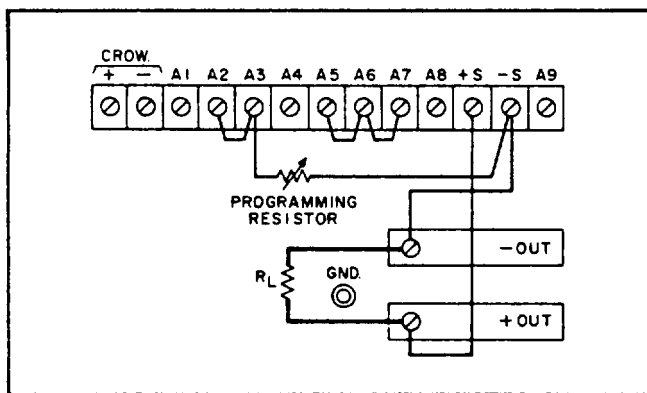


Figure 3-3. Remote Resistance Programming (Constant Voltage)

3-26 The output voltage of the supply should be $-15\text{mV} \pm 5\text{mV}$ when zero ohms is connected across the programming terminals. If a zero ohm voltage closer to zero than this is required, it may be achieved by inserting and adjusting R110 as discussed in Paragraph 5-83, or, if the instrument is equipped with Option 020, by adjusting potentiometer R113 as discussed in Paragraph 5-85.

3-27 To maintain the stability and temperature coefficient of the power supply, use programming resistors that have stable, low noise, and low temperature coefficient (less than 30ppm per degree Centigrade) characteristics. A switch can be used in conjunction with various resistance values in order to obtain discrete output voltages. The switch should have make-before-break contacts to avoid momentarily opening the programming terminals during the switching interval.

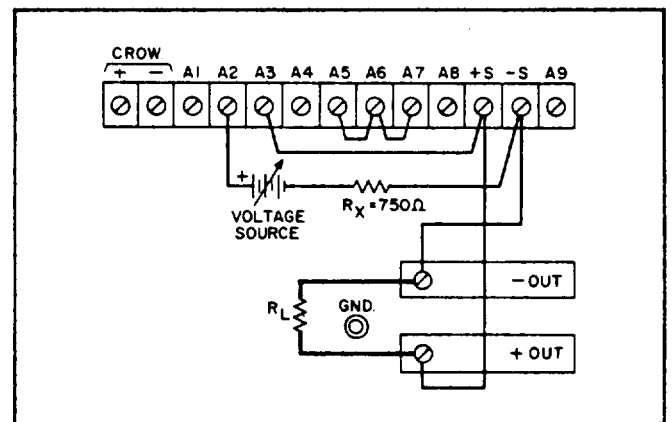


Figure 3-4. Remote Voltage Programming, Unity Gain (Constant Voltage)

3-28 Voltage Programming, Unity Gain (Figure 3-4). Employ the strapping pattern shown in Figure 3-4 for voltage programming with unity gain. In this mode, the output voltage will vary in a 1 to 1 ratio with the programming voltage (reference voltage) and the load on the programming voltage source will not exceed 20 microampere. Impedance matching resistor (R_x) is required to maintain the temperature coefficient and stability specifications of the supply.

3-29 Voltage Programming, Non-Unity Gain (Figure 3-5). The strapping pattern shown in Figure 3-5 can be utilized for programming the power supply using an external voltage source with a variable voltage gain. The output voltage in this configuration is found by multiplying the external voltage source by (R_p/RR) .

3-30 External resistors R_p and R_R should have stable, low noise, and low temperature coefficient

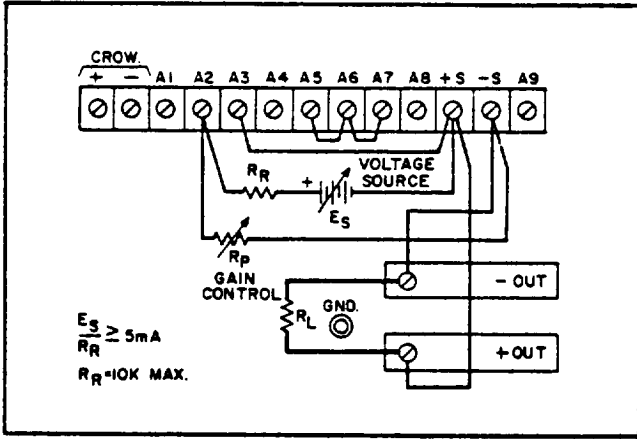


Figure 3-5. Remote Voltage Programming, Non-Unity Gain (Constant Voltage)

(less than 30ppm Per degree Centigrade) characteristics in order to maintain the Supply's temperature and stability specifications. Reference resistor R_R should not exceed 10K. Note that it is possible to use the front panel voltage control already in the supply (A5R121) as the voltage gain control (R_P) by simply removing the external R_P and strapping terminals A1 and A2 together.

3-31 The output voltage of the supply may be adjusted to exactly zero when the external programming voltage is zero by either inserting and adjusting R111 as discussed in Paragraph 5-84, or, if the instrument is equipped with Option 020, by adjusting potentiometer R112 as discussed in Paragraph 5-86.

3-32 REMOTE PROGRAMMING, CONSTANT CURRENT

3-33 Either a resistance or a voltage source can be used to control the constant current output of the supply. The CURRENT controls on the front panel are automatically disabled in the following procedures.

3-34 Resistance Programming (Figure 3-6). In this mode, the output current varies at a rate determined by the *programming* coefficient as follows:

| Model | Programming Coefficient |
|-------|-------------------------|
| 6259B | 4 ohms/ampere |
| 6260B | 2 ohms/ampere |
| 6261B | 4 ohms/ampere |
| 6268B | 6 ohms/ampere |
| 6269B | 4 ohms/ampere |

The programming coefficient is determined by the constant current programming current which is adjusted to within 10% of 2.5mA at the factory. If greater programming accuracy is required, it may be achieved by either adjusting R30 as discussed in Paragraph 5-97, or, if the instrument is equipped

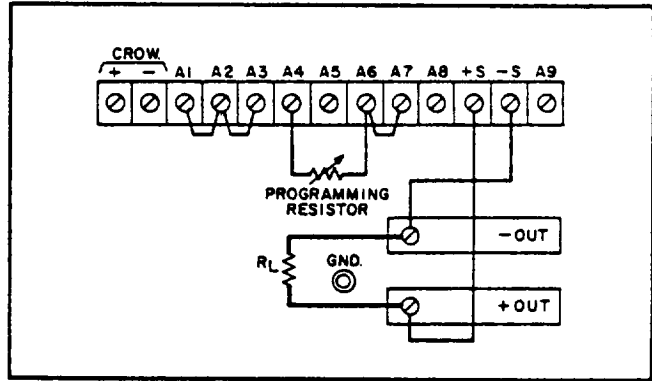


Figure 3-6. Remote Resistance Programming (Constant Current)

with Option 021, by adjusting potentiometer R116 as discussed in Paragraph 5-98. The output current of the supply when zero ohms is placed across the programming terminals *may* be set to exactly zero by either inserting and adjusting R117 as discussed in Paragraph 5-92, or, if the instrument is equipped with Option 021, by adjusting potentiometer R119 as discussed in Paragraph 5-94.

3-35 Use stable, low noise, low temperature coefficient (less than 30ppm/°C) programming resistors to maintain the power supply temperature coefficient and stability specifications. A switch may be used to set discrete values of output current. A make-before-break type of switch should be used since the output current will exceed the maximum rating of the power supply if the switch contacts open during the switching interval.

C A U T I O N

If the programming terminals (A4 and A 6) should open at any time during the remote resistance programming mode, the output current will rise to a value that may damage the power supply and/or the load. If, in the particular programming configuration in use, there is a chance that the terminals might become open, it is suggested that a 200 ohm resistor be connected across the programming terminals. Like the programming resistor, this resistor should be a low noise, low temperature coefficient type. Note that when this resistor is used, the resistance value actually programming the supply is the parallel combination of the remote programming resistance and the resistor across the programming terminals.

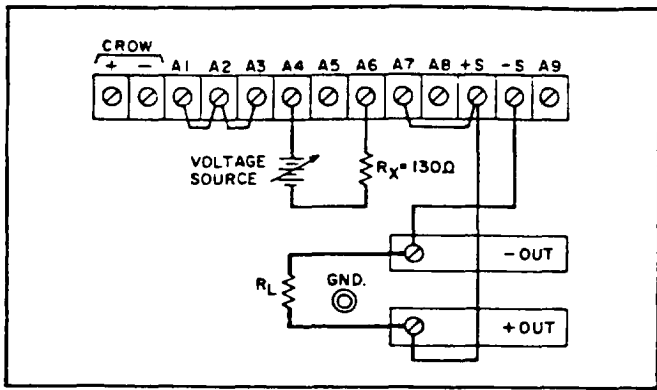


Figure 3-7. Remote Voltage Programming, Unity Gain (Constant Current]

3-36 Voltage Programming, Unity Gain (Figure 3-7). In this mode, the output current will vary linearly with changes in the programming voltage. The programming voltage should not exceed 0.6 volts. Voltage in excess of 0.6 volts will result in excessive power dissipation in the instrument and possible damage.

3-37 The output current varies at a rate determined by the programming coefficient as follows:

| Model | Programming Coefficient |
|-------|-------------------------|
| 6259B | 10.0mV/ampere |
| 6260B | 5.0mV/ampere |
| 6261B | 10.0mV/ampere |
| 6268B | 16.7mV/ampere |
| 6269B | 10.0mV/ampere |

The current required from the voltage source will be less than 20μA. Impedance matching resistor R_x is required to maintain the temperature coefficient and stability specifications of the supply.

3-38 Voltage Programming, Non-Unity Gain (Figure 3-8). The power supply output current can be

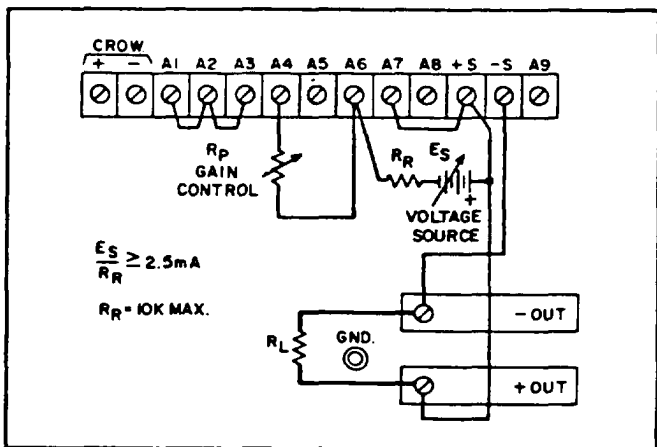


Figure 3-8. Remote Voltage Programming, Non-Unity Gain (Constant Current)

programmed using an external voltage source with variable gain by utilizing the strapping pattern shown in Figure 3-8. In this mode, the output current is found by multiplying the external voltage source (E_s) by [R_p/(R_R × K_p)], where K_p is the constant current voltage programming coefficient as given in Paragraph 3-37. The value of reference resistor R_R and programming voltage source E_s should be such that the value of E_s/R_R is equal to or greater than 2.5mA.

3-39 External resistors R_p and R_R should have stable, low noise, and low temperature coefficient (less than 30ppm per degree Centigrade) characteristics in order to maintain the stability and temperature specifications of the Power supply. Reference resistor R_R should not exceed 10K. Note that it is possible to use the front panel current control already in the supply (A5R123) as the gain control (R_p) by simply removing the external R_p and strapping terminals AS and A6 together.

3-40 The output current of the supply may be adjusted to exactly zero when the external programming voltage is zero by either inserting and adjusting R115 as discussed in Paragraph 5-93, or, if the instrument is equipped with Option 021, by adjusting potentiometer R116 as discussed in Paragraph 5-95.

3-41 REMOTE SENSING (Figure 3-9)

3-42 Remote sensing is used to maintain good regulation at the load and reduce the degradation of regulation which would occur due to the voltage drop in the leads between the power supply and the load. Remote sensing is accomplished by utilizing the strapping pattern shown in Figure 3-9. The Power supply should be turned off before changing strapping patterns. The leads from the sensing (±S) terminals to the load will carry much less current than the load leads and it is not required that these leads be as heavy as the load leads. However, they must be twisted or shielded to minimize noise pickup.

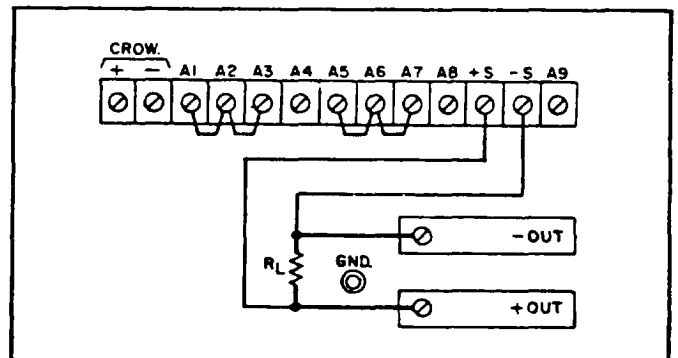


Figure 3-9. Remote Sensing

3-43 For reasonable load lead lengths, remote sensing greatly improves the performance of the supply. However, if the load is located a considerable distance from the supply, added precautions must be observed to obtain satisfactory operation. Notice that the voltage drop in the load leads subtracts directly from the available output voltage and also reduces the amplitude of the feedback error signals that are developed within the unit. Because of these factors it is recommended that the drop in each load lead not exceed 0.5 volt. If a larger drop must be tolerated, please consult an HP Sales Engineer.

NOTE

Due to the voltage drop in the load leads, it may be necessary to readjust the current limit in the remote sensing mode.

3-44 Observance of the precautions in Paragraph 3-43 will result in a low dc output impedance at the load. However, another factor that must be considered is the inductance of long load leads. This causes a high ac impedance and could affect the stability of the feedback loop seriously enough to cause oscillation. If this is the case, it is recommended that the following actions be taken:

a. Adjust equalization control R47 to remove oscillation, or to achieve best possible transient response for given long load lead configuration. Refer to Paragraph 5-27 for discussion of transient response measurement.

b. If performing adjustment in step (a) above does not remove oscillation, disconnect output capacitor A3C3 and connect a capacitor having similar characteristics (approximately the same capacitance, the same voltage rating or greater, and having good high frequency characteristics) directly across load using short leads. Readjust equalization control R47 as in step (a) above after making this change. In order to gain access to capacitor A3C3, it is necessary to remove the RFI assembly as described in steps (a) through (c) of Paragraph 5-67. Lead from positive side of capacitor (shown arrowed in Figure 7-2) can then be unsoldered from A3 interconnection circuit board.

3-45 To employ remote sensing with any method of remote programming or with any method of combining more than one supply discussed in the preceding or following paragraphs, use the following procedure:

a. Remove the two external leads connecting the sensing terminals ($\pm S$) to the output bus bars ($\pm OUT$).

b. Connect a lead from the +S terminal to the positive side of the load, and connect another lead

from the -S terminal to the negative side of the load. Note that there may be more than one lead connected to the +S and -S terminals.

3-46 AUTO-PARALLEL OPERATION (Figure 3-10)

3-47 Two or more power supplies can be connected in an Auto-Parallel arrangement to obtain an output

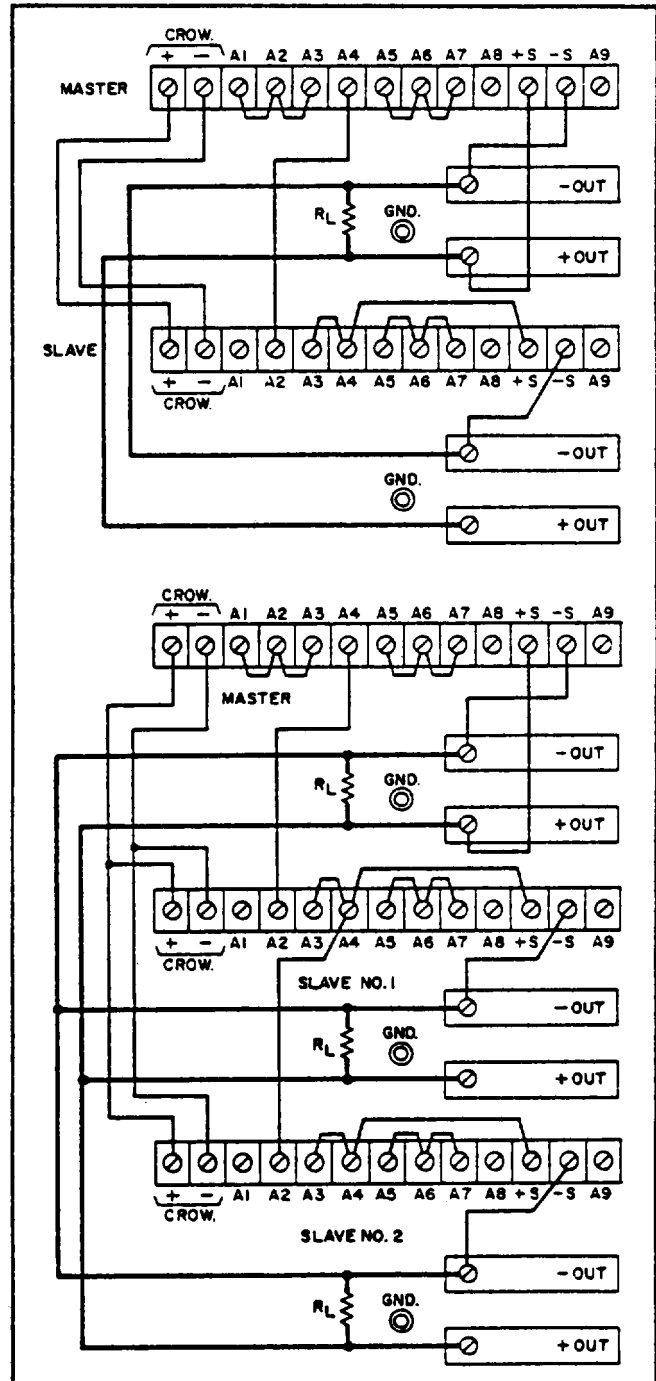


Figure 3-10. Auto-Parallel Operation, Two and Three Units

current greater than that available from one supply. Auto-Parallel operation permits equal current sharing under all load conditions, and allows complete control of the output current from one master power supply. The output current of each slave will be approximately equal to the master's output current regardless of the load conditions. Because the output current controls of each slave are operative, they should be set to maximum to prevent the slave reverting to constant current operation; this would occur if the master output current setting exceeded the slave's.

3-48 Additional slave supplies may be added in parallel with the master/slave combination as shown in the bottom half of Figure 3-10. All the connections between the master and slave #1 are duplicated between slave #1 and the added slave supply. In addition, the strapping pattern of the added slave should be the same as slave #1. Remote sensing and programming can be used, though the strapping arrangements shown in Figure 3-10 show local sensing and programming.

3-49 Overvoltage protection is controlled by the crowbar circuit in the master supply which monitors the voltage across the load and fires the SCR's in both units if an overvoltage condition occurs. The firing pulses are fed to the slave supply from transformer T90 (winding 5-6) of the master supply through the "EXT. CROWBAR TRIGGER" terminals on the rear panel of the master supply. Correct polarity must be observed in connecting the crowbars together. The overvoltage trip point is adjusted on the master supply, The OVERVOLTAGE ADJUST potentiometer on the slave supply should be set to maximum [clockwise] so that the master crowbar will control the slave.

3-50 AUTO-SERIES OPERATION (Figure 3-11)

3-51 Two or more power supplies can be operated in Auto-Series to obtain a higher voltage than that available from a single supply. When this connection is used, the output voltage of each slave supply varies in accordance with that of the master supply. At maximum output voltage, the voltage of the slaves is determined by the setting of the front panel VOLTAGE controls on the master. The master supply must be the most positive supply of the series. The output CURRENT controls of all series units are operative and the current limit is equal to the lowest control setting. If any of the output CURRENT controls are set too low, automatic cross-over to constant current operation will occur and the output voltage will drop. Remote sensing and programming can be used, though the strapping arrangements shown in Figure 3-11 show local sensing and programming.

3-52 In order to maintain the temperature coeffi-

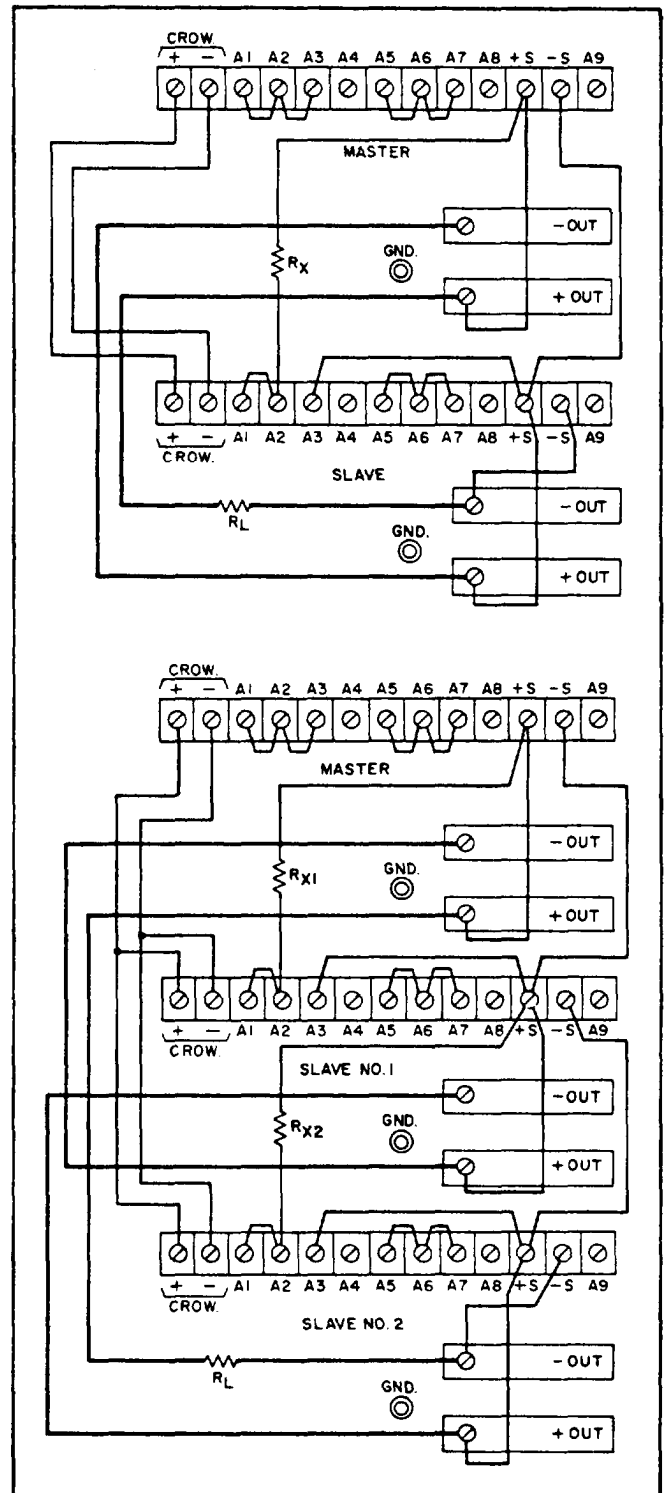


Figure 3-11. Auto-Series Operation, Two and Three Units

cient and stability specifications of the power supply, the external resistors (R_x) shown in Figure 3-11 should be stable, low noise, low temperature coefficient (less than 30ppm per degree Centigrade) resistors. The value of each resistor is dependent

on the maximum voltage rating of the "master" supply. The value of R_x is this voltage divided by the voltage programming current of the slave supply ($1/K_p$ where K_p is the voltage programming coefficient). The voltage contribution of the slave is determined by its voltage control setting.

3-53 Overvoltage protection is provided in Auto-Series operation by connecting the crowbars in parallel with correct polarity as in Auto-Parallel operation (see Paragraph 3-49). The OVERVOLTAGE ADJUST potentiometer in each supply should be adjusted so that it trips at a point slightly above the output voltage that the supply will contribute.

3-54 When the center tap of an Auto-Series combination is grounded, coordinated positive and negative voltages result. This technique is commonly referred to as "robber-banding" and an external reference source may be employed if desired. Any change of the internal or external reference source (e.g. drift, ripple) will cause an equal percentage change in the outputs of both the master and slave supplies. This feature can be of considerable use in analog computer and other applications, where the load requires a positive and a negative power supply and is less susceptible to an output voltage change occurring simultaneously in both supplies than to a change in either supply alone.

3-55 AUTO-TRACKING OPERATION (Figure 3-12)

3-56 The Auto-Tracking configuration is used when several different voltages referred to a common bus must vary in proportion to the setting of a particular instrument (the control or master). A fraction of the master's output voltage is fed to the comparison amplifier of the slave supply, thus controlling the slave's output. The master must have the largest output voltage of any power supply in the group. It must be the most positive supply in the example shown on Figure 3-12.

3-57 The output voltage of the slave (E_s) is a percentage of the master's output voltage (E_M), and is determined by the voltage divider consisting of R_x and the voltage control of the slave supply, R_p , where $E_s = E_M [R_p / (R_x + R_p)]$. Remote sensing and programming can be used (each supply senses at its own load), though the strapping patterns given in Figure 3-12 show only local sensing and programming. In order to maintain the temperature coefficient and stability specifications of the power supply, the external resistors should be stable, low noise, low temperature coefficient (less than 30ppm per degree Centigrade) resistors.

3-58 The overvoltage protection circuit in each unit is operable and independently monitors the voltage across its own load. Notice that if the master supply crowbars, the output voltage of

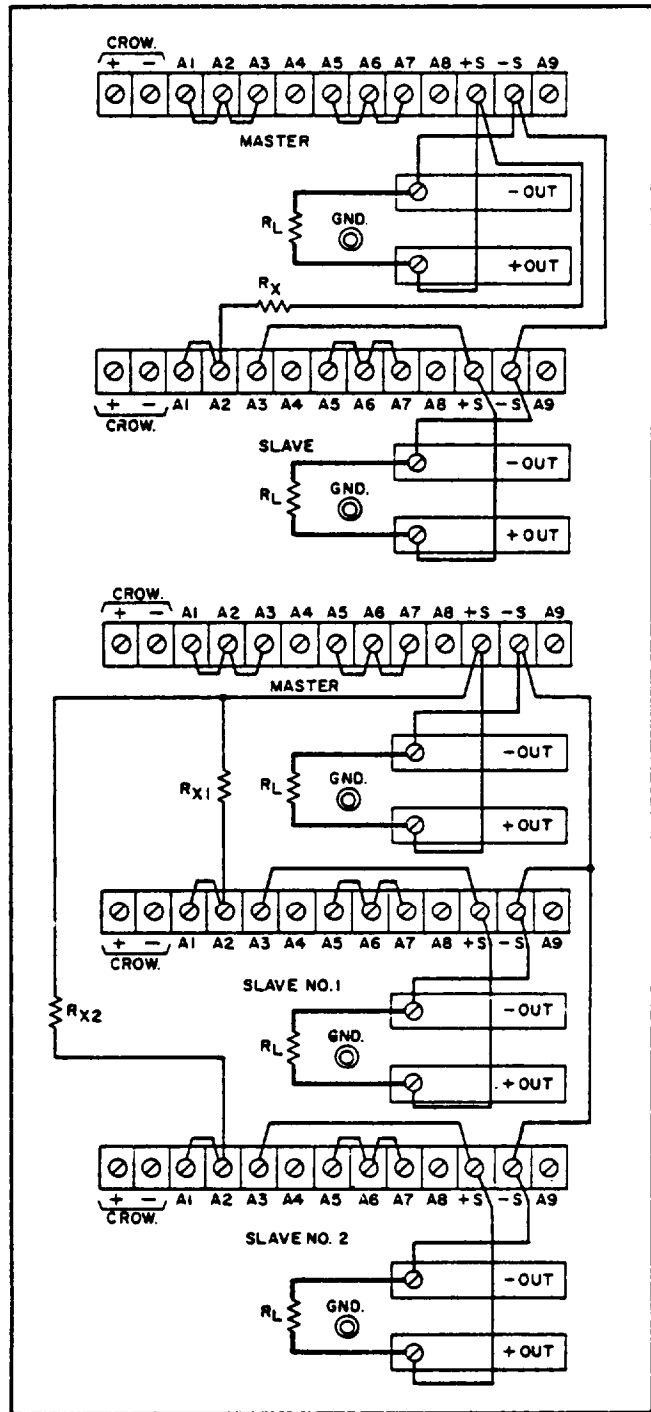


Figure 3-12. Auto-Tracking, Two and Three Units

each slave will also decrease. However, the reverse is not true. If one of the slave units crowbars, the other supplies in the ensemble will not be affected.

3-59 SPECIAL OPERATING CONSIDERATIONS

3-60 "PULSE LOADING

3-61 The power supply will automatically cross

over from constant voltage to constant current operation, or the reverse, in response to an increase (over the preset limit) in the output current or voltage, respectively. Although the preset limit may be set higher than the average output current or voltage, high peak currents or voltages (as occur in pulse loading) may exceed the preset limit and cause crossover to occur. If this crossover limiting is not desired, set the preset limit for the peak requirement and not the average.

3-62 OUTPUT CAPACITANCE

3-63 An internal capacitor (A3C3) connected across the output terminals of the power supply, helps to supply high-current pulses of short duration during constant voltage operation. Any capacitance added externally will improve the pulse current capability, but will decrease the safety provided by the constant current circuit. A high-current pulse may damage load components before the average output current is large enough to cause the constant current circuit to operate.

3-64 The effects of the output capacitor during constant current operation are as follows:

- a. The output impedance of the power supply decreases with increasing frequency.
- b. The recovery time of the output voltage is longer for load resistance changes.

c. A large surge current causing a high power dissipation in the load occurs when the load resistance is reduced rapidly.

3-65 REVERSE VOLTAGE LOADING

3-66 A diode (A4CR106) is connected across the output terminals. Under normal operation conditions, the diode is reverse biased (anode connected to the negative terminal). If a reverse voltage is applied to the output terminals (positive voltage applied to the negative terminal), the diode will conduct, shunting current across the output terminals and limiting the voltage across the output terminals to the forward voltage drop of the diode. This diode protects the series transistors and the output electrolytic capacitors.

3-67 REVERSE CURRENT LOADING

3-68 Active loads connected to the power supply may actually deliver a reverse current to the power supply during a portion of its operating cycle. An external source cannot be allowed to pump current into the supply without loss of regulation and possible damage to the output capacitor. To avoid these effects, it is necessary to preload the supply with a dummy load resistor so that the power supply delivers current through the entire operation cycle of the load device.

SECTION IV
PRINCIPLES OF OPERATION

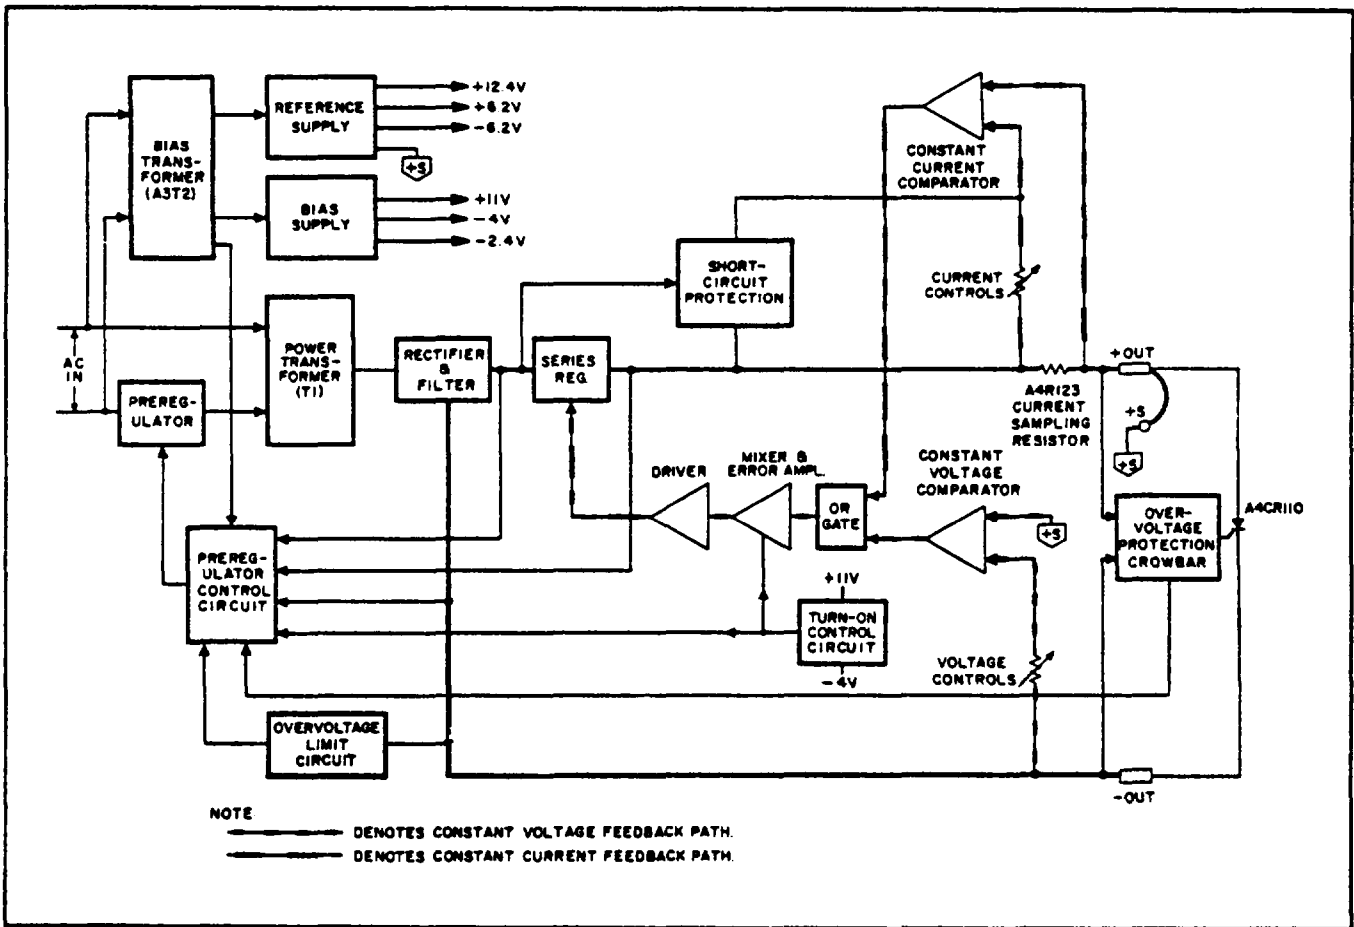


Figure 4-1. Overall Block Diagram

4-1 OVERALL BLOCK DIAGRAM DISCUSSION

4-2 The major circuits of the power supply are shown on the overall block diagram of Figure 4-1. The ac input voltage is first applied to the preregulator triac which operates in conjunction with the preregulator control circuit to form a feedback loop. This feedback loop minimizes the power dissipated by the series regulator by keeping the voltage drop across the regulator at a low and constant level.

4-3 To accomplish this, the preregulator control circuit issues a phase adjusted firing pulse to the triac once during each half cycle of the input ac. The control circuit continuously samples the output voltage, the input line voltage (from A3T2), and the voltage across the series regulator and, on the

basis of these inputs, determines at what time each firing pulse is generated.

4-4 The phase adjusted output of the triac is applied to the power transformer where it is stepped-down and coupled to a full-wave rectifier and filter. The preregulated dc current is applied next to the series regulator which varies its conduction to provide a regulated voltage or current at the output terminals.

4-5 The series regulator is part of another feedback loop consisting of the error and driver amplifiers and the constant voltage/constant current comparators. The series regulator feedback loop provides rapid, low magnitude regulation of the output while the preregulator feedback loop handles large, relatively slow, regulation demands.

4-6 The feedback signals controlling the conduction of the series regulator originate within the constant voltage or constant current comparator. During constant voltage operation the constant voltage comparator continuously compares the output voltage of the supply with the drop across the VOLTAGE controls. If these voltages are not equal, the comparator produces an amplified error signal which is further amplified by the error amplifier and then fed back to the series regulator in the correct phase and amplitude to counteract the difference. In this manner, the constant voltage comparator helps to maintain a constant output voltage and also generates the error signals necessary to set the output voltage at the level established by the VOLTAGE controls.

4-7 During constant current operation, the constant current comparator detects any difference between the voltage drop developed by the load current flowing through the current sampling resistor and the voltage across the CURRENT controls. If the two inputs to the comparator are momentarily unequal, an error signal is generated which (after amplification) alters the conduction of the series regulator by the amount necessary to reduce the error voltage at the comparator input to zero. Hence, the IR drop across the current sampling resistor, and therefore the output current, is maintained at a constant value.

4-8 Since the constant voltage comparator tends to achieve zero output impedance and alters the output current whenever the load resistance changes, while the constant current comparator causes the output impedance to be infinite and changes the output voltage in response to any load resistance change, it is obvious that the two comparison amplifiers cannot operate simultaneously. For any-given value of load resistance, the power supply must act either as a constant voltage source or as a constant current source - it cannot be both.

4-9 Figure 4-2 shows the output characteristic of a constant voltage/constant current power supply. With no load attached ($R_L = \infty$), $I_{OUT} = 0$, and $E_{OUT} = E_S$, the front panel voltage control setting. When a load resistance is applied to the output terminals of the power supply, the output current increases, while the output voltage remains constant; point D thus represents a typical constant voltage operating point. Further decreases in load resistance are accompanied by further increases in I_{OUT} with no change in the output voltage until the output current reaches I_S , a value equal to the front panel current control setting. At this point the supply automatically changes its mode of operation and becomes a constant current source; still further decreases in the value of load resistance are accompanied by a drop in the supply output voltage with no accompanying change in the output current

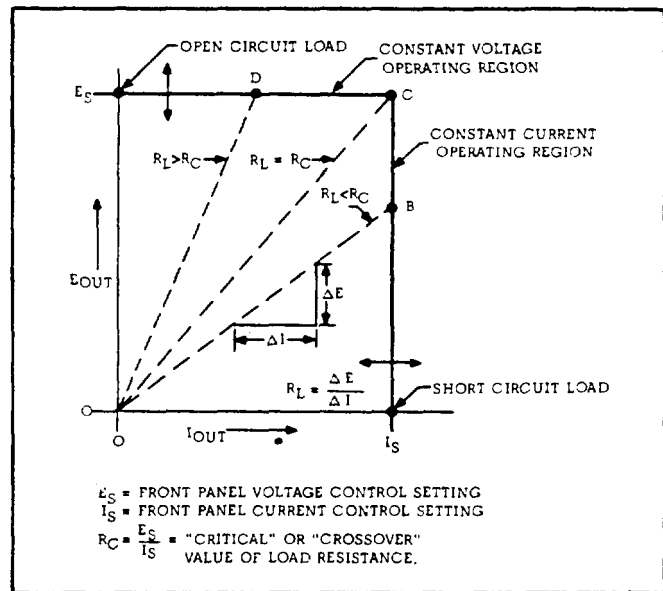


Figure 4-2. Operating Locus of a CV/CC Power Supply

value. With a short circuit across the output load terminals, $I_{OUT} = I_S$ and $E_{OUT} = 0$.

4-10 The "Crossover" value of load resistance can be defined as $R_C = E_S / I_S$. Adjustment of the front panel voltage and current controls permits this "crossover" resistance R_C to be set to any desired value from 0 to ∞ . If R_L is greater than R_C , the supply is in constant voltage operation, while if R_L is less than R_C , the supply is in constant current operation.

4-11 The short circuit protection circuit (see Figure 4-1) protects the series regulator in the event of a shorted output when the controls are set to a high output voltage and current. The protection circuit monitors the voltage drop across the series regulator. If the drop rises above a preset level, the protection circuit limits the current through the series regulator until the preregulator can reduce the voltage across the series regulator. Once this voltage returns to normal, the short circuit protection circuit is turned off and has no effect on normal operation of the supply.

4-12 The overvoltage protection crowbar monitors the output of the supply, and if it exceeds a preset (adjustable) threshold, fires an SCR which short circuits the supply. The circuit also sends a turn-down signal to the preregulator control circuit.

4-13 The overvoltage limit circuit protects the main rectifier diodes and filter capacitors from damage that might occur if the series regulator transistors were shorted or the voltage programming pot were opened. The circuit monitors the output voltage of

the supply and, if it exceeds approximately 120% of maximum rated output, sends a turn-down signal to the preregulator control circuit. Hence, the output voltage of the supply is limited to a "safe" value despite any possible failure in the series regulator feedback loop.

4-14 The turn-on control circuit is a long time constant network which allows the supply to achieve a gradual turn-on characteristic. The slow turn-on feature protects the preregulator triac and the series regulator from damage which might occur when ac power is first applied to the unit. At turn-on, the control circuit sends inhibiting voltages to the preregulator *control* circuit and the series regulator (via the error and driver amplifiers). A short time after the unit is in operation, the inhibiting voltages are removed and the circuit no longer exercises any control over the operation of the supply.

4-15 The reference supply provides stable reference voltages used by the constant voltage and current comparators. Less critical operating voltages are obtained from the bias supply.

4-16 DETAILED CIRCUIT ANALYSIS (See Figure 7-11)

4-17 PREREGULATOR CONTROL CIRCUIT

4-18 The preregulator minimizes changes in the power dissipated by the series regulating transistors due to output *voltage or* input line voltage variations. Preregulation is accomplished by means of a phase control circuit utilizing triac A2CR1 as the switching element.

4-19 In order to understand the operation of the preregulator, it is important to understand the operation of the triac. The triac is a bi-directional device, that is, it can conduct current in either direction. Hence, the device fires whenever it receives a gating pulse regardless of the polarity of the input ac that is applied to it. The triac is fired once during each half-cycle (8.33 milliseconds) of the input ac (see Figure 4-3). Notice that when the triac is fired at an early point during the half-cycle, the ac level applied to the power transformer is relatively high. When the triac is fired later during the half-cycle, the ac level is relatively low.

4-20 Normally the ac input signal must be at a certain minimum potential before the triac will conduct. However, A2R1 and A2C1 provide a holding current that allows the triac to conduct at any time during the ac input cycle. RFI choke A2L1A/A2L1B (in series with the triac) slows down the turn-on of the triac in order to minimize spikes at the output of the supply. Components A2CR1, A2R1, A2L1A/A2L1B, and A2C1 are all mounted inside a shielded

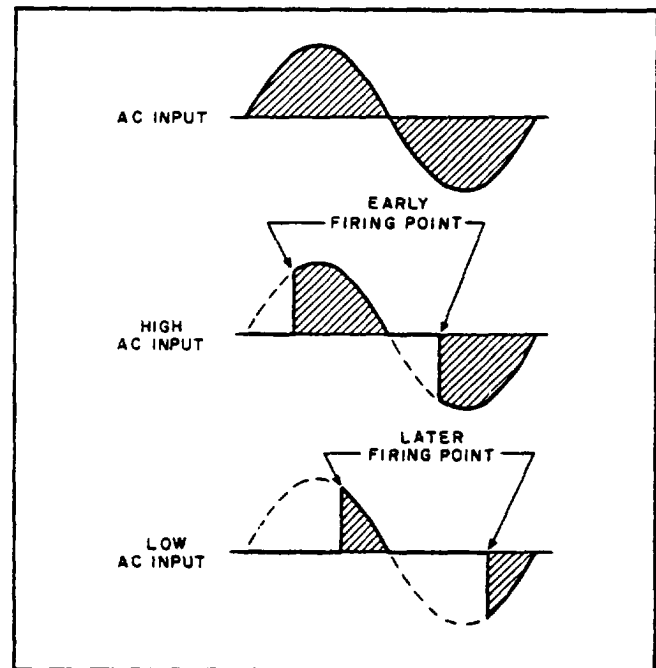


Figure 4-3. Triac Phase Control Over AC Input Amplitude

box (assembly A2) to minimize radiated and reflected RFI. Further RFI suppression is provided by bypass capacitors C110 and C111.

4-21 The preregulator control circuit samples the input line voltage, the output voltage, and the voltage across the series regulator transistors. It generates firing pulses, at the time required, to fire the triac. This action maintains the ac input voltage across the primary winding of T1 at the desired level.

4-22 The inputs to the control circuit are algebraically summed across capacitor C70. All inputs contribute to the time required to charge C70. The input line voltage is rectified by CR81, CR82, CR83, and CR84, attenuated by voltage divider R86 and R83, and applied to the summing point at the collector of Q71 (TP81) via capacitor C70. Capacitor C73 is used for smoothing purposes.

4-23 Transistor Q71, connected in a common base configuration, provides a charging current for the summing capacitor varying in accordance with the input signals applied to its emitter. Resistor R78, connected between the negative output line and the emitter of Q71, furnishes a signal which is *proportional* to the output voltage. Resistors R75 and R76 sample the voltage across, and the current through, the series regulator. Capacitor C72 and resistor R82 stabilize the entire preregulator feedback loop. Resistors R70 and R80 are the source of a *constant* offset current which sustains a net negative charg-

TM 11-6625-2958-14&P
ing current to the summing point, ensuring that the triac will fire at low output "voltages.

4-24 The summation of the input signals results in the generation of a voltage waveform at TP80 similar to that shown in waveform (A) of Figure 4-4. When the linear ramp portion of the waveform reaches a certain negative threshold voltage, diodes CR74 and CR75 become forward biased. The negative voltage is then coupled to the base of transistor Q72. Transistors Q72 and Q73 form a squaring circuit resembling a Schmitt trigger configuration. Q72 is conducting prior to firing time due to the positive bias connected to its base through R84. Transistor Q73 is cut off at this time because its base is driven negative by the collector of Q72.

4-25 When the negative threshold voltage is reached, transistor Q72 is turned off and Q73 is turned on. The conduction of Q73 allows capacitor C71 to discharge rapidly through pulse transformer T70 resulting in the generation of a firing pulse across the secondary winding of T70. As shown in

waveform (C) of Figure 4-4, the firing pulse is quite narrow because Q73 saturates rapidly, causing the magnetic field surrounding T70 to collapse. Diode CR76 damps out positive overshoot.

4-26 Reset of the control circuit occurs once every 8.33 milliseconds when the rectified ac voltage at the junction of CR77, CR78, and CR79 (TP82) increases to a level at which diode CR78 becomes forward biased. Summing capacitor C70 is then allowed to discharge through CR78. Diodes CR74 and CR75 become reverse biased at reset and transistor Q72 reverts to its "on" state. Consequently, Q73 is turned off and capacitor C71 charges up through R79 at a comparatively slow rate until the collector voltage of Q73 reaches approximately +11 volts. The above action causes the small positive spike that appears across the windings of pulse transformer at T70 at reset time.

4-27 SERIES REGULATOR AND DRIVER

4-28 The series regulator consists of transistors A4Q103 through A4Q108 connected in parallel. The transistors serve as the series or "pass" element which provides precise and rapid control of the output. Resistors A4R150 through A4R155 allow high output currents to be equally shared by the series regulator transistors. The conduction of the series regulator transistors is controlled by signals obtained from driver A4Q102, which is connected in a Darlington configuration with the parallel-connected series regulator transistors. Thermal switch A4TS101 opens if the heat sink assembly temperature exceeds approximately 230°F, thus turning off the series regulator transistors. This feature protects critical components of the supply from excessive temperatures which could occur if cooling fan A4B1 failed. Diode CR50 provides a discharge path for the output capacitors when the supply is rapidly down-programmed; R57 limits the discharge current flowing through the diode and through error amplifier A4Q101. Diode A4CR105, connected across the regulator circuit, protects the series elements from reverse voltages that could develop across them during parallel operation if one supply is turned on before the other.

4-29 SHORT CIRCUIT PROTECTION

4-30 This circuit acts to initially protect the series regulator against a simultaneous full-voltage, full-current conditions such as might occur if the output were shorted when the controls were set to deliver a high output voltage and current. Under this condition, Q20 goes into heavy conduction due to the increased voltage across the series regulator, putting R26 in parallel with the current controls and thus limiting the current to less than 10% of the supply's rating. Within 10 milliseconds after the short circuit is imposed, the preregulator shuts off.

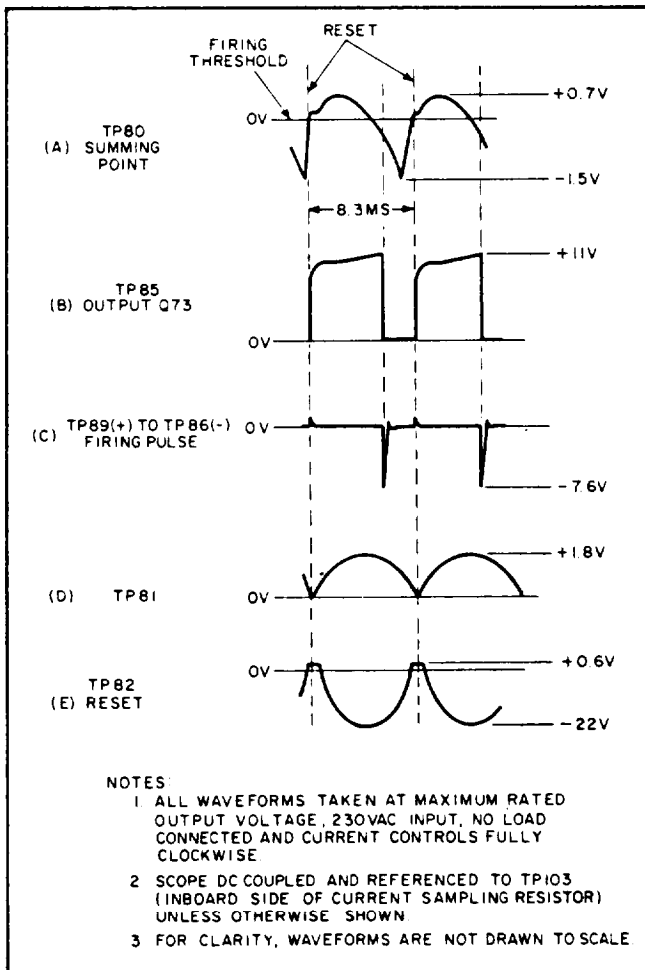


Figure 4-4. Preregulator Control Circuit Waveforms

The input capacitor then begins to discharge through the series regulator, and the voltage across the regulator decreases until Q20 turns off. The discharge time (typically ½ to 4 seconds) depends on the voltage and current ratings of the supply, the main filter capacitor, and the control settings. Once this recovery time has elapsed, the output current will return to the level set by the current controls, and the preregulator will return the voltage across the series regulator to the normal 3.5V level, thus limiting the power dissipated by the series regulator.

4-31 CONSTANT VOLTAGE COMPARATOR

4-32 This circuit consists of the programming resistors (A5R121 and A5R122) and a differential amplifier stage (Z1 and associated components). An integrated circuit is used for the differential amplifier to minimize differential voltages due to mismatched transistors and thermal differentials.

4-33 The constant voltage comparator continuously compares the voltage drop across the VOLTAGE controls with the output voltage and, if a difference exists, produces an error voltage whose amplitude is proportional to this difference. The error signal ultimately alters the conduction of the series regulator which, in turn, alters the output current so that the output voltage becomes equal to the voltage drop across the VOLTAGE controls. Hence, through feedback action, the difference between the two inputs to Z1 is held at zero volts.

4-34 One input of the differential amplifier (pin 10) is connected to the output voltage sensing terminal of the supply (+S) through impedance equalizing resistor R23. Resistors R1 and optional resistor R110 are used to zero bias the input. If the supply is equipped with Option 020, resistor R114 and potentiometer R 113 provide a variable input bias that allows the output voltage to be adjusted to exactly zero volts when the supply is programmed for zero output. The other input of the differential amplifier (pin 1) is connected to a summing point (terminal A2) at the junction of the programming resistors and the current pullout resistors R3, R4, and R5. Instantaneous changes in the output voltage or changes in the voltage at the summing point due to manipulation of the VOLTAGE controls produce a difference voltage between the two inputs of the differential amplifier. This difference voltage is amplified and appears at the output of the differential amplifier (pin 12) as an error voltage which ultimately varies the conduction of the series regulator.

4-3 S Resistor R6, in series with the summing-point input to the differential amplifier, limits the current through the programming resistors during rapid voltage turn-down. Diode CR7 prevents excessive current drain from the +6.2 volt reference supply

during rapid down-programming; diodes CR5 and CR6 prevent excessive voltage excursions from over-driving the differential amplifier. Capacitor C2 prevents the gain of the feedback loop from changing during manipulation of the VOLTAGE controls. Resistor R2 limits the discharge current through C2. Resistors Z2F, Z2M, and Z2N bias the differential amplifier; diode CR4 provides temperature compensation.

4-36 During constant voltage operation, the programming current flowing through the programming resistors (VOLTAGE controls) is held constant because the value of shunt resistor R3 is factory selected to allow all of the +6.2 volt reference to be dropped across R3, R4, and RS. Linear constant voltage programming is thus assured with a constant current flowing through A5R121 and A5R122. If the supply is equipped with Option 020, resistor R111 and potentiometer R 112 allow the programming current to be adjusted by varying the bias applied to the summing point.

4-37 Main output capacitor A3C3 stabilizes the series regulator feedback loop and helps supply high-current pulses of short duration during constant voltage pulse loading operation. An additional output capacitor (C 19), connected directly across the output bus bars, helps maintain a low ac output impedance by compensating for the inductive reactance of the main output capacitor at high frequencies. C19 also prevents any spikes in the output from reaching the load.

4-38 CONSTANT CURRENT COMPARATOR

4-39 This circuit is similar in appearance and operation to the constant voltage comparator circuit. It consists of the coarse and fine current controls (A5R123 and A5R124) and a differential amplifier stage (Z 1 and associated components). As in the constant voltage comparator, an integrated circuit is used for the differential amplifier to minimize differential voltages due to mismatched transistors and thermal differentials.

4-40 The constant current comparator circuit continuously compares the voltage drop across the CURRENT controls with the voltage drop across the current sampling resistor, A4R123. If a difference exists, the differential amplifier produces an error signal which is proportional to this difference. The remaining components in the feedback loop (mixer amplifier, error amplifiers, and the series regulator) function to maintain the voltage drop across the current sampling resistors, and hence the output current, at a constant value.

4-41 One input of the differential amplifier (pin 7) is connected to the output bus through impedance equalizing resistor R20 and is zero-biased by R21

and optional resistor R 117. The other input of the differential amplifier (pin 4) is connected to a summing point (terminal A6) at the junction of the programming resistors and the current pullout resistors R30 and R31. Changes in the output current due to load changes or changes in the voltage at the summing point due to manipulation of the CURRENT controls produce a difference voltage between the two inputs of the differential amplifier. This difference voltage is amplified and appears at the output of the differential amplifier (pin 6) as an error voltage which ultimately varies the conduction of the series regulator.

4-42 Resistor R30 serves as a trimming adjustment for the programming current flowing through A5R123 and A5R124. If the supply is equipped with Option 021, resistor R115 and potentiometer R116 provide a means of adjusting the programming current. As in the constant voltage comparator circuit, a variable input bias (from resistor R118 and potentiometer R119) is provided to allow the output current to be adjusted to exactly zero when the supply is programmed for zero output. Diode CR21 limits excessive voltage excursions at the summing-point input to the differential amplifier.

4-43 VOLTAGE CLAMP CIRCUIT

4-44 The voltage clamp circuit keeps the constant voltage programming current relatively constant when the power supply is operating in the constant current mode. This is accomplished by clamping terminal A2, the voltage summing point, to a fixed bias voltage. During constant current operation the constant voltage programming resistors are a shunt load across the output terminals of the power supply. When the output voltage changes, the current through these resistors also tends to change. Since this programming current flows through the current sampling resistor, it is erroneously interpreted as a load change by the current comparator circuit. The clamp circuit eliminates this undesirable effect by maintaining this programming current at a constant level.

4-45 The voltage divider, Z2A, Z2B, and VR1, back biases CR2 and Q1 during constant voltage operation. When the power supply goes into constant current operation, CR2 becomes forward biased by the voltage at pin 12 of Z 1. This results in conduction of Q1 and the clamping of the summing point at a potential only slightly more negative than the normal constant voltage potential. Clamping this voltage at approximately the same potential that exists in constant voltage operation results in a constant voltage across, and consequently a constant current through, the current pullout resistors R3, R4, and R5.

4-46 MIXER AND ERROR AMPLIFIERS

4-47 The mixer and error amplifiers amplify the error signal from the constant voltage or constant current input circuit to a level sufficient to drive the series regulating transistors. Mixer amplifier Q41 receives the error voltage input from either the constant voltage or constant current comparator via the OR-gate diode (CR1 or CR20) that is conducting at the time. Diode CR1 is forward biased and CR20 reverse biased during constant voltage operation. The reverse is true during constant current operation.

4-48 Transistor Q40 provides a constant current to the collector of Q41 and also generates a negative going turn-off signal for the series regulator when the unit is first turned off. Feedback network C41, R47, and R53 shapes the high frequency rolloff in the loop gain response in order to stabilize the series regulator feedback loop.

4-49 Error amplifiers Q42 and A4Q101 serve as the predriver elements for the series regulator. In addition, transistor A4Q101 allows faster down-programming by providing a discharge path for output capacitors A3C3 and C19, and by supplying a bleed current for the series regulator (thus keeping it in its linear, active region) when the supply is set for zero output current. Diode CR44, in the base circuit of transistor A4Q101, prevents the base from going more negative than -3 volts. This action limits the current through R57 to a relatively low level, thus protecting A4Q101 from damage in the event a voltage higher than the programmed output voltage is placed across the output terminals (such as might occur in Auto-Parallel or battery charging applications).

4-50 OVERVOLTAGE PROTECTION CROWBAR

4-51 The overvoltage protection circuit protects delicate loads from high voltage conditions such as might result from the failure of the series regulator transistor. It accomplishes this by shorting the output of the supply. Under normal operation (no overvoltage), Q92 is conducting since CR91 is reverse biased and Q91 is off. Thus no trigger signal is received by SCR A4CR110 and it acts as an open circuit, having no effect on normal output voltage.

4-52 A5R125 (OVERVOLTAGE ADJUST) adjusts the bias of Q92 with relation to -S. It establishes the point at which CR91 becomes forward biased and Q92 is turned off. Zener diode VR90 provides a stable reference voltage with which the -S potential is compared; R95 sets the upper crowbar trip limit. When Q92 turns off, Q91 begins to conduct, sending a positive going trigger pulse to A4CR110, causing it to create a near short circuit across the

output. When A4CR110 is fired, overvoltage lamp A5DS2 is tuned on, completing a path for a + 11V unregulated holding current through A5DS2. This current holds A4CR110 on even after the output voltage has fallen. A4 CR110 will remain in conduction until the supply is turned off. R92 supplies the holding current if lamp A5DS2 should open. R106 protects A4CR108 and A4CR110 from the large surge current that occurs when A4CR110 is first fired. CR93 damps out positive overshoot in the trigger pulse.

4-53 The firing of SCR A4CR110 biases Q90 into conduction, placing approximately +11 volts on the cathode of CR74 in the preregulator control circuit and thus reverse biasing CR74 and CR75. This action, by preventing transistor Q 72 from turning off, prevents the generation of any trigger pulses and turns off the preregulator. This prevents the series regulator from experiencing a full-voltage, full-current condition.

4-54 The crowbar circuit creates an extra current path during normal operation of the supply, thus changing the current that flows through the sampling resistor. Diode CR92 keeps this extra current at a fixed level for which compensation can then be made in the constant current comparator circuit.

4-55 A slaving arrangement of crowbar circuits in more than one unit is made possible by an extra secondary winding (terminals 5 and 6) on transformer T90. Terminals on the rear barrier strip (\pm EXT. CROWBAR TRIGGER) allow easy connection to this winding. Connecting these windings in parallel when operating in a multiple-supply configuration will result in all the crowbars being activated if one of the crowbars is tripped. To reset the crowbars in this arrangement, all of the units must be turned off and then on. Correct polarity must be observed when connecting the windings in parallel. Figures 3-10 and 3-11 (Auto-Parallel and Auto-Series) demonstrate these connections.

4-56 TURN-ON CONTROL CIRCUIT

4-57 This circuit is a long time-constant network which protects the triac and the series regulator from possible damage during turn-on. When the supply is first tuned on, C35 provides a positive voltage to the anodes of CR35 and CR36. The voltage from CR35 is connected to the cathode of diode CR74 in the preregulator control circuit to ensure that it is initially reverse biased. After C35 becomes sufficiently charged, diode CR35 becomes reverse biased and the preregulator control circuit is permitted to fire the triac.

4-58 Diode CR36 performs a similar function for the series regulator. CR36 initially couples a positive voltage to Q41 where it is inverted and ap-

plied to the series regulator. This negative voltage keeps the regulator cut off until C35 charges up. Diode CR37 provides a discharge path for C35 when the supply is turned off.

4-59 REFERENCE REGULATOR

4-60 The reference circuit is a feedback power supply similar to the main supply. It provides stable reference voltages used throughout the unit. AH the reference *voltages are* derived from dc obtained from full wave rectifier CR61-CR62 and filter capacitor C61. The total output of the reference circuit is 18.6V. Zener diodes VR60 and VR61 establish moderately well regulated potentials of +6.2V and -6.2V respectively from the common point +S, while the regulator circuit establishes a very well regulated potential of +12.4 volts from +S. Resistor R63 limits the current through the Zener diodes to establish an optimum bias level.

4-61 The regulating circuit consists of s crie s regulating transistor Q60, driver Q61, and differential amplifier Q62 and Q63. The voltage across Zener diode VR60 (+6.2 volts with respect to +S) and the voltage at the junction of divider Z2L-R69B and Z2J are compared, and any difference is amplified by Q 62 and Q63. The error voltage thus appearing at the collector of Q62 is amplified by driver stage Q61 and applied to series regulator Q60 in the correct phase and amplitude to maintain the +12.4 volt output at a constant level.

4-62 Diode CR60, connected from voltage divider R66 and R67 to the base of Q61, serves as a turn-on circuit for series regulator transistor Q60. When the supply is first turned on, CR60 biases driver Q61 on, thus turning on the series regulator. When the reference supply reaches normal output, the base voltage of Q61 is sufficient to reverse bias CR60, thus effectively removing it from the circuit. Capacitor C60, connected across the output of the reference supply, removes spikes and stabilizes the reference regulator loop.

4-63 Unregulated 11Vdc is supplied from a separate winding on transformer A3T2 by diodes CR53 and CR54 and filter capacitor C44. Additional lightly regulated reference voltages of -4V and -2.4V are provided by diodes CR45-CR46 and CR47-CR48-CR49 respectively. Diode CR43 prevents reverse current flow from damaging the main supply series regulator transistors. Diode CR7, shown in the schematic near the current pullout resistors (R3, R4, and RS), protects the Zener diodes in the reference circuit by providing a path for surge currents which occur during rapid down programming.

4-64 METER CIRCUIT

4-65 The meter circuit provides continuous indica-

tions of output voltage and current on the dc voltmeter and ammeter. Both meter movements can withstand an overload of many times the maximum rated output without damage.

4-66 The ammeter together with its series resistors (R101, R105) is connected across current sampling resistor A4R123. As mentioned previously, the voltage drop across the current sampling resistor varies in proportion to the output current. Potentiometer R101 is adjusted for full scale deflection (calibration) of the ammeter.

4-67 The voltmeter, in series with R103 and R104 and shunted by R102 and R106, is connected directly across the output terminals of the supply. Potentiometer R106 permits calibration of the voltmeter.

4-68 ADDITIONAL PROTECTION FEATURES

4-69 The supply contains several "special purpose" components which protect the supply in the event of unusual circumstances. One of these components is diode A4CR106. Connected across the output terminals of the supply, it prevents internal damage from reverse voltages that might be applied across the supply. This could occur, for example, during Auto-Series operation if one supply was turned on before the other.

4-70 Resistors R108 and R109 limit the output of the supply if the connections between both output buses and the sensing terminals (+S and -S) are inadvertently removed.

4-71 Diode A4CR105, previously mentioned in the series regulator description, protects the regulating transistor from the effects of reverse voltages.

SECTION V MAINTENANCE

5-1 INTRODUCTION

5-2 Upon receipt of the power supply, the performance check (Paragraph 5-5) should be made. This check is suitable for incoming inspection. If a fault is detected in the power supply while making the performance check or during normal operation, proceed to the troubleshooting procedures (Paragraph 5-51). After troubleshooting and repair (Paragraph 5-71), perform any necessary adjustments and calibrations (Paragraph 5-73). Before

returning the power supply to normal operation, repeat the performance check to ensure that the fault has been properly corrected and that no other faults exist. Before performing any maintenance checks, turn on the power supply and allow a half-hour warm-up.

5-3 TEST EQUIPMENT REQUIRED

5-4 Table 5-1 lists the test equipment required to perform the various procedures described in this section.


Table 5-1. Test Equipment Required

| TYPE | REQUIRED CHARACTERISTICS | USE | RECOMMENDED MODEL |
|------------------------------|---|--|--|
| Differential Voltmeter | Sensitivity: 1mV full scale (min.) Input impedance: 10M Ω (rein.) | Measure dc voltages; calibration procedures. | Ⓢ 3420A/B (See Note on Page 5-2) |
| Oscilloscope | Sensitivity and bandwidth; 100 μ V/cm and 400KHz for all measurements except noise spike; 5mV sensitivity and 20 MHz bandwidth for noise spike measurement. | Measure ripple; display transient recovery waveform; measure noise spikes. | Ⓢ 140A with 1423A time base and 1400A vertical plug-in; 1402A plug-in for spike measurement. |
| Variable Voltage Transformer | Range: 207-253Vac. Recommended minimum output current: 12A, 6259B; 22A, 6261B and 6268B; 24A, 6260B: 36A, 6269B. | Vary ac input for line regulation measurement. | ---- |
| AC Voltmeter | Sensitivity: 1mV full scale deflection (min). Accuracy: 2%. | Measure ac voltages and ripple. | Ⓢ 403B |
| DC Voltmeter | Sensitivity: 1mV full scale deflection (rein). Accuracy: 1%. | Measure dc voltages. | Ⓢ 412A |
| Repetitive Load Switch | Switching rate: 60-400Hz Rise time: 2 μ sec. | Measure transient recovery time. | See Figure 5-5. |
| Resistive Loads | Values: see Figures 5-2 and 5-5. | Power supply load resistors. | ---- |
| Current Sampling Resistors | Values: see Figure 5-8. | Measure output current; calibrate ammeter. | A4R123; A4R123A-A4R123B, 6260B only; see Replaceable Parts Table. |

Table 5-1. Test Equipment Required (Continued)

| TYPE | REQUIRED CHARACTERISTICS | USE | RECOMMENDED MODEL |
|-----------------------|--|--------------------------|-------------------|
| Terminating Resistors | Value: 50 ohms, 1/2 watt, ±5%, non-inductive. (Four required.) | Noise spike measurement. | ---- |
| Blocking Capacitors | Value: 0.01µF, 100Vdc. (Two required.) | Noise spike measurement. | ---- |

NOTE

A satisfactory substitute for a differential voltmeter is a reference voltage source and null detector arranged as shown in Figure 5-1. The reference voltage source is adjusted so that the voltage difference between the supply being measured and the reference voltage will have the required resolution for the measurement being made. The voltage difference will be a function of the null detector that is used. Examples of satisfactory null detectors are:  419A null detector, a dc coupled oscilloscope utilizing differential input, or a 50mV meter movement with a 100 division scale. For the latter, a 2mV change in voltage will result in a meter deflection of four divisions.

5-5 PERFORMANCE TEST

5-6 The following test can be used as an incoming inspection check and appropriate portions of the test can be repeated either to check the operation of the instrument after repairs or for periodic maintenance tests. The tests are performed using a 230V ac, 60 Hz, single phase input power source. If the correct result is not obtained for a particular check, do not adjust any internal controls; proceed to troubleshooting (Paragraph 5-5 1).

5-7 CONSTANT VOLTAGE TESTS

5-8 If maximum accuracy is to be obtained in the following measurements, the measuring devices must be connected as close to the output terminals as possible. This is particularly important when measuring the transient response, regulation, or ripple of the power supply. A measurement made across the load includes the impedance of the leads to the load and such lead lengths can easily have an impedance several orders of magnitude greater than the supply impedance, thus invalidating the measurement.

5-9 To avoid mutual coupling effects, each monitoring device must be connected to the output terminals by a separate pair of leads. Twisted pairs or shielded two-wire cables should be used to avoid pickup on the measuring leads. The load resistor should be connected across the output terminals as close to the supply as possible. When measuring the constant voltage performance specifications, the current controls should be set well above (at least 10%) the maximum output current which the supply will draw, since the onset of constant current action will cause a drop in output voltage, increased ripple, and other performance changes not properly ascribed to the constant voltage operation of the supply.

5-10 Voltage Output and Voltmeter Accuracy. To check the output voltage, proceed as follows:
 a. Connect load resistor (R_L) indicated in Figure 5-2 across output terminals of supply.
 b. Connect differential voltmeter across +OUT and -OUT terminals of supply, observing

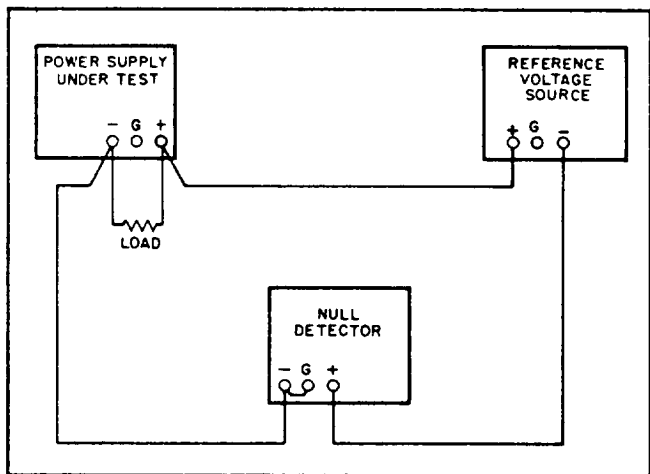


Figure 5-1. Differential Voltmeter Substitute Test Setup

CAUTION

Care must be exercised to avoid ground loops and circulating currents when using an electronic null detector in which one input terminal is grounded.

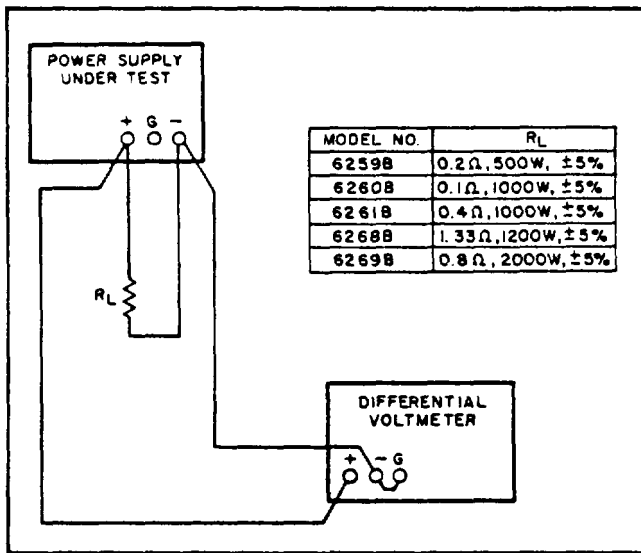


Figure 5-2. Constant Voltage Load Regulation Test Setup

correct polarity.

c. Turn CURRENT controls fully clockwise.

d. Turn on supply and adjust VOLTAGE controls until front panel meter indicates exactly maximum rated output voltage.

e. Differential voltmeter should indicate the following:

| | |
|--------------|------------|
| 6259B, 6260B | 10 ±0.2Vdc |
| 6261B | 20 ±0.4Vdc |
| 6268B, 6269B | 40 ±0.8Vdc |

5-11 Load Regulation.

Definition: The change ΔE_{OUT} in the static value of dc output voltage resulting from a change in load resistance from open circuit to a value which yields maximum rated output current (or vice versa).

5-12 To check the constant voltage load regulation, proceed as follows:

a. Connect test setup shown in Figure 5-2.

b. Turn CURRENT controls fully clockwise.

c. Turn on supply and adjust VOLTAGE controls until front panel meter indicates exactly maximum rated output current.

d. Read and record voltage indicated on differential voltmeter.

e. Disconnect load resistor.

f. Reading on differential voltmeter should not vary from reading recorded in Step (d) by more than the following:

| | |
|--------------|-------|
| 6259B, 6260B | 1.2mV |
| 6261B | 2.2mV |
| 6268B, 6269B | 4.2mV |

5-13 Line Regulation.

Definition: The change ΔE_{OUT} in the static value of dc output voltage resulting from a change in ac input voltage over the specified range from low line (usually 207 volts) to high line (usually 253 volts), or from high line to low line.

5-14 To check the line regulation, proceed as follows :

a. Connect test setup shown in Figure 5-2.

b. Connect variable auto transformer between input power source and power supply power input.

c. Adjust variable auto transformer for 207 volts ac input.

d. Turn CURRENT controls fully clockwise.

e. Turn on supply and adjust VOLTAGE controls until front panel meter indicates exactly maximum rated output voltage.

f. Read and record voltage indicated on differential voltmeter.

g. Adjust variable auto transformer for 253V ac input.

h. Reading on differential voltmeter should not vary from reading recorded in Step (f) by more than the following:

| | |
|--------------|-------|
| 6259B, 6260B | 1.2mV |
| 6261B | 2.2mV |
| 6268B, 6269B | 4.2mV |

5-15 Ripple and Noise.

Definition: The residual ac voltage superimposed on the dc output of a regulated power supply. Ripple and noise may be specified and measured in terms of its RIMS or (preferably) peak-to-peak value.

Ripple and noise measurement can be made at any input ac line voltage combined with any dc output voltage and load current within the supply's rating.

5-16 The amount of ripple and noise that is present in the power supply output is measured either in terms of the RMS or (preferably) peak-to-peak value. The peak-to-peak measurement is particularly important for applications where noise spikes could be detrimental to a sensitive load, such as logic circuitry. The RMS measurement is not an ideal representation of the noise, since fairly high output noise spikes of short duration can be present in the ripple without appreciably increasing the RMS value,

5-17 Ripple Measurements. Figure 5-3A shows an incorrect method of measuring p-p ripple. Note that a continuous ground loop exists from the third wire of the input power cord of the supply to the third wire of the input power cord of the oscilloscope via the grounded power supply case, the

wire between the negative output terminal of the power supply and the vertical input of the scope, and the grounded scope case. Any ground current circulating in this loop as a result of the difference in potential E_G between the two ground points causes an IR drop which is in series with the scope input. This IR drop, normally having a 60Hz line frequency fundamental, plus any pickup on the unshielded leads interconnecting the power supply and scope, appears on the face of the CRT. The magnitude of this resulting noise signal can easily be much greater than the true ripple developed between the plus and minus output terminals of the power supply, and can completely invalidate the measurement.

5-18 The same ground current and pickup problems can exist if an RMS voltmeter is substituted in place of the oscilloscope in Figure 5-3. However, the oscilloscope display, unlike the true RMS meter reading, tells the observer immediately whether the fundamental period of the signal displayed is 8.3 milliseconds (1/120 Hz) or 16.7 milliseconds (1/60 Hz). Since the fundamental ripple frequency present on the output of an ϕ supply is 120Hz (due to full-wave rectification), an oscilloscope display showing a 120Hz fundamental component is indicative of a "clean" measurement set-up, while the presence of a 60Hz fundamental usually means that an improved setup will result in a more accurate (and lower) value of measured ripple.

5-19 Although the method shown in Figure 5-3A is not recommended for ripple measurements, it may prove satisfactory in some instances provided certain precautionary measures are taken. One method of minimizing the effects of ground current (I_G) flow is to ensure that both the supply and the test instrument are plugged into the same ac power buss.

5-20 To minimize pick up, a twisted pair or (preferably) a shielded two-wire cable should be used to connect the output terminals of the power supply to the vertical input terminals of the scope. When using a twisted pair, care must be taken that one of the two wires is connected both to the grounded terminal of the power supply and the grounded input terminal of the oscilloscope. When using shielded two-wire cable, it is essential for the shield to be connected to ground at one end only to prevent any ground current flowing through this shield from inducing a signal in the shielded leads.

5-21 To verify that the oscilloscope is not displaying ripple that is induced in the leads or picked up from the grounds, the (+) scope lead should be shorted to the (-) scope lead at the power supply terminals. The ripple value obtained when the leads are shorted should be subtracted from the

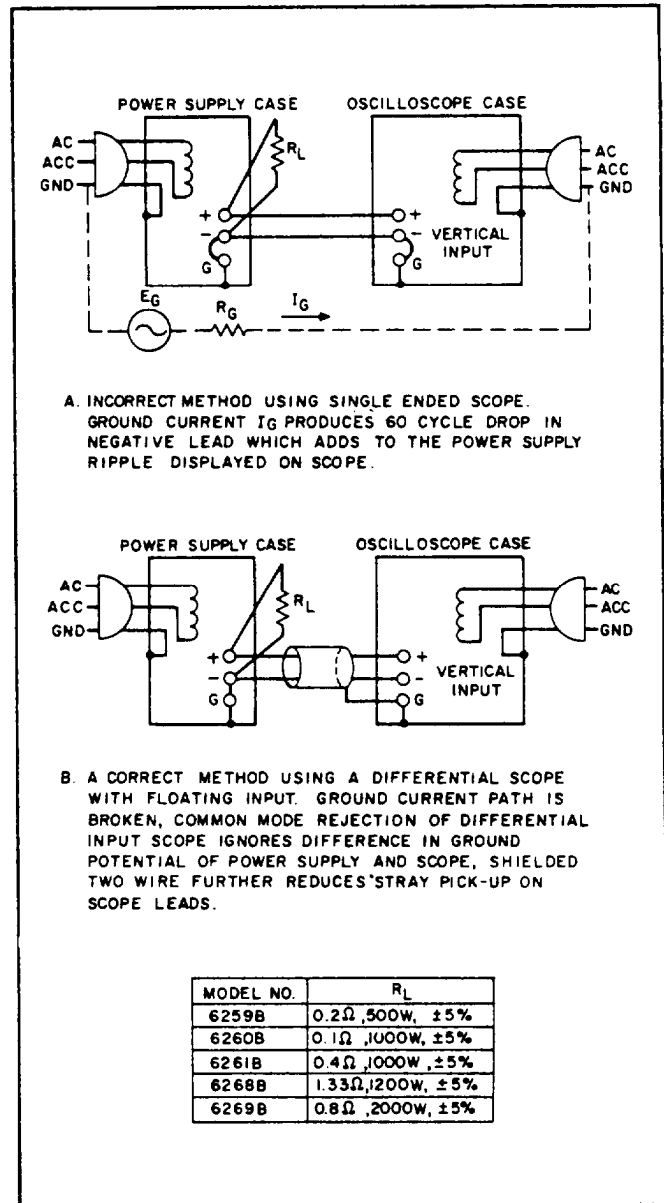


Figure 5-3. Ripple Test Setup

actual ripple measurement.

5-22 If the foregoing measures are used, the single-ended scope of Figure 5-3A may be adequate to eliminate non-real components of ripple so that a satisfactory measurement can be obtained. However, in stubborn cases or in measurement situations where it is essential that both the power supply case and the oscilloscope case be connected to ground (e. g. if both are rack-mounted), it may be necessary to use a differential scope with floating input as shown in Figure 5-3B. If desired, two single-conductor shielded cables may be substituted in place of the shielded two-wire cable with equal success.

Because of its common mode rejection, a differential oscilloscope displays only the difference in signal between its two vertical input terminals, thus ignoring the effects of any common mode signal produced by the difference in the ac potential between the power supply case and scope case. Before using a differential input scope in this manner, however, it is imperative that the common mode rejection capability of the scope be verified by shorting together its two input leads at the power supply and observing the trace on the CRT. If this trace is a straight line, then the scope is properly ignoring any common mode signal present. If this trace is not a straight line, then the scope is not rejecting the ground signal and must be realigned in accordance with the manufacturer's instructions until proper common mode rejection is attained.

5-23 To check the ripple output, proceed as follows :

- a. Connect oscilloscope or RMS voltmeter as shown in Figures 5-3A or 5-3B.
- b. Turn CURRENT controls fully clockwise.
- c. Adjust VOLTAGE controls until front panel meter indicates maximum rated output voltage.
- d. The observed ripple should be less than the following:

| | |
|---------------------|----------------------------|
| 6259B, 6260B, 6261B | 500 μ Vrms and 5mV p-p |
| 6268B, 6269B | 1mVrms and 5mV p-p |

5-24 Noise Spike Measurement. When a high frequency spike measurement is being made, an instrument of sufficient bandwidth must be used; an oscilloscope with a bandwidth of 20 MHz or more is adequate. Measuring noise with an instrument that has insufficient bandwidth may conceal high frequency spikes detrimental to the load.

5-25 The test setup illustrated in Figure 5-3A is generally not acceptable for measuring spikes; a differential oscilloscope is necessary. Furthermore, the measurement concept of Figure 5-3B must be modified if accurate spike measurement is to be achieved

1. As shown in Figure 5-4, two coax cables must be substituted for the shielded two-wire cable.
2. Impedance matching resistors must be included to eliminate standing waves and cable ringing, and capacitors must be inserted to block the dc current path.
3. The length of the test leads outside the coax is critical and must be kept as short as possible; the blocking capacitor and the impedance matching resistor should be connected directly from the inner conductor of the cable to the power supply terminals.
4. Notice that the shields of the power supply end of the two coax cables are not connected to the power supply ground, since such a connection would give rise to a ground current path through the

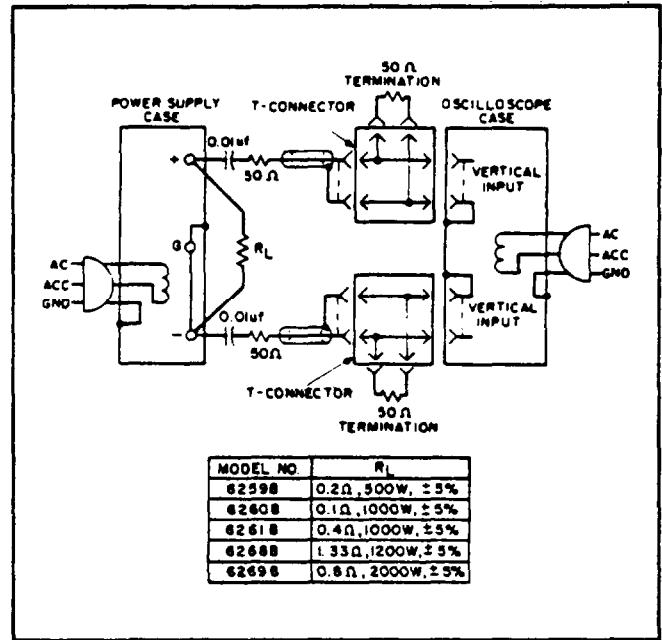


Figure 5-4. Noise Spike Measurement Test Setup

coax shield, resulting in an erroneous measurement.

5. Since the impedance matching resistors constitute a 2-to-1 attenuator, the noise spikes observed on the oscilloscope should be less than 2.5mV p-p instead of 5mV p-p.

5-26 The circuit of Figure 5-4 can also be used for the normal measurement of low frequency ripple: simply remove the four terminating resistors and the blocking capacitors and substitute a higher gain vertical plug-in in place of the wide-band plug-in required for spike measurements. Notice that with these changes, Figure 5-4 becomes a two-cable version of Figure 5-3B.

5-27 Transient Recovery Time.

Definition: The time "X" for the output voltage recovery to within "Y" millivolts of the nominal output voltage following a "Z" amp step change in load current, where: "Y" is specified as 10mV, the nominal output Voltage is defined as the dc level halfway between the static output voltage before and after the imposed load change, and "Z" is the specified load current change of S amps or the full load current rating of the supply, whichever is less.

5-28 Transient recovery time may be measured at any input line voltage combined with any output voltage and load current within rating,

5-29 Reasonable care must be taken in switching the load resistance on and off. A hand-operated

switch in series with the load is not adequate, since the resulting one-shot displays are difficult to observe on most oscilloscopes, and the arc energy occurring during switching action completely masks the display with a noise burst. Transistor load switching devices are expensive if reasonably rapid load current changes are to be achieved.

5-30 A mercury-wetted relay, as connected in the load switching circuit of Figure 5-5 should be used for loading and unloading the supply. When this load switch is connected to a 60Hz ac input, the mercury-wetted relay will open and close 60 times per second. Adjustment of the 25K control permits adjustment of the duty cycle of the load current switching and reduction in jitter of the oscilloscope display.

5-31 The load resistances shown in Figure 5-5 are the minimum resistances that must be used in order to preserve the mercury-wetted relay contacts. Switching of larger load currents can be accomplished with mercury pool relays; with this technique fast rise times can still be obtained, but the large inertia of mercury pool relays limits the maximum repetition rate of load switching and makes the clear display of the transient recovery characteristic on oscilloscope more difficult.

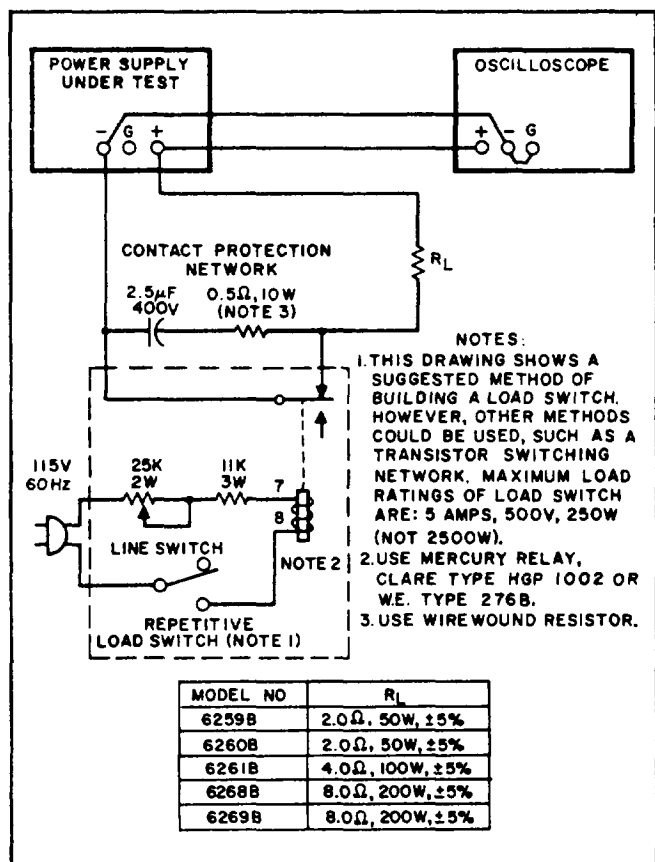


Figure 5-5. Transient Recovery Time Test Setup

5-32 To check the transient recovery time, proceed as follows:

- Connect test setup shown in Figure 5-5.
- Turn CURRENT controls fully clockwise.
- Turn on supply and adjust VOLTAGE controls until front panel ammeter indicates 5 amps output current.
- Close line switch on repetitive load switch setup.
- Set oscilloscope for internal sync and lock on either positive or negative load transient spike.
- Set vertical input of oscilloscope for ac coupling so that small dc level changes in power supply output voltage will not cause display to shift.
- Adjust the vertical centering on the scope so that the tail ends of the no load and full load waveforms are symmetrically displayed about the horizontal center line of the oscilloscope. This center line now represents the nominal output voltage defined in the specification.
- Adjust the horizontal positioning control so that the trace starts at a point coincident with a major graticule division. This point is then representative of time zero.
- Increase the sweep rate so that a single transient spike can be examined in detail.
- Adjust the sync controls separately for the positive and negative going transients so that not only the recovery waveshape but also as much as possible of the rise time of the transient is displayed.
- Starting from the major graticule division representative of time zero, count to the right 50µsec and vertically 10mV. Recovery should be within these tolerances as illustrated in Figure 5-6.

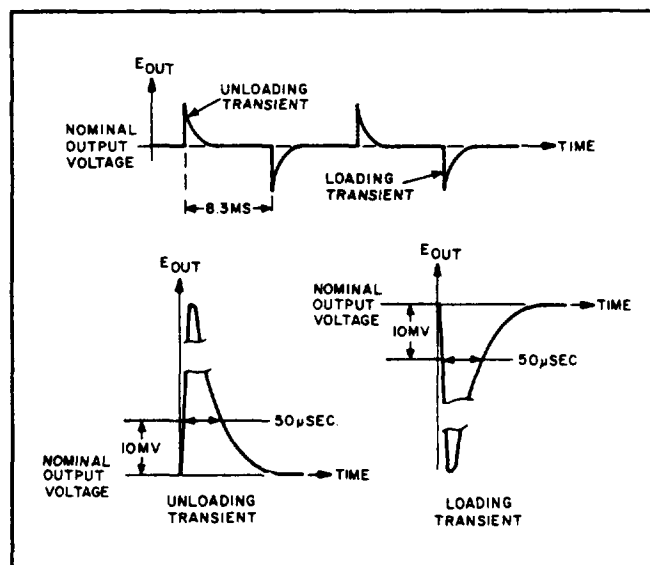


Figure 5-6. Transient Recovery Time Waveforms

5-33 Temperature Coefficient.

Definition: The change in output voltage per degree Centigrade change in the ambient temperature under conditions of constant input ac line voltage, output voltage setting, and load resistance.

5-34 The temperature coefficient of a power supply is measured by placing the power supply in an oven and varying it over any temperature span within its rating. (Most HP power supplies are rated for operation from 0°C to 55°C.) The power supply must be allowed to thermally stabilize for a sufficient period of time at each measurement temperature.

5-35 The temperature coefficient given in the specifications is the maximum temperature-dependent output voltage change which will result over any one degree Centigrade interval. The differential voltmeter or digital voltmeter used to measure the output voltage change of the supply should be placed outside the oven and should have a long term stability adequate to insure that its drift will not affect the overall measurement accuracy.

5-36 To check the temperature coefficient, proceed as follows:

- a. Connect load resistance and differential voltmeter as illustrated in Figure 5-2.
 - b. Turn CURRENT controls fully clockwise.
 - c. Adjust front panel VOLTAGE controls until front panel voltmeter indicates maximum rated output voltage.
 - d. Place power supply in temperature-controlled oven (differential voltmeter remains outside oven). Set temperature to 30°C and allow 30 minutes warm-up.
 - e. Record differential voltmeter reading.
 - f. Raise temperature to 40°C and allow 30 minutes warm-up.
 - g. Observe differential voltmeter reading.
- Difference in voltage reading between Step (e) and (g) should be less than the following:
- | | |
|--------------|------|
| 62599,62600 | 12mV |
| 6261B | 22mV |
| 6268B, 6269B | 42mV |

5-37 Output Stability.

Definition: The change in output voltage for the first eight hours following a 30-minute warm-up period. During the interval of measurement all parameters, such as load resistance, ambient temperature, and input line voltage are held constant.

5-38 This measurement is made by monitoring the output of the power supply on a differential voltmeter or digital voltmeter over the stated measurement interval; a strip chart recorder can be used to

provide a permanent record. A thermometer should be placed near the supply to verify that the ambient temperature remains constant during the period of measurement. The supply should be put in a location immune from stray air currents (open doors or windows, air conditioning vents); if possible, the supply should be placed in an oven which is held at a constant temperature. Care must be taken that the measuring instrument has a stability over the eight hour interval which is at least an order of magnitude better than the stability specification of the power supply being measured. Typically, a supply may drift less over the eight hour measurement interval than during the half-hour warm-up.

5-39 To check the output stability, proceed as follows :

- a. Connect load resistance and differential voltmeter as illustrated in Figure 5-2.
- b. Turn CURRENT controls fully clockwise.
- c. Adjust front panel VOLTAGE controls until differential voltmeter indicates maximum rated output voltage.
- d. Allow 30 minutes warm-up, then record differential voltmeter reading.
- e. After 8 hours, differential voltmeter should change from reading recorded in Step (d) by less than the following:

| | |
|--------------|--------|
| 6259B, 62600 | 5.0mV |
| 6261B, 6268B | 8.0mV |
| 6269B | 14.0mV |

5-40 CONSTANT CURRENT TESTS

5-41 The instruments, methods, and precautions for the proper measurement of constant current power supply characteristics are for the most part identical to those already described for the measurement of constant voltage power supplies. There **are**, however, two main differences: first, the power supply performance will be checked between short circuit and full load rather than open circuit and full load. Second, a current monitoring resistor is inserted between the output of the power supply and the load.

5-42 For all output current measurements the current sampling resistor must be treated as a four terminal device. In the manner of a meter shunt, the load current is fed to the extremes of the wire leading to the resistor while the sampling terminals are located as close as possible **to** the resistance portion itself (see Figure 5-7). Generally, any **current** sampling resistor should be of the low noise, low temperature coefficient (less than 30ppm/°C) type and should be used at no more than 5% of its rated power so that its temperature rise will be minimized, If difficulty is experienced in obtaining a low resistance, high current resistor suitable for current sampling, a duplicate of the sampling resistor used in this unit (A4R123 or A4R123A-A4R123B)

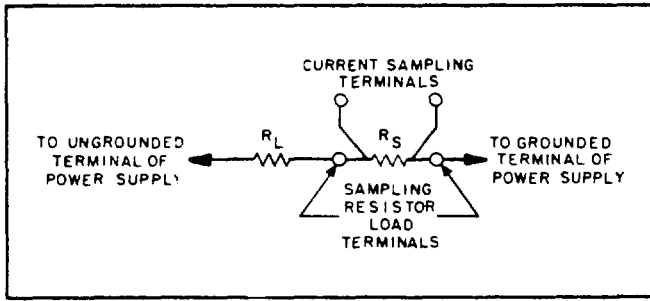


Figure 5-7. Current Sampling Resistor Connections

NOTE

When using the HP current sampling resistor recommended for this instrument, an external fan must be employed to cool the resistor. This precaution will maintain the sampling resistance at a constant value.

may be obtained from the factory.

5-43 Rated Output and Meter Accuracy.

- Connect test setup shown in Figure 5-8.
- Turn VOLTAGE controls fully clockwise.
- Turn on supply and adjust CURRENT controls until front panel ammeter indicates maximum rated output current.
- Differential voltmeter should read $0.5 \pm 0.01V_{dc}$.

5-44 Load Regulation.

Definition: The change ΔI_{OUT} in the static value of the dc output current resulting from a change in load resistance from short circuit to a value which yields maximum rated output voltage.

5-45 To check the constant current load regulation, proceed as follows:

- Connect test setup shown in Figure 5-8.
- Turn VOLTAGE controls fully clockwise.
- Adjust CURRENT controls until front panel meter reads exactly maximum rated out voltage.
- Read and record voltage indicated on differential voltmeter.
- Short circuit load resistor (R_L).
- Reading on differential voltmeter should not vary from reading recorded in Step (d) by more than the following:

| | |
|-------|-------------|
| 6259B | 110 μ v |
| 6260B | 110 μ v |
| 6261B | 110 μ v |
| 6268B | 134 μ v |
| 6269B | 120 μ v |

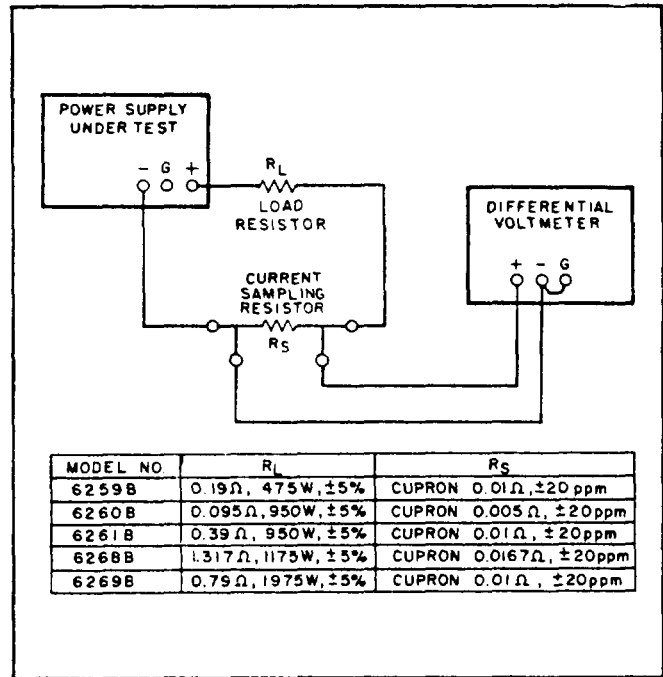


Figure 5-8. Constant Current Load Regulation Test Setup

5-46 Line Regulation.

Definition: The change ΔI_{OUT} in the static value of dc output current resulting from a change in ac input voltage over the specified range from low line (usually 207 volts) to high line (usually 253 volts), or from high line to low line.

5-47 To check the line regulation, proceed as follows:

- Utilize test setup shown in Figure 5-8.
- Connect variable auto transformer between input power source and power supply power input.
- Adjust auto transformer for 207Vac input.
- Turn VOLTAGE controls fully clockwise.
- Adjust CURRENT controls until front panel ammeter reads exactly maximum rated output current.
- Read and record voltage indicated on differential voltmeter.
- Adjust variable auto transformer for 253V ac input.
- Reading on differential voltmeter should not vary from reading recorded in Step (f) by more than the following:

| | |
|--------------|-------------|
| 6259B, 6269B | 120 μ v |
| 6260B, 6261B | 110 μ v |
| 6268B | 134 μ v |

5-48 Ripple and Noise.

Definition: The residual ac current which is superimposed on the dc output current

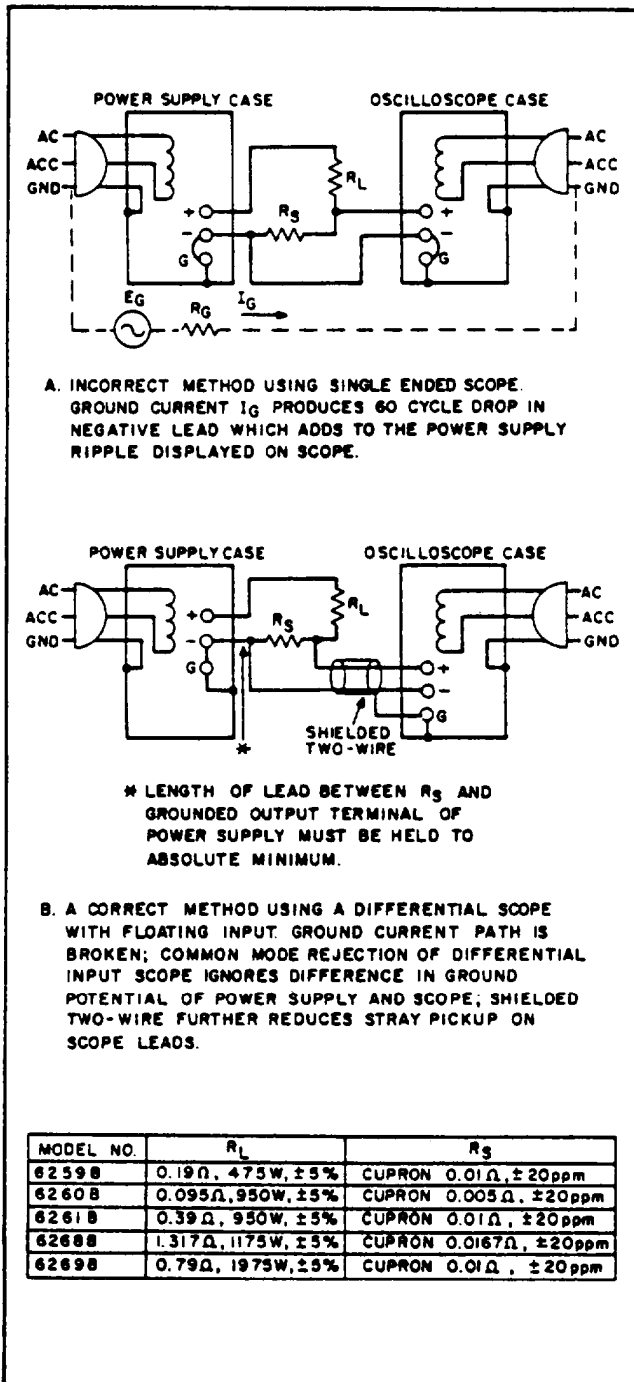


Figure 5-9. Constant Current Ripple and Noise Test Setup

of a regulated power supply. AC ripple and noise current is usually specified and measured in terms of its RMS value.

s-49 Most of the instructions pertaining to the ground loop and pickup problem-s associated with constant voltage ripple and noise measurement

also apply to the measurement of constant current ripple and noise. Figure 5-9 illustrates the most important precautions to be observed when measuring the ripple and noise of a constant current supply. The presence of a 120Hz waveform on the oscilloscope is normally indicative of a correct measurement method. A waveshape having 60Hz as its fundamental component is typically associated with an incorrect measurement setup.

5-50 Ripple and Noise Measurement. To check the ripple and noise, proceed as follows:

- a. Connect oscilloscope or RMS voltmeter as shown in Figures 5-9A or 5-9B.
- b. Turn VOLTAGE controls fully clockwise.
- c. Adjust CURRENT controls until front pane 1 ammeter reads exactly maximum rated output current.
- d. The observed ripple and noise should be less than:

| | |
|-------|----------------|
| 6259B | 250 μ Vrms |
| 6260B | 250 μ Vrms |
| 6261B | 250 μ Vrms |
| 6268B | 334 μ Vrms |
| 6269B | 250 μ Vrms |

5-51 TROUBLESHOOTING

5-52 Before attempting to troubleshoot this instrument, ensure that the fault is with the instrument and not with an associated circuit. The performance test (Paragraph 5-5) enables this to be determined without having to remove the instrument from the cabinet.

5-53 A good understanding of the principles of operation is a helpful aid in troubleshooting, and it is recommended that the reader review Section IV of the manual before attempting to troubleshoot the unit in detail. Once the principles of operation are understood, refer to the overall troubleshooting procedures in Paragraph S-S 6 to locate the symptom and probable cause.

5-54 The schematic diagram at the rear of the manual (Figure 7-11) contains normal voltage readings taken at various points within the circuits. These voltages are positioned adjacent to the applicable test points (identified by encircled numbers). The component location diagrams (Figures 7-1 through 7-8, and Figure 7-10) at the rear of the manual should be consulted to determine the location of components and test points.

5-55 If a defective component is located, replace it and re-conduct the performance test. When a component is replaced, refer to the repair and replacements (Paragraph 5-71) and adjustment and calibration (Paragraph 5-73) sections of this manual

5-57 To locate the cause of trouble, follow Steps 1, 2, and 3 in sequence:

(1) Check for obvious troubles such as tripped circuit breaker, defective power cord, incorrectly strapped rear terminals, input power failure or defective meter. Next, remove the top and bottom covers and inspect for open connections, charred components, etc., paying particular attention to both sides of the main circuit board. (Refer to Paragraph 5-64 for the main circuit board removal procedure.)

If the trouble source cannot be detected by visual inspection, re-install the main circuit board and proceed to Step (2).

(2) In almost all cases, the trouble can be caused by incorrect dc bias or reference voltages; thus, it is a good practice to check the voltages in Table 5-2 before proceeding with Step (3). Refer to Figure 7-10 for the location of the test points listed in Table 5-2.

(3) Disconnect load and examine Table 5-3 to determine your symptom and its probable cause.

Table 5-2. Reference and Bias Voltages
(Refer to Schematic and Figure 7-10 for test point locations)

| STEP | METER COMMON | METER POSITIVE | NORMAL VDC | NORMAL RIPPLE (P-P) | PROBABLE CAUSE |
|------|--------------|----------------|-------------|---------------------|---|
| 1 | +S | TP63 | +12.4 ± 7% | 2.0mV | CR61, CR62, Q60, Q61, Q62, Q63 |
| 2 | +S | TP64 | +6.2 ±5% | 0.5mV | VR60, VR61, Q62, Q63 |
| 3 | +S | TP65 | -6.2 ±5% | 2.0mV | VR60, VR61, Q62, Q63 |
| 4 | +S | TP66 | +11 ±15% | 2.0V | C44, CR53, CR54 |
| 5 | +S | TP67 | -4.0 ±12.5% | 0.8V | C44, CR53, CR54, CR45, CR46, CR47, CR48, CR49 |
| 6 | +S | TP68 | -2.4±12.5% | 0.4V | CR54, CR45, CR46, CR47, CR48, CR49 |

Table 5-3. Overall Trouble shooting

| SYMPTOM | PROBABLE CAUSE |
|---|--|
| Low or no output voltage (Overvoltage lamp may be on or off) | a. Front panel meter defective. b. Crowbar not reset or defective. Refer to Table 5-4. c. Series regulator or preregulator feedback loop defective. Refer to Table 5-4. |
| High output voltage | a. Front panel meter defective. b. Open circuit between sensing terminals (*S) and output terminals (*OUT). Refer to Table 5-4. c. Series regulator or preregulator loop defective. If crowbar does not trip, it also is faulty. Refer to Table 5-4. |
| High ripple | a. Ground loops in operating setup. Refer to Paragraph 5-15. b. Incorrect reference and/or bias voltages. Refer to Table 5-2. c. Supply crossing over to constant current operation under loaded conditions. Check current limit setting or constant |

Table 5-3. Overall Troubleshooting (Continued)

| SYMPTOM | PROBABLE CAUSE |
|--|---|
| High ripple (continued) | current comparator circuit (Z1 and associated components). |
| Poor line regulation | a. Improper measurement technique. Refer to Paragraph 5-13. b. Incorrect reference and/or bias voltages. Refer to Table 5-2. |
| Poor load regulation (Constant voltage) | a. Improper measurement technique. Refer to Paragraph 5-11. b. Incorrect reference and/or bias voltages. Refer to Table 5-2. c. Supply current limiting. Check constant current comparator circuit (Z1 and associated components). |
| Poor load regulation (Constant current) | a. Improper measurement technique. Refer to Paragraph 5-44. b. Incorrect reference and/or bias voltages. Refer to Table 5-2. c. Supply voltage limiting. Check constant voltage comparator circuit (Z1 and associated components) and voltage clamp circuit, Q1. d. Leaky C19, A3C3. |
| Oscillates (Constant current\constant voltage) | a. Adjustment of R47. Refer to Paragraph 5-99. b. Faulty C40, C41, C19, A3C3, R50. c. Open sensing lead (+S). |
| Instability (Constant current/constant voltage) | a. Incorrect reference and/or bias voltages; CR92 defective. Refer to Table 5-2. b. Noisy voltage or current controls (A5R121, A5R122, or A5R123, A5R124); noisy VR60 or VR61. c. Integrated circuit Z1 defective. d. CR4, CR5, CR6, or CR21 leaky. e. R2, R3, R4, R5, R6, R22, R30, R31, C2 noisy or drifting. |
| Cannot reach maximum output | a. Q20 shorted. One or more of series regulator transistors (A4Q103 through A4Q108) open, |

5-58 Table 5-3 contains symptoms and probable causes of many possible troubles. If either high or low output voltage is a symptom, Table 5-4 contains the steps necessary to isolate the trouble to one of the feedback loops and instructions directing the tester to the proper table for further isolation. Because of the interaction between feedback loops, it is necessary to refer to Table 5-4 before proceeding to Tables 5-5, 5-6, or 5-7.

5-59 Tables 5-5, 5-6, and 5-7 contain troubleshooting methods for the series regulator and preregulator feedback loops once the fault has been

isolated to either one. Tables 5-5 and 5-6 contain instructions for driving each stage of the series regulator feedback loop into conduction or cut-off. By following the steps in these tables, the fault can be isolated to a circuit or to a component.

5-60 Table 5-7 contains troubleshooting procedures for the preregulator feedback loop. The troubleshooting method is based upon comparing the waveforms shown in Figure 7-9 with those actually found at the various test points in the preregulator control circuit. As indicated in Table

5-7, the circuit is checked by starting with the output waveform and tracing backwards.

5-61 Performing the tests given in Table 5-5, 5-6, and 5-7 will usually require partial disassembly of

the supply in order to gain access to components (such as the series regulator transistors) that are not mounted on the main circuit board. If this is the case, refer as necessary to Paragraphs 5-65 through 5-70 for disassembly procedures.

Table 5-4. Feedback Loop Isolation

| STEP | ACTION | RESPONSE | PROBABLE CAUSE |
|------|--|---|---|
| 1 | <p>NOTE: After each step, crowbar should be reset by turning supply off and then on.</p> <p>Inspect LINE circuit breaker.</p> | <p>a. Tripped.</p> <p>b. Not tripped; High voltage output.</p> <p>c. Not tripped; Low voltage output.</p> | <p>a. Check rectifier, filter, and triac for short. Faulty pre-regulator. Proceed to Step 3.</p> <p>b. Series regulator loop in high voltage condition. Proceed to Step 2.</p> <p>c. Proceed to Step 2.</p> |
| 2 | <p>Inspect overvoltage lamp on front pane 1.</p> | <p>a. On.</p> <p>b. Off; High voltage output.</p> <p>c. off; Low voltage output.</p> | <p>a. Check setting of overvoltage adjust (A5R125). Check A4CR110 for short. Series regulator loop in high voltage condition. Proceed to Step 3.</p> <p>b. Check setting of overvoltage adjust (A5R125). Check A4CR110 for open, Q91 for open, Q92 for short. Series regulator loop in high voltage condition. Proceed to Step 3.</p> <p>c. Check overvoltage adjust (A5R125). Check A4CR110 for short. Check Q20 for short. Proceed to Step 3.</p> |
| 3 | <p>Isolate fault to either series regulator or preregulator by using the following steps:</p> <p>(1) Open the gate lead to triac A2CR1 by disconnecting either end of resistor R88 (TP87 or TP88).</p> <p>(2) Place a small dc power supply across the input capacitors (C 101 through C104). A 0-10V, 2A supply is sufficient.</p> <p>(3) Set external supply to ten volts.</p> <p>(4) Vary front panel voltage controls.</p> | <p>a. Output voltage normal. Variable from 0 volts to about 9 volts.</p> <p>b. Output voltage high. Varying controls has little or no effect.</p> <p>c. Output voltage low, Varying controls has little or no effect.</p> | <p>a. Check each series regulator transistor (A4Q103 through A4Q108) for open. Then check preregulator by disconnecting source and proceeding to Table 5-7.</p> <p>b. High voltage condition in series regulator. Proceed to Table 5-5. Leave external source connected.</p> <p>c. Low voltage condition in series regulator loop. Proceed to Table 5-6. Leave external source connected.</p> |

Table 5-5. Series Regulator Troubleshooting, High Voltage Condition

| STEP | ACTION | RESPONSE | PROBABLE CAUSE |
|------|---|---|--|
| 1 | These tests should be made with Check turn-off of series regulator transistors A4Q103 through A4Q108 by shorting base (TP101) to emitter (TP103). | external source connected as described a. Output voltage remains high. b. Output voltage decreases. | in Table 5-4, Step 3. a. One or more of A4Q103 through A4Q108 shorted or A4CR105 shorted. Check A4R150-A4R155. b. Remove short. Proceed to Step 2. |
| 2 | Check turn-off of driver A4Q102 by shorting base (TP100) to emitter (TP101). | a. Output voltage remains high. b. Output voltage decreases. | a. A4Q102 shorted. b. Remove short. Proceed to Step 3. |
| 3 | Check conduction of error amplifier A4Q101 by connecting base (TP45) to cathode of CR45 (TP67) through a 100 Ω resistor. | a. Output voltage remains high. b. Output voltage decreases. | a. A4Q101 open. b. Remove resistor. Proceed to Step 4. |
| 4 | Check conduction of error amplifier Q42 by connecting base (TP44) to cathode of CR45 (TP67) through a 1K Ω resistor. | a. Output voltage remains high, b. Output voltage decreases. | a. Q42 open. b. Remove resistor. Proceed to Step 5. |
| 5 | Check turn-off of mixer amplifier Q41 by connecting base (TP40) to +11 volt supply (TP66) through a 1K Ω resistor. | a. Output voltage remains high. b. Output voltage decreases. | a. Q41 shorted. b. Remove resistor. Proceed to Step 6. |
| 6 | Check turn-off of constant voltage comparator Z 1 by shunting R 1 with a 10K Ω resistor, or by installing a 10K Ω resistor in R1 position if resistor is not installed in the supply. | a. Output voltage remains high. b. Output voltage decreases. | a. Z1 defective, R110 shorted. b. R23 open, open strap between A 1 and A2, A5R121 or A5R122 open. |

Table 5-6. Series Regulator Troubleshooting, Low Voltage Condition

| STEP | ACTION | RESPONSE | PROBABLE CAUSE |
|------|--|--|--|
| 1 | These tests should be made with Check conduction of series regulator transistors A4Q103 through A4Q108 by connecting base (TP101) to +11 volt supply (TP66) through a 100 ohm resistor. | external source connected as described a. Output voltage remains low. b. Output voltage rises. | in Table 5-4, Step 3. a. A4Q103 through A4Q108 open and/or A4R150 through A4R155 open, A4CR106 shorted. b. Remove resistor. Proceed to Step 2. |

Table 5-6. Series Regulator Troubleshooting, Low Voltage Condition (Continued)

| STEP | ACTION | RESPONSE | PROBABLE CAUSE |
|------|--|--|--|
| 2 | Check conduction of driver A4Q102 by shorting A4Q101 emitter (TP100) to base (TP45). | a. Output voltage remains low. b. Output voltage rises. | a. A4Q102 open, thermal switch A4TS101 open. b. Remove short. Proceed to Step 3. |
| 3 | Check turn-off of error amplifier A4Q10 1 by connecting base (TP45) to Q42 base (TP44). | a. Output voltage remains low. b. Output voltage rises. | a. A4Q101 or CR44 shorted. b. Remove short. Proceed to Step 4. |
| 4 | Check turn-off of error amplifier Q42 by connecting base (TP44) to +11V supply (TP66) through a 1K Ω resistor. | a. Output voltage remains low, b. Output voltage rises. | a. Q42 shorted. b. Remove resistor. Proceed to Step 5. |
| 5 | Isolate fault to either constant voltage comparator or constant current comparator by opening the cathode of CR20. | a. Output voltage rises. b. Output voltage remains low. | a. Z1 defective, open strap between A6 and A7, or shorted A5R123 or A5R124. b. Reconnect lead and proceed to Step 6. |
| 6 | Check conduction of mixer amplifier Q41 by connecting base (TP40) to +S terminal. | a. Output voltage remains low. b. Output voltage rises. | a. Q41 or CR40 open, Q40 shorted. b. Remove short. Proceed to Step 7. |
| 7 | Check conduction of constant voltage comparator Z 1 by shunting R110 with a 10K ohm resistor, or by installing a 10K Ω resistor in R110 position if resistor is not installed in the supply. | a. Output voltage remains low. b. Output voltage rises. | a. Z1 defective, R1 shorted. b. A5R121 and A5R122 shorted, open strap' between AZ and A3, R5 open, C2 shorted, CR7 shorted. |

Table 5-7. Preregulator Troubleshooting (Refer to Waveforms in Figure 7-9)

| STEP | ACTION | RESPONSE | PROBABLE CAUSE |
|--|---|---|--|
| WARNING | | | |
| A differential oscilloscope <u>must be used</u> for these tests in order to avoid a potentially dangerous shock hazard. Floating a single-ended oscilloscope for these tests is not recommended, because it may result in the oscilloscope chassis being at 230Vac line potential. | | | |
| 1 | Connect oscilloscope between TP89 (+) and TP86 (-). | a. Normal waveform. b. Little or no voltage. | a. Defective A2CR1, R88, CR88, A2L1A/A2L1B, T1, A2C1, A2R1. b. Proceed to Step 2. |

Table 5-7. Preregulator Troubleshooting (Continued)

| STEP | ACTION | RESPONSE | PROBABLE CAUSE |
|------|--|---|--|
| 2 | Connect oscilloscope between TP85 (+) and TP103 (-). | a. Normal waveform. b. Little or no voltage. | a. Defective T70. b. Defective Q72, Q73, CR76, or C71. proceed to Step 3. |
| 3 | Connect oscilloscope between TP80 (+) and TP103 (-). | a. Amplitude incorrect. b. Period incorrect. | a. Defective Q71, C70, C72, CR74, CR75, R82, R75, or R78. b. CR78 defective. Proceed to Step 4. |
| 4 | Connect oscilloscope between TP82 (+) and TP103 (-). | a. Amplitude, dc reference or period incorrect. | a. Defective CR82, CR84, CR79, CR80, CR77, CR78. Check R87. |
| 5 | Connect oscilloscope between TP81 (+) and TP103 (-). | a. Amplitude, dc reference or period incorrect. | a. Defective CR81, CR83, R86, R83, C73. |

5-62 DISASSEMBLY PROCEDURES

5-63 The following seven paragraphs describe procedures for removing and disassembling the five subassemblies in this supply (A1 main circuit board, A2 RFI assembly, A3 interconnection circuit board, A4 heat sink, and A5 front panel). These procedures are referenced throughout the manual wherever necessary. For example, in the instructions for converting the supply to 115Vac operation, reference is made to the RFI assembly removal procedure in order to allow access to the bias transformer (A3T2) primary connections.

5-64 Main Circuit Board (A1) Removal. To remove the main printed circuit board, proceed as follows:

- a. Unplug unit and remove top cover of supply.
- b. Remove six hold-down screws visible on component side of main circuit board (arrowed "A" through "F" in Figure 7-1 O).
- c. Unplug board from receptacle mounted on interconnection circuit board by gently pulling on finger hole in opposite end of circuit board. Only finger hole should be used to remove board; do not pull on board-mounted components to aid removal. Care must be taken that rear barrier strip clears opening in rear panel.

5-65 Front Panel (A5) Removal. To remove the front panel, proceed as follows:

- a. Unplug unit, turn supply upside down, and remove four screws holding handlers to front panel.

b. Front panel may now be swung outward, hinging on wires to LINE circuit breaker. Access is provided to all panel-mounted components.

5-66 Main Filter Capacitor Bank Removal. To remove the main filter capacitors (C1 01 through C104), proceed as follows:

- a. Unplug unit, remove top and bottom covers of supply.
- b. Remove one long screw and hold-down bracket on top of supply (arrowed "A" in Figure 7-3), and one long screw and hold-down bracket on bottom of supply (arrowed "A" in Figure 7-4).
- c. Sufficient lead length is provided to allow capacitors to be lifted partially out of instrument.

5-67 RFI Assembly (A2) Removal. To remove the RFI assembly, proceed as follows:

- a. Unplug unit, turn supply upside down, and remove bottom cover.
- b. Remove four screws holding RFI heat sink to mounting brackets (arrowed "A" through "D" in Figure 7-5). Two of the screws are accessible through holes in chassis flanges.
- c. Lift out RFI assembly and turn over.
- d. Remove four screws holding cover to heat sink (screw holes are arrowed "A" through "D" in Figure 7-1). This allows access to A2R1, A2C1, and A2L1A/A2L1B with its jumpers for 115/230 volt operation.
- e. Remove four screws holding A2L1A/A2LIB mounting bracket to heat sink. (Two of the screws

are arrowed "E" and "F" in Figure 7-1.) Lifting brackets away from heat sink allows access to triac A2CR1. A magnetized screwdriver is useful in performing this step.

5-68 Heat Sink (A4) Removal. In order to gain access to the following components, it is necessary to remove the heat sink assembly. Transistors A4Q101 through A4Q108; diodes A4CR10I through A4CR106, A4CR108, and A4CR110; resistors A4R106, A4R123, and A4R150 through A4R155; capacitors A4C1 through A4C5; cooling fan A4B1; and thermal switch A4TS101. For the location of these components, see Figures 7-5, 7-6, 7-7, and 7-8. To remove the heat sink assembly, proceed as follows:

- a. Unplug unit, stand it on left side, and remove top and bottom covers.
- b. Remove main printed circuit board as described in Paragraph 5-64.
- c. Remove two screws holding upper edge of heat sink to upper chassis flange (arrowed "E" and "F" in Figure 7-D).
- d. Disengage two pins holding lower section of heat sink assembly to main circuit board support tray by sliding heat sink down about ½ inch and slightly away from chassis. Before fully removing heat sink assembly, observe lead dress so assembly may be returned easily to correct position.
- e. Maneuver heat sink assembly downwards and away from chassis until it is resting on table (sufficient lead length is provided). Gentle leverage with a thin screwdriver may be necessary to allow heat sink assembly to clear upper chassis flange. Access is now provided to all components mounted on heat sink except resistors A4R150 through A4R155, and A4R123,

5-69 Heat Sink (4) Disassembly. To gain access to resistors A4R123 and A4R150 through A4R155 (shown in Figures 7-6 and 7-8) it is necessary to disassemble the heat sink assembly by utilizing the following procedure:

- a. Remove heat sink assembly as described in Paragraph 5-68 above.
- b. Turn supply upside down and place heat sink assembly partially into chassis so fan (A4B1) is protruding above chassis.
- c. Remove four screws and four shoulder washers attaching fan mounting plate to heat sink. Do not remove fan from mounting plate. When re-assembling heat sink, do not overtighten these screws. Too much tension will damage the insulating rods.
- d. Remove two screws holding current sampling resistor A4R123 to topmost two portions of heat sink. If necessary, the resistor may be

unsoldered at this point.

- e. Remove mounting nuts from A4CR106 on left side of heat sink, and from A4CR108 on right side of heat sink. Remove mounting nuts, bolts and shoulder washers on transistor A4Q102 on right side of heat sink (see Figure 7-5).
- f. Slide top section of heat sink forward and off insulating rods.
- g. Remove four screws holding emitter resistor circuit board to bottom half of heat sink. A magnetized screwdriver is useful here. Access is now provided to series regulator emitter resistors A4R150 through A4R155 (see Figure 7-6).
- h. If necessary to completely remove emitter resistor circuit board, unsolder connections to board, marking wires to enable correct replacement, and remove board.

5-70 Interconnection Circuit Board (A3) Removal.

To replace capacitor A3C3 or transformer A3T2, (shown in Figure 7-2), it is necessary to remove the interconnection circuit board by utilizing the following procedure:

- a. Remove main circuit board, RFI assembly, and heat sink assembly as described in Paragraphs 5-64, 5-67, and 5-68 respectively.
- b. Remove six screws holding back panel to chassis frame.
- c. Stand supply on left side, and remove two screws holding main circuit board support tray to back panel. Move panel away from frame.
- d. Remove two screws holding main circuit board support tray to internal chassis divider.
- e. Working from top rear of supply, interconnection circuit board (still attached to main circuit board support tray) can be angled up enough to allow access.
- f. If necessary to completely remove interconnection circuit board, remove two screws holding board to support tray, one screw holding capacitor clamp (A3C3) to support tray, and two screws holding bias transformer (A3T2) to support tray. Unsolder connections to board, marking wires to enable correct replacement, and remove board.

5-71 REPAIR AND REPLACEMENT

5-72 Section VI of this manual contains a list of replaceable parts. If the part to be replaced does not have a standard manufacturers' part number, it is a "special" part and must be obtained directly from Hewlett-Packard. After replacing a semiconductor device, refer to Table 5-8 for checks and adjustments that may be necessary. All components listed in Table 5-8 without A-designators are on the main printed circuit board (A1).

Table 5-8. Checks and Adjustments After Replacement of Semiconductor Devices

| REFERENCE | FUNCTION OR CIRCUIT | CHECK | ADJUST |
|----------------------------------|--|---|--|
| Z1 | Constant voltage and constant current differential amplifiers. | Constant voltage (CV) line and load regulation. Zero volt output. Constant current (CC) line and load regulation. Zero current output. | R110, or R113 (Option 020); R117, or R119 (Option 021) |
| Q1 | Voltage clamp circuit. | CC load regulation. | --- |
| Q20 | Short circuit protection. | Output current, protection action. | --- |
| Q40, Q41 | Mixer amplifier. | CV/CC load regulation. CV transient response. | R47 |
| Q42, A4Q101, A4Q102 | Driver and error amplifiers. | CV/CC load regulation. | --- |
| Q60, Q61, Q62, Q63 | Reference regulator. | +12.4V, +6.2V, and -6.2V reference voltages and reference circuit line operation. | --- |
| Q70 | Overvoltage limit. | Limiting action and level. | --- |
| Q71, Q72, Q73 | Preregulator control circuit. | Output voltage, ripple imbalance, and preregulator waveforms. | R70, R82 |
| Q90, Q91, Q92 | Crowbar. | Crowbar action, trip voltage, voltage across series regulator when tripped. | A5R125 |
| A4Q103 thru A4Q108 | Series regulator. | CV/CC load regulation. | --- |
| A42CR1 | Preregulator. | Output voltage. | R70 |
| CR1, CR20 | CV/CC OR gate. | CV/CC crossover operation. | --- |
| CR2, CR3 | Voltage clamp circuit. | CC load regulation. | --- |
| CR4, CR40, CR41 | Temperature stabilizing diodes. | Temperature coefficient. | --- |
| CR5, CR6, CR21 | Limiting diodes. | CV/CC load regulation. | --- |
| CR7, CR60, CR61, CR62 | Reference regulator. | +12.4V, +6.2V, and -6.2V reference voltages. | --- |
| CR35, CR36, CR37 | Turn-on circuit. | Preregulator control turn-on delay. | --- |
| CR43, CR45 thru CR49, CR53, CR54 | Bias supply. | +11V, -4V, and -2.4V bias voltages. | --- |
| CR44, CR50 | Driver and error amplifier. | Down-programming speed, CV/CC load regulation. | --- |

Table 5-8. Checks and Adjustments After Replacement of Semiconductor Devices (Continued)

| REFERANCE | FUNCTION OR CIRCUIT | CHECK | ADJUST |
|----------------------------------|--------------------------------------|--|-------------|
| CR70, CR71 | Overvoltage limit circuit. | Limiting action and level. | --- |
| CR72, thru CR84, CR88 | Preregulator control. | Output voltage, ripple imbalance, and preregulator waveforms. | R70, R82 |
| CR90 thru CR93, A4CR108, A4CR110 | Crowbar. | Trip voltage, voltage across series regulator when crowbar is tripped, supply stability. | R95, A5R125 |
| A4CR101 thru A4CR104 | Main rectifier diodes. | Voltage across main filter capacitors. | --- |
| A4CR105 and A4CR106 | Reverse voltage protection. | Output voltage. | --- |
| VR1 | Voltage clamp circuit. | CC load regulation. | --- |
| VR40 | Mixer amplifier stabilization diode. | CV transient response. | R47 |
| VR60, VR61 | Reference regulator. | +6.2V and -6.2V reference voltages. | --- |
| VR90 | Crowbar. | Trip voltage. | R95, A5R125 |

5-73 ADJUSTMENT AND CALIBRATION

5-74 Adjustment and calibration may be required after performance testing, troubleshooting, or repair and replacement. Perform only those adjustments that affect the operation of the faulty circuit and no others.

5-75 METER ZERO

5-76 The meter pointer must rest on the zero calibration mark on the meter scale when the instrument is at normal operating temperature, resting in its normal operating position, and turned off.

To zero set the meter proceed as follows:

- a. Connect load resistor of value shown in Figure 5-2.
- b. Turn on instrument and allow it to come up to normal operating temperature (about 30 minutes).
- c. Turn instrument off. Wait one minute for power supply capacitors to discharge completely.
- d. Insert sharp pointed object (pen point or awl) into small indentation near top of round black plastic disc located directly below meter face.
- e. Rotate plastic disc clockwise until meter reads zero, then rotate counterclockwise

slightly in order to free adjustment screw from meter suspension. Pointer should not move during latter part of adjustment.

5-77 VOLTMETER CALIBRATION

5-78 To calibrate the voltmeter, proceed as follows:

- a. Connect differential voltmeter across supply, observing correct polarity.
- b. Turn on supply and adjust VOLTAGE controls until differential voltmeter reads exactly the maximum rated output voltage.
- c. Adjust R106 until front panel voltmeter also indicates exactly the maximum rated output voltage.

5-79 AMMETER CALIBRATION

5-80 To calibrate the ammeter, proceed as follows:

- a. Connect test setup shown in Figure 5-8.
- b. Turn VOLTAGE controls fully clockwise.
- c. Turn on supply and adjust CURRENT controls until differential voltmeter reads 0.5Vdc.
- d. Adjust R101 until front panel ammeter indicates exactly maximum rated output current.

5-81 CONSTANT VOLTAGE PROGRAMMING CURRENT

5-82 Zero Output Voltage. To calibrate the zero voltage programming accuracy, proceed as directed in Paragraphs 5-83, 5-84, 5-85, or 5-86, whichever applies to your particular instrument.

5-83 Standard instrument with resistance or unity-gain voltage programming.

- a. Connect differential voltmeter between +OUT and -OUT bus bars.
- b. If unit is to be used in local programming mode, turn VOLTAGE controls fully counterclockwise. If unit is to be used in remote programming mode, connect remote programming setup (Figure 3-3 or 3-4) and adjust remote resistance or voltage to zero (minimum).
- c. Connect decade resistance box between pads of position marked for resistor R110 in "ZERO ADJUST" section of main circuit board (points "A" and "B" in Figure 5-10; also see Figure 7-10).
- d. Rotate CURRENT controls fully clockwise and turn on supply.
- e. Adjust decade resistance box until differential voltmeter reads exactly zero volts.
- f. Replace decade resistance box with fixed, metal film, 1%, 1/4 or 1/8 watt resistor of same value.

5-84 Standard instrument with non-unity gain voltage programming.

- a. Perform Steps (a) and (b) in Paragraph 5-83.
- b. Solder jumper between "wiper" pad and "+12.4V" pad of position marked for potentiometer R112 in "ZERO ADJUST" section of main circuit board (points "C" and "D" in Figure 5-10; also see Figure 7-10).
- c. Connect decade resistance box between pads marked for resistor R111 in "ZERO ADJUST" section of main circuit board (points "E" and "F" in Figure 5-10; also see Figure 7-10).
- d. Perform Steps (d) through (f) in Paragraph 5-83.

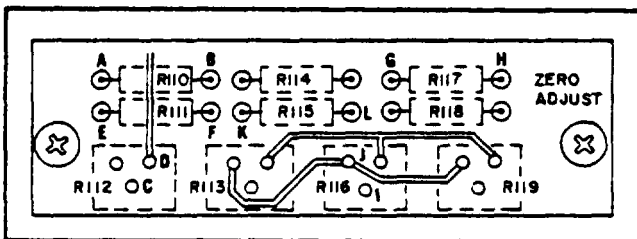


Figure 5-10. "ZERO ADJUST" Section of Main circuit Board

5-85 Option 020 with resistance or unity-gain

voltage programming.

- a. Perform Steps (a) and (b) in Paragraph 5-83.
 - b. Rotate CURRENT controls fully clockwise and turn on supply.
 - c. If reading on differential 1 voltmeter is not exactly zero volts, adjust potentiometer R113 (labeled "VOLTAGE ZERO" and accessible through hole in rear panel) until reading is exactly zero.
- 5-86 Option 020 with non-unity gain voltage programming.
- a. Perform Steps (a) and (b) in Paragraph 5-83.
 - b. Rotate CURRENT controls fully clockwise and turn on supply.
 - c. If reading on differential voltmeter is not exactly zero volts, adjust potentiometer R112 (labeled "VOLTAGE PROG" and accessible through hole in rear panel) until reading is exactly zero.

5-87 CV Programming Accuracy. To calibrate the constant voltage programming current, proceed as directed in Paragraphs 5-88 or 5-89, whichever applies to your particular instrument.

5-88 Standard instrument.

- a. Connect 0.1%, 1/8 watt resistor of value shown below between terminals -S and A3 on rear barrier strip.

| Model | Value |
|-------|-------------|
| 62596 | 2K Ω |
| 62606 | 2K Ω |
| 62616 | 4K Ω |
| 6268B | 8K Ω |
| 62696 | 8K Ω |

- b. Disconnect strap between terminals A1 and A2 on rear barrier strip.
- c. Connect differential voltmeter between +OUT and -OUT bus bars.
- d. Connect decade resistance box in place of R3 (mounted on standoffs on main circuit board; see Figure 7-10).
- e. Rotate CURRENT controls fully clockwise and turn on supply.
- f. Adjust decade resistance box until differential voltmeter indicates exactly maximum rated output voltage.
- g. Replace decade resistance box with fixed, composition, 5%, 1/2 watt resistor of same value.

5-89 Option 020.

- a. Perform Steps (a) through (c) in Paragraph 5-88.
- b. Rotate CURRENT controls fully clockwise and turn on supply.
- c. Adjust potentiometer R112 (labeled "VOLTAGE PROG" and accessible through hole in rear panel) until differential voltmeter indicates

exactly maximum rated output voltage.

5-90 CONSTANT CURRENT PROGRAMMING
CURRENT

5-91 Zero Current OutPut. To calibrate the zero current programming accuracy, proceed as directed in Paragraphs 5-92, 5-93, 5-94, or 5-95, whichever applies to your particular instrument.

5-92 Standard instrument with resistance or unity-gain voltage programming.

- a. Connect test setup shown in Figure 5-8.
- b. If unit is to be used in local programming mode, turn CURRENT controls fully counterclockwise. If unit is to be used in remote programming mode, connect remote programming setup (Figure 3-6 or 3-7) and adjust remote resistance or voltage to zero. (minimum).
- c. Connect decade resistance box between pads of position marked for resistor R117 in "ZERO ADJUST" section of main circuit board (points "G" and "H" in Figure 5-10; also see Figure 7-10).
- d. Rotate VOLTAGE controls fully clockwise and turn on supply.
- e. Adjust decade resistance box until differential voltmeter reads exactly zero volts.
- f. Replace decade resistance box with fixed, metal film, 1%, 1/4 or 1/8 watt resistor of same value.

5-93 Standard instrument with non-unity gain voltage programming.

- a. Perform Steps (a) and (b) in Paragraph 5-92.
- b. Solder jumper between "wiper" pad and "-6.2V" pad of position marked for potentiometer R116 in "ZERO ADJUST" section of main circuit board (points "I" and "J" in Figure 5-10; also see Figure 7-10).
- c. Connect decade resistance box between pads marked for resistor R115 in "ZERO ADJUST" section of main circuit board (points "K" and "L" in Figure 5-1 O; also see Figure 7-10).
- d. Perform Steps (d) through (f) in Paragraph 5-92.

5-94 Option 021 with resistance or unity-gain voltage programming.

- a. Perform Steps (a) and (b) in Paragraph 5-92.
- b. Rotate VOLTAGE controls fully clockwise and turn on supply.
- c. If reading on differential voltmeter is not exactly zero volts, adjust potentiometer R119 (labeled "CURRENT ZERO" and accessible through hole in rear panel) until reading is exactly zero.

5-95 Option 021 with non-unity gain voltage programming.

- a. Perform Steps (a) and (b) in Paragraph 5-92.

b. Rotate VOLTAGE controls fully clockwise and turn on supply.

c. If reading on differential voltmeter is not exactly zero volts, adjust potentiometer R116 (labeled "CURRENT PROG" and accessible through hole in rear panel) until reading is exactly zero.

5-96 CC Programming Accuracy. To calibrate the constant current programming current, proceed as directed in Paragraphs 5-97 or 5-98, whichever applies to your particular instrument.

5-97 Standard instrument.

- a. Connect test setup shown in Figure 5-8.
- b. Disconnect strap between terminals A5 and A6 on rear barrier strip.
- c. Connect 0.1%, 1/8 watt resistor of value shown below between terminals A4 and A6 on rear barrier strip.

| <u>Mode 1</u> | <u>Value</u> |
|---------------|--------------|
| 6259B | 200 Ω |
| 6260B | 200 Ω |
| 6261B | 200 Ω |
| 6268B | 180 Ω |
| 6269B | 200 Ω |

- d. Connect decade resistance box in place of R30 (mounted on standoffs on main circuit board; see Figure 7-1 O).
- e. Rotate VOLTAGE controls fully clockwise and turn on supply.
- f. Adjust decade resistance box until differential voltmeter indicates exactly 0.5Vdc.
- g. Replace decade resistance box with fixed, composition, 5%, 1/2 watt resistor of same value.

5-98 Option 021.

- a. Perform Steps (a) through (c) in Paragraph 5-97.
- b. Rotate VOLTAGE controls fully clockwise and turn on supply.
- c. Adjust potentiometer R116 (labeled "CURRENT PROG" and accessible through hole in rear panel) until differential voltmeter indicates exactly 0.5Vdc.

5-99 TRANSIENT RECOVERY TIME

5-100 To adjust the transient response, proceed as follows:

- a. Connect test setup shown in Figure 5-5.
- b. Repeat Steps (a) through (k) as outlined in Paragraph 5-32.
- c. Adjust R47 until transient response is within specification as shown in Figure 5-6.

5-101 RIPPLE IMBALANCE (50 and 60Hz Operation)

5-102 This procedure ensures balanced operation of the triac by ensuring that the conduction time

is equal in either direction (within 25%). To check for imbalance, proceed as follows:

a. Connect appropriate load resistance across rear output terminals of supply as follows:

| <u>MODEL</u> | <u>Load Resistance</u> |
|--------------|------------------------|
| 6259B | 0.2 Ω 500W, ±5% |
| 6260B | 0.1 Ω, 1000W, ±5% |
| 62610 | 0.4 Ω, 1000W, ±5% |
| 6268B | 1.33 Ω, 1200W, ±5% |
| 6269B | 0.8 Ω, 2000W, ±5% |

b. Connect variable auto transformer between input power source and power supply power input; adjust auto transformer for 230Vac input to supply.

c. Connect oscilloscope (ac coupled) between TP102 and TP103 (across series regulator).

d. Turn CURRENT controls fully clockwise, turn on supply, and adjust VOLTAGE controls for maximum rated output voltage.

e. Adjust oscilloscope to observe 120Hz sawtooth waveform. Peak amplitudes of adjacent sawtooth peaks should be within 25% of each other.

f. If amplitude difference is greater than 25%, turn off supply and replace R82 with decade resistance.

g. Turn on supply and adjust decade resistance to reduce imbalance to within 25%.

h. Vary input line voltage from 207 to 253V ac and insure that imbalance does not exist anywhere within this range. Replace decade box with equivalent resistor.

NOTE

If imbalance cannot be reduced to within 25%, check capacitors C70 and C72, and diodes CR79 through CR84. If these components test satisfactorily, the problem may be due to distortion present on the ac power line.

5-103 PREREGULATOR TRACKING (50 and 60Hz Operation)

5-104 To adjust the voltage drop across the series regulator, proceed as follows:

a. Connect appropriate load resistance across rear output terminals of supply as follows:

| <u>Model</u> | <u>Load Resistance</u> |
|--------------|------------------------|
| 62S9B | 0.2 Ω 500W, ±5% |
| 6260B | 0.1 Ω, 1000W, ±5% |
| 6261B | 0.4 Ω, 1000W, ±5% |
| 6268B | 1.33 Ω, 1200W, ±5% |
| 6269B | 0.8 Ω, 2000W, ±5% |

b. Connect variable auto transformer between input power source and power supply power input adjust auto transformer for 230Vac input to supply.

Connect dc voltmeter across series regulator (TP102 and TP103).

d. Turn CURRENT controls fully clockwise.

e. To check voltage drop across regulator at low output voltage, short circuit load resistor and adjust VOLTAGE controls for maximum rated output current on front pane 1 ammeter.

f. Adjust R70 until voltmeter reads 3.5± 0.3Vdc.

g. To check the voltage drop at high output voltage, remove short circuit from across load resistor and adjust VOLTAGE controls for maximum rated output current. Voltmeter reading should again be 3.5 ± 0.3Vdc.

h. Vary input line voltage from 207 to 253V ac. Voltmeter reading should vary between 3.2 (minimum) and 3.8 (maximum) volts. If reading exceeds this range, proceed with Step (i).

i. Replace resistor R77 with decade resistance box. Vary input line voltage between 207 and 253Vac while adjusting decade box until voltmeter reading variation is minimal and within range of 3.2 to 3.8Vdc. Replace decade box with equivalent resistor.

5-105 50Hz OPERATION (Option 005)

5-106 If the supply is to be operated from a 50Hz ac input, the following modifications are required:

a. Replace resistor R82 with 240 Ω, ±5%, 1/2 watt resistor, and check ripple imbalance as described in Steps (a) through (e) of Paragraph 5-101.

b. Perform preregulator tracking adjustment described in Paragraph 5-103.

5-107 CROWBAR TRIP VOLTAGE

5-108 To adjust A5R125 (OVERVOLTAGE ADJUST), proceed as follows:

a. Turn screwdriver adjustment, A5R125, fully clockwise.

b. Turn on supply.

c. Set voltage output to desired trip voltage.

d. Turn A5R125 slowly counterclockwise until the crowbar is tripped (meter falls to zero volts).

e. Turn off supply and turn down output voltage.

f. Turn on supply and set desired operating output voltage.

NOTE

It is recommended that the crowbar be set to no less than 5% of the desired output voltage plus two volts, in order to avoid false tripping of the crowbar. However, if occasional crowbar tripping on unloading can be tolerated, the crowbar trip point can

TM 11-6625-2958-14&P
be set much closer to the operating
output voltage of the supply.

| <u>Model</u> | <u>Value</u> |
|--------------|--------------|
| 6261B | 23Vdc |
| 6268B | 45Vdc |
| 6269B | 45Vdc |

5-109 MAXIMUM CROWBAR TRIP VOLTAGE

5-110 To adjust the maximum voltage at which the crowbar trips, proceed as follows:

- a. Rotate A5R125 (OVERVOLTAGE ADJUST) and CURRENT controls fully clockwise.
- b. Disconnect either end of R72 (TP70 or TP71; see Figure 7-10).
- c. Connect decade resistance box in place of R95 (mounted on standoffs on main circuit board).
- d. Turn on supply and adjust VOLTAGE controls for output voltage shown below:

| <u>Model</u> | <u>Value</u> |
|--------------|--------------|
| 6259B | 12Vdc |
| 6260B | 12Vdc |

e. Adjust decade resistance box until crowbar trips (amber OVERVOLTAGE lamp lights up).

f. Replace decade resistance with appropriate value resistor in R95 position and reconnect resistor R72. Maximum crowbar trip voltage is now set at voltage given in Step (d).

5-111 CROWBAR DISABLEMENT

5-112 To disable the crowbar completely, disconnect either end of R98 (TP97 or TP98). This resistor is mounted on the main circuit board (see Figure 7-10).

**SECTION VI
REPLACEABLE PARTS**

6-1 INTRODUCTION

6-2 This section contains information for ordering replacement parts. Table 6-4 lists parts in alpha-numeric order by reference designators and provides the following information:

- a. Reference Designators. Refer to Table 6-1.
- b. Description. Refer to Table 6-2 for abbreviations.
- c. Total Quantity (TQ). Given only the first time the part number is listed except in instruments containing many sub-modular assemblies, in which case the TQ appears the first time the part number is listed in each assembly.
- d. Manufacturer's Part Number or Type.
- e. Manufacturer's Federal Supply Code Number. Refer to Table 6-3 for manufacturer's name and address.
- f. Hewlett-Packard Part Number.
- g. Recommended Spare Parts Quantity (RS) for complete maintenance of one instrument during one year of isolated service.
- h. Parts not identified by a reference designator are listed at the end of Table 6-4 under Mechanical and/or Miscellaneous. The former consists of parts belonging to and grouped by individual assemblies; the latter consists of all parts not immediately associated with an assembly.

6-3 ORDERING INFORMATION

6-4 Table 6-5 is a part number-national stock number cross reference index. The items on this cross reference index are source coded PAHZZ. Items that do not appear on this cross reference index are source coded XD and shall be procured using the FSCM and the NPN at the nearest wholesale level.

Table 6-1. Reference Designators

| | |
|-------------------------------|-------------------|
| A = assembly | E = miscellaneous |
| B = blower (fan) | electronic part |
| C = capacitor | F = fuse |
| CB = circuit breaker | J = jack, jumper |
| CR = diode | K = relay |
| DS = device, signaling (lamp) | L = inductor |
| | M = meter |

Table 6-1. Reference Designators (Continued)

| | |
|----------------------|-----------------------------------|
| P = plug | v = vacuum tube, |
| Q = transistor | neon bulb, |
| R = resistor | photocell, etc. |
| S = switch | VR = zener diode |
| T = transformer | x = socket |
| TB = terminal block | z = integrated circuit or network |
| TS = therms 1 switch | |

Table 6-2. Description Abbreviations

| | |
|----------------------------------|----------------------------------|
| A = ampere | mfr = manufacturer |
| ac = alternating current | mod. = modular or modified |
| assy. = assembly | mtg = mounting |
| bd = board | n = nano = 10 ⁻⁹ |
| bkt = bracket | NC = normally closed |
| °C = degree Centigrade | NO = normally open |
| cd = card | NP = nickel-plated |
| coef = coefficient | W = ohm |
| comp = composition | obd = order by description |
| CRT = cathode-ray tube | OD = outside diameter |
| CT = center-tapped | p = pico = 10 ⁻¹² |
| dc = direct current | P.C. = printed circuit |
| DPDT = double pole, double throw | pot. = potentiometer |
| DPST = double pole, single throw | P-P = peak-to-peak |
| elect = electrolytic | ppm = parts per million |
| encap = encapsulated | pvr = peak reverse voltage |
| F = farad | rect = rectifier |
| OF = degree Fahrenheit | rms = root mean square |
| fxd = fixed | \$1 = silicon |
| Ge = germanium | SPDT = single pole, double throw |
| H = Henry | SPST = single pole, single throw |
| Hz = Hertz | SS = small signal |
| IC = integrated circuit | T = slow-blow |
| ID = inside diameter | tan. = tantalum |
| incnd = incandescent | T1 = titanium |
| k = kilo = 10 ³ | V = volt |
| m = mini = 10 ⁻³ | var = variable |
| M = mega = 10 ⁶ | ww = wirewound |
| μ = micro = 10 ⁻⁶ | w = Watt |
| met. = metal | |

Table 6-3. Code List of Manufacturers

| CODE NO. | MANUFACTURER | ADDRESS |
|----------|---|----------------------------------|
| 00629 | EBY Sales Co. , Inc. | Jamaica, N. Y. |
| 00656 | Aerovox Corp. | New Bedford, Mass. |
| 00853 | Sangamo Electric Co. | |
| | S. Carolina Div. | Pickens, S. C. |
| 01121 | Allen Bradley Co. | Milwaukee, Wis. |
| 01255 | Litton Industries, Inc. | Beverly Hills, Calif. |
| 01281 | TRW Semiconductors, Inc. | Lawndale, Calif. |
| 01295 | Texas Instruments, Inc. | |
| | Semiconductor-Components Div. | Dallas, Texas |
| 01686 | RCL Electronics, Inc. | Manchester, N. H. |
| 01930 | Amerock Corp. | Rockford, Ill. |
| 02107 | Sparta Mfg. Co. | Dover, Ohio |
| 02114 | Ferroxcube Corp. | Saugerties, N. Y. |
| 02606 | Fenwal Laboratories | Morton Grove, Ill. |
| 02660 | Amphenol Corp. | Broadview, Ill. |
| 02735 | Radio Corp. of America, Solid State and Receiving Tube Div. | Somerville, N. J. |
| 03508 | G. E. Semiconductor Products Dept. | Syracuse, N. Y. |
| 03797 | Eldema Corp. | Compton, Calif. |
| 03877 | Transitron Electronic Corp. | Wakefield, Mass. |
| 03888 | Pyrofilm Resistor Co. Inc. | |
| | | Cedar Knolls, N. J. |
| 04009 | Arrow, Hart and Hegeman Electric Co. | Hartford, Conn. |
| 04072 | ADC Electronics, Inc. | Harbor City, Calif. |
| 04213 | Caddell & Bums Mfg. Co. Inc. | Mineola, N. Y. |
| 04404 | *Hewlett-Packard Co. | Palo Alto Div, Palo Alto, Calif. |
| 04713 | Motorola Semiconductor Prod. Inc. | Phoenix, Arizona |
| 05277 | Westinghouse Electric Corp. | |
| | Semiconductor Dept. | Youngwood, Pa. |
| 05347 | Ultronix, Inc. | Grand Junction, Colo. |
| 05820 | Wakefield Engr. Inc. | Wakefield, Mass. |
| 06001 | General Elect. Co. Electronic Capacitor & Battery Dept. | Irmo, S. C. |
| 06004 | Bassik Div. Stewart-Warner Corp. | Bridgeport, Conn. |
| 06486 | IRC Div. of TRW Inc. | |
| | Semiconductor Plant | Lynn, Mass. |
| 06540 | Amatom Electronic Hardware Co. Inc. | New Rochelle, N. Y. |
| 06555 | Beede Electrical Instrument Co. | Penacook, N. H. |
| 06666 | General Devices Co. Inc. | Indianapolis, Ind. |
| 06751 | Semcor Div. Components, Inc. | Phoenix, Arizona |
| 06776 | Robinson Nugent, Inc. | New Albany, Ind. |
| 06812 | Torrington Mfg. Co. , West Div. | Van Nuys, Calif. |
| 07137 | Transistor Electronics Corp. | Minneapolis, Minn. |

| CODE NO. | MANUFACTURER | ADDRESS |
|----------|---|-----------------------------------|
| 07138 | Westinghouse Electric Corp. | |
| | Electronic Tube Div. | Elmira, N. Y. |
| 07263 | Fairchild Camera and Instrument Corp. Semiconductor Div. | Mountain View, Calif. |
| 07387 | Birtcher Corp.,The | Los Angeles, Calif. |
| 07397 | Sylvania Electric Prod. Inc. | |
| | Sylvania Electronic Systems Western Div. | Mountain View, Calif. |
| 07716 | IRC Div. of TRW Inc. | Burlington Plant Burlington, Iowa |
| 07910 | Continental Device Corp. | Hawthorne, Calif. |
| 07933 | Raytheon Co. Components Div. Semiconductor Operation | Mountain View, Calif. |
| 08484 | Breeze Corporations, Inc. | Union, N. J. |
| 08530 | Reliance Mica Corp. | Brooklyn, N. Y. |
| 08717 | Sloan Company, The | Sun Valley, Calif. |
| 08730 | Vemaline Products Co. Inc. | Wyckoff, N. J. |
| 08806 | General Elect. Co. Miniature Lamp Dept. | Cleveland, Ohio |
| 08863 | Nylomatic Corp. | Norrisville, Pa. |
| 08919 | RCH Supply Co. | Vernon, Calif. |
| 09021 | Airco Speer Electronic Components | Bradford, Pa. |
| 09182 | *Hewlett-Packard Co. | New Jersey Div. Rockaway, N. J. |
| 09213 | General Elect. Co. Semiconductor Prod. Dept. | Buffalo, N. Y. |
| 09214 | General Elect. Co. Semiconductor Prod. Dept. | Auburn, N. Y. |
| 09353 | C & K Components Inc. | Newton, Mass. |
| 09922 | Burdy Corp. | Norwalk, Conn. |
| 11115 | Wagner Electric Corp. | |
| | Tung-Sol Div. | Bloomfield, N. J. |
| 11236 | CTS of Berne, Inc. | Berne, Ind. |
| 11237 | Chicago Telephone of Cal. Inc. | So. Pasadena, Calif. |
| 11502 | IRC Div. of TRW Inc. | Boone Plant Boone, N.C. |
| 11711 | General Instrument Corp Rectifier Div. | Newark, N. J. |
| 12136 | Philadelphia Handle Co. Inc. | Camden, N. J. |
| 12615 | U. S. Terminals, Inc. | Cincinnati, Ohio |
| 12617 | Hamlin Inc. | Lake Mills, Wisconsin |
| 12697 | Clarostat Mfg. Co. Inc. | Dover, N. H. |
| 13103 | Thermally Co. | Dallas, Texas |
| 14493 | *Hewlett-Packard Co. | Loveland Div. Loveland, Colo. |
| 14655 | Comell-Dubilier Electronics Div. Federal Pacific Electric Co. | Newark, N. J. |
| 14936 | General Instrument Corp. Semiconductor Prod. Group | Hicksville, N. Y. |
| 15801 | Fenwal Elect. | Framingham, Mass. |
| 16299 | Corning Glass Works, Electronic Components Div. | Raleigh, N. C. |

*Use Code 28480 assigned to Hewlett-Packard Co. , Palo Alto, California

Table 6-3. Code List of Manufacturers (Continued)

TM 11-6625-2958-14&P

| CODE NO. | MANUFACTURER | ADDRESS |
|----------|---|---|
| 16758 | Delco Radio Div. of General Motors Corp. | Kokomo, I.nd. |
| 17545 | Atlantic Semiconductors, Inc. | Asbury Park, N. J. |
| 17803 | Fairchild Camera and Instrument Corp Semiconductor Div. | Transducer Plant Mountain View, Calif. |
| 17870 | Daven Div. Thomas A. Edison Industries McGraw-Edison Co. | Orange, N. J. |
| 18324 | Slngetics Corp. | Sunnyvale, Calif. |
| 19315 | Bendix Corp. The Navigation and Control Div. | Teterboro, N. J. |
| 19701 | Electra/Midland Corp. | Mineral Wells, Texas |
| 21520 | Fansteel Metallurgical Corp. | No. Chicago, Ill. |
| 22229 | Union Carbide Corp. Electronics Div. | Mountain View, Calif. |
| 22753 | UID Electronics Corp. | Hollywood, Fla. |
| 23936 | Pamotor, Inc. | Pampa, Texas |
| 24446 | General Electric Co. | Schenectady, N.Y. |
| 24455 | General Electric Co. Lamp Div. of Con- sumer Prod. Group | Nela Park, Cleveland, Ohio |
| 24655 | General Radio Co. | West Concord, Mass. |
| 24681 | LTV Electrosystems Inc Memcor/Com- ponents Operations | Huntington, Ind. |
| 26982 | Dynacool Mfg. Co. Inc. Saugerties, N.Y. | |
| 27014 | National Semiconductor Corp. | Santa Clara, Calif. |
| 28480 | Hewlett-Packard Co. | Palo Alto, Calif. |
| 28520 | Heyman Mfg. Co. | Kenilworth, N. J. |
| 28875 | IMC Magnetics Corp. | |
| | New Hampshire Div. | Rochester, N. H. |
| 31514 | SAE Advance Packaging, Inc. | Santa Ana, Calif. |
| 31827 | Budwig Mfg. Co. | Ramona, Calif. |
| 33173 | G. E. Co. Tube Dept. | Owensboro, Ky. |
| 35434 | Lectroh, Inc. | Chicago, Ill. |
| 37942 | P. R. Mallory & Co. Inc. | Indianapolis, Ind. |
| 42190 | Muter Co. | Chicago, 111. |
| 43334 | New Departure-Hyatt Bearings Div. | |
| | General Motors Corp. | Sanclusky, Ohio |
| 44655 | Ohmite Manufacturing Co. | Skokie, 111. |
| 46384 | Penn Engr. and Mfg. Corp. | Doylestown, Pa. |
| 47904 | Polaroid Corp. | Cambridge, Mass. |
| 49956 | Raytheon Co. | Lexington, Mass. |
| 55026 | Simpson Electric Co. Div. of American Gage and Machine Co. | Chicago, 111. |
| 56289 | Sprague Electric Co. | North Adams, Mass. |
| 58474 | Superior Electric Co. | Bristol, Corm. |
| 58849 | Syntron Div. of FMC Corp. | |
| | | Homer City, Pa. |
| 59730 | Thomas and Betts Co. | Philadelphia, Pa. |
| 61637 | Union Carbide Corp. | New York, N. Y. |
| 63743 | Ward Leonard Electric Co. | Mt. Vernon, N. Y. |

| CODE NO. | MANUFACTURE R | ADDRESS |
|----------|--|-----------------------|
| 70563 | Amperite Co. Inc. | Union City, N. J. |
| 70901 | Beemer Engrg. Co. | Fort Washington, Pa. |
| 70903 | Belden Corp. | Chicago, Ill. |
| 71218 | Bud Radio, Inc. | Willoughby, Ohio |
| 71279 | Cambridge Thermionic Corp. | Cambridge, Mass. |
| 71400 | Bussmann Mfg. Div. of McGraw & Edison Co. | St. Louis, Mo. |
| 71450 | CTS Corp. | Elkhart, Ind. |
| 71468 | I. T. T. Cannon Electric Inc. | Los Angeles, Calif. |
| 71590 | Globe-Union Inc. | |
| | Centralab Div. | Milwaukee, Wis. |
| 71700 | General Cable Corp. Cornish Wire Co. Div. | Williams town, Mass. |
| 71707 | Coto Coil Co. Inc. | Providence, R. 1. |
| 71744 | Chicago Miniature Lamp Works | Chicago, Ill. |
| 71785 | Cinch Mfg. Co. and Howard B. Jones Div. | Chicago, Ill. |
| 71984 | Dow Coming Corp. | Midland, Mich. |
| 72136 | Electro Motive Mfg. Co. Inc. | Willimantic, Corm. |
| 72619 | Dialight Corp. | Brooklyn, N. Y. |
| 72699 | General Instrument Corp. | Newark, N. J. |
| 72765 | Drake Mfg. Co. | Harwood Heights, Ill. |
| 72962 | Elastic Stop Nut Div. of Amerace Esna Corp. | Union, N. J. |
| 72982 | Erie Technological Products Inc. | Erie, Pa. |
| 73096 | Hart Mfg. Co. | Hartford, Corm. |
| 73138 | Beckman Instruments Inc. | |
| | Helipot Div. | Fullerton, Calif. |
| 73168 | Fenwal, Inc. | Ashland, Mass. |
| 73293 | Hughes Aircraft Co. Elecmon Dynamics Div. | Torrance, Calif. |
| 73445 | Amperex Electronic Corp. | Hicksville, N. Y. |
| 73506 | Bradley Semiconductor Corp. | New Haven, Corm. |
| 73559 | Carling Electric, Inc. | Hartford, Corm. |
| 73734 | Federal Screw Products, Inc. | Chicago, Ill. |
| 74193 | Heinemann Electric Co. | Trenton, N. J. |
| 74545 | Hubbell Harvey Inc. | Bridgeport, Corm. |
| 74868 | Amphenol Corp. Amphenol RF Div. | Danbury, Corm. |
| | | Waseca, Minn. |
| 74970 | E. F. Johnson Co. | Philadelphla, Pa. |
| 75042 | IRC Div. of TRW, Inc. | |
| 75183 | I Howard B. Jones Div. of Cinch Mfg. Corp. | New York, N. Y. |
| 75376 | Kurz and Kasch, Inc. | Dayton, Ohio |
| 75382 | Kilka Electric Corp. | Mt. Vernon, N. Y. |
| 75915 | Littlefuse, Inc. | Des Plaines, Ill. |
| 76381 | Minnesota Mining and Mfg. Co. | |
| | | St. Paul, Minn. |
| 76385 | Minor Rubber Co. Inc. | Bloomfield, N.J. |
| 76487 | James Millen Mfg. Co. Inc. | |
| | | Maiden, Mass. |
| 76493 | J. W. Miller Co. | Compton, Callf. |

I Use Code 71785 assigned to Cinch Mfg. Co. , Chicago, Ill.

| CODE NO. | MANUFACTURER | ADDRESS |
|---|---|---|
| 76530 76854 77068 | Cinch Oak Mfg. Co. Div. of Oak Electro/Netics Corp. | City of Industry, Calif. Crystal Lake, Ill. |
| 77122 77147 77221 | Bendix Corp. , Electroynamics Div. Palnut Co. Patton -Mac Guyer Co. | No. Hollywood, Calif. Mountainside, N. J. Providence, R. I. |
| 77252 77342 77630 | Phaostron Instrument and Electronic Co. Philadelphia Steel and Wire Corp. American Machine and Foundry Co. | South Pasadena, Calif. Philadelphia, Pa. Potter and Brumfield Div. Princeton, Ind. |
| 77764 78189 | TRW Electronic Components Div. Resistance Products Co. | Camden, N. J. Harrisburg, Pa. |
| 78452 78488 78526 | Illinois Tool Works Inc. Shakeproof Div. Everlock Chicago, Inc. Stackpole Carbon Co. | Elgin, Ill. Chicago, 111. St. Marys, Pa. |
| 78553 78584 79136 79307 79727 | Stanwyck Winding Div. San Fernando Electric Mfg. Co. Inc. Tinnerman Products, Inc. Stewart Stamping Corp. Waldes Kohinoor, Inc. | Newburgh, N.Y. Cleveland, Ohio Yonkers, N. Y. L.I.C., N.Y. |
| 79963 80031 | Whitehead Metals Inc. Continental-Wirt Electronics Corp. Zierick Mfg. Co. | New York, N. Y. Philadelphia, Pa. Mt. Kisco, N.Y. |
| 80294 81042 | Mepco Div. of Sessions Clock Co. Bourns, Inc. Howard Industries Div. of Msl Ind. Inc. | Morristown, N. J. Riverside, Calif. Racine, Wise. |
| 81073 81483 | Grayhiil, Inc. International Rectifier Corp. | La Grange, Ill. El Segundo, Calif. |
| 81751 82099 | Columbus Electronics Corp. Goodyear Sundries & Mechanical Co. Inc. | Yonkers, N. Y. New York, N. Y. |
| 82142 82219 | Airco Speer Electronic Components Sylvania Electric Products Inc. | Du Bois, Pa. Electronic Tube Div. Receiving Tube Operations |
| 82389 82647 | Emporium, Pa. Switchcraft, Inc. Metals and Controls Inc. Control Products Group | Chicago, Ill. Chicago, Ill. Attleboro, Mass. |
| 82866 82877 82893 83058 83186 | Research Products Corp. Rotron Inc. Vector Electronic Co. Cam Fastener Co. Victory Engineering Corp. | Madison, Wis. Woodstock, N. Y. Glendale, Calif. Cambridge, Mass. Springfield, N. J. |
| 83298 83330 83385 83501 | Bendix Corp. Electric Power Div. Herman H. Smith, Inc. Central Screw Co. Gavitt Wire and Cable Div. of Amerace Esna Corp. | Eatontown, N, J. Brooklyn, N. Y. Chicago, Ill. Brookfield, Mass. |

| CODE NO. | MANUFACTURER | ADDRESS |
|---|--|--|
| 83508 83594 | Grant Pulley and Hardware Co. Burroughs Corp. Electronic Components Div. | West Nyack, N. Y. Plainfield, N.J. |
| 83835 83877 | U. S. Radium Corp. Yardeny Laboratoriss, Inc. | Morristown, N.J. New York, N.Y. |
| 84171 84411 86684 | Arco Electronics, Inc. TRW Capacitor Div. RCA Corp. Electronic Components | Great Neck, N.Y. Ogallala, Neb. Harrison, N. J. |
| 86838 87034 | Rummel Fibre Co. Marco & Oak Industries a Div. of Oak Electro/netics Corp. | Newark, N, J. Anaheim; Calif. |
| 87216 87585 | Philco Corp. Lansdale Div. Stockwell Rubber Co. Inc. | Lansdale, Pa. Philadelphia, Pa. |
| 87929 88140 | Tower-Olschan Corp. Cutler-Hammer Inc. Power Distribution and Control Div. Lincoln Plant | Bridgeport, Corm. Lincoln, Ill. |
| 88245 90634 90763 91345 | Litton Precision Products Inc, USECO Div. Litton Industries Gulton Industries Inc. United-Car Inc. Miller Dial and Nameplate Co. | Van Nuys, Calif. Metuchen, N,J. Chicago, Ill. El Monte, Calif. |
| 91418 91506 91637 91662 91929 | Radio Materials Co. Augat, Inc. Dale Electronics, Inc. Elco Corp. Honeywell Inc. Div. Micro Switch | Chicago, Ill. Attleboro, Mass. Columbus, Neb. Willow Grove, Pa. Freeport, Ill. |
| 92825 93332 | Whitso, Inc. Sylvania Electric Prod. Inc. Semi- conductor Prod. Div. | Schiller Pk. , Ill. Woburn, Mass. |
| 93410 94144 94154 | Essex Wire Corp. Stemco Controls Div. Raytheon Co. Components Div. Ind. Components Oper. Wagner Electric Corp. | Mansfield, Ohio Quincy, Mass. Livingston, N. J. |
| 94222 95263 95354 95712 | Tung-Sol Div. Southco Inc. Leecraft Mfg. Co. Inc. Method Mfg. Co. Rolling Meadows, Ill, Bendix Corp. Microwave Devices Div. | Lester, Pa. L.I.C., N.Y. Rolling Meadows, Ill, Franklin, Ind. |
| 35987 96791 97464 | Weckesser Co. Inc. Amphenol Corp. Amphenol Controls Div. Industrial Retaining Ring Co. | Chicago, Ill. Janesville, Wis. Irvington, N.J. |
| 97702 98291 98410 38978 | IMC Magnetics Corp. Eastern Div. Seaelectro Corp. ETC Inc. 'International Electronic Research Corp. | Westbury, N. Y. Mamaroneck, N. Y. Cleveland, Ohio Burbank, Calif. |
| 39934 | Renbrandt, Inc. | Boston, Mass. |

Table 6-4. Replaceable Parts

| REF. DESIG. | DESCRIPTION | TQ | MFR. PART NO. | MFR. CODE | HP PART NO. | RS |
|--------------------------------|---------------------------------|----|----------------|-----------|-------------|----|
| | AI MAIN PRINTED CIRCUIT BOARD | | | | | |
| A1 | Printed Circuit Board, Main | 1 | | 28480 | 5060-6189 | |
| C1 | fxd, mylar. 01μF 200V | 1 | | 28480 | 0160-0161 | 1 |
| C2 | fxd, elect. 5μF 50Vdc | 3 | 30D505G050BB2 | 56289 | 0180-0301 | 1 |
| C20 | fxd, elect. 68μF 15Vdc | 2 | 150D686X0015R2 | 56285 | 0180-1835 | 1 |
| C35 | fxd, elect. 20μF 50Vdc | 1 | 30 D206G050C02 | 56289 | 0180-0049 | 1 |
| C40, 41 | fxd, mylar .022μF 200Vdc | 2 | 192P22392 | 56289 | 0160-0162 | 1 |
| C44 | fxd, elect. 1,400μF 30Vdc | 1 | | 28480 | 0180-1860 | 1 |
| C60 | fxd, elect. 4.7μF 35Vdc | 1 | 150D475X9035B2 | 56289 | 0180-0100 | 1 |
| C61 | fxd, elect. 325μF 35Vdc | 1 | | 28480 | 0180-0332 | 1 |
| C70 | fxd, elect. 1μF 35Vdc | 1 | 150D105X9035A2 | 56289 | 0180-0291 | 1 |
| C71 | fxd, mylar .1μF 200Vdc | 2 | 192P10492 | 56289 | 0160-0168 | 1 |
| C72, 73 | fxd, elect. 5μF 50Vdc | | 30D505G050BB2 | 56289 | .0180-0301 | |
| C90 | fxd, mylar .1μF 200Vdc | | 192P10492 | 56289 | 0160-0168 | |
| CR1-7,20, 21,35-37 | Diode, Si. 200mA 200prv | 38 | | 28480 | 1901-0033 | 12 |
| CR40 | Stabistor | 1 | | 28480 | 1901-0460 | 1 |
| CR41,43,44 | Diode, Si 200mA 200prv | | | 28480 | 1901-0033 | |
| CR42,51,52 | NOT ASSIGNED | - | - | | | |
| CR45-50, 53,54 | Diode, Si. | 8 | 1N5059 | 03508 | 1901-0327 | 6 |
| CR60-62, 70-84,88, 90-93 | Diode, Si. 200mA 200prv | | | 28480 | 1901-0033 | |
| Q1 | SS PNP Si. | 6 | | 28480 | 1853-0099 | 6 |
| Q20, 40 | SS NPN Si. | 9 | | 28480 | 1854-0071 | 6 |
| Q41, 42 | SS PNP Si. | | | 28480 | 1853-0099 | |
| Q60 | SS PNP Si | 1 | | 28480 | 1853-0041 | 1 |
| Q61-Q63 | SS NPN Si. | | | 28480 | 1854-0071 | |
| Q70, 71 | SS PNP Si. | | | 28480 | 1853-0099 | |
| Q72, 73 | SS NPN Si. | | | 28480 | 1854-0071 | |
| Q90 | SS PNP Si. | | | 28480 | 1853-009-9 | |
| Q91, 92 | SS NPN Si. | | | 09182 | 1854-0071 | |
| R1 | fxd, met. film 1M Ω ±1% ¼ Ω | 1 | Type CEB T-O | 07716 | 0757-0344 | 1 |
| R2 | fxd, comp 160 Ω ±5% ½ Ω | 2 | EB-1615 | 01121 | 0686-1615 | 1 |
| R3 | fxd, comp (selected) +5% ½ Ω | 2 | Type EB (obd) | 01121 | - | 1 |
| R4 | fxd, ww 680 Ω ±5% 5W | 1 | 243E6815 | 56289 | 0811-2099 | 1 |
| R5 | fxd, ww 600 Ω ± 5 % 5 W | 1 | 243E6015 | 56289 | 0811-1869 | 1 |
| R6 | fxd, ww 1K Ω ± 5% 3W | 1 | 242E1025 | 56289 | 0813-0001 | 1 |
| R20 | fxd, met. film 330 Ω ±1% 1/8W | 1 | Type CEA T-0 | 07716 | 0698-5663 | 1 |
| R21 | fxd, met. film 200k Ω ±1% 1/8W | 1 | Type CEA T-0 | 07716 | 0757-0472 | 1 |
| R22 | fxd, met. film 196 Ω ±1% 1/8W | 1 | Type CEA T-0 | 07716 | 0698-3440 | 1 |
| R23 | fxd, met. film 1.21k Ω ±1% 1/8W | 2 | Type CEA T-0 | 07716 | 0757-0274 | 1 |
| R24 | fxd, met. film 7.5K Ω ±1% 1/8W | 3 | Type CEA T-0 | 07716 | 0757-0440 | 1 |
| R25 | fxd, met. film 5.49K Ω ±1% 1/8W | 2 | Type CEA T-0 | 077,16 | 0698-3382 | 1 |
| R26 | fxd, met. film 21.5K Ω ±1% 1/8W | 1 | Type CEA T-0 | 07716 | 0698-3430 | 1 |
| R27 | fxd, comp 3.9M Ω ±5% ½W | 1 | EB-3955 | 01121 | 0686-3955 | 1 |
| R28, 29 | fxd, comp 3.3 Ω ±5% ½W | 2 | EB-0335 | 01121 | 0686-0335 | 1 |
| R30 | fxd, comp (Selected) ±5% ½W | | Type EB (obd) | 01121 | - | |
| R31 | fxd, ww 2.6K Ω ±5% 3W | 1 | 242E2625 | 56289 | 0811-1808 | 1 |
| R35, 36 | fxd, comp 10k Ω ± 5 % ½ W | 2 | EB-1035 | 01121 | 0686-1035 | 1 |
| R37 | fxd, comp 180k Ω ± 5 % ½ W | 1 | EB-1845 | 01121 | 0686-1845 | 1 |
| R40 | fxd, comp 1.5K Ω ±5% ½W | 1 | EB-1525 | 01121 | 0686-1525 | 1 |

| REF. DESIG. | DESCRIPTION | TQ | MFR. PART NO. | MFR. CODE | HP PART NO. | RS |
|-------------|--|----|---------------|-----------|-------------|----|
| R41 | fxd, comp 510 $\Omega \pm 5\%$ $\frac{1}{2}W$ | 2 | EB-5115 | 01121 | 0686-5115 | 1 |
| R42 | fxd, met. film 560 $\Omega \pm 1\%$ $\frac{1}{4}W$ | 1 | Type CEB T-O | 07716 | 0698-5146 | 1 |
| R43 | fxd, ww 50 $\Omega \pm 5\%$ 5W | 2 | 243E5005 | 56289 | 0811-1854 | 1 |
| R44 | fxd, met. oxide 22 $\Omega \pm 5\%$ 2W | 1 | Type C42S | 16299 | 0698-3609 | 1 |
| R45 | fxd, comp 820 $\Omega \pm 5\%$ $\frac{1}{2}W$ | 1 | EB-8215 | 01121 | 0686-8215 | 1 |
| R46 | fxd, comp 1K $\Omega \pm 5\%$ $\frac{1}{2}W$ | 2 | EB-1025 | 01121 | 0686-1025 | 1 |
| R47 | var. ww 5k $\Omega \pm 10\%$, Equalizer Adj. | 2 | Type 110-F4 | 11236 | 2100-1824 | 1 |
| R48 | fxd, comp 5.1k $\Omega \pm 5\%$ $\frac{1}{2}W$ | 1 | EB-5125 | 01121 | 0686-5125 | 1 |
| R49 | fxd, comp 47 $\Omega \pm 5\%$ $\frac{1}{2}W$ | 1 | EB-4705 | 01121 | 0686-4705 | 1 |
| R50 | fxd, comp 39 $\Omega \pm 5\%$ $\frac{1}{2}W$ | 1 | EB-3905 | 01121 | 0686-3905 | 1 |
| R51 | fxd, comp 1k $\Omega \pm 5\%$ $\frac{1}{2}W$ | 1 | EB-1025 | 01121 | 0686-1025 | 1 |
| R52 | fxd, met. film 61.9k $\Omega \pm 1\%$ 1/8W | 1 | Type CEA T-O | 07716 | 0757-0460 | 1 |
| R53 | fxd, comp 560 $\Omega \pm 5\%$ $\frac{1}{2}W$ | 1 | EB-5615 | 01121 | 0686-5615 | 1 |
| R54 | fxd, ww 50 $\Omega \pm 5\%$ 5W | 1 | 243 E5005 | 56289 | 0811-1854 | 1 |
| R56 | fxd, comp 75 $\Omega \pm 5\%$ $\frac{1}{2}W$ | 1 | EB-7505 | 01121 | 0686-7505 | 1 |
| R57 | fxd, ww 3.9 Ω 2W | 1 | Type BWH | 07716 | 0811-1673 | 1 |
| R58 | fxd, ww 400 $\Omega \pm 5\%$ 10W | 1 | Type 10XM | 63743 | 0811-0942 | 1 |
| R60 | fxd, met. film 600 $\Omega \pm 1\%$ 1/8W | 1 | Type CEA T-O | 07716 | 0757-1100 | 1 |
| R61 | fxd, met. film 7.5K $\Omega \pm 1\%$ 1/8W | 1 | Type CEA T-O | 07716 | 0757-0440 | 1 |
| R62 | fxd, met. oxide 180 $\Omega \pm 5\%$ 2W | 1 | Type C42S | 16299 | 0698-3626 | 1 |
| R63 | fxd, met. film 499 $\Omega \pm 1\%$ $\frac{1}{4}W$ | 1 | Type CEB T-O | 07716 | 0698-3207 | 1 |
| R64 | fxd, met. film 2k $\Omega \pm 1\%$ $\frac{1}{4}W$ | 1 | Type CEB T-O | 07716 | 0757-0739 | 1 |
| R65 | fxd, comp 100k $\Omega \pm 5\%$ $\frac{1}{2}W$ | 2 | EB-1045 | 01121 | 0686-1045 | 1 |
| R66 | fxd, comp 200k $\Omega \pm 5\%$ $\frac{1}{2}W$ | 3 | EB-2045 | 01121 | 0686-2045 | 1 |
| R67 | fxd, comp 33k $\Omega \pm 5\%$ $\frac{1}{2}W$ | 1 | EB-3335 | 01121 | 0686-3335 | 1 |
| R68 | fxd, met. film 5.49k $\Omega \pm 1\%$ 1/8W | 1 | Type CEA T-O | 07716 | 0698-3382 | 1 |
| R69 | fxd, met. film 7.5k $\Omega \pm 1\%$ 1/8W | 1 | Type CEA T-O | 07716 | 0757-0440 | 1 |
| R69B | fxd, met. film 3.4k $\Omega \pm 1\%$ 1/8W | 1 | Type CEA T-O | 07716 | 0698-4440 | 1 |
| R70 | var, ww 5k $\Omega \pm 10\%$, Ramp Adjust. | 1 | Type 110-F4 | 11236 | 2100-1824 | 1 |
| R71 | fxd, met. film 12k $\Omega \pm 1\%$ 1/8W | 1 | Type CEA T-O | 07716 | 0698-5088 | 1 |
| R72 | fxd, met. film 45k $\Omega \pm 1\%$ 1/8W | 1 | Type CEA T-O | 07716 | 0698-5091 | 1 |
| R73 | fxd, comp 12k $\Omega \pm 5\%$ $\frac{1}{2}W$ | 1 | EB-1235 | 01121 | 0686-1235 | 1 |
| R74 | fxd, comp 82k $\Omega \pm 5\%$ $\frac{1}{2}W$ | 1 | EB-8235 | 01121 | 0686-8235 | 1 |
| R75, 76 | fxd, met. film 4,75k $\Omega \pm 1\%$ 1/8W | 2 | Type CEA T-O | 07716 | 0757-0437 | 1 |
| R77 | fxd, comp 430k $\Omega \pm 5\%$ $\frac{1}{2}W$ | 1 | EB-4345 | 01121 | 0686-4345 | 1 |
| R78 | fxd, met. film 249k $\Omega \pm 1\%$ 1/8W | 1 | Type CEA T-O | 07716 | 0757-0270 | 1 |
| R79 | fxd, comp 3.9k $\Omega \pm 5\%$ $\frac{1}{2}W$ | 2 | EB-3925 | 01121 | 0686-3925 | 1 |
| R80 | fxd, met. film 4.32k $\Omega \pm 1\%$ 1/8W | 1 | Type CEA T-O | 07716 | 0757-0436 | 1 |
| R81 | fxd, comp 4.7 $\Omega \pm 5\%$ $\frac{1}{2}W$ | 2 | EB-47G5 | 01121 | 0698-0001 | 1 |
| R82 | fxd, comp 9.1k $\Omega \pm 5\%$ $\frac{1}{2}W$ | 2 | EB-9125 | 01121 | 0686-9125 | 1 |
| R83 | fxd, comp 27 $\Omega \pm 5\%$ $\frac{1}{2}W$ | 1 | EB-2705 | 01121 | 0686-2705 | 1 |
| R84 | fxd, comp 100k $\Omega \pm 5\%$ $\frac{1}{2}W$ | 1 | EB-1045 | 01121 | 0686-1045 | 1 |
| R85 | fxd, comp 9.1k $\Omega \pm 5\%$ $\frac{1}{2}W$ | 1 | EB-9125 | 01121 | 0686-9125 | 1 |
| R86 | fxd, met. oxide 270 $\Omega \pm 5\%$ 2W | 1 | Type C42S | 16299 | 0698-3629 | 1 |
| R87 | fxd, met. oxide 1.5k $\Omega \pm 5\%$ 2w | 1 | Type C42S | 16299 | 0698-3338 | 1 |
| R88 | fxd, comp 10 $\Omega \pm 5\%$ $\frac{1}{2}W$ | 2 | EB-1005 | 01121 | 0686-1005 | 1 |
| R90 | fxd, met. oxide 820 $\Omega \pm 5\%$ 2W | 1 | Type C42S | 16299 | 0698-3637 | 1 |
| R91 | fxd, comp 180 $\Omega \pm 5\%$ 1W | 1 | GB-1815 | 01121 | 0689-1815 | 1 |
| R92 | fxd, ww 220 Ω 2W | 1 | Type BWH | 07716 | 0811-1763 | 1 |
| R93 | fxd, comp 3.9k $\Omega \pm 5\%$ $\frac{1}{2}W$ | 1 | EB-3925 | 01121 | 0686-3925 | 1 |
| R94 | fxd, comp 510 $\Omega \pm 5\%$ $\frac{1}{2}W$ | 1 | EB-5115 | 01121 | 0686-5115 | 1 |
| R95 | fxd, met. film 1.5k $\Omega \pm 1\%$ 1/8W | 2 | Type CEA T-O | 07716 | 0757-0427 | 1 |
| R96 | fxd, comp 200k $\Omega \pm 5\%$ $\frac{1}{2}W$ | 1 | EB-2045 | 01121 | 0686-2045 | 1 |
| R97 | fxd, comp 4.7 $\Omega \pm 5\%$ $\frac{1}{2}W$ | 1 | EB-47G5 | 01121 | 0698-0001 | 1 |
| R98 | fxd, comp 10 $\Omega \pm 5\%$ $\frac{1}{2}W$ | 1 | EB-1005 | 01121 | 0686-1005 | 1 |
| R99 | fxd, comp 200k $\Omega \pm 5\%$ $\frac{1}{2}W$ | 1 | EB-2045 | 01121 | 0686-2045 | 1 |
| R101 | var. ww 250 $\Omega \pm 10\%$, Ammeter Adj. | 2 | Type 110-F4 | 11236 | 2100-0439 | 1 |
| R102 | fxd, met. film 909 $\Omega \pm 1\%$ 1/8W | 1 | Type CEA T-O | 07716 | 0757-0422 | 1 |

| REF. DESIG. | DESCRIPTION | TQ | MFR. PART NO. | MFR. CODE | HP PART NO. | RS |
|---------------------------------|---|----|---------------|-----------|-------------|----|
| R103 | fxd, met. film 1.5k Ω \pm 1% 1/8W | | Type CEA 7-0 | 07716 | 0757-0427 | |
| R104 | fxd, met. film 19.1k Ω \pm 1% 1/8W | 1 | Type CEA T-O | 07716 | 0698-4484 | 1 |
| R105 | fxd, met. film 422 Ω \pm 1% 1/4W | 1 | Type CEB T-O | 07716 | 0698-4590 | 1 |
| R106 | var. ww 250 Ω \pm 10%, Voltmeter Adj. | | Type 110-F4 | 11236 | 2100-0439 | |
| R108, 109 | fxd, comp 100 Ω \pm 5% 1/2W | 2 | EB-1015 | 01121 | 0686-1015 | 1 |
| T70, 90 | Pulse Transformer | 2 | | 28480 | 5080-7122 | 1 |
| VR1, 40 | Diode, zener 4.22V \pm 5% | 2 | | 28480 | 1902-3070 | 2 |
| VR60, 61 | Diode, zener 6.2V \pm 5% | 2 | | 28480 | 1902-1221 | 2 |
| VR90 | Diode, zener 6.19V \pm 5% | 1 | | 28480 | 1902-0049 | 1 |
| Z1 | Dual Differential Amplifier | 1 | CA3026 | 02735 | 1820-0240 | 1 |
| 22 | Resistor Network | 1 | | 28480 | 1810-0042 | 1 |
| A2 RFI FILTER ASSEMBLY | | | | | | |
| A2 | RFI Filter Assembly | 1 | | 28480 | 06269-60007 | |
| C1 | fxd, paper .22 μ F 600Vdc | 1 | Type 160P | 56289 | 0160-2461 | 1 |
| CR1 | Triac, 40A 400prv | 1 | 2N5445 | 02735 | 1884-0080 | 1 |
| L1A/L1B | Filter Choke 1.5mH | 1 | | 28480 | 5080-7146 | 1 |
| R1 | fxd, met. oxide 270 Ω \pm 5% 2W | 1 | Type C42S | 16299 | 0698-3629 | 1 |
| A3 INTERCONNECTION BOARD | | | | | | |
| A3 | Interconnection Board Assembly | 1 | | 28480 | 5060-7906 | |
| C3 | fxd, elect. 5000 μ F 45Vdc | 1 | | 28480 | 0180-1919 | 1 |
| J1 | P.C. Board Edge Connector | 1 | 64-718-22 | 76530 | 1251-1887 | |
| R120 | fxd, comp 51k Ω \pm 5% 1/2W | 1 | EB-5135 | 01121 | 0686-5135 | 1 |
| T2 | Bias Transformer | 1 | | 28480 | 9100-2607 | 1 |
| A4 HEAT SINK ASSEMBLY | | | | | | |
| A4 | Heat Sink Assembly | 1 | | 28480 | 06269-60004 | |
| B1 | Fan | 1 | WS2107F | 97702 | 3160-0056 | 1 |
| C1-C4 | fxd, ceramic .05 μ F 400V | 4 | | 28480 | 0150-0052 | 1 |
| C5 | fxd, elect. 15 μ F 50V | 1 | | 28480 | 0180-1834 | 1 |
| CR101, 102 | Rect. Si. 40A 50prv | 4 | 1N1183AR | 02577 | 1901-0316 | 4 |
| CR103, 104 | Rect. Si. 40A 50prv | 3 | 1N1183A | 02577 | 1901-0315 | 3 |
| CR105 | Rect. Si. 40A 50prv | | 1N1183AR | 02577 | 1901-0316 | |
| CR106 | Rect. Si. 40A 50prv | | 1N1183A | 02577 | 1901-0315 | |
| CR108 | Rect. Si. 40A 50prv | | 1N1183AR | 28480 | 1901-0316 | |
| CR110 | SCR 35A 400prv | 1 | | 28480 | 1884-0058 | 1 |
| Q101 | Power PNP Si. | 1 | | 28480 | 1853-0063 | 1 |
| Q102 | Power NPN Si. | 1 | | 28480 | 1854-022S | 1 |
| Q103-Q108 | Power NPN Si. | 6 | | 28480 | 1854-0458 | 6 |
| R106 | fxd, ww .125 Ω \pm 5% 5W | 1 | | 28480 | 0811-1846 | 1 |
| R123 | fxd, cupron 0.01 Ω 20ppm, Current Sampling | 1 | | 28480 | 5080-7144 | 1 |
| R150-R155 | Emitter Resistor Assembly | 1 | | 28480 | 06260-60023 | 1 |
| | fxd, wire helix 0.1 Ω \pm 5% - Part of Emitter Resistor Assembly | 6 | | 28480 | 0811-2545 | 2 |

| REF. DESIG. | DESCRIPTION | TQ | MFR. PART NO. | MFR. CODE | HP PART NO. | RS |
|------------------------------|--|----|----------------|-----------|-------------|----|
| TS101 | Thermal Switch, open 230°F, close 200°F | 1 | | 28480 | 0440-0079 | 1 |
| A5 FRONT PANEL ASSEMBLY | | | | | | |
| A5 | Front Panel Assembly | 1 | | 28480 | 06269-60005 | |
| CB1 | Circuit Breaker, 25A @ 250Vac max. | 1 | AM33 Curve 5 | 74193 | 2110-0213 | 1 |
| DS1 | Indicator Light, Neon, Red | 1 | 599-124 | 72765 | 1450-0048 | 1 |
| DS2 | Overvoltage Indicator, 6V, Amber | 1 | MCL-A3-1730 | 07137 | 1450-0305 | 1 |
| M1 | Voltmeter, 0-50V | 1 | | 28480 | 1120-1173 | 1 |
| M2 | Ammeter, 0-60A | 1 | | 28480 | 1120-1181 | 1 |
| R121 | var. ww 10k Ω ±5%, Voltage Control, Coarse | 2 | | 28480 | 2100-1854 | 1 |
| R122 | var. ww 50 Ω ±5%, Voltage Control, Fine | 2 | | 28480 | 2100-1858 | 1 |
| R123 | var. ww 200 Ω ±5%, Current Control, Coarse | 1 | | 28480 | 2100-1856 | 1 |
| R124 | var. ww 10 Ω ±5%, Current Control, Fine | 1 | | 28480 | 2100-1857 | 1 |
| R125 | var. ww 10k Ω ±5%, Overvoltage Adjustment | | | 28480 | 2100-1854 | |
| CHASSIS - ELECTRICAL | | | | | | |
| B 2 | Fan | 1 | 8500 | 23936 | 3160-0056 | 1 |
| C19 | fxd, elect. 15μF 50Vdc | 1 | 150D156X0050R2 | 56289 | 0180-1834 | 1 |
| C101-C104 | fxd, elect. 50,000μF 50Vdc | 4 | | 28480 | 0180-2346 | 1 |
| C110, 111 | fxd, ceramic .01μF 300Vdc | 2 | 41C21A5 | 56289 | 0160-2568 | 1 |
| T1 | Power Transformer | 1 | | 28480 | 06269-80091 | 1 |
| CHASSIS ASSEMBLY- MECHANICAL | | | | | | |
| | Chassis Assembly (Welded) | 1 | | 28480 | 5060-6186 | |
| | Bracket, RFI Filter Mounting | 2 | | 28480 | 5000-6257 | |
| | Standoff, Insulated, RFI Filter Mounting | 4 | | 28480 | 0380-0902 | |
| | Grommet, 5/8" (Internal Chassis Divider) | 1 | 1661 | 73734 | 0400-0062 | |
| | Cover | 2 | | 28480 | 5000-6250 | |
| | Chassis, Internal, Ckt. Board Tray | 1 | | 28480 | 5000-6248 | |
| | Chassis, Internal, Capacitor Tray | 1 | | 28480 | 06269-00002 | |
| | Bus Bar, C101-C102 | 2 | | 28480 | 5000-6251 | |
| | Bus Bar, C103-C104 | 2 | | 28480 | 5000-6253 | |
| | Clamp, C101-C104 | 3 | | 28480 | 5000-6017 | |
| | Bracket, Fan B2 | 2 | | 28480 | 06269-00003 | |
| | Rear Panel (Blank, with labeling) | 1 | | 28480 | 06260-60008 | |
| | Cover, AC Input Barrier Block | 1 | | 28480 | 5000-6249 | |
| | Cover, Rear Control Barrier Strip | 1 | | 28480 | 00712-20001 | |
| | Bus Bar, Output | 2 | | 28480 | 5000-6252 | |
| | Barrier Block, AC Input | 1 | 603-3 | 75382 | 0360-1596 | 1 |
| | Rubber Bumper | 4 | 2097-W | 87585 | 0403-0089 | |
| | Spacer, Insulated, AC Input Barrier (2), Output Bus Bars (4) | 6 | | 28480 | 0380-0710 | 6 |
| | Serial I.D. Plate | 1 | | 28480 | 7120-1111 | |

| REF. DESIG. | DESCRIPTION | TQ | MFR. PART NO. | M R F . CODE | H P PART NO. | R S |
|------------------------------|--|------------------|------------------------------|----------------------------------|---|-------------|
| | MISCELLANEOUS | | | | | |
| | Manual | 1 | | 28480 | 06269-90002 | |
| | Carton, Packing | 1 | | 28480 | 9211-1181 | |
| | Floater Pad, Packing | 2 | | 28480 | 9220-1402 | |
| R82 | OPTION 005 50Hz Operation fxd, comp 240 Ω ±5% ½W Label, Identification | 1 1 | EB-2415 | 01121 | 0686-2415 7124-1719 | 1 |
| A5R121 | OPTION 007 10-Turn Voltage Coarse Control var. ww 10k Ω ±5% 10-Turn | 1 | | 28480 | 2100-1866 | 1 |
| A5R123 | OPTION 008 10-Turn Current Coarse Control var. ww 200 Ω ±5% 10-Turn | 1 | | 28480 | 2100-1863 | 1 |
| A5R121 A5R123 | OPTION 009 10-Turn Voltage & Current Controls var. ww 10k Ω ±5% 10-Turn var. ww 200 Ω ±5% 10-Turn | 1 1 | | 28480 28480 | 2100-1866 2100-1863 | 1 1 |
| | OPTION 010 Chassis Slides Slides, Chassis | 1 | CTS 120 E6 | | | 1 |
| R3 A5R121 | OPTION 013 Decadial Voltage Control fxd, comp (Selected) ±5% ½W var. ww 10k Ω ±5% 10-Turn Decadial Control | 1 1 1 | Type EB (obd) RD-411 | 01121 28480 07716 | 2100-1866 1140-0020 | 1 1 |
| R30 A5R123 | OPTION 014 Decadial Current Control fxd, comp (Selected) ±5% ½W var. ww 200 Ω ±5% 10-Turn Decadial Control | 1 1 1 | Type EB (obd) RD-411 | 01121 28480 07716 | 2100-1863 1140-0020 | 1 1 |
| R111 R112,113 R114 | OPTION 020 Voltage Programming Adjust fxd, met. film 221k Ω ±1% 1/8W var. ww 5k Ω fxd, met. film 249k Ω ±1% 1/8W Label, Identification | 1 2 1 1 | Type CEA T-O Type CEA T-O | 07716 28480 07716 | 0757-0473 2100-0806 0757-0270 7124-1721 | 1 1 1 |
| R115 R116 R118 R119 | OPTION 021 Current Programming Adjust fxd, met. film 23K Ω ±1% 1/8W var. ww 5k Ω fxd, met. film 200k Ω ±1% 1/8W var. ww 5k Ω Label, Identification | 1 2 1 1 | Type CEA T-O Type CEA T-O | 07716 28480 07716 28480 | 0698-3269 2100-0806 0757-0472 2100-0806 7124-1721 | 1 1 1 |

| REF DESIGN | DESCRIPTION | TQ | MFR PART NO | MFR CODE | HP PART NO | RS |
|---------------|--|----|--------------|-------------|---------------|----|
| | OPTION 022 VOLTAGE & CURRENT PROGRAMMING ADJUST | | | | | |
| R111 | FXD, MET. FILM 221KW ±1% 1/8W | 1 | TYPE CEA T-O | 07716 | 0757-0473 | 1 |
| R112, 113 | VAR. WW 5KΩ | 4 | | 28480 | 2100-0806 | 1 |
| R114 | FXD, MET. FILM 249KW ±1% 1/8W | 1 | TYPE CEA T-O | 07716 | 0757-0270 | 1 |
| R115 | FXD, MET. FILM 23KW ±1% 1/8W | 1 | TYPE CEA T-O | 07716 | 0698-3269 | 1 |
| R116 | VAR. WW 5KΩ | | | 28480 | 2100-0806 | |
| R118 | FXD, MET. FILM 200KW ±1% 1/8W | 1 | TYPE CEA T-O | 07716 | 0757-0472 | 1 |
| R119 | VAR. WW 5KW | | | 28480 | 2100-0806 | |
| | LABEL, IDENTIFICATION | 1 | | 28480 | 7124-1721 | |
| | OPTION 027 208VAC INPUT | | | | | |
| | LABEL, IDENTIFICATION | 1 | | 28480 | 7124-1717 | |

TABLE 6-5. PART NUMBER - NATIONAL STOCK NUMBER
CROSS REFERENCE INDEX

| PART NUMBER | FSCM | NATIONAL STOCK NUMBER | PART NUMBER | FSCM | NATIONAL STOCK NUMBER |
|----------------|-------|-----------------------------|----------------|-------|-----------------------------|
| 0150-0052 | 28480 | 5910-00-797-4909 | 0757-0437 | 28480 | 5905-00-904-4404 |
| 0160-0161 | 28480 | 5910-00-911-9271 | 0757-0440 | 28480 | 5905-00-858-6795 |
| 0160-0162 | 28480 | 5910-00-850-2162 | 0757-0460 | 28480 | 5905-00-858-8959 |
| 0160-0168 | 28480 | 5910-00-917-0668 | 0757-0472 | 28480 | 5905-00-257-9210 |
| 0180-0049 | 28480 | 5910-00-781-9398 | 0757-0473 | 28480 | 5905-00-994-8480 |
| 0180-0100 | 28480 | 5910-00-752-4172 | 0757-0739 | 28480 | 5905-00-830-6078 |
| 0180-0291 | 28480 | 5910-00-931-7055 | 0757-1100 | 28480 | 5905-00-917-0586 |
| 0180-0332 | 28480 | 5910-00-943-6709 | 0813-0001 | 28480 | 5905-00-932-0413 |
| 0180-1860 | 28480 | 5910-00-931-7061 | 1N5059 | 03508 | 5961-00-088-8792 |
| 0686-1035 | 28480 | 5905-00-451-0540 | 1140-0020 | 28480 | 5355-00-584-0840 |
| 0686-1045 | 28480 | 5905-00-195-6761 | 1251-1887 | 28480 | 5935-00-147-7384 |
| 0686-1525 | 28480 | 5905-00-279-1757 | 137 | 83330 | 5940-00-321-4984 |
| 0686-3335 | 28480 | 5905-00-997-5436 | 1410-0052 | 28480 | 5895-00-061-2906 |
| 0686-4345 | 28480 | 5905-00-279-2518 | 1450-0048 | 28480 | 6210-00-761-8898 |
| 0686-5125 | 28480 | 5905-00-279-2019 | 150D105X9035A2 | 56289 | 5910-00-104-0144 |
| 0689-1815 | 28480 | 5905-00-403-9066 | 150D475X9035B2 | 56289 | 5910-00-177-4300 |
| 0698-0001 | 28480 | 5905-00-682-4247 | 1661 | 73734 | 5325-00-301-8656 |
| 0698-3338 | 28480 | 5905-00-431-6842 | 1810-0042 | 28480 | 5905-00-450-0107 |
| 0698-3430 | 28480 | 5905-00-420-7136 | 1853-0041 | 28480 | 5961-00-931-8259 |
| 0698-3440 | 28480 | 5905-00-828-0377 | 1853-0063 | 28480 | 5961-00-867-9319 |
| 0698-3629 | 28480 | 5905-00-405-3727 | 1853-0099 | 28480 | 5961-00-450-4689 |
| 0698-4440 | 28480 | 5905-00-431-6840 | 1854-0071 | 28480 | 5961-00-137-4608 |
| 0698-4484 | 28480 | 5905-00-140-5675 | 1854-0225 | 28480 | 5961-00-072-0094 |
| 0698-5088 | 28480 | 5905-00-469-2838 | 1901-0033 | 28480 | 5961-00-821-0710 |
| 0698-5146 | 28480 | 5905-00-431-6837 | 1901-0327 | 28480 | 5961-00-931-0213 |
| 0757-0270 | 28480 | 5905-00-491-4596 | 1901-0460 | 28480 | 5961-00-867-9206 |
| 0757-0274 | 28480 | 5905-00-858-9105 | 1902-0049 | 28480 | 5961-00-911-9277 |
| 0757-0344 | 28480 | 5905-00-269-2629 | 1902-3070 | 28480 | 5961-00-931-6989 |
| 0757-0422 | 28480 | 5905-00-728-9980 | 192P10492 | 56289 | 5910-00-728-8472 |
| 0757-0427 | 28480 | 5905-00-917-0578 | 192P22392 | 56289 | 5910-00-993-8308 |
| 0757-0436 | 28480 | 5905-00-858-6792 | 2100-0439 | 28480 | 5905-00-851-3924 |

PART NUMBER - NATIONAL STOCK NUMBER
CROSS REFERENCE INDEX

TM 11-6625-2958-14&P

| PART NUMBER | FSCM | NATIONAL STOCK NUMBER | PART NUMBER | FSCM | NATIONAL STOCK NUMBER |
|---------------|-------|-----------------------|-------------|------|-----------------------|
| 2100-0806 | 28480 | 5905-00-929-0485 | | | |
| 2100-1824 | 28480 | 5905-00-892-9626 | | | |
| 2100-1857 | 28480 | 5905-00-575-8853 | | | |
| 2100-1866 | 28480 | 5905-00-110-0282 | | | |
| 242E1025 | 56289 | 5905-00-504-4892 | | | |
| 243E5005 | 56289 | 5905-00-950-5551 | | | |
| 2950-0034 | 28480 | 5310-00-903-8729 | | | |
| 30D505G050BB2 | 56289 | 5910-00-081-6159 | | | |
| 3160-0056 | 28480 | 4140-00-758-6113 | | | |
| 422-13-11-013 | 71785 | 5935-00-917-9079 | | | |
| 599-124 | 72765 | 6210-00-761-8898 | | | |
| 734 | 08530 | 5970-00-840-5109 | | | |

SECTION VII
CIRCUIT DIAGRAMS AND COMPONENT LOCATION DIAGRAMS

This section contains the circuit diagrams necessary for the operation and maintenance of this power supply. Included are:

a. Component location diagrams (Figures 7-1 through 7-8, and 7-10), showing the physical location and reference designators of parts mounted on the printed circuit boards and chassis.

b. Preregulator control circuit waveforms (Figure 7-9), showing the waveforms found at various points in the preregulator control circuit.

c. Schematic diagram (Figure 7-1 1), illustrating the circuitry for the entire power supply. Voltages are given adjacent to test points, which are identified by encircled numbers on the schematic.

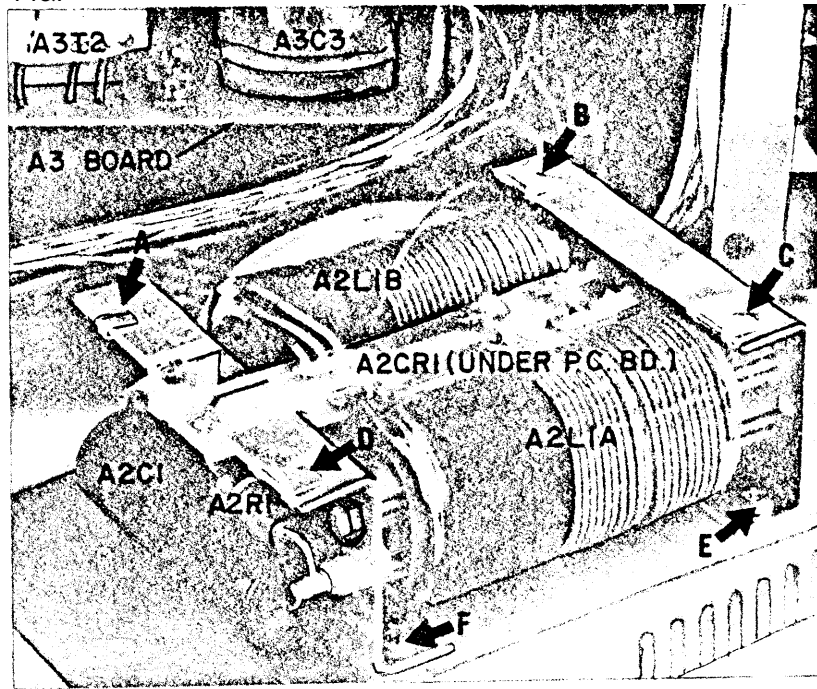


Figure 7-1. A2 RFI Assembly Component Location Diagram
(Shown removed from supply with assembly cover off.)

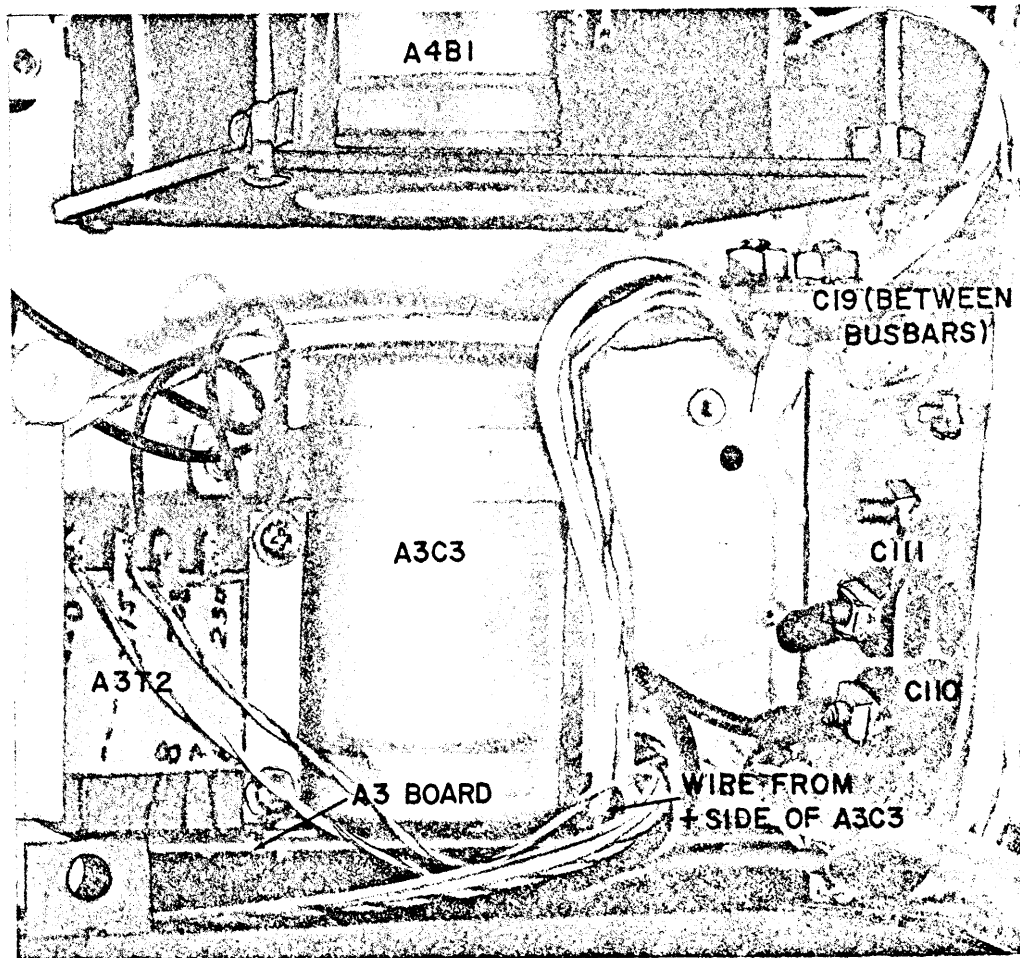


Figure 7-2. A3 Interconnection Circuit Board Assembly Component Location Diagram (Shown with A2 RF I assembly removed.)

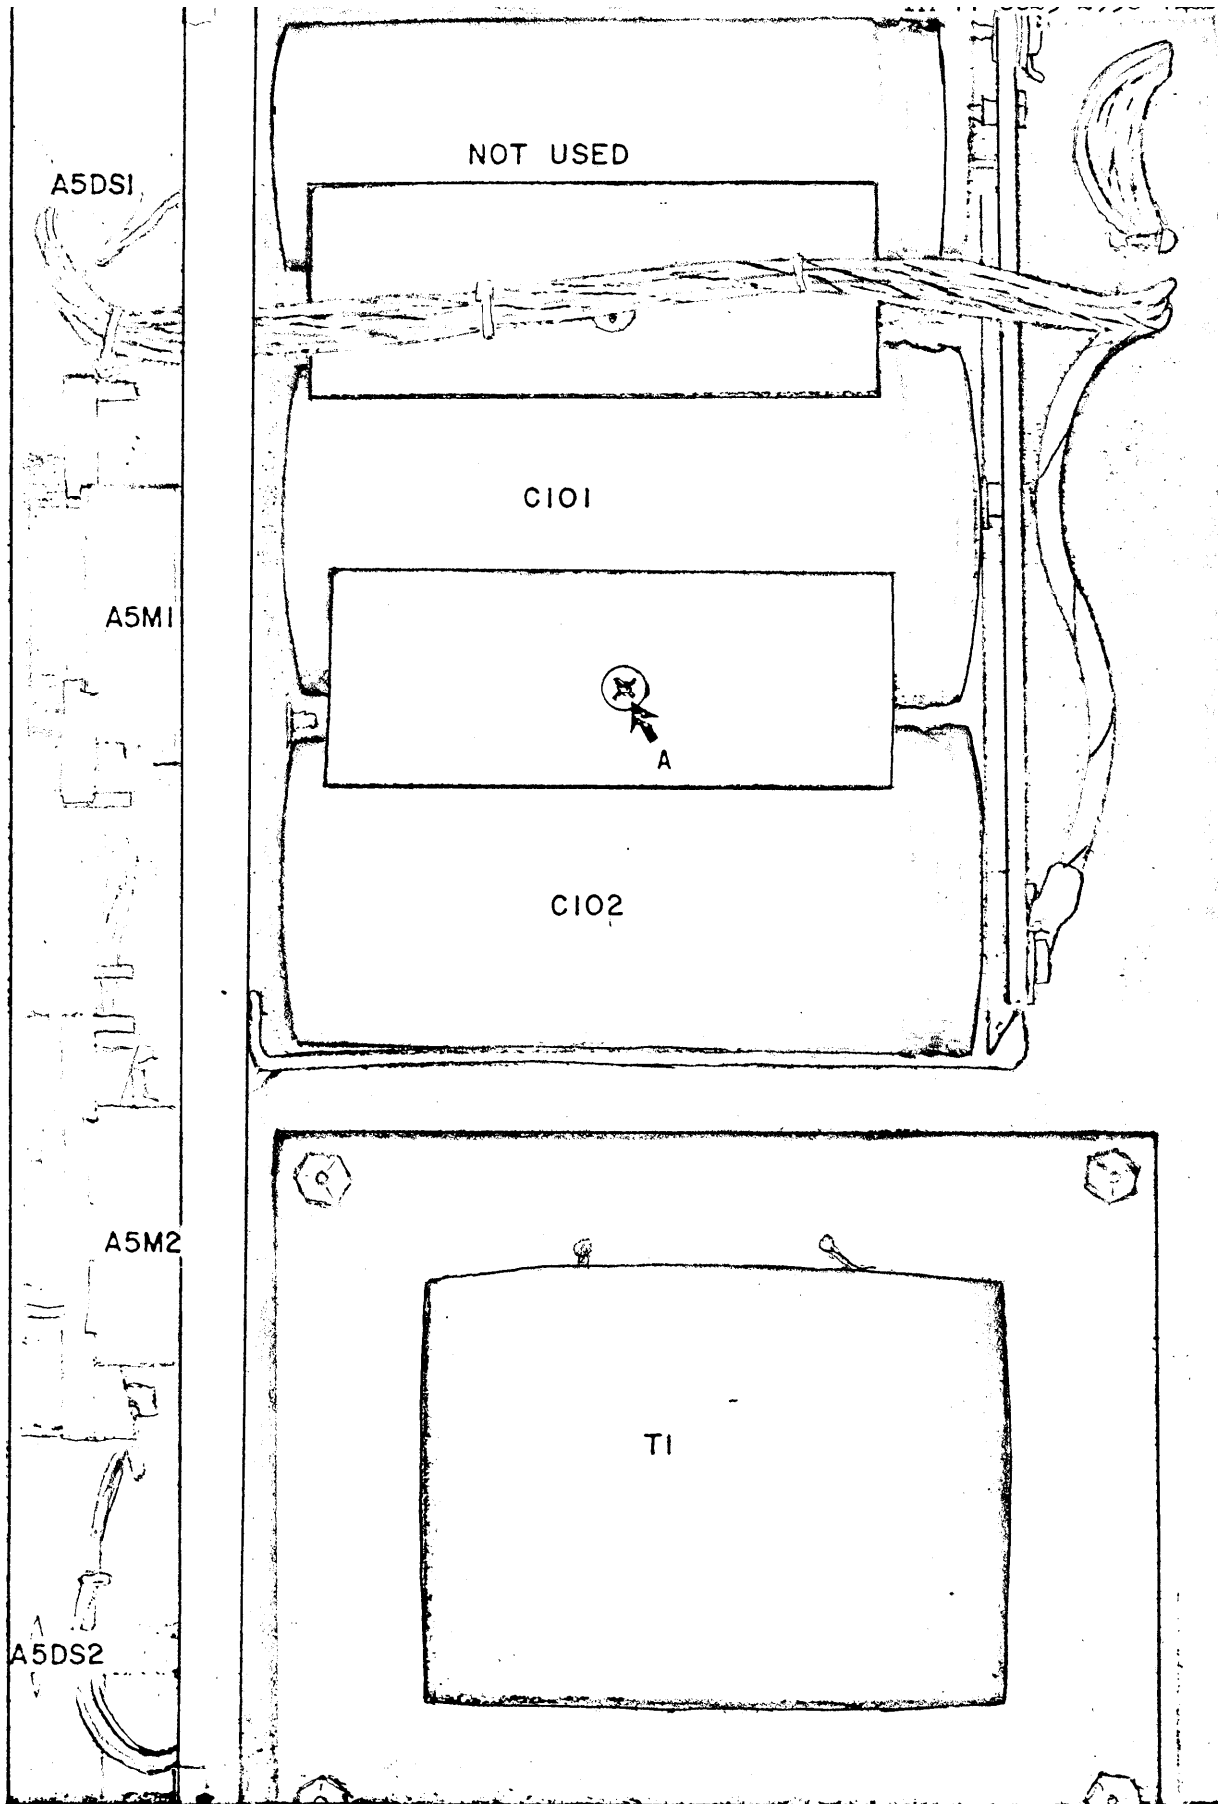


Figure 7-3. Top Front Chassis Assembly Component Location Diagram

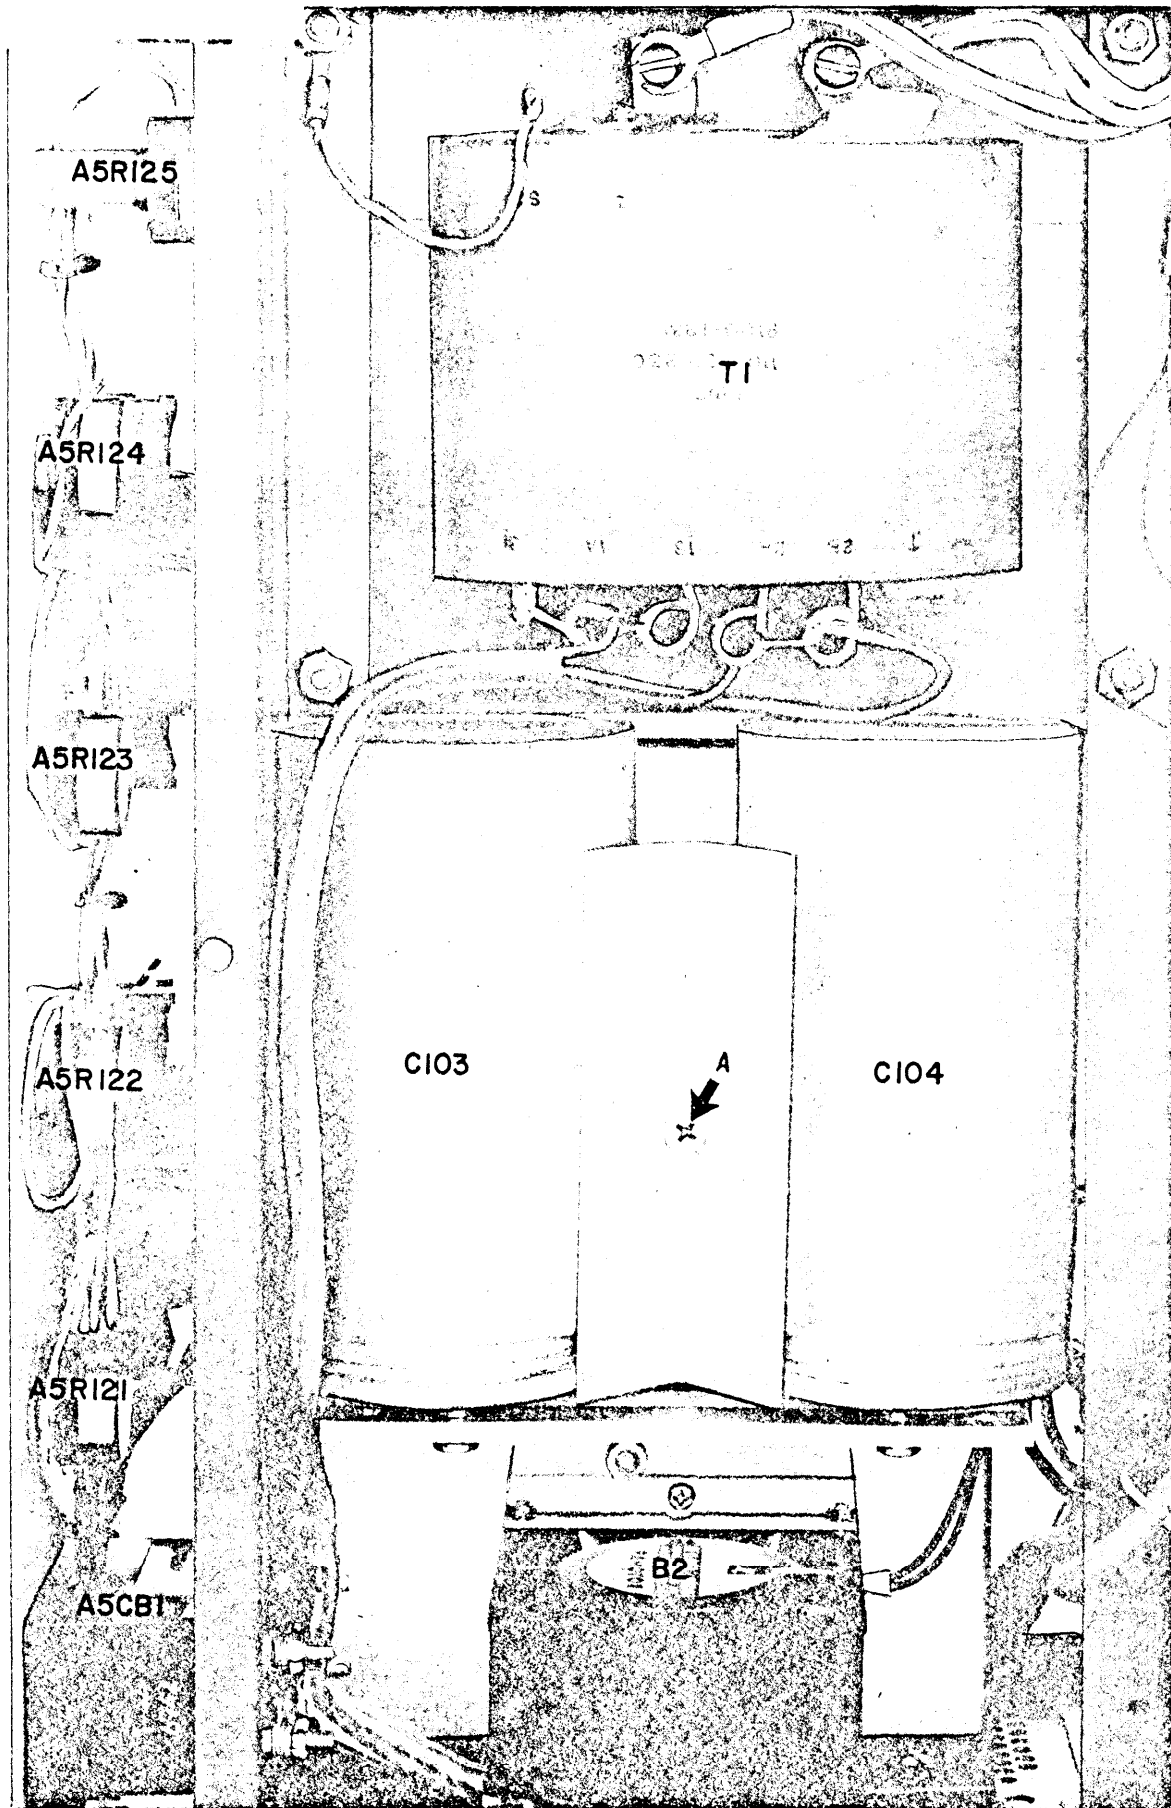


Figure 7-4. Bottom Front Chassis Assembly Component Location Diagram

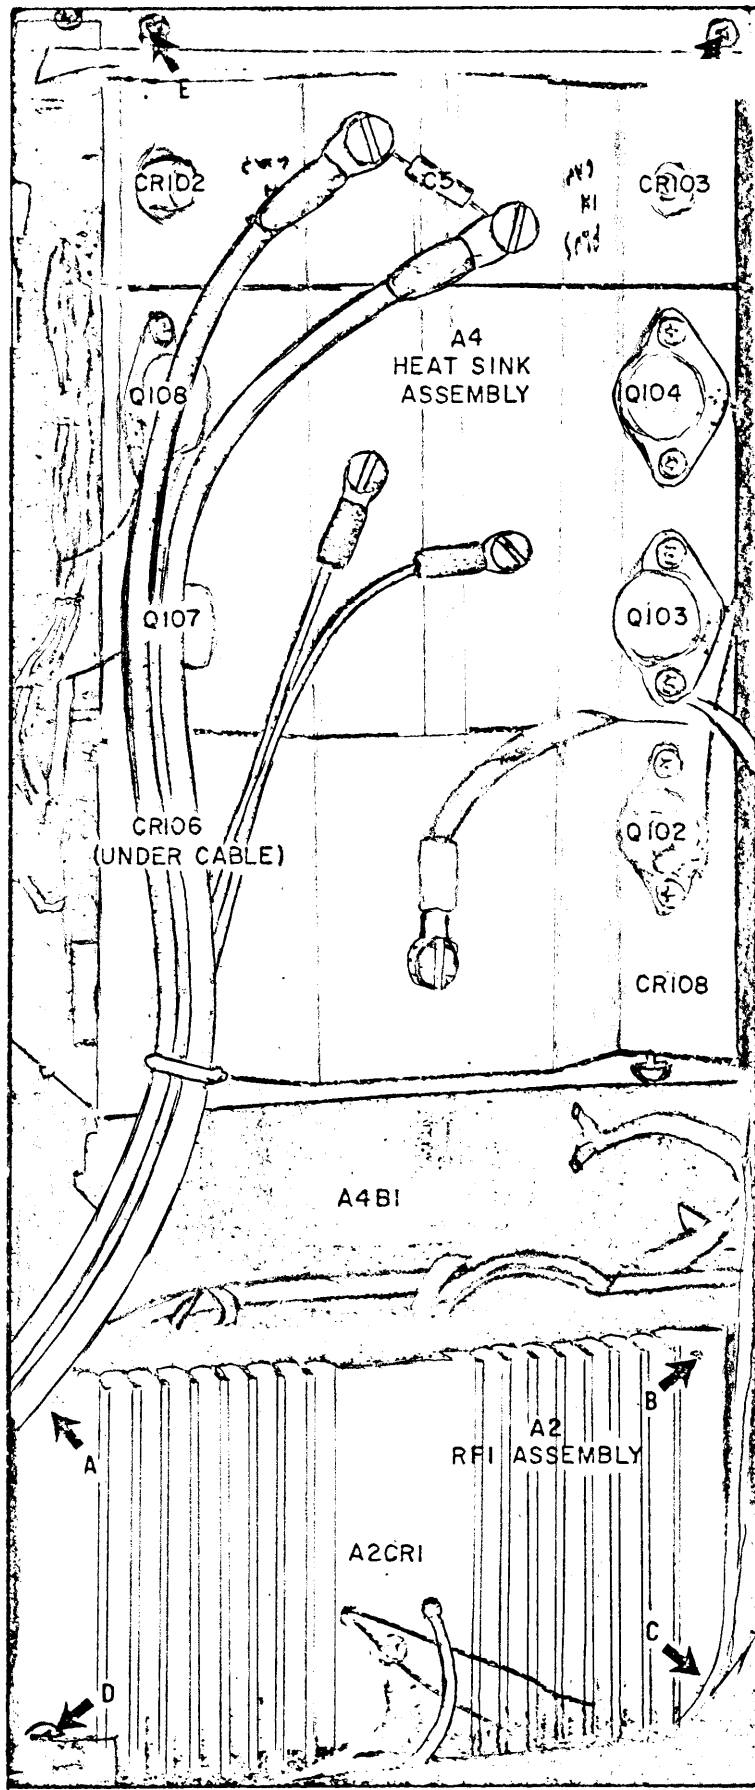


Figure 7-5. Bottom Rear Chassis Assembly Component Location Diagram

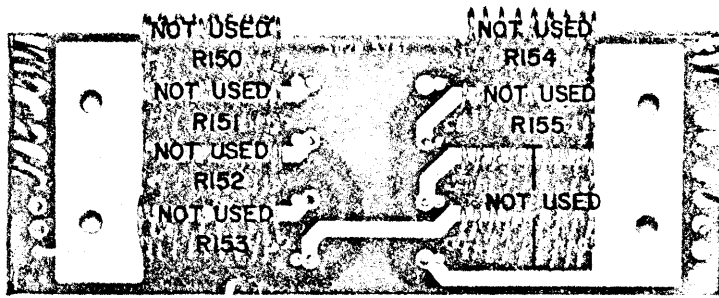


Figure 7-6. Series Regulator Emitter Resistor Assembly Component Location Diagram
(Circuit board is part of A4 heat sink assembly.)

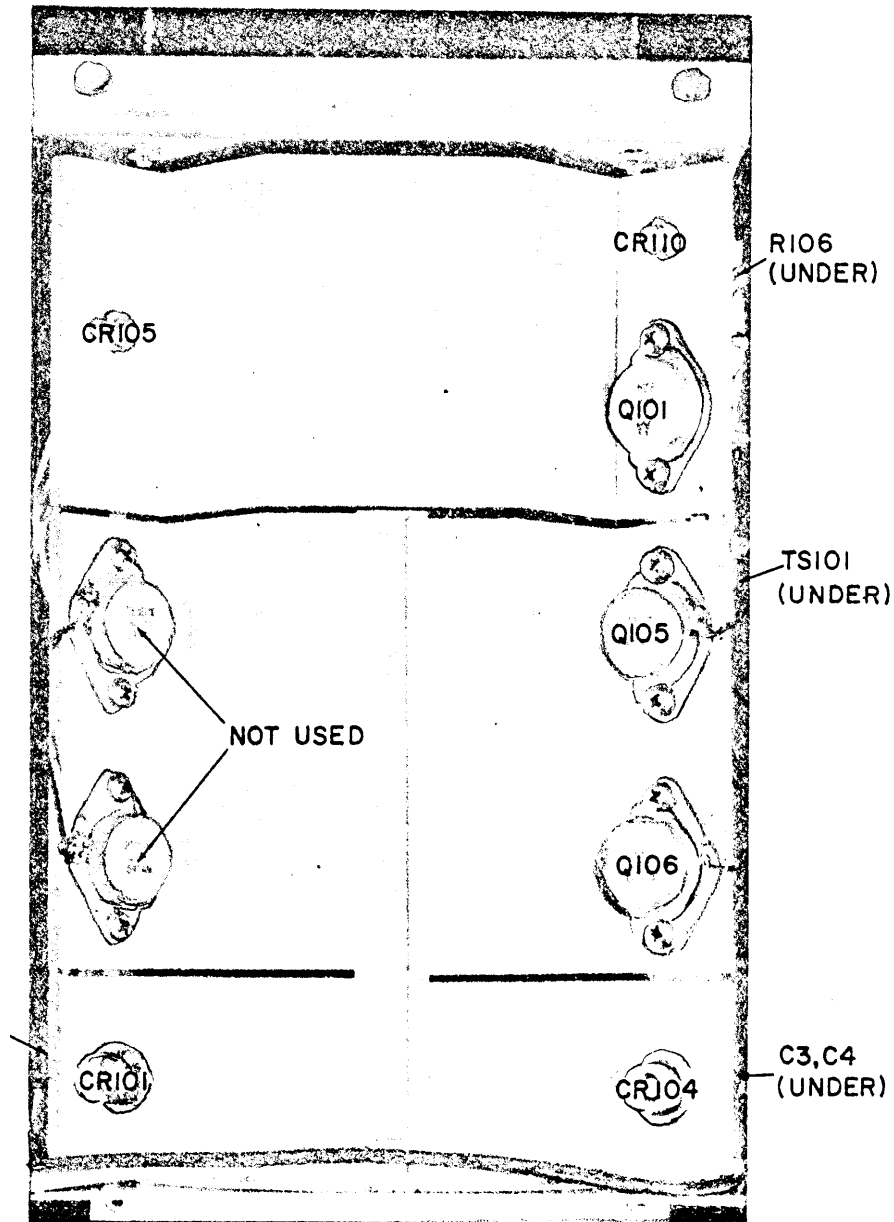


Figure 7-7. A4 Heat Sink Assembly Component Location Diagram
(Top view, assembly removed from supply.)


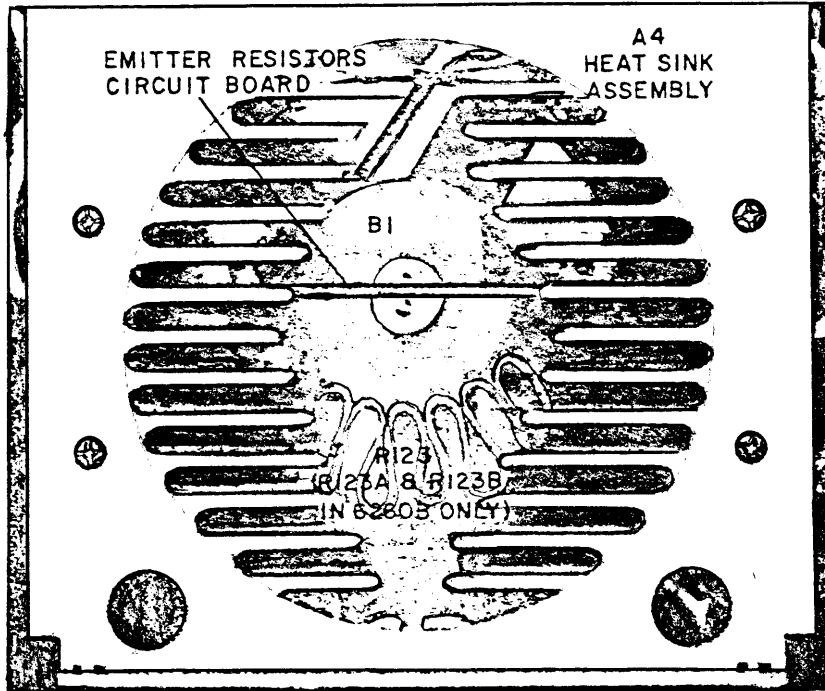


Figure 7-8. A4 Heat Sink Assembly Component Location Diagram (End view, assembly removed from supply.)

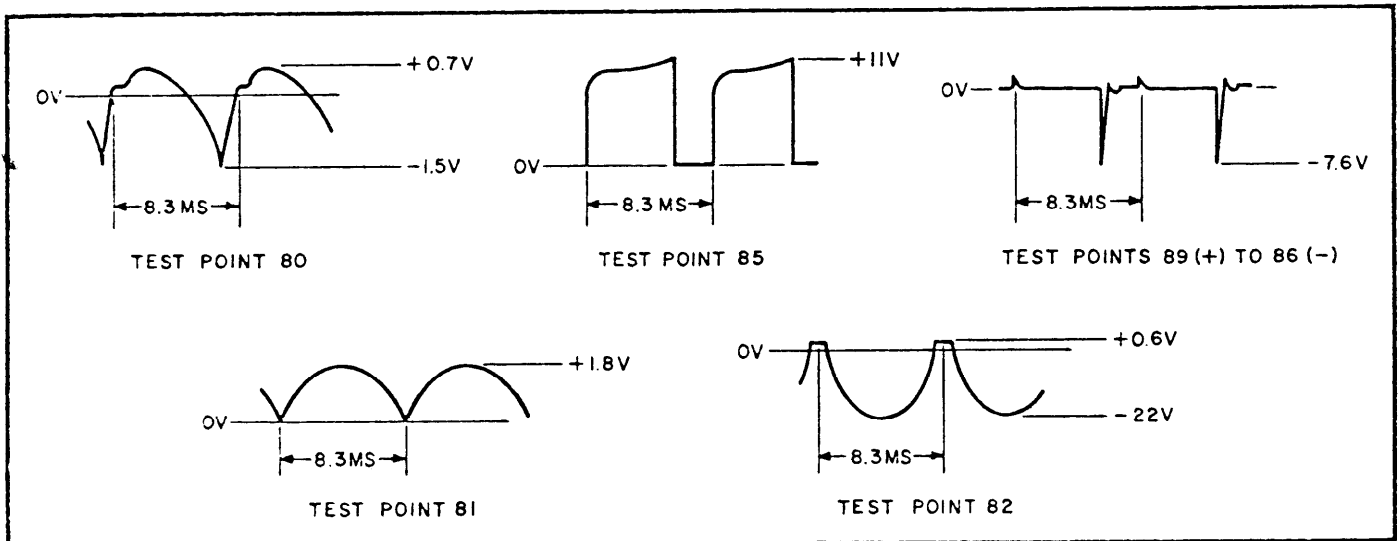

NOTES

1. ALL WAVEFORMS TAKEN AT MAXIMUM RATED OUTPUT VOLTAGE, 230 VAC INPUT, NO LOAD CONNECTED AND CURRENT CONTROLS FULLY CLOCKWISE.
2. SCOPE DC COUPLED AND REFERENCED TO TP103 (INBOARD SIDE OF CURRENT SAMPLING RESISTOR) UNLESS OTHERWISE SHOWN.
3. FOR CLARITY, WAVEFORMS ARE NOT DRAWN TO SCALE.

Figure 7-9. Preregulator Control Circuit Waveforms

Figure 7-10

This publication does not contain Figure 7-10.
Figure 7-10 does not exist in paper or digital form.

NOT DIGITIZED



APPENDIX A

REFERENCES

| | |
|---------------|---|
| DA Pam 310-4 | Index of Technical Manuals, Technical Bulletins, Supply Manuals (Types 7, 8 and 9), Supply Bulletins, and Lubrication Orders. |
| DA Pam 310-7 | Index of Modification Work Orders. |
| TM 38-750 | The Army Maintenance Management System (TAMMS). |
| TM 740-90-1 | Administrative Storage of Equipment. |
| TM '750-244-2 | Procedures for Destruction of Electronics Materiel to Prevent Enemy Use (Electronics Command). |
| TB 43-180 | Calibration Requirements for the Maintenance of Army Materiel. |
| TB 385-4 | Safety Precautions for Maintenance of Electrical/ Electronic Equipment. |

APPENDIX B
COMPONENTS OF END ITEM LIST

Section L INTRODUCTION

B-1. Scope

This appendix lists integral components of and basic issue items for the PP-7545/U to help you inventory items required for safe and efficient operation.

B-2. General

This Components of End Item List is divided into the following sections:

a. Section II. Integral Components of the End item. Not applicable. These items, when assembled, comprise the PP-7545/U and must accompany it whenever it is transferred or turned in. The illustrations will help you identify these items.

b. Section III. Basic Issue Items. Not applicable. These are the minimum essential items required to place the PP-7545/U in operation, to operate it, and to perform emergency repairs. Although shipped separately packed they must accompany the PP-7545/U during operation and whenever it is transferred between accountable officers. The illustrations will assist you with hard-to-identify items. This manual is your authority to requisition replacement BII, based on TOE/MTOE authorization of the end item.

B-3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) Figure number. Indicates the figure number of the illustration on which the item is shown.

(2) Item number. The number used to identify item called out in the illustration.

b. National Stock Number. Indicates the National stock number assigned to the item and which will be used for requisitioning.

c. Description. Indicates the Federal item name and, if required, a minimum description to identify the item. The part number indicates the primary number used by the manufacturer, which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items. Following the part number, the Federal Supply Code for Manufacturers (FSCM) is shown in parentheses.

d. Location. The physical location of each item listed is given in this column. The lists are designed to inventory all items in one area of the major item before moving on to an adjacent area.

e. Usable on Code. Not applicable.

f. Quantity Required (Qty Reqd). This column lists the quantity of each item required for a complete major item.

g. Quantity. This column is left blank for use during an inventory. Under the Rcvd column, list the quantity you actually receive on your major item. The Date columns are for your use when you inventory the major item.

(Next printed page is B-2.)

| (1) ILLUSTRATION (A) (B) FIG ITEM NO NO | | SECTION III BASIC ISSUE ITEMS (2) NATIONAL STOCK NUMBER (3) DESCRIPTION PART NUMBER | | | (4) LOCATION (FSCM) | (5) USABLE ON CODE | (6) QTY REQD | (7) QUANTITY RCVD DATE | |
|---|-----|--|----------------------|-------|---------------------------|-----------------------------|--------------------|------------------------------|--|
| 1-1 | N/A | 6130-00-148-1796 | PP-7545/U | 28480 | | 1 | | | |
| | | | TM 11-6625-2958-14&P | | | 1 | | | |

APPENDIX D

MAINTENANCE ALLOCATION

Section L INTRODUCTION

D-1. General

This appendix provides a summary of the maintenance operations for the PP-7545/U. It authorizes categories of maintenance for specific maintenance functions on repairable items and components and the tools and equipment required to perform each function. This appendix may be used as an aid in planning maintenance operations.

D-2. Maintenance Function

Maintenance functions will be limited to and defined as follows:

- a. Inspect. To determine the serviceability of an item by comparing its physical, mechanical, and/or electrical characteristics with established standards through examination.
- b. Test. To verify serviceability and to detect incipient failure by measuring the mechanical or electrical characteristics of an item and comparing those characteristics with prescribed standards.
- c. Service. Operations required periodically to keep an item in proper operating conditions, i.e., to clean (decontaminate), to preserve, to drain, to paint, or to replenish fuel, lubricants, hydraulic fluids, or compressed air supplies.
- d. Adjust. To maintain, within prescribed limits, by bringing into proper or exact position, or by setting the operating characteristics to the specified parameters.
- e. Align. To adjust specified variable elements of an item to bring about optimum or desired performance.
- f. Calibrate. To determine and cause corrections to be made or to be adjusted on instruments or test measuring and diagnostic equipments used in precision measurement. Consists of comparisons of two instruments, one of which is a certified standard of known accuracy, to detect and adjust any discrepancy in the accuracy of the instrument being compared.
- g. install. The act of emplacing, seating, or fixing into position an item, part, module (component or assembly) in a manner to allow the proper functioning of the equipment or system.
- h. Replace. The act of substituting a serviceable like type part, subassembly, or module (component or assembly) for an unserviceable counterpart.
- i. Repair. The application of maintenance services (inspect, test, service, adjust, align, calibrate, replace) or other maintenance actions (welding, grinding, riveting, straightening, facing, remachining, or resurfacing) to restore serviceability to an item by correcting, specific damage, fault, malfunction, or failure in a part, subassembly, module (component or assembly), end item, or system.
- j. Overhaul. That maintenance effort (service/action) necessary to restore an item to a completely serviceable/operational condition as prescribed by maintenance standards (i.e., DMWR) in appropriate technical publications. Overhaul is normally the highest degree of maintenance performed by the Army. Overhaul does not normally return an item to like new condition.
- k. Rebuild. Consists of those services actions necessary for the restoration of unserviceable equipment to a like new condition in accordance with original manufacturing standards. Rebuild is the highest degree of materiel maintenance applied to Army equipment. The rebuild operation includes the act of returning to zero those age measurements (hours, miles, etc.) considered in classifying Army equipments/components.

D-3. Column Entries

u. Column 1, Group Number. Column 1 lists group numbers, the purpose of which is to identify components, assemblies, subassemblies, and modules with the next higher assembly.

b. Column 2, Component/Assembly. Column 2 contains the noun names of components, assemblies, subassemblies, and modules for which maintenance is authorized.

c. Column 3, Maintenance Functions. Column 3 lists the functions to be performed on the item listed in column 2. When items are listed without maintenance functions, it is solely for purpose of having the group numbers in the MAC and RPSTL coincide.

d. Column 4, Maintenance Category. Column 4 specifies, by the listing of a "worktime" figure in the appropriate subcolumn (s), the lowest level of maintenance authorized to perform the function listed in column 3. This figure represents the active time required to perform that maintenance function at the indicated category of maintenance. If the number or complexity of the tasks within the listed maintenance function vary at different maintenance categories, appropriate "worktime" figures will be shown for each category. The number of task-hours specified by the "worktime" figure represents the average time required to restore an item (assembly, subassembly, component, module, end item or system) to a serviceable condition under typical field operating conditions. This time includes preparation time, troubleshooting time, and quality assurance/quality control time in addition to the time required to perform the specific tasks identified for the maintenance functions authorized in the maintenance allocation chart. Subcolumns of column 4 are as follows:

- C - Operator/Crew
- O- Organizational
- F - Direct Support
- H - General Support
- D - Depot

e. Column 5, Tools and Equipment. Column 5 specifies by code, those common tool sets (not individual tools) and special tools, test, and support equipment required to perform the designated function.

f. Column 6, Remarks. Column 6 contains an alphabetic code which leads to the remark in section IV, Remarks, which is pertinent to the item opposite the particular code.

D-4. Tool and Test Equipment Requirement (sect III)

a. Tool or Test Equipment Reference Code. The numbers in this column coincide with the numbers used in the tools and equipment column of the MAC. The numbers indicate the applicable tool or test equipment for the maintenance functions.

b. Maintenance Category. The codes in this column indicate the maintenance category allocated the tool or test equipment.

c. Nomenclature. This column lists the noun name and nomenclature of the tools and test equipment required to perform the maintenance functions.

d. National/NATO Stock Number. This column lists the National, NATO stock number of the specified tool or test equipment.

e. Tool Number. This column lists the manufacturer's part number of the tool followed by the Federal Supply Code for manufacturers (5-digit) in parentheses.

D-5. Remarks (sect IV)

a. Reference Code. This code refers to the appropriate item in section II, column 6.

b. Remarks. This column provides the required explanatory information necessary to clarify items appearing in section II.

| (1) GROUP NUMBER | (2) COMPONENT ASSEMBLY | (3) MAINTENANCE FUNCTION | (4) MAINTENANCE CATEGORY | | | | | (5) TOOLS AND EQPT. | (6) REMARKS |
|------------------------|---------------------------|--------------------------------|-----------------------------|-----|---|-----|-----|------------------------------|----------------|
| | | | C | O | F | H | D | | |
| 00 | Power Supply PP-7545/U | Inspect | | 0.2 | | | | 2 | A |
| | | Service | | 0.2 | | | | 1 | A |
| | | Test | | 0.1 | | | | | B |
| | | Inspect | | | | 0.3 | | 3 | C |
| | | Service | | | | 0.3 | | 3 | C |
| | | Test | | | | 1.5 | | 3-11 | D |
| | | Adjust | | | | 0.7 | | 3-11 | D |
| | | Repair | | | | 1.5 | | 3 | D |
| | | Overhaul | | | | | 1.5 | 3-11 | |

SECTION III TOOL AND TEST EQUIPMENT REQUIREMENTS
FOR
POWER SUPPLY PP-7545/U

| TOOL OR TEST EQUIPMENT REF CODE | MAINTENANCE CATEGORY | NOMENCLATURE | NATIONAL/NATO STOCK NUMBER | TOOL NUMBER |
|---------------------------------------|-------------------------|---|-------------------------------|-------------|
| 1 | O | MULTIMETER AN/URM-105 | 6625-00-581-2036 | |
| 2 | O | TOOL KIT, ELECTRONIC EQUIPMENT TK-101/G | 5180-00-064-5178 | |
| 3 | H, D | TOOL KIT, ELECTRONIC EQUIPMENT TK-105/G | 5180-00-610-8177 | |
| 4 | H, D | GENERATOR, SIGNAL SG-321/U | 6625-00-880-5791 | |
| 5 | H, D | MULTIMETER, AN/USM-223/U | 6625-00-999-7465 | |
| 6 | H, D | MULTIMETER, ELECTRONIC, ME-260/U | 6625-00-913-9781 | |
| 7 | H, D | OSCILLOSCOPE AN/USM-281 | 6625 00-106-9622 | |
| 8 | H, D | RESISTANCE BRIDGE, ZM-4()/U | 6625-00-500-9370 | |
| 9 | H, D | TRANSFORMER, VARIABLE CN-16/U | 5950-00-235-2086 | |
| 10 | H, D | VOLTMETER DIGITAL, AN/GSM-64 | 6625-00-022-7894 | |
| 11 | H, D | VOLTMETER DIGITAL, ME-202/U | 6625-00-709-0288 | |

| REFERENCE CODE | REMARKS |
|-------------------|-------------|
| A | Exterior |
| B | Operational |
| C | Interior |
| D | All |

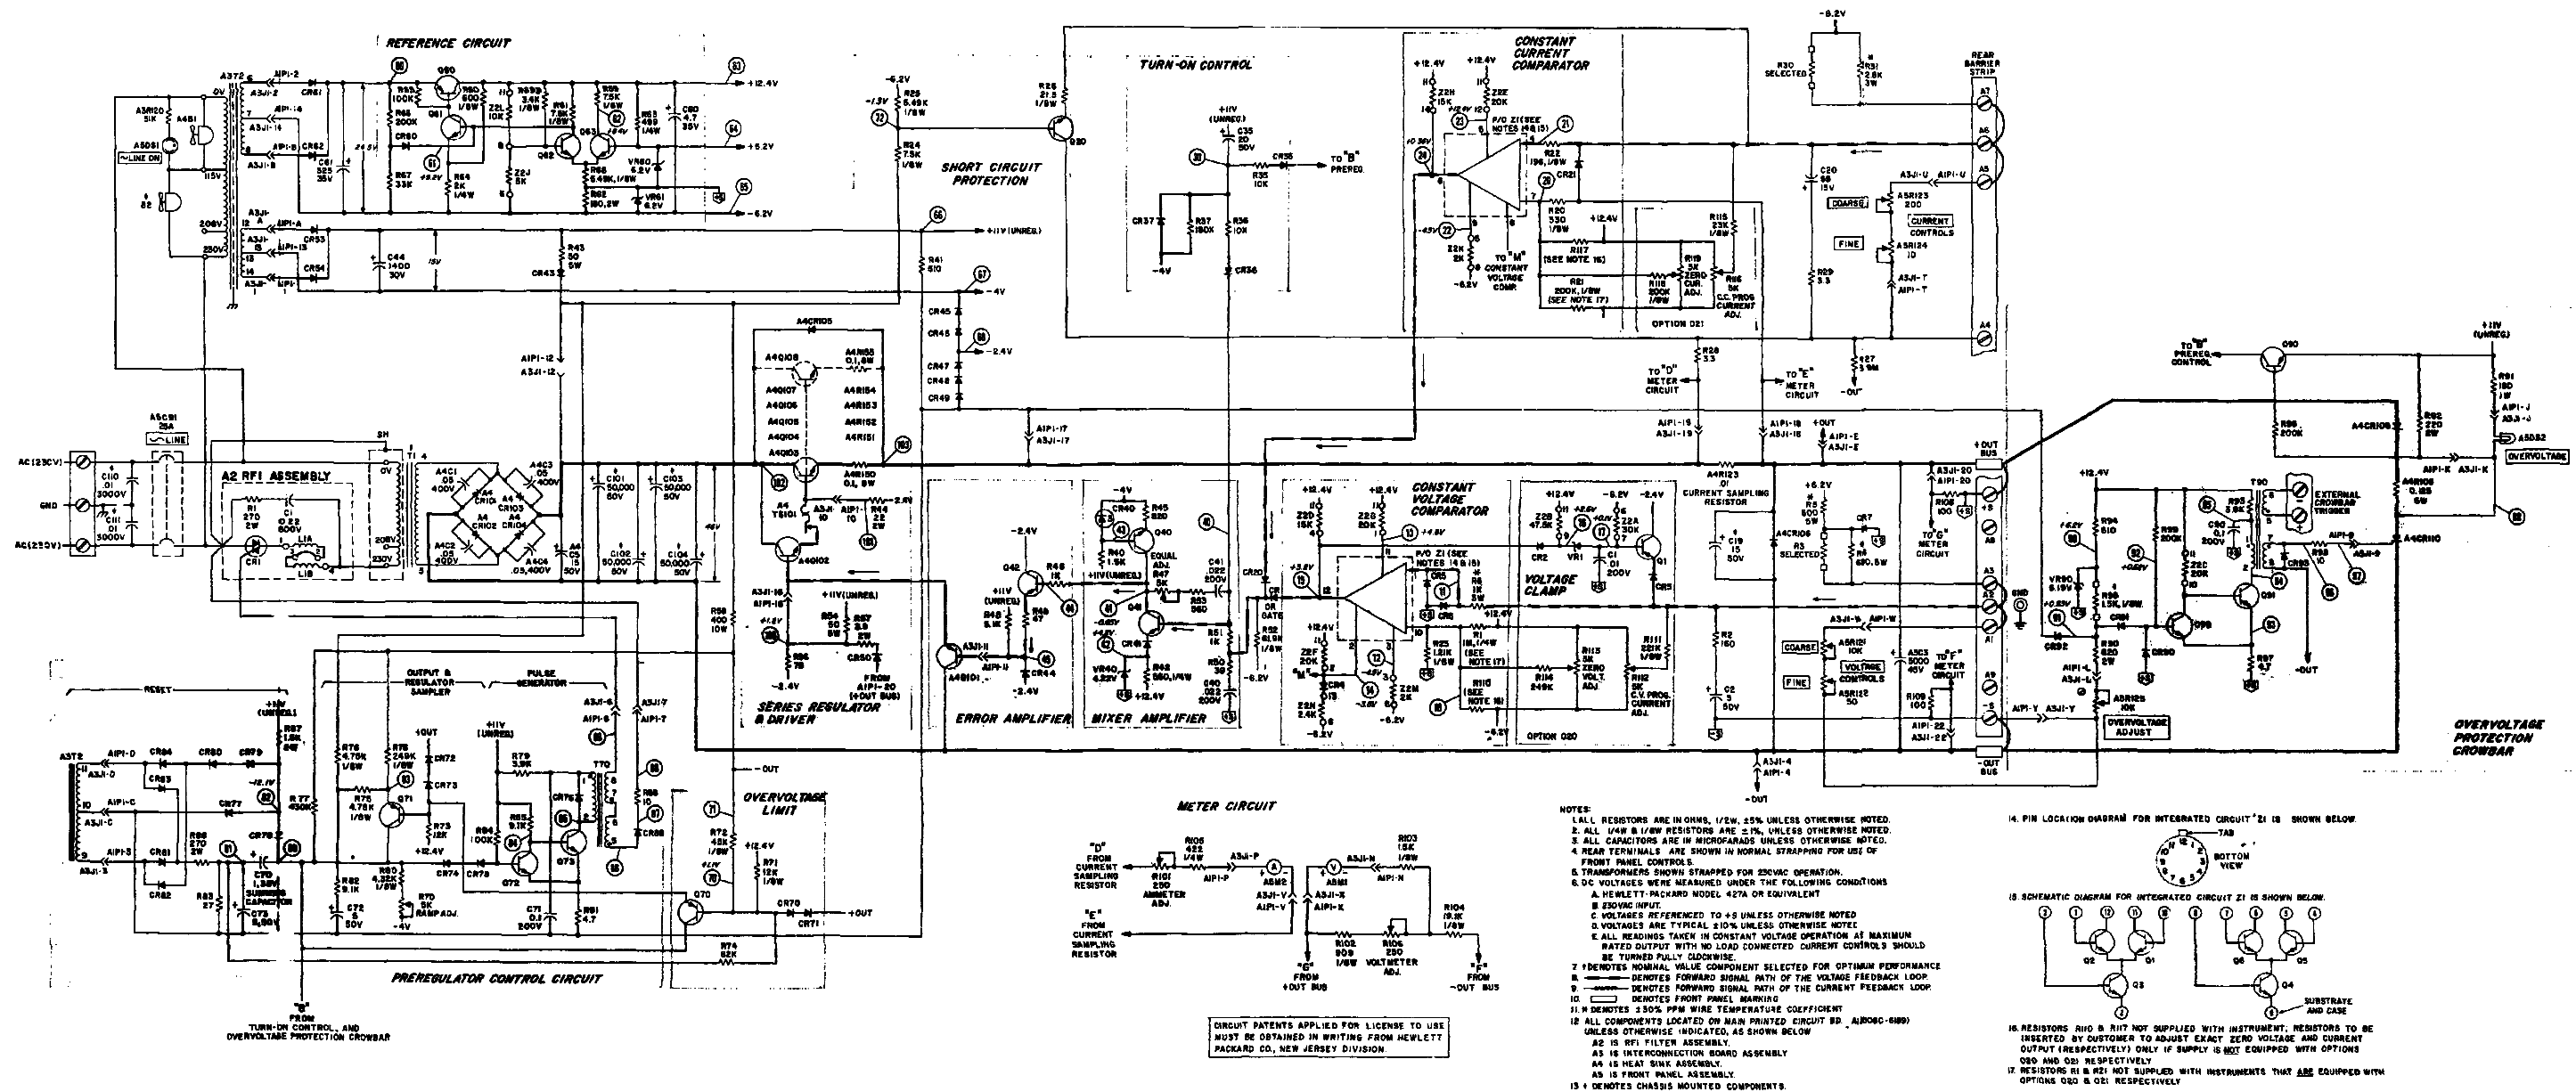


Figure 7-11. Schematic Diagram, Model 6269B

MANUAL CHANGES
 Model 6269B DC Power Supply
 Manual HP Part No. 06269-90002

Make all corrections in the manual according to errata below, then check the following table for your power supply serial number and enter any listed change(s) in the manual.

| SERIAL | | MAKE CHANGES |
|--------------|--|--------------|
| Prefix | Number | |
| ALL 1027A | 0245, 0246, 0255 | Errata 1 |
| 1027A | 0236, 0239, 0241 - 0244, 0247, 0248, 0252 -0254, 0256-0305 | 1,2 |
| 1027A | 0306 - 0355 | 1,2,3 |
| 1027A | 0356 - 0380 | 1,2, 3,4 |
| 1027A | 0381 - 0429 | 1 thru S |
| 1027A | 0430 - 0455 | 1 thru 6 |
| 1027A | 0456 - 0540 | 1 thru 7 |
| 1027A | 0541 - 0870 | 1 thru 8 |
| 1027A | 0871 - 1080 | 1 thru 9 |
| 1027A | 1081 - 1260 | 1 thru10 |
| 1436A | 1261 - 1470 | 1 thru 11 |
| 1506A | 1471 - 1510 | 1 thru 12 |
| 1513A | 1511 - 1630 | 1 thru 13 |
| 1535A | 1631 - up | 1 thru 14 |

ERRATA:

In the Replaceable Parts List, make the following changes:

Knob, front panel, black: Change to HP Part No. 0370-0084.

Option 007: Add knob, HP Part No. 0370-0137, quantity 1.

Option 008: Add knob, HP Part No. 0370-0137, quantity 1.

Option 009: Add knob, HP Part No. 0370-0137, quantity 2.

Under AS-Mechanical:

Bezel, Gray Plastic: Change to HP Part No. 4040-0293 (Black).

Under Chassis Assembly-Mechanical

Bus Bar, C103-C104: Change to HP Part No. 5000-6251.

CHANGE 1:

Add new RC network (C2 and R2) on the RFI filter board assembly A2. On the schematic, C2 and R2 are connected directly across Triac CR1 (C2 is on the inboard side of CR1).

C2 and R2 prevent the misfiring (turning on too soon) of triac CR1 by slowing the rate of voltage increase across L1A/B (in series with T1) when the triac turns off.

In the Replaceable Parts list under AZ RFI Filter Assembly:

C2: Add, 0.047 μ F, 600V, HP Part No. 0160-0005.
 R2: Add, 220 Ω , \pm 5%, 2W, HP Part No. 0811-1763.

In the Replaceable Parts list, make the following changes:

CR1: Delete Mfr. Part No. and change HP Part No. to 1884-0209.

Under A2-Mechanical:

Wafer, Insulated, CR1: Delete.

Shoulder Washer, CR1: Delete.

CHANGE 2:

In the Replaceable Parts List under A4 Heat Sink Assembly and on the Schematic, make the following changes:

A4R106 (in the Overvoltage Protection Crowbar):
 Change to fxd, ww, 0.2 Ω , 12W, HP Part No. 0811-3081.

A4Q102 (in the Series Regulator and Driver Circuit): change to HP Part No. 1854-0458.

CHANGE 3:

In the Replaceable Parts list, make the following changes:

A1C71: Change to 0.22 μ F, 80V, HP Part No. 0160-2453.

A1R5: Change to 680 Ω , 5W, HP Part No. 0811-2099.

A1R79: Change to 1.8k, $\frac{1}{2}$ W, HP Part No. 0686-1825.

ERRATA :

In the Replaceable Parts List on Page 6-8, under Chassis-Electrical, change:

C110, C111 to 3000 Vdc.

On the schematic, Figure 7-11, connect the +S output terminal to the A8 terminal on the inboard side of the + OUT BUS (these terminals are internally connected).

CHANGE 4:

In the Replaceable Parts List and on the schematic make the following changes:

A2C1: Change C1 to 0.1 μ F, 400Vdc, HP Part No. 0160-0013.

A1C41: Change C41 to 0.01 μ F, 200Vdc, HP Part No. 0160-0161.

CHANGE 5:

The standard colors for this instrument are now mint gray (for front and rear panels) and olive, gray (for all top, bottom, side, and other external surfaces). Option X95 designates use of the former color scheme of light gray and blue gray. Option A85 designates use of a light gray front panel with olive gray used for all other external surfaces. New part numbers are shown below:

| DESCRIPTION | HP PART NO. | | |
|----------------------------|-------------|-------------|------------|
| | STANDARD | OPTION A85 | OPTION X95 |
| Front Panel, Complete | 06269-60005 | ← | ← |
| Front Panel, Lettered | 06269-60009 | 06269-60006 | ← |
| Rear Panel | 5000-9475 | ← | 5000-6247 |
| Cover, Top and Bottom | 5000-9476 | ← | 5000-6250 |
| Chassis, Assembly (welded) | 5060-7972 | ← | 5060-6186 |

CHANGE 6:

In the Replaceable Parts list and on the schematic, make the following changes:

- A1R24: Change to 127k Ω , $\pm 25\%$, 1/8W, HP Part No. 0698-6659.
- A1R25: Change to 90.9k Ω , $\pm 1\%$, 1/8W, HP Part No. 0757-0464.

These changes insure that the Short Circuit Protection circuit operates correctly.

CHANGE 7:

In the replaceable parts table under AI Main P. C. Board - Electrical and on the schematic (in the Overvoltage Protection Crowbar circuit), make the following changes:

- C91: Add, 0.0047 μ F, 200V, HP Part No. 0160-0157.
- R99: Change to 10k Ω , $\pm 5\%$, 1/2W, HP Part No. 0686-1035.
- T70, T90: Change to HP Part No. 5080-7192.

The above changes have been made to improve the noise immunity of the overvoltage protection crowbar and thereby eliminate spurious triggering of the crowbar. Capacitor C91 is connected from between the collector of Q92 (which also connects to the base of Q91) and (+S). The top of R99 has been disconnected from +12.4V and connected instead to the junction of R94-R95 (the other end of R95 still connects to the base of Q92 through CR91).


In order to eliminate false triggering and ripple imbalance in the Preregulator Control Circuit, the following changes have been made:

Diode CR88 and resistor R88 are now in series

CHANGE 8:

In the replaceable parts table under A2 RFI Filter Assembly, change Triac CR1 HP Part No. to 1884-0218.

with the secondary winding of the new Pulse Generator Pulse Transformer T70 (HP Part No. 5080-7192) as shown below:

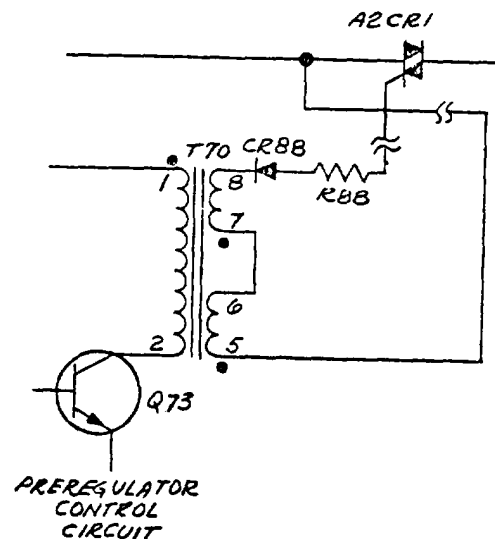

ERRATA :

In the parts list

Under A4 Mechanical, add Transistor Insulator, HP Part No. 0340-0795, quantity 2.
 Under AS Front Panel Assembly, change the HP Part No. of circuit breaker CB1 to 3105-0034.

CHANGE 9:

In the parts list under A4 Heat Sink Assembly, change the HP Part No. of CR101, 102, 105, and 108 to 1901-0318, and change CR103, 104, and 106 to 1901-0317.

CHANGE 10:

In the parts list under AS Front Panel Assembly, change R122 to 100 ohms, variable, HP Part No. 2100-1987.

CHANGE 11:

In the parts list and on the schematic, make the following additions and changes:

Under AS: Add C112, fxd, .01 μ F 3KV HP Part No. 0160-2568

Under A2: Add RV1, varistor, MOV HP Part No. 0837-0117

Change: C110 and C111 have been moved from chassis to the front panel assembly. Connect the added and changed components as shown below.

The following changes enable the master crowbar to trip the slave crowbar(s) when two or more units are connected in parallel. In the parts list under AI Main Printed Circuit Board and on the schematic, change A1C90 to .47 μ F 25Vdc HP Part No. 0160-0174. Also, add resistor A1R120, 4.7K 1/4W HP Part No. 0758-0005. Connect A1R20 in parallel with A1Z2C in the Overvoltage Protection Crowbar Circuit on schematic.

The following change prevents series regulator failure under short circuit conditions. On schematic, in the Constant Voltage Comparator Circuit disconnect anode of A1CR6 from A1Z1 pin 1 side of A1R6. Connect anode of A1CR6 to rear terminal A2 side of A1R6.

►CHANGE 13:

In the parts list under A4 Heat Sink Assembly, change the part number of CR101 and CR102 to 1901-0729 and change CR103 and CR104 to 1901-0730.


►CHANGE 14:

The RFI Assembly is changed to HP Part No. 06269-60010. This new RFI Assembly is completely interchangeable in all previously built 6269B power supplies.

In the parts list under A2-Mechanical make the following changes:

Change the Cover, RFI Assembly to 5020-2284.


Change the Heat Sink, RFI Filter Ass'y to 5020-2282.

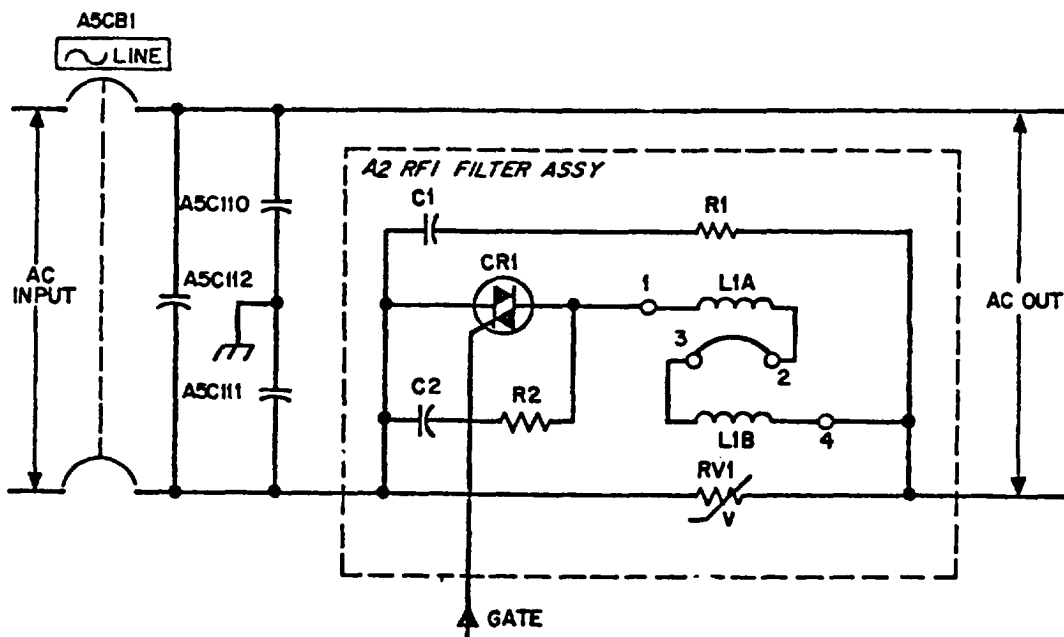

In the parts list, delete the entire listing under A2 RFI Filter Assembly and replace with the following.

A schematic of RFI Filter Assembly 06269-60010 is shown below. This schematic replaces the A2 Filter portion of the schematic shown in Change 11.

| REF. DESIG. | DESCRIPTION | HP PART NO. |
|-------------|--|-------------|
| A2 | RFI Filter Assembly | 06269-60010 |
| C1, C2 | fxd, metalized paper, 0.1 μ F 250Vac | 0160-4065 |
| C3 | fxd, metalized paper, .047 μ F 250v | 0160-4323 |
| C4 | fxd mica, 5000pF, 1kV | 0160-0899 |
| CR1 | Thyristor, Si. (Triac) | 1884-0248 |
| L1 | Filter choke, 20A | 5080-1782 |
| R1, R2 | fxd, metal oxide, 1.5k Ω 2W | 0698-3338 |
| R4 | fxd, metal oxide, 220 Ω 2W | 0698-3628 |
| RV1 | Varistor, MOV | 0837-0117 |

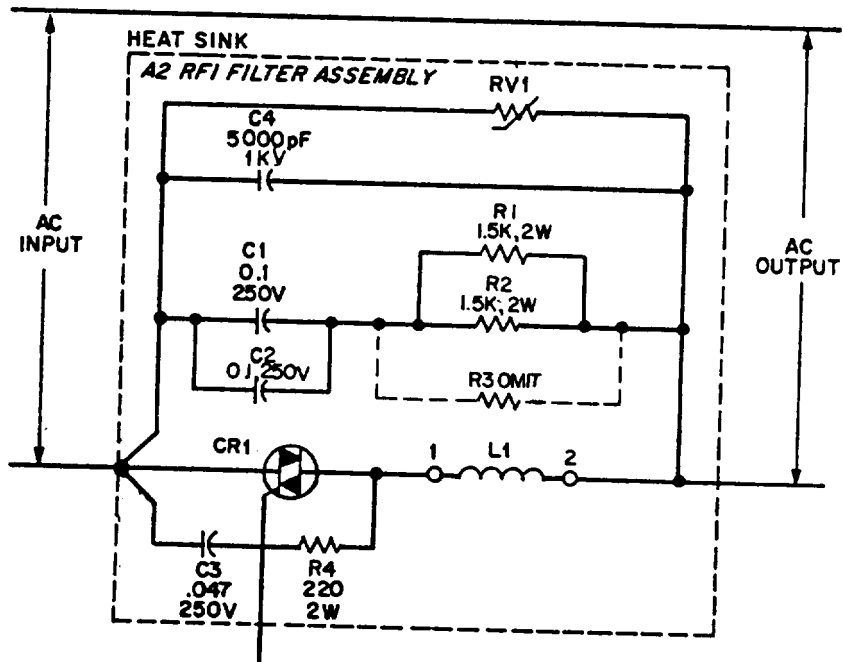

9-26-75

HEWLETT PACKARD

SALES & SERVICE OFFICES

AFRICA, ASIA, AUSTRALIA

ANGOLA
Telecra
Empresa Técnica de Equipamentos
Elétricos, S.A.R.L.
R. Barbosa Rodrigues, 42-1 DT
Caixa Postal 6487
Luanda
Tel: 2551516
Cable TELECRUA Luanda

AUSTRALIA
Hewlett-Packard Australia
Phy. Ltd
31-41 Joseph Street
Blackburn, Victoria 3130
P.O. Box 36
Doncaster East, Victoria 3109
Tel: 89-6351
Telex: 31-024
Cable HEWPAR Melbourne
Hewlett-Packard Australia
Phy. Ltd
31 Bridge Street
Pyrmont
New South Wales, 2073
Tel: 449-6566
Telex: 21561
Cable HEWPAR Sydney
Hewlett-Packard Australia
Phy. Ltd
153 Greenhill Road
Parkville, S.A. 5063
Tel: 272-5911
Telex: 82536 ADEL
Cable HEWPAR ADELAID
Hewlett-Packard Australia
Phy. Ltd
14 Spring Highway
Nedlands, W.A. 6009
Tel: 86-5455
Telex: 93859 PERTH
Cable HEWPAR PERTH
Hewlett-Packard Australia
Phy. Ltd
121 Worongong Street
Pyrmont, A.C.T. 2608
Tel: 95-2733
Telex: 82650 Canberra
Cable HEWPAR CANBERRA
Hewlett-Packard Australia
Phy. Ltd
5th Floor
Teachers Union Building
495-499 Boundary Street
Spring Hill, 4000 Queensland
Tel: 225-1544
Cable HEWPAR Brisbane

GUAM
Medical/Pocket Calculators Only
Guam Medical Supply, Inc.
Jay East Building, Room 210
P.O. Box 8967
Yamounging 96911
Tel: 648-4513
Cable EARMED Guam

HONG KONG
Schmidt & Co. (Hong Kong) Ltd
P.O. Box 297
Connaught Centre
39th Floor
Connaught Road Central
Hong Kong
Tel: H-255251-5
Telex: 74766 SCHMC HK
Cable SCHMIDTCO Hong Kong

INDIA
Blue Star Ltd
Kasturi Buildings
Janshree Tada Rd
Bombay 400 020
Tel: 29 50 21
Telex: 001-2156
Cable BLUEFROST
Blue Star Ltd
Sales
414 2 Vrk Savarkar Marg
Prabhadevi
Bombay 400 025
Tel: 45 78 87
Telex: 011-4093
Cable FROSTBLUE
Blue Star Ltd
Band Box House
Prabhadevi
Bombay 400 025
Tel: 45 73 01
Telex: 011-3751
Cable BLUESTAR
Yokogawa-Hewlett-Packard Ltd
Blue Star Ltd
7 Mare Street
P.O. Box 506
Calcutta 700 001
Tel: 23-0131
Telex: 021-7655
Cable BLUESTAR
Blue Star Ltd
7th & 8th Floor
Bhuvan House
91 Nehru Place
New Delhi 110024
Tel: 634770 & 635166
Telex: 031-2483
Cable BLUESTAR
Blue Star Ltd
Blue Star House
11-11A Magarath Road
Bangalore 560 025
Tel: 55608
Telex: 04-3-430
Cable BLUESTAR
Blue Star Ltd
Mesahis Mandran
100/1678 Mahatma Gandhi Rd
Coimbatore 582 018
Tel: 3208 0218/32382
Telex: 0885-514
Cable BLUESTAR
Blue Star Ltd
1-1-1171
Sarcom Devi Road
Bengaluru 500 003
Tel: 70126, 70127
Cable BLUEFROST
Tel: 015-459

INDONESIA
BERCA Indonesia P.T.
JLN. Abdul Muis 82
Jakarta
Tel: 40389 49886 49255 356038
JKT 42895
Cable BERCACON
BERCA Indonesia P.T.
63 JL. Raya Gubeng
Surabaya
Tel: 44309

ISRAEL
Electronics & Engineering Div
of Motorola Israel Ltd
17 Kremenetski Street
P.O. Box 25016
Tel: 38373
Telex: 33569
Cable BASTEL Tel-Aviv

JAPAN
Yokogawa-Hewlett-Packard Ltd
Onashi Building
59-1 Yoyogi 1-Chome
Shibuya-ku, Tokyo 151
Tel: 03-370-2281 92
Telex: 232-2024YHP MARKET
TKX 23-724
Cable YHPMARKET
Yokogawa-Hewlett-Packard Ltd
Chuo Bldg 4th Floor
4-20 Nishinakajima 5-Chome
Yokogawa-ku, Osaka-shi
Osaka 532
Tel: 06-304-6021
Yokogawa-Hewlett-Packard Ltd
Makino Building
24 Kami Sasayama-cho
Nakamura-ku, Nagoya 450
Tel: (052) 571-5171
Yokogawa-Hewlett-Packard Ltd
Tamagawa Building
2-24-1 Tsutsuryu-cho
Kanagawa-ku
Yokohama 221
Tel: 045-312-1252
Telex: 382-3204 YHP YOK
Yokogawa-Hewlett-Packard Ltd
Mito Inetu Building
105 Chome-1 San-no-maru
Mito Ibaragi 310
Tel: 0292-25-7470
Yokogawa-Hewlett-Packard Ltd
Inoue Building
1348-3 Asahi-cho 1-chome
Atsugi, Kanagawa 243
Tel: 0462-24-0432

KENYA
Technical Engineering
Services (E.A.) Ltd
P.O. Box 18311
Nairobi
Tel: 557726-556762
Cable PROTON
Medical Only
International Aeradio (E.A.) Ltd
P.O. Box 19012
Nairobi/Airport
Tel: 336055-56
Telex: 22201 22301
Cable INTAERIO Nairobi

KOREA
Samsung Electronics Co. Ltd
200, Fi. Dongbang Bldg 250 2-KA
C.P.O. Box 2775
Taepyung-Ro, Chung-Ku
Seoul
Tel: (23) 8811
Telex: 22575
Cable ELEKSTAR Seoul

MALAYSIA
Ternak Mutu Sdn Bhd
2 Lorong 13 BA
Section 13
Petaling Jaya Selangor
Tel: 54594 5498
Telex: MA 37605
Protin Engineering
P.O. Box 197
Lot 259 Satok Road
Kuching, Sarawak
Tel: 2400
Cable PROTEL ENG
MOZAMBIQUE
A.M. Goncalves Lda
182 1 Apt. 14 Av. D. Luis
Caixa Postal 107
Lourenco Marques
Tel: 27091, 27114
Telex: 6-203 NEGON Mo
Cable NEGON

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd
P.O. Box 9443
Courtenay Place
Wellington
Tel: 877-199
Cable HEWPACK Wellington
Hewlett-Packard (N.Z.) Ltd
Paikura Professional Centre
267 Patuanga Highway
Box 51092
Palustranga
Tel: 569-651
Cable ELECTRON Auckland

Yokogawa-Hewlett-Packard Ltd
Kumagaya Asah
Hachison Building
4th Floor
3-4 Tsutuba
Kumagaya, Satama 360
Tel: 0485-24-6563

ANALYTICAL MEDICAL ONLY
Medical Supplies N.Z. Ltd
Scientific Division
79 Carlton Gore Rd Newmarket
P.O. Box 1234
Auckland
Tel: 75-289
Cable DENTAL Auckland
Analytical Medical Only
Medical Supplies N.Z. Ltd
P.O. Box 1994
147-161 Tony St
Wellington
Tel: 850-799
Telex: 3856
Cable DENTAL Wellington
Analytical Medical Only
Medical Supplies N.Z. Ltd
P.O. Box 309
239 Stanmore Road
Christchurch
Tel: 892-019
Cable DENTAL Christchurch
Cable INTAERIO Nairobi

ANALYTICAL MEDICAL ONLY
Medical Supplies N.Z. Ltd
303 Great King Street
P.O. Box 233
Dunedin
Tel: 88-817
Cable DENTAL Dunedin

ANGERIA
The Electronics
Instrumentations Ltd
N68 770 Oyo Road
Oshodi House
P.M.B. 5402
Lagos
Tel: 61577
Telex: 31231 TEIL Nigeria
Cable THETEL Ibadan
The Electronics Instrumentations
Lagos Ltd
144 Agege Motor Road, Mushin
P.O. Box 6645
Lagos
Cable THETEL Lagos

PAKISTAN
Mushko & Company Ltd
Osman Chambers
Abdullah Hanger Road
Karachi-3
Tel: 511027 512927
Telex: 2094
Cable COOPERATOR Karachi
Mushko & Company Ltd
38B Sakate Town
Rawalpindi
Tel: 53-7955 mu 9
Telex: 57-0006
Service Department
Hewlett-Packard South Africa
(Phy.) Ltd
P.O. Box 120
Howard Place, Cape Province 7450
Pine Park Centre, Forest Drive
Rivervalley, Cape Province 7405
Tel: 53-7955 mu 9
Telex: 57-0006
Service Department
Hewlett-Packard South Africa
(Phy.) Ltd
P.O. Box 37099
Overport, Durban 4067
Brady House
841 Ridge Road
Durban, 4001
Tel: 88-7478
Tel: 85-35-81 85-34-91
Telex: 3274 ONLINE

PHILIPPINES
The Drive Advanced
Systems Corporation
Rico House
Amaroso cor. Herrera Str
Laguna Village, Makati
Metro Manila
Tel: 85-35-81 85-34-91
Telex: 3274 ONLINE

RHODESIA
Field Technical Sales
45 Kelvin Road North
P.O. Box 3458
Salisbury
Tel: 705231 (5 lines)
Telex: RH 4122

SINGAPORE
Hewlett-Packard Singapore
(Phy.) Ltd
1150 Depot Road
Awanbra P.O. Box 58
Singapore 4
Tel: 270-2355
Telex: HPSG RS 21486
Cable HEWPACK Singapore

SOUTH AFRICA
Hewlett-Packard South Africa
(Phy.) Ltd
Private Bag Wendywood
Sandton, Transvaal 2144
Hewlett-Packard Centre
Daphne Street Wendywood
Sandton, Transvaal 2144
Tel: 802-10408
Telex: 8-4782
Cable HEWPACK JOHANNESBURG
Service Department
Hewlett-Packard South Africa
(Phy.) Ltd
P.O. Box 33225
Graham Street 2018
451 Wynberg Extension 3
Sandton 2001
Tel: 536-8188 9
Telex: 6-2391
Hewlett-Packard South Africa
(Phy.) Ltd
P.O. Box 120
Howard Place, Cape Province 7450
Pine Park Centre, Forest Drive
Rivervalley, Cape Province 7405
Tel: 53-7955 mu 9
Telex: 57-0006
Service Department
Hewlett-Packard South Africa
(Phy.) Ltd
P.O. Box 37099
Overport, Durban 4067
Brady House
841 Ridge Road
Durban, 4001
Tel: 88-7478
Tel: 85-35-81 85-34-91
Telex: 3274 ONLINE

TAIWAN
Hewlett-Packard Far East Ltd
Taiwan Branch
39 Chung Hsiao West Road
Sec. 1, 7th Floor
Taipei
Tel: 3819160-4
Cable HEWPACK TAIPEI
Hewlett-Packard Far East Ltd
Taiwan Branch
68-2 Chung Cheng 3rd Road
Kaohsiung
Tel: (07) 242318-kaosung
Analytical Only
San Kwong Instruments Co. Ltd
No 20 Yung Sui Road
Taipei
Tel: 3715071-4 (5 lines)
Telex: 28294 SANKWANG
Cable SANKWANG TAIPEI

TANZANIA
Medical Only
International Aeradio (E.A.) Ltd
P.O. Box 861
Dar es Salaam
Tel: 21251 Ext. 265
Telex: 41030

THAILAND
UNIMESA Co. Ltd
Ecom Research Building
2538 Sukhumvit Ave
Bangkok
Tel: 3932387, 3930338
Cable UNIMESA Bangkok

UGANDA
Medical Only
International Aeradio (E.A.) Ltd
P.O. Box 2577
Kampala
Tel: 54388
Cable INTAERIO Kampala

ZAMBIA
R.J. Tibury (Zambia) Ltd
P.O. Box 2792
Lusaka
Tel: 73793
Cable ARJAYTEE Lusaka

OTHER AREAS NOT LISTED. CONTACT:
Hewlett-Packard International
3200 Hillview Ave
Palo Alto, California 94304
Tel: (415) 493-1501
Tel: 910-373-1267
Cable HEWPACK Palo Alto

CANADA

ALBERTA
Hewlett-Packard (Canada) Ltd
11620A - 188th Street
Edmonton T5C 3T9
Tel: (403) 432-3679
TWX 610-631-2431

BRITISH COLUMBIA
Hewlett-Packard (Canada) Ltd
837 E Cordova Street
Vancouver V6A 3R2
Tel: (604) 254-0531
TWX 610-822-5059

MANITOBA
Hewlett-Packard (Canada) Ltd
513 Century St
St. James
Winnipeg R3M 0L8
Tel: (204) 786-7581
TWX 610-671-3531

NOVA SCOTIA
Hewlett-Packard (Canada) Ltd
800 Windmill Road
Dartmouth B3B 1L1
Tel: (902) 488-7820
TWX 60-271-4824 HWX

ONTARIO
Hewlett-Packard (Canada) Ltd
1020 Morrison Dr
Ottawa K2M 8K7
Tel: (613) 820-6483
TWX 610-563-1636

QUEBEC
Hewlett-Packard (Canada) Ltd
275 Hymus Blvd
Pointe Claire H9R 1G7
Tel: (514) 697-4232
TWX 810-422-3022
TLX 05-821521 HPCL

FOR CANADIAN AREAS NOT LISTED:
Contact Hewlett-Packard (Canada)
Ltd in Mississauga

CENTRAL AND SOUTH AMERICA

ARGENTINA
Hewlett-Packard Argentina
S.A.
Av. Leandro N. Alem 622 - 12
1001 Buenos Aires
Tel: 31-6063 4 5 6 and 7
Telex: 322443 AR DICV
Cable HEWPACK ARG

BOLIVIA
Casa Kavin S.A.
Cable Potosi 1130
P.O. Box 500
La Paz
Tel: 41330, 53221
Telex: CWC BX 5298 IIT 3560062
Cable KAVLIN

BRAZIL
Hewlett-Packard do Brasil
I.E.C. Ltda
Av. Rio Negro 980
Aparecida
05400 Barueri SP
Tel: 429-3222

Hewlett-Packard do Brasil
I.E.C. Ltda
Rua Siqueira Campos 53
Copacabana
20000-Flora de Janeiro
Tel: 257-80-94-000 (021)
Telex: 38-212-905 HEWP-BR
Cable HEWPACK
Rio de Janeiro

CHILE
Calcagn y Metcalf Ltda
Alameda 980-DI 807
Casita 2118
Santiago 1
Tel: 398013
Telex: 05400001 CALNET
Cable CALNET Santiago

COLOMBIA
Instrumentacion
Henri A. Langebak & Kier S.A.
Carrera 7 No. 48-75
Apartado Aéreo 6267
Bogota, D.E.
Tel: 69-88-77
Cable AARIS Bogota
Telex: 044-400

COSTA RICA
Ciencia Costarricense S.A.
Avenida 2, Calle 5
San Pedro de Montes de Oca
Apartado 10159
San Jose
Tel: 24-38-20 24-08-19
Telex: 2367 GALGUR CR
Cable GALGUR

ECUADOR
Calculators Only
Computadoras y Equipos
Electrónicos
P.O. Box 6423 CCJ
Eloy Alfaro #1824 3 Piso
Quito
Tel: 453482
Telex: 02-2113 Sagis Ed
Cable Sagis-Quito

EL SALVADOR
Instrumentacion y Procesamiento
Electronico de El Salvador
Bulevar de los Heroes 11-48
San Salvador
Tel: 252787

GUATEMALA
I.P.E.S.A.
Avenida La Reforma 3-48
Zona 9
Guatemala City
Tel: 53627 64786
Telex: 4192 Teletro Gu

MEXICO
Hewlett-Packard Mexicana
S.A. de C.V.
Av. Periferico Sur No. 6501
Tlalpam, Xochimilco
Mexico 23, D.F.
Tel: 905-678-4600

Hewlett-Packard Mexicana
S.A. de C.V.
Ave. Constitucion No. 2184
Monterrey, N.L.
Tel: 48-71-32 48-71-84
Telex: 038-410

NICARAGUA
Roberto Teran G
Apartado Postal 689
Managua
Tel: 25114, 23412, 23454
Cable ROTERAN Managua

PANAMA
Electronico Balboa S.A.
P.O. Box 4929
Cable Samuel Lewis
Calle de Panama
Tel: 64-2700
Telex: 3483103 Curunda
Canal Zone
Cable ELECTRON Panama

PERU
Compañia Electro Medica S.A.
Los Flamencos 145
San Isidro Casilla 1030
Lima
Tel: 41-4325
Cable ELMED Lima

PUERTO RICO
Roberto Teran G
Puerto Rico Branch Office
Calle 272
No. 203 Urb. Country Club
Carolina 00924
Tel: (809) 782-2255
Telex: 345 0514

URUGUAY
Pablo Ferrando S.A.
Comercial e Industrial
Avenida Italia 28
Casilla de Correo 370
Montevideo
Tel: 40-3100
Cable RAJIOD Montevideo

VENEZUELA
Hewlett-Packard de Venezuela
C.A.
P.O. Box 50933
Caracas 105
Los Ruices Norte
38 Transversal
Edificio Segre
Caracas 107
Tel: 35-00-11 (20 lines)
Telex: 25146 HEWPACK
Cable HEWPACK Caracas

FOR AREAS NOT LISTED. CONTACT:
Hewlett-Packard
Inter-Américas
3200 Hillview Ave
Palo Alto, California 94304
Tel: (415) 493-1501
TWX 910-373-1260
Cable HEWPACK Palo Alto
Telex: 034-8300 034-6493

EUROPE, NORTH AFRICA AND MIDDLE EAST

AUSTRIA

Hewlett-Packard Ges m b H
Handelsstr. 52
P.O. Box 7
A-1205 Vienna
Tel (0222) 351621 to 27
Cable HEWPAK Vienna
Telex 75923 hewpak a

BELGIUM

Hewlett-Packard Benelux
S.A. N.V.
Avenue de Col-Vert 1
(Grootraklaan)
B-1170 Brussels
Tel (02) 872 22 40
Cable PALOBEN Brussels
Telex 23 494 paloben br

CYPRUS

Kyprionics
19 Gregorios & Xenopoulos Rd
P.O. Box 1152
Cy-Helios
Tel 45628-29
Cable KYPRIONICS PANDEHIS
Telex 3018

CZECHOSLOVAKIA

Vývoje a Provoz Ústřední
Výzkumný Ústav v Bechovicích
CSSR-25097 Bechovice u Prahy
Tel 89 93 41
Telex 151333

Institute of Medical Biophysics

Výzkumný Ústav Laborator Biophysiky
Jedlova 6
CS-88346 Bratislava-Kramarske
Tel 44-551-45-541

DOR

Entwicklungs-labor der TU Dresden
Forschungsinstitut Mensburg
DDR-7305
Waldheim/Mensburg
Tel 37 667

Export Contact AG Zuench

Guenther Forster
Schlegelstrasse 15
1040 Berlin
Tel 42-74-12
Telex 111889

DENMARK

Hewlett-Packard A/S
Cafavaj 52
DK-3480 Birkeland
Tel (02) 81 66 40
Cable HEWPAK AS
Telex 37409 hpas dk

Hewlett-Packard A/S

Norway
DK-8650 Silkeborg
Tel (06) 82 71 66
Telex 37409 hpas dk
Cable HEWPAK AS

FINLAND

Hewlett-Packard Oy
Mantolintie 5
P.O. Box 6
SF-00211 Helsinki 21
Tel (90) 6923031
Cable HEWPAKOW Helsinki
Telex 12-1563 HEWPA SF

FRANCE

Hewlett-Packard France
Quartier de Courtoisbois
Boris Pasternak No 6
F-91401 Orsay Cedex
Tel (1) 907 78 25
Cable HEWPAK Orsay
Telex 60048

Hewlett-Packard France

Agence Regionale
La Saque
Chemin des Moulins
B.P. 102
F-69130 Ecullay
Tel (78) 33 81 25
Cable HEWPAK Ecullay
Telex 31 06 17

Hewlett-Packard France

Agence Regionale
Chemin de la Capere
20
F-31300 Toulouse-Le Mirail
Tel (61) 40 11 12
Cable HEWPAK 51957
Telex 510957

Hewlett-Packard France

Agence Regionale
Aéroport principal de
Marseille-Mangane
F-13711 Mangrane
Tel (91) 89 12 36
Cable HEWPAK MARGN
Telex 410770

Hewlett-Packard France

Agence Regionale
8.P. 1124
F-35014 Rennes Cedex
Tel (88) 35 23 20 21
Tel (88) 89 81 81
Cable HEWPAK STRBG
Telex 21 59 621 gr

Hewlett-Packard France

Agence Regionale
Centre Vauban
201 rue Colbert
F-59000 Lille
Tel (20) 51 44 14
Telex 202744

Hewlett-Packard France

Centre d'Affaires Paris-Nord
Bâtiment Ampère
Rue de la Commune de Paris
8.P. 300
F-93153 Le Blanc Mesnil Cedex
Tel (01) 931 88 50

Hewlett-Packard GmbH

Technisches Büro Nuremberg
Neumayer Str 90
D-8500 Nuremberg
Tel (091) 56 30 83 85
Telex 0623 860

Hewlett-Packard GmbH

Technisches Büro München
Unterhachinger Strasse 28
ISAR Center
Tel (49) 66 48 88
Telex 41612 Hewpacu

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via d'Agliardi 7
I-20100 Milano
Tel (2) 6251 (10 lines)
Cable HEWPAKIT Milano
Telex 32046

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
(ang. Via Visentini)
I-35100 Padova
Tel (49) 66 48 88
Telex 41612 Hewpacu

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via d'Agliardi 7
I-20100 Milano
Tel (052) 32 04
Telex 32046 via Milano

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-00143 Roma
Tel (06) 54 69 61
Cable HEWPAKIT Roma

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Corso Giovanni Lanza
I-10131 Torino
Tel (011) 682245-659308
Cable HEWPAKIT Roma

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via Principe Acaola 43 G.C.
I-96128 Catania
Tel (095) 37 05 04
Cable HEWPAKIT Catania

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via Ameglio Vespucci 9
I-80142 Napoli
Tel (081) 33 77 11
Cable HEWPAKIT Catania

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arimondi 10
I-40137 Bologna
Tel (051) 30 78 87
Cable HEWPAKIT Bologna

Hewlett-Packard Italiana S.p.A.

Medica ony
Hewlett-Packard Italiana S.p.A.
Via G. Arim

By Order of the Secretary of the Army:

E. C. MEYER
General, United States Army
Chief of Staff

Official:

J. C. PENNINGTON
Major General, United States Army
The Adjutant General

Distribution:

Active Army:

| | |
|--------------------------------|--------------------------|
| TSG (1) | USAERDAA (1) |
| USAARENBD (1) | USAERDAW (1) |
| USAINSCOM (2) | Army Dep (1) except |
| TRADOC (2) | SAAD (20) |
| DARCOM (1) | TOAD (14) |
| TECOM (2) | SHAD (2) |
| OS Maj Cored (2) | USA Dep (1) |
| USACC (2) | Sig Sec USA Dep (1) |
| HISA (Ft Monmouth) (21) | Units org under fol TOE: |
| Armies (1) | (2 copies each unit) |
| USASIGS (10) | 29-207 |
| Svc Colleges (1) | 29-610 |
| Ft Richardson (CERCOM Ofc) (1) | (1 copy each unit) |
| Ft Carson (5) | 29-134 |
| Ft Gillem (10) | 29-136 |
| WSMR (1) | |

ARNG: None

USAR: None

For explanation of abbreviations used, see AR 310-50.



SOMETHING WRONG WITH THIS MANUAL?

THEN... JOT DOWN THE DOPE ABOUT IT ON THIS FORM, TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

FROM: (YOUR UNIT'S COMPLETE ADDRESS)

Commander
Stateside Army Depot
ATTN: AMSTA-US
Stateside, N.J. 07703

DATE 4 April 1978

PUBLICATION NUMBER

TM 11-5840-340-14&P

DATE

23 Jan 74

TITLE

Radar Set W/PLC-76

BE EXACT... PIN-POINT WHERE IT IS

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

TEAR ALONG DOTTED LINE

| PAGE NO. | PARA-GRAPH | FIGURE NO. | TABLE NO. |
|----------|------------|------------|-----------|
| 2-25 | 2-28 | | |
| 3-10 | 3-3 | | 3-1 |
| 5-6 | 5-8 | | |
| E-5 | | | |
| E-8 | | E-3 | |
| E-9 | | | |

Recommend that the installation antenna alignment procedure be changed throughout to specify a 2° IFF antenna lag rather than 1°.

REASON: Experience has shown that with only a 1° lag, the antenna servo system is too sensitive to wind gusting in excess of 5 knots, and has a tendency to rapidly accelerate and decelerate as it hunts, causing strain to the drive train. Hunting is minimized by adjusting the lag to 2° without degradation of operation.

Item 5, Function column. Change "2 db" to "3db."

REASON: The adjustment procedure for the TRANS POWER FAULT indicator calls for a 3 db (500 watts) adjustment to light the TRANS POWER FAULT indicator.

Add new step f.1 to read, "Replace cover plate removed in step e.1, above."

REASON: To replace the cover plate.

For item 2, change the NSN to read: 5835-00-134-9186.

REASON: Accuracy.

Identify the cover on the junction box (item no. 5).

REASON: It is a separate item and is not called out on figure 19.

Add the cover of the junction box as an item in the listing for figure 19.

REASON: Same as above.

TYPED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SSG I. M. DeSpirito 999-1776

SIGN HERE:

SSA I. M. DeSpirito

DA FORM 2028-2
1 AUG 74

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR MANUAL "FIND" MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE, \$300

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD-314



Commander
US Army Communications and
Electronics Materiel Readiness Command
ATTN: DRSEL-ME-MQ
Fort Monmouth, New Jersey 07703

TEAR ALONG DOTTED LINE

FOLD BACK

REVERSE OF DA FORM 2026-2

THE METRIC SYSTEM AND EQUIVALENTS

NEAR MEASURE

1 Centimeter = 10 Millimeters = 0.01 Meters = 0.3937 Inches
 1 Meter = 100 Centimeters = 1000 Millimeters = 39.37 Inches
 1 Kilometer = 1000 Meters = 0.621 Miles

WEIGHTS

1 Gram = 0.001 Kilograms = 1000 Milligrams = 0.035 Ounces
 1 Kilogram = 1000 Grams = 2.2 lb.
 1 Metric Ton = 1000 Kilograms = 1 Megagram = 1.1 Short Tons

LIQUID MEASURE

1 Milliliter = 0.001 Liters = 0.0338 Fluid Ounces
 1 Liter = 1000 Milliliters = 33.82 Fluid Ounces

SQUARE MEASURE

1 Sq. Centimeter = 100 Sq. Millimeters = 0.155 Sq. Inches
 1 Sq. Meter = 10,000 Sq. Centimeters = 10.76 Sq. Feet
 1 Sq. Kilometer = 1,000,000 Sq. Meters = 0.386 Sq. Miles

CUBIC MEASURE

1 Cu. Centimeter = 1000 Cu. Millimeters = 0.06 Cu. Inches
 1 Cu. Meter = 1,000,000 Cu. Centimeters = 35.31 Cu. Feet


TEMPERATURE

$5/9(^{\circ}\text{F} - 32) = ^{\circ}\text{C}$
 212° Fahrenheit is equivalent to 100° Celsius
 90° Fahrenheit is equivalent to 32.2° Celsius
 32° Fahrenheit is equivalent to 0° Celsius
 $9/5^{\circ}\text{C} + 32 = ^{\circ}\text{F}$

APPROXIMATE CONVERSION FACTORS

| TO CHANGE | TO | MULTIPLY BY |
|------------------------|----------------------|-------------|
| Inches | Centimeters | 2.540 |
| Feet | Meters | 0.305 |
| Yards | Meters | 0.914 |
| Miles | Kilometers | 1.609 |
| Square Inches | Square Centimeters | 6.451 |
| Square Feet | Square Meters | 0.093 |
| Square Yards | Square Meters | 0.836 |
| Square Miles | Square Kilometers | 2.590 |
| Acres | Square Hectometers | 0.405 |
| Cubic Feet | Cubic Meters | 0.028 |
| Cubic Yards | Cubic Meters | 0.765 |
| Fluid Ounces | Milliliters | 29.573 |
| its | Liters | 0.473 |
| arts | Liters | 0.946 |
| allons | Liters | 3.785 |
| Ounces | Grams | 28.349 |
| Pounds | Kilograms | 0.454 |
| Short Tons | Metric Tons | 0.907 |
| Pound-Feet | Newton-Meters | 1.356 |
| Pounds per Square Inch | Kilopascals | 6.895 |
| Miles per Gallon | Kilometers per Liter | 0.425 |
| Miles per Hour | Kilometers per Hour | 1.609 |

| TO CHANGE | TO | MULTIPLY BY |
|--------------------|------------------------|-------------|
| Centimeters | Inches | 0.394 |
| Meters | Feet | 3.280 |
| Meters | Yards | 1.094 |
| Kilometers | Miles | 0.621 |
| Square Centimeters | Square Inches | 0.155 |
| Square Meters | Square Feet | 10.764 |
| Square Meters | Square Yards | 1.196 |
| Square Kilometers | Square Miles | 0.386 |
| Square Hectometers | Acres | 2.471 |
| Cubic Meters | Cubic Feet | 35.315 |
| Cubic Meters | Cubic Yards | 1.308 |
| Milliliters | Fluid Ounces | 0.034 |
| Liters | Pints | 2.113 |
| Liters | Quarts | 1.057 |
| ers | Gallons | 0.264 |
| ms | Ounces | 0.035 |
| ograms | Pounds | 2.205 |
| Metric Tons | Short Tons | 1.102 |
| Newton-Meters | Pounds-Feet | 0.738 |
| Kilopascals | Pounds per Square Inch | 0.145 |
| ometers per Liter | Miles per Gallon | 2.354 |
| ometers per Hour | Miles per Hour | 0.621 |

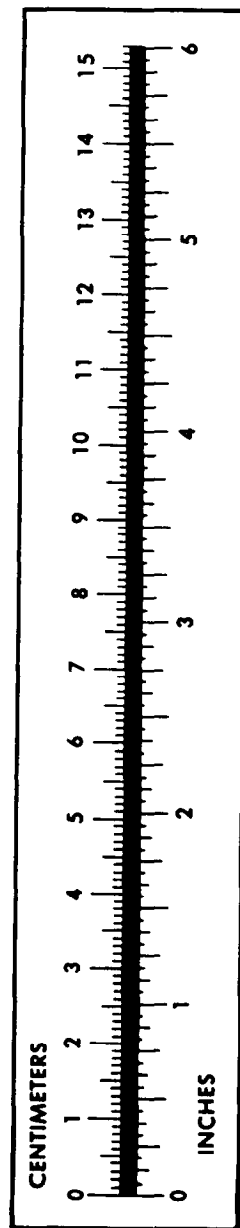

PIN: 046413-000

K4XL's **BAMA**

This manual is provided **FREE OF CHARGE** from the "BoatAnchor Manual Archive" as a service to the Boatanchor community.

It was uploaded by someone who wanted to help you repair and maintain your equipment.

If you paid anyone other than BAMA for this manual, you paid someone who is making a profit from the free labor of others without asking their permission.

You may pass on copies of this manual to anyone who needs it. But do it without charge.

Thousands of files are available without charge from BAMA. Visit us at <http://bama.sbc.edu>

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>