

HP Photosmart 370 series User's Guide

English



Copyrights and trademarks

© Copyright 2004 Hewlett-Packard Development Company, L.P.

The information contained herein is subject to change without notice. Reproduction, adaptation or translation without prior written permission is prohibited, except as allowed under the copyright laws.

Notice

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

The Hewlett-Packard Development Company shall not be liable for incidental or consequential damages in connection with, or arising out of the furnishing, performance, or use of this document and the program material which it describes.

Trademarks

HP, the HP logo, and Photosmart are property of Hewlett-Packard Development Company, L.P.

The Secure Digital logo is a trademark of the SD Association.

Microsoft and Windows are registered trademarks of Microsoft Corporation.

CompactFlash, CF, and the CF logo are trademarks of the CompactFlash Association (CFA).

Memory Stick, Memory Stick Duo, Memory Stick PRO, and Memory Stick PRO Duo are trademarks or registered trademarks of Sony Corporation.

MultiMediaCard is a trademark of Infineon Technologies AG of Germany, and is licensed to the MMCA (MultiMediaCard Association).

SmartMedia is a trademark of Toshiba Corporation.

xD-Picture Card is a trademark of Fuji Photo Film Co., Ltd., Toshiba Corporation, and Olympus Optical Co., Ltd.

Mac, the Mac logo, and Macintosh are registered trademarks of Apple Computer, Inc.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by

Hewlett-Packard Company is under license.

PictBridge and the PictBridge logo are trademarks of the Camera & Imaging Products Association (CIPA).

Other brands and their products are trademarks or registered trademarks of their respective holders.

The embedded software in the printer is based in part on the work of the Independent JPEG Group.

The copyrights to certain photos within this document are retained by the original owners.

Regulatory model identification number SDGOA-0405

For regulatory identification purposes, your product is assigned a Regulatory Model Number. The Regulatory Model Number for your product is SDGOA-0405. This regulatory number should not be confused with the marketing name (HP Photosmart 370 series printer) or product number (Q3419A).

Safety information

Always follow basic safety precautions when using this product to reduce risk of injury from fire or electric shock.



Warning To prevent fire or shock hazard, do not expose this product to rain or any type of moisture.

- Read and understand all instructions in the *HP Photosmart Setup Guide*.
- Use only a grounded electrical outlet when connecting the unit to a power source. If you do not know whether the outlet is grounded, check with a qualified electrician.
- Observe all warnings and instructions marked on the product.
- Unplug this product from wall outlets before cleaning.
- Do not install or use this product near water or when you are wet.
- Install the product securely on a stable surface.
- Install the product in a protected location where no one can step on or trip over the power cord,

and where the power cord will not be damaged.

- If the product does not operate normally, see the troubleshooting information in the onscreen HP Photosmart Printer Help.
- There are no operator serviceable parts inside. Refer servicing to qualified service personnel.
- Use in a well-ventilated area.

Environmental statements

Hewlett-Packard Company is committed to providing quality products in an environmentally sound manner.

Protecting the environment

This printer has been designed with several attributes to minimize impact on our environment. For more information, go to HP's Commitment to the Environment website at www.hp.com/hpinfo/globalcitizenship/environment/.

Ozone production

This product generates no appreciable ozone gas (O₃).

Energy consumption

Energy usage drops significantly while in ENERGY STAR® mode, which saves natural resources and saves money without affecting the high performance of this product. This product qualifies for ENERGY STAR, which is a voluntary program established to encourage the development of energy-efficient office products.



ENERGY STAR is a U.S. registered mark of the U.S.

EPA. As an ENERGY STAR partner, Hewlett-Packard Company has determined that this product meets the ENERGY STAR guidelines for energy efficiency. For more information, go to www.energystar.gov.

Paper use

This product is suited for the use of recycled paper according to DIN 19309.

Plastics

Plastic parts over 24 grams (0.88 ounces) are marked according to international standards that enhance the ability to identify plastics for recycling purposes at the end of the printer life.

Material safety data sheets

Material Safety Data Sheets (MSDS) can be obtained from the HP website at www.hp.com/go/msds. Customers without Internet access should contact Customer Care.

Recycling program

HP offers an increasing number of product return and recycling programs in many countries, and partners with some of the largest electronics recycling centers throughout the world. HP conserves resources by reselling some of its most popular products.

This HP product contains lead in the solder, which may require special handling at the end of its life.

Contents

1	Welcome	3
	Printer parts	4
	Available accessories	7
	Printer menu	8
2	Getting ready to print	15
	Loading paper	15
	Choosing the right paper	15
	Loading your paper	15
	Inserting print cartridges	16
	Inserting memory cards	19
	Supported file formats	19
	Inserting a memory card	19
	Removing a memory card	21
3	Printing without a computer	23
	Getting your photos from camera to printer	23
	Deciding which photos to print	24
	Selecting photos to print	25
	Getting creative	26
	Improving the quality of your photos	27
	Printing your photos	28
	Selecting a layout	28
	Setting print quality	28
	Selecting a print method	29
4	Getting connected	31
	Connecting to other devices	31
	Connecting through HP Instant Share	32
5	Maintaining and transporting the printer	33
	Cleaning and maintaining the printer	33
	Cleaning the outside of the printer	33
	Automatically cleaning the print cartridge	33
	Printing a test page	34
	Aligning the print cartridge	34
	Storing the printer and print cartridges	35
	Storing the printer	35
	Storing the print cartridges	35
	Maintaining the quality of photo paper	36
	Storing photo paper	36
	Handling photo paper	36
	Transporting the printer	36
6	Troubleshooting	39
	Printer hardware problems	39
	Printing problems	42
	Bluetooth printing problems	44
	Error messages	45

7	Specifications	49
	System requirements	49
	Printer specifications	49
8	Customer Care	53
	Customer Care by phone	53
	Placing a call	54
a	Installing the software	57
	Index	59

1 Welcome

Thank you for purchasing an HP Photosmart 370 series printer! With your new, compact photo printer you can easily print beautiful photos with or without a computer. This guide explains how to print photos from the printer without connecting it to a computer. To learn how to print from your computer, install the printer software and click **Help** in the HP Director. See [Installing the software](#).

Among other things, you'll learn how to:



Print borderless photos with colorful, customized frames (See [Getting creative](#).)



Transform your photos into instant classics with black-and-white, sepia, or other color effects (See [Getting creative](#).)



Improve the quality of your photos by removing red eye, brightening, and improving the contrast (See [Improving the quality of your photos](#).)


Your new printer comes with the following documentation:

- **Setup Guide:** The *HP Photosmart 370 series Setup Guide* explains how to set up the printer and print your first photo.
- **User's Guide:** The *HP Photosmart 370 series User's Guide* is the book you are reading. This book describes the basic features of the printer, explains how to use the printer without connecting a computer, and contains hardware troubleshooting information.
- **HP Photosmart Printer Help:** The onscreen HP Photosmart Printer Help describes how to use the printer with a computer and contains software troubleshooting information.

After you have installed the HP Photosmart printer software on your computer, you can view the onscreen Help:


- **Windows PC:** From the **Start** menu, select **Programs** (in Windows XP, select **All Programs**) > **HP** > **Photosmart 320, 370, 7400, 7800, 8100, 8400, 8700 series** > **Photosmart Help**.
- **Macintosh:** Select **Help** > **Mac Help** in the Finder, then select **Library** > **HP Photosmart Printer Help for Macintosh**.

Printer parts

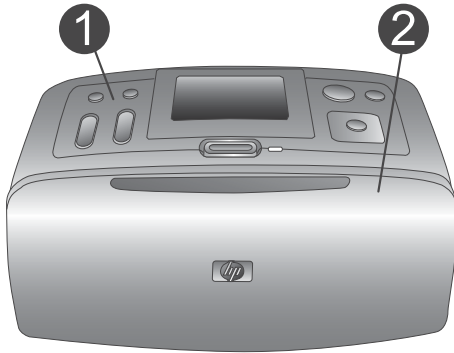

Front of printer


- 1 **Control panel**
Control the basic functions of the printer from here.
- 2 **Out tray (closed)**
Open this to print, insert a memory card, or connect a compatible digital camera.

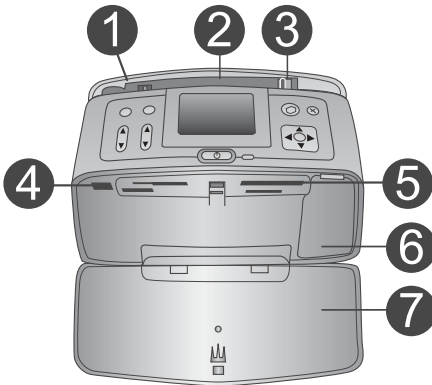

Inside front of printer

- 1 **In tray**
Load paper here.
- 2 **In tray extender**
Pull out to support paper.
- 3 **Paper-width guide**
Move to width of current paper to position the paper properly.
- 4 **Camera port**
Connect a PictBridge digital camera to this port or the optional HP Bluetooth wireless printer adapter.
- 5 **Memory card slots**
Insert memory cards into these slots. See [Inserting memory cards](#).
- 6 **Print cartridge door**
Open to insert or remove a print cartridge.
- 7 **Out tray (open)**
The printer deposits printed photos here.

(continued)

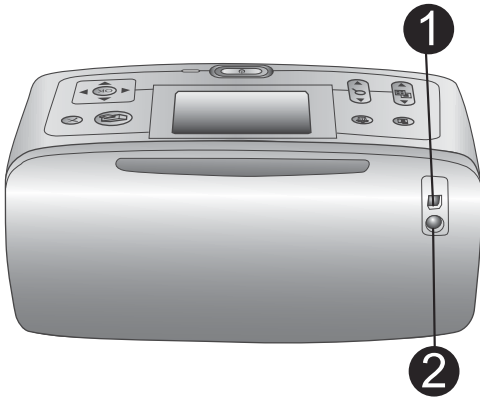


Rear of printer

- 1 USB port**
Use this port to connect the printer to a computer or to an HP direct-printing digital camera.
- 2 Power cord connection**
Connect the power cord here.



Indicator lights

- 1 Memory Card light**
The light indicates the memory card status. See *Inserting memory cards*.
- 2 On light**
 - Green: printer is on
 - Green and flashing: printer is busy
 - Red and flashing: printer requires attention

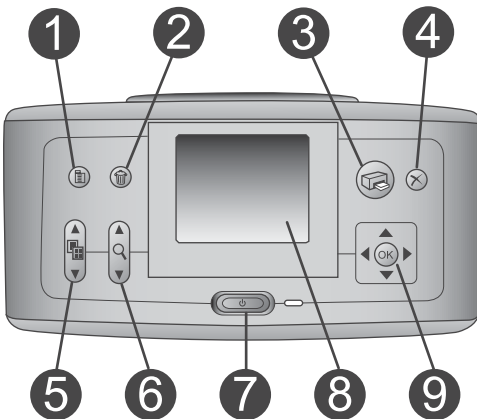

Control panel

- 1 Menu**
Press to access the printer menu.
- 2 Delete**
Press to delete the currently selected photo from a memory card.
- 3 Print**
Press to print selected photos from a memory card.
- 4 Cancel**
Press to deselect photos, exit a menu, or stop an action.
- 5 Layout**
Use the arrows to scroll through layout selections. Press **OK** to select a layout.
- 6 Zoom**

Use the arrows to increase or decrease the zoom level.

7 **Power**
Press to turn the printer on or off.


8 **Printer screen**
View photos and menus here.

9 **Select Photos buttons**
Use the arrows to scroll through photos on a memory card or navigate menus. Press **OK** to select a photo, menu, or menu option.



Idle screen


- 1 **Battery indicator**
Displays the charge level of the HP Photosmart Internal battery, if installed.
- 2 **Ink level indicator**
Displays the ink level of the print cartridge.

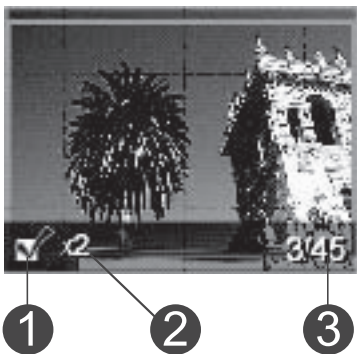

Select Photos screen

- 1 **Selection box**
Displays a check mark if photo is selected.
- 2 **Copies**
Displays number of copies to be printed of the current photo.
- 3 **Index number**
Displays index number of current photo and total number of photos on the inserted memory card.

(continued)

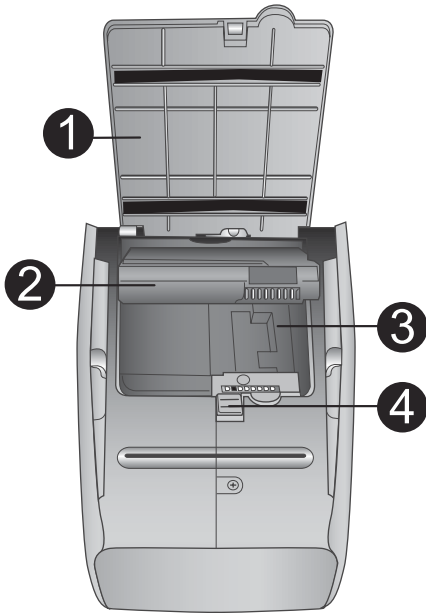


Internal battery compartment




- 1 Cover of the battery compartment**
Open this cover on the bottom of the printer to insert the optional HP Photosmart Internal Battery.
- 2 HP Photosmart Internal Battery** (Model number: Q5599A)
A fully-charged battery has sufficient charge to print approximately 75 photos. You must purchase the battery separately.
- 3 Internal battery compartment**
Insert the optional HP Photosmart Internal Battery here.
- 4 Battery compartment button**
Slide to release the compartment cover.

Available accessories

There are several accessories available for the HP Photosmart 370 series printer that enhance its portability for printing anywhere, anytime. The appearance of the accessories may vary from what is shown.

Accessory name	Description
 HP Photosmart Internal Battery	The HP Photosmart Internal Battery lets you take the printer with you wherever you go. (Model: Q5599A)

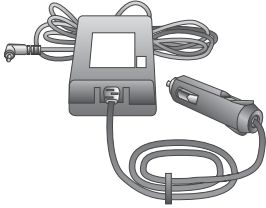(continued)

Accessory name	Description
 <p data-bbox="240 404 599 458">HP Photosmart Automobile DC Adapter</p>	<p data-bbox="706 170 1116 343">The HP Photosmart Automobile DC Adapter lets you plug into your automobile for backup power and to recharge an optional HP Photosmart Internal Battery inserted in the printer. (Model: Q3448A)</p>
 <p data-bbox="240 769 630 822">HP Photosmart Carrying Case for Compact Printers</p>	<p data-bbox="706 487 1141 626">The lightweight, durable HP Photosmart Carrying Case for Compact Printers holds and protects everything needed for hassle-free printing on the go. (Model: Q3424A)</p>
 <p data-bbox="240 1008 593 1062">HP Bluetooth® wireless printer adapter</p>	<p data-bbox="706 852 1126 991">The HP Bluetooth® wireless printer adapter goes into the camera port on the front of the printer and lets you use Bluetooth wireless technology for printing. (Model: Q3395A)</p>

Printer menu

Press **Menu** on the printer control panel to access the printer menu.

To navigate the printer menu:

- Press **Select Photos** ▲ or ▼ to scroll through the menu options displayed on the printer screen. Menu items that are not accessible are grayed out.
- Press **OK** to open a menu or select an option.
- Press **Cancel** to exit the current menu.

Note You cannot access the printer menu while you are viewing photos in 9-up view mode on the printer screen. Press **Zoom** ▲ to exit 9-up view mode and return to viewing one photo at a time before pressing **Menu**.

Printer menu structure

Top level menu	Submenus/options	Additional submenus/ options
Print Options	Print all	
	Print range	Select beginning of range: Select end of range:
	Print index page	
Edit	Red eye	Remove Red eye
	Rotate photo	Press ► to rotate photo 90° clockwise Press ◀ to rotate photo 90° counterclockwise
	Photo brightness	Photo brightness: (select -3 to +3; default is 0 and represents no change)
	Add frame	Select pattern: Select color:
	Add color effect	Choose color effect: <ul style="list-style-type: none"> • Black & white • Sepia • Antique • No effect (default)
Tools	Instant Share	
	View 9-up	
	Slide show	
	Print quality	Print quality: <ul style="list-style-type: none"> • Best (default) • Normal
	Print test page	
	Clean cartridge	Continue to second level cleaning? <ul style="list-style-type: none"> • Yes • No

Printer menu structure (continued)

Top level menu	Submenus/options	Additional submenus/ options
		Continue to third level cleaning? <ul style="list-style-type: none"> • Yes • No
	Align cartridge	
Bluetooth	Device address	Device address: (Some devices with Bluetooth wireless technology require you to enter the address of the device they are trying to locate. This menu option shows the device address.)
	Device name	(You can select a device name for the printer that appears on other devices with Bluetooth wireless technology when they locate the printer.)
	View Passkey	
	Change Passkey	(You can assign a Bluetooth numerical passkey to the printer that users of devices with Bluetooth wireless technology trying to locate the printer must enter before they can print, if the printer Bluetooth Security level is set to High . The default passkey is 0000.)
	Accessibility	Accessibility: <ul style="list-style-type: none"> • Visible to all • Not visible When Accessibility is set to Not visible , only devices that know the device address can print to it.

Printer menu structure (continued)

Top level menu	Submenus/options	Additional submenus/ options
		(You can set the Bluetooth-equipped printer to be visible or invisible to other devices with Bluetooth wireless technology by changing this accessibility option.)
	Security level	Security Level: <ul style="list-style-type: none"> • Low (The printer does not require users of other devices with Bluetooth wireless technology to enter the printer passkey) • High (The printer does require users of other devices with Bluetooth wireless technology to enter the printer passkey)
Help	Cartridges	Print Cartridge Help: (Press Select Photos ▲ or ▼ to scroll through the HP print cartridges available for the printer, then press OK to see how to insert the cartridge)
	Photo sizes	Photo Sizes Help: (Press Select Photos ▲ or ▼ to scroll through the available photo sizes)
	Paper loading	Paper Loading Help: (Press Select Photos ▲ or ▼ to scroll through information on loading paper)
	Paper jam	Paper Jam Help: (Select to see how to remove a paper jam)
	Camera connect	Camera Connect Help:

Printer menu structure (continued)

Top level menu	Submenus/options	Additional submenus/options
		(Select to see where to connect a PictBridge compatible digital camera to the printer)
Preferences	Smart focus	Smart focus: <ul style="list-style-type: none"> ● On (default) ● Off
	Digital flash	Digital Flash: <ul style="list-style-type: none"> ● On (default) ● Off
	Date/time	Date/time stamp: <ul style="list-style-type: none"> ● Date/time ● Date only ● Off (default)
	Colorspace	Choose colorspace: <ul style="list-style-type: none"> ● Adobe RGB ● sRGB ● Auto-select (default) <p>The Auto-select default tells the printer to use the Adobe RGB colorspace, if available. The printer defaults to sRGB if Adobe RGB is not available.</p>
	Borderless	Turn borderless printing: <ul style="list-style-type: none"> ● On ● Off (default)
	After printing	After printing, deselect all photos: <ul style="list-style-type: none"> ● Always (default) ● Never ● Ask
	Passport photo mode	Turn passport photo mode: <ul style="list-style-type: none"> ● On ● Off (default) <p>Select Size:</p> <p>Passport mode tells the printer to print all photos in the selected passport</p>

Printer menu structure (continued)

Top level menu	Submenus/options	Additional submenus/ options
		<p>photo size. Each page contains one photo. However, if you specify several copies of the same photo, they all appear on the same page (if enough space is available).</p>
	Demo state	<p>Turn demo state:</p> <ul style="list-style-type: none"> ● On (default) ● Off
	Auto-save	<p>Turn auto-save:</p> <ul style="list-style-type: none"> ● On (default) ● Off <p>The default setting tells the printer to transfer all photos from a memory card to the computer, whenever you first insert a card. The printer must be connected to a computer where you have already installed the HP Photosmart software. See Installing the software.</p>
	Preview animation	<p>Turn preview animation:</p> <ul style="list-style-type: none"> ● On (default) ● Off <p>(Select Off to bypass printer screen animations.)</p>
	Video enhancement	<p>Turn video enhancement:</p> <ul style="list-style-type: none"> ● On ● Off (default)
	Restore defaults	<p>Restore original factory preferences:</p> <ul style="list-style-type: none"> ● Yes ● No
	Language	<p>Select language:</p> <hr/> <p>Select country/region:</p>

2 Getting ready to print

Before you can begin printing, there are three easy procedures you need to become familiar with:

- Loading paper
- Inserting print cartridges
- Inserting memory cards

You must load paper and insert a print cartridge before inserting a memory card.

Loading paper

Learn how to choose the right paper for your print job and how to load it into the In tray for printing.

Choosing the right paper

For a list of available HP-designed inkjet paper, or to purchase supplies, go to:

- www.hpshopping.com (U.S.)
- www.hp.com/go/supplies (Europe)
- www.hp.com/jp/supply_inkjet (Japan)
- www.hp.com/paper (Asia/Pacific)

To get the best results from the printer, choose from these high-quality HP photo papers.

To print	Use this paper
High-quality, long-lasting prints and enlargements	HP Premium Plus photo paper
Medium-to-high-resolution images from scanners and digital cameras	HP Premium photo paper
Casual and business photos	HP photo paper HP Everyday photo paper


To keep your paper in good condition for printing:

- Store the photo paper in its original packaging or in a resealable plastic bag.
- Keep the paper flat in a cool, dry place. If the corners curl, place the paper in a plastic bag and gently bend it in the opposite direction until it lies flat.
- Hold photo paper by the edges to avoid smears.

Loading your paper

Paper loading tips:

- You can print photos on photo paper, index cards, L-size cards, or Hagaki cards.
- Before loading paper, slide out the paper-width guide to make room for the paper.
- Load only one type and size of paper at a time. Do not mix paper types or sizes in the In tray.

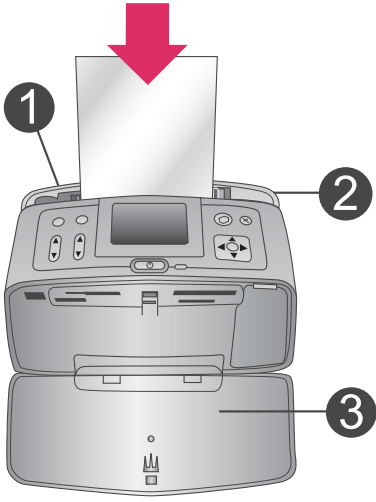Paper type	How to load							
10 x 15 cm (4 x 6 inch) photo paper Index cards L-size cards Hagaki cards	<ol style="list-style-type: none"> 1 Open the In tray and pull out the In tray extender. 2 Load up to 20 sheets of paper with the print side or glossy side facing towards you. If you are using tabbed paper, insert it so the tabbed end feeds in last. 3 Adjust the paper-width guide to fit close to the edge of the paper without bending the paper. 4 Open the Out tray to prepare for printing. 	 <table border="1" data-bbox="681 683 908 782"> <tbody> <tr> <td>1</td> <td>In tray</td> </tr> <tr> <td>2</td> <td>Paper-width guide</td> </tr> <tr> <td>3</td> <td>Out tray</td> </tr> </tbody> </table>	1	In tray	2	Paper-width guide	3	Out tray
1	In tray							
2	Paper-width guide							
3	Out tray							

Inserting print cartridges

Your HP Photosmart 370 series printer can print color and black-and-white photos. HP provides different types of print cartridges so you can choose the best cartridge for your project. The cartridge number varies by country/region. Choose the correct cartridge number for your country/region.

For optimum printing results, HP recommends using only HP print cartridges. Inserting a cartridge that is not in this table may invalidate the printer warranty.

Use the right print cartridge

To print...	Insert this print cartridge in the cartridge cradle
Full-color photos	Tri-color (7 ml) HP #95 (North America, Latin America, Asia Pacific), #135 (Eastern Europe, Russia, Middle East, Africa, Japan), #343 (Western Europe), #855 (China, India) Tri-color (14 ml) HP #97 (North America, Latin America, Asia Pacific), #134 (Eastern Europe, Russia, Middle East, Africa, Japan), #344 (Western Europe), #857 (China, India)
Black-and-white photos	Gray Photo HP #100 (worldwide)

Use the right print cartridge (continued)

To print...	Insert this print cartridge in the cartridge cradle
Sepia or antique photos	Tri-color (7 ml) HP #95 (North America, Latin America, Asia Pacific), #135 (Eastern Europe, Russia, Middle East, Africa, Japan), #343 (Western Europe), #855 (China, India) Tri-color (14 ml) HP #97 (North America, Latin America, Asia Pacific), #134 (Eastern Europe, Russia, Middle East, Africa, Japan), #344 (Western Europe), #857 (China, India)
Text and colored line drawings	Tri-color (7 ml) HP #95 (North America, Latin America, Asia Pacific), #135 (Eastern Europe, Russia, Middle East, Africa, Japan), #343 (Western Europe), #855 (China, India) Tri-color (14 ml) HP #97 (North America, Latin America, Asia Pacific), #134 (Eastern Europe, Russia, Middle East, Africa, Japan), #344 (Western Europe), #857 (China, India)



Caution Check that you are using the correct print cartridge. Also, note that HP does not recommend modifying or refilling HP cartridges. Damage that results from modifying or refilling HP cartridges is not covered by the HP warranty.

For best print quality, HP recommends that you install all retail print cartridges before the date stamped on the box.

Insert or replace the print cartridge



Remove the pink tape


Prepare the printer and cartridge

- 1 Make sure the power is on and you have removed the cardboard from inside the printer.
- 2 Open the print cartridge access door of the printer.
- 3 Remove the bright pink tape from the cartridge.

Insert or replace the print cartridge (continued)



Do not touch here

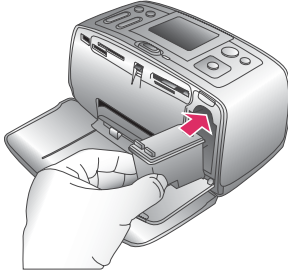

Insert the cartridge

- 1 If you are replacing a cartridge, push down and pull outward on the cartridge in the cradle to remove it.
- 2 Hold the replacement cartridge with the label on top. Slide the cartridge at a slight upward angle into the cradle so the copper-colored contacts go in first. Push the cartridge until it snaps into place.
- 3 Close the print cartridge access door.

The idle screen of the printer displays an icon showing the approximate ink level for the installed cartridge (100%, 75%, 50%, 25%, and nearly empty). No ink-level icon appears if the cartridge is not a genuine HP cartridge.




Each time you install or replace a print cartridge, a message appears on the printer screen asking you to load plain paper so the printer can align the cartridge. This ensures high-quality prints.

Align the cartridge

- 1 Load paper in the In tray and press **OK**.
- 2 Follow the onscreen instructions to align the cartridge.

See *Aligning the print cartridge*.

When you are not using a print cartridge

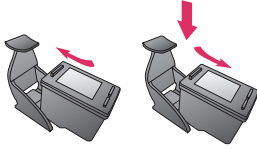

Whenever you remove a print cartridge from the printer, store it in a print cartridge protector. The cartridge protector keeps the ink from drying out. Storing the cartridge improperly can cause the cartridge to malfunction.

In some countries/regions the cartridge protector is not included with the printer, but comes with the Gray Photo cartridge that can be purchased separately. In other countries/regions, the protector is included with the printer.

→ To insert a cartridge into the cartridge protector, slide the cartridge into the protector at a slight angle and snap it securely into place.

Inserting memory cards

After you have taken pictures with a digital camera, you can remove the memory card from the camera and insert it into the printer to view and print your photos. The printer can read the following types of memory cards: CompactFlash™, Memory Sticks, MultiMediaCard™, Secure Digital™, SmartMedia™, and xD-Picture Card™. The Microdrive is not supported.



Caution Using any other type of memory card may damage the memory card and the printer.

To learn about other ways of transferring photos from a digital camera to the printer, see [Getting connected](#).

Supported file formats

The printer can recognize and print the following file formats directly from a memory card: JPEG, uncompressed TIFF, Motion JPEG AVI, Motion-JPEG QuickTime, and MPEG-1. If your digital camera saves photos and video clips in other file formats, save the files to your computer and print them using a software application. For more information, see the onscreen Help.

Inserting a memory card

Find your memory card in the following table and use the instructions to insert the card into the printer.

Guidelines:






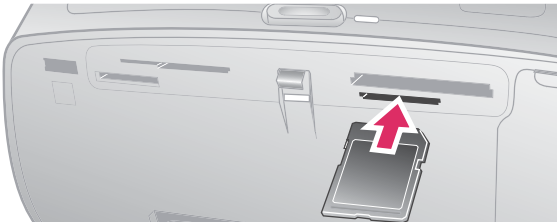
- Insert only one memory card at a time.
- Gently push the memory card into the printer until it stops. The memory card does not insert all the way into the printer; do not try to force it.









Caution 1 Inserting the memory card any other way may damage the card and the printer.

When the memory card is inserted correctly, the Memory Card light flashes and then remains solid green.

Caution 2 Do not pull out a memory card while the Memory Card light is flashing. For more information, see *Removing a memory card*.

Memory card	Slot	How to insert the memory card
<p>CompactFlash</p> 	Top right slot	<ul style="list-style-type: none"> • Front label faces up, and if the label has an arrow, the arrow points toward the printer • Edge with metal pinholes goes into the printer first 
<p>MultiMediaCard</p> 	Bottom right slot	<ul style="list-style-type: none"> • Angled corner is on the right • Metal contacts face down 
<p>Secure Digital</p> 	Bottom right slot	<ul style="list-style-type: none"> • Angled corner is on the right • Metal contacts face down 
<p>SmartMedia</p>	Upper portion of the top left double slot	<ul style="list-style-type: none"> • Angled corner is on the left • Metal contacts face down

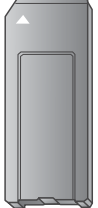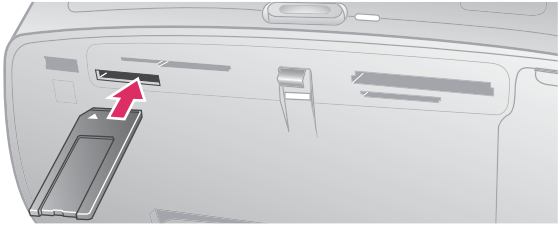(continued)

Memory card	Slot	How to insert the memory card
		
Memory Stick 	Bottom left slot	<ul style="list-style-type: none">• Angled corner is on the left• Metal contacts face down• If you are using a Memory Stick Duo™ or Memory Stick PRO Duo™ card, attach the adapter that came with the card before you insert the card into the printer 
xD-Picture Card 	Lower right portion of the top left double slot	<ul style="list-style-type: none">• Curved side of card points toward you• Metal contacts face down 

Removing a memory card

Wait until the Memory Card light stops flashing, then gently pull the memory card to remove it from the printer.



Caution Do not pull out a memory card while the Memory Card light is flashing. A flashing light means that the printer is accessing the memory card. Removing a memory card while it is being accessed may damage the printer and the memory card or corrupt the information on the memory card.

3 Printing without a computer

The HP Photosmart lets you print amazing photos without even going near a computer. After setting up the printer using the instructions in the HP Photosmart 370 series *Setup Guide* refer to these steps for start-to-finish printing.

Getting your photos from camera to printer

Use these steps for start-to-finish printing in minutes!

Step 1

Insert a memory card
See Inserting memory cards.



Step 2

Decide which photos to print
See Deciding which photos to print.



Step 3

Load paper
See Loading paper.







Step 4

Insert the right print cartridges
See Inserting print cartridges.



(continued)

Use these steps for start-to-finish printing in minutes!

<p>Step 5</p> <p>Select photos to print See Selecting photos to print.</p>	
<p>Step 6</p> <p>Get creative! See Getting creative.</p>	
<p>Step 7</p> <p>Improve the quality of your photos See Improving the quality of your photos.</p>	
<p>Step 8</p> <p>Print your photos See Printing your photos.</p>	

Deciding which photos to print

To view photos on the screen	Do this
<p>One by one</p>	<ol style="list-style-type: none"> 1 Insert a memory card. 2 Press Select Photos ◀ or ▶ to view the photos one by one. Press and hold the button to view the photos rapidly. When you reach the last photo in either direction, the display returns to the first or last photo and continues.
<p>Nine at a time</p>	<ol style="list-style-type: none"> 1 Insert a memory card. 2 Press Zoom ▼ to view nine photos at a time. 3 Press Select Photos ◀ or ▶ to highlight one of the nine photos. 4 Press Zoom ▲ to change back to viewing one by one.

(continued)

To view photos on the screen	Do this
In a continuous slide show	<ol style="list-style-type: none">1 Press Menu.2 Select Tools, then press OK.3 Select Slide Show, then press OK. <p>Press OK to pause or resume a slide show. Press Cancel to stop the slide show.</p>
Print a photo index A photo index shows thumbnail views and index numbers for all the photos on a memory card (2000 maximum). You can use the index numbers to print specific photos or a range of photos. Use an index card instead of photo paper to cut costs.	<ol style="list-style-type: none">1 Press Menu.2 Select Print Options, then press OK.3 Select Print Index Page, then press OK.

Selecting photos to print

If you want to...	Do this
Print one photo	<ol style="list-style-type: none">1 Insert a memory card and view photos.2 Press Print to print the photo displayed on the printer screen using the current layout.
Print more than one copy of a photo	<ol style="list-style-type: none">1 Insert a memory card and view photos.2 Press OK once for each copy of the current photo you want to print. Press Cancel to decrease the number of copies by one.3 Press Print.
Print several photos	<ol style="list-style-type: none">1 Insert a memory card and view photos.2 Press OK to select each photo you want to print.3 Press Print.
Print a continuous range of photos	<ol style="list-style-type: none">1 Insert a memory card.2 Press Menu.3 Select Print Options, then press OK.4 Select Print Range, then press OK.5 Press Select Photos ◀ or ▶ until the first photo you want to print appears, then press OK.

(continued)

If you want to...	Do this
	<ol style="list-style-type: none"> 6 Press Select Photos ◀ or ▶ until the last photo you want to print appears, then press OK. 7 Press Print.

Getting creative

The printer provides a variety of tools and effects that let you use your photos in creative ways. The settings do not change your original photo. They only affect printing.

Things to try	Do this
<p>Crop a photo</p> <p>Press Zoom ▲ or ▼ to increase or decrease the magnification by 0.25x. The maximum level is 5.0x.</p>	<ol style="list-style-type: none"> 1 Navigate to the photo you want to change, then press OK to select it. 2 Press Zoom ▲ to magnify the current photo. 3 Use the Select Photos arrows to move the crop box. 4 Press OK when the portion of the photo you want to print is in the crop box. 5 Press Print to begin printing. <p>Cropping does not change your original photo. It only affects printing.</p>
<p>Add a decorative frame</p> <p>Choose from a palette of various patterns and colors to make the frame stand out.</p>	<ol style="list-style-type: none"> 1 Navigate to the photo you want to change, then press OK to select it. 2 Press Menu. 3 Select Edit, then press OK. 4 Select Add Frame, then select OK. 5 Use the Select Photos arrows to highlight the frame pattern you want to use, then press OK. 6 Use the Select Photos arrows to highlight the frame color you want to use, then press OK. <p>The photo appears on the printer screen with the frame. The effect does not change your original photo. It only affects printing.</p>
<p>Add a color effect</p> <p>Set the printer to change the color effect of your prints to Black and White, Sepia, Antique, or None (default).</p>	<ol style="list-style-type: none"> 1 Navigate to the photo you want to change, then press OK to select it. 2 Press Menu. 3 Select Edit, then press OK. 4 Select Add Color Effect, then press OK.

(continued)

Things to try	Do this
	<p>5 Use the Select Photos arrows to highlight the color effect you want to use, then press OK.</p> <p>The photo appears on the printer screen with the selected color effect applied. The effect does not change your original photo. It only affects printing.</p>
<p>Add the date and time to your prints</p> <p>You can print a stamp on the front of your photos that shows when the photo was taken. This preference affects all prints.</p>	<p>1 Press Menu.</p> <p>2 Select Preferences, then press OK.</p> <p>3 Select Date/time, then press OK.</p> <p>4 Use the Select Photos arrows to highlight a date/time stamp option:</p> <ul style="list-style-type: none">– Date/time– Date only– Off <p>5 Press OK.</p>

Improving the quality of your photos

The HP Photosmart 370 series printer provides a variety of preferences and effects that can improve the quality of your printed photos. The settings do not change your original photo. They only affect printing.

Problem and solution	How to do it
<p>Red eye in flash photos</p> <p>Red eye removal</p> <p>Remove the red eye effect that mars some photos taken with a flash.</p>	<p>1 Press Menu.</p> <p>2 Select Edit, then press OK.</p> <p>3 Select Red-eye, then press OK.</p>
<p>Blurred photos</p> <p>Smart Focus</p> <p>Sharpen blurred photos. It is turned on by default. Use these instructions to turn it on if it is currently off. This preference affects all printed photos.</p>	<p>1 Press Menu.</p> <p>2 Select Preferences, then press OK.</p> <p>3 Select Smart Focus, then press OK.</p> <p>4 Select On, then press OK.</p>
<p>Photos with poor lighting and contrast</p> <p>Digital Flash</p> <p>Improve the lighting and contrast in prints. This preference affects all printed photos.</p>	<p>1 Press Menu.</p> <p>2 Select Preferences, then press OK.</p> <p>3 Select Digital Flash, then press OK.</p> <p>4 Use the Select Photos arrows to highlight On, then press OK.</p>
<p>Poor-quality video clips</p>	<p>1 Press Menu.</p>

(continued)


Problem and solution	How to do it
<p>Video enhancement</p> <p>Improve the quality of printed video clips. Print times can be slower when the preference is turned on.</p>	<ol style="list-style-type: none"> 2 Select Preferences, then press OK. 3 Select Video Enhancement, then press OK. 4 Use the Select Photos arrows to highlight On, then press OK.
<p>Photos with poor brightness</p> <p>Photo brightness</p> <p>Improve the brightness level in photos.</p>	<ol style="list-style-type: none"> 1 Press Menu. 2 Select Edit, then press OK. 3 Select Photo Brightness, then press OK. 4 Use the Select Photos arrows to adjust photo brightness to the desired level, then press OK.

Printing your photos

Printing your photos involves three steps: selecting a layout, setting print quality, and selecting a print method.

Selecting a layout

You can select from several print layouts by pressing **Layout** after you insert a memory card.

Layout options	Do this
	<ol style="list-style-type: none"> 1 Insert a memory card. 2 Press Layout. 3 Use the Layout arrows to select a layout: <ul style="list-style-type: none"> – Print one photo per sheet, borderless – Print one photo per sheet, with borders around the edges – Print two photos per sheet – Print four photos per sheet <p>The printer may rotate your photos to fit the layout.</p>

Setting print quality

Best quality is the default and produces the highest quality photos. Normal quality conserves ink and prints faster.

To change the print quality to Normal

- 1 Press **Menu**.
- 2 Select **Tools**, then press **OK**.
- 3 Select **Print Quality**, then press **OK**.
- 4 Select **Normal**, then press **OK**.

Print quality reverts to Best after the next print job.

Selecting a print method

The HP Photosmart 370 series printer lets you print from a memory card or directly from a digital camera.

Print from	Do this
<p>Memory card</p> <p>Print digital photos that are stored on a memory card. The photos can be unmarked or camera-selected (Digital Print Order Format, or DPOF). Printing from a memory card requires no computer and does not drain your digital camera's batteries. See Inserting memory cards.</p>	<p>To print unmarked photos</p> <ol style="list-style-type: none">1 Insert a memory card.2 Select one or more photos. See Selecting photos to print.3 Press Print. <p>To print camera-selected photos</p> <ol style="list-style-type: none">1 Insert a memory card that contains camera-selected (DPOF) photos.2 Select Yes when the printer asks you whether you want to print the camera-selected photos, then press OK.
<p>Digital camera</p> <p>Print beautiful photos from a PictBridge or HP direct-printing digital camera without using a computer. See Getting connected.</p> <p>When you print directly from a digital camera, the printer uses the settings that you selected on the camera. For more information on using camera-selected photos, see the documentation that came with the camera.</p>	<p>To print from a PictBridge camera</p> <ol style="list-style-type: none">1 Turn on the PictBridge digital camera and select the photos you want to print.2 Make sure the camera is in PictBridge mode, then connect it to the camera port on the front of the printer using the USB cable that came with the camera. <p>Once the printer recognizes the PictBridge camera, the selected photos print.</p> <p>To print from an HP direct-printing camera</p> <ol style="list-style-type: none">1 Turn on the HP direct-printing digital camera and select the photos you want to print.2 Connect the camera to the USB port on the back of the printer using the USB cable that came with the camera.3 Follow the instructions on the camera screen.

4 Getting connected

Use the printer to stay connected to other devices and to family and friends.

Connecting to other devices

This printer offers several ways of connecting to computers or other devices. Each connection type lets you do different things.

Connection type and what you need	What this lets you do
<p>USB</p> <ul style="list-style-type: none">• A Universal Serial Bus (USB) 1.1 or 2.0 full speed compliant cable 3 meters (10 feet) or less in length. For instructions about connecting the printer with a USB cable, see the <i>Setup Guide</i>.• A computer with Internet access (to use HP Instant Share).	<ul style="list-style-type: none">• Print from your computer to the printer.• Save photos from a memory card inserted in the printer to your computer where you can enhance or organize them in the HP Image Zone software.• Share photos through HP Instant Share.• Print directly from an HP Photosmart direct-printing digital camera to the printer. For more information, see Printing without a computer and the camera documentation.
<p>PictBridge</p> <p>A PictBridge-compatible digital camera and a USB cable.</p> <p>Connect the camera to the camera port on the front of the printer.</p>	<p>Print directly from a PictBridge-compatible digital camera to the printer. For more information, see Printing without a computer and the camera documentation.</p>
<p>Bluetooth</p> <p>The optional HP Bluetooth wireless printer adapter.</p> <p>If the printer came with this accessory or you have purchased it separately, see the accompanying documentation and the onscreen Help for instructions.</p>	<p>Print from any device with Bluetooth wireless technology to the printer.</p> <p>If you connect the optional HP Bluetooth wireless printer adapter to the printer through the camera port, be sure to set the Bluetooth printer menu options as needed. See Printer menu.</p> <p>The adapter is not compatible with the Macintosh OS.</p>

Connecting through HP Instant Share

Use HP Instant Share to share photos with friends and relatives using e-mail, online albums, or an online photo finishing service. The printer must be connected through a USB cable to a computer with Internet access and have all the HP software installed. If you try to use HP Instant Share and do not have all the required software installed or configured, a message prompts you through the required steps.

To use HP Instant Share

- 1 Insert a memory card and select some photos.
- 2 Press **Menu**, select **Tools**, then press **OK**.
- 3 Select **HP Instant Share**, then press **OK**.
- 4 Follow the instructions on your computer to share the selected photos with others.

See the onscreen HP Image Zone Help for information about using HP Instant Share.

5 Maintaining and transporting the printer

The HP Photosmart 370 series printer requires very little maintenance. Follow the guidelines in this chapter to extend the life span of the printer and printing supplies, and to ensure that the photos you print are always of the highest quality.

Cleaning and maintaining the printer

Keep the printer and print cartridges clean and well maintained using the simple procedures in this section.

Cleaning the outside of the printer

- 1 Turn off the printer, then disconnect the power cord from the back of the printer.
- 2 If you installed the optional HP Photosmart Internal Battery in the printer, remove it, then replace the battery compartment cover.
- 3 Wipe the outside of the printer with a soft cloth that has been lightly moistened with water.



Caution 1 Do not use any type of cleaning solution. Household cleaners and detergents may damage the printer finish.

Caution 2 Do not clean the interior of the printer. Keep all fluids away from the interior.

Automatically cleaning the print cartridge

If you notice white lines or single-color streaks on the photos you print, the print cartridge may need to be cleaned. Do not clean the cartridge more often than necessary, since cleaning uses up ink.

- 1 Press **Menu**.
- 2 Select **Tools**, then press **OK**.
- 3 Select **Clean cartridge**, then press **OK**.
- 4 Following the directions on the printer screen, load paper so the printer can print a test page after cleaning the cartridge. Use plain paper or index cards to conserve photo paper.
- 5 Press **OK** to begin cleaning the print cartridge.
- 6 When the printer finishes cleaning the cartridge and prints a test page, it asks whether you want to **Continue to second level cleaning**. Check the test page and select from the following options:
 - If the test page has white streaks or missing colors, the print cartridge needs to be cleaned again. Select **Yes**, then press **OK**.
 - If the print quality of the test page looks good, select **No**, then press **OK**.

You can clean the cartridge up to three times. Each successive cleaning is more thorough and uses more ink.

If you complete all three levels of cleaning using this procedure and you still notice white streaks or missing colors on the test page, you may need to replace the cartridge.

Note If the cartridge or printer has been recently dropped, you may also see white streaks or missing colors in your prints. This problem is temporary and clears up within 24 hours.

Printing a test page

You can print a test page to check the condition of the printer, see its serial number, check the print cartridge, and so on. Print a test page before contacting Customer Care.

- 1 Press **Menu**.
- 2 Select **Tools**, then press **OK**.
- 3 Select **Print test page**, then press **OK**.
- 4 Following the directions on the printer screen, load paper so the printer can print a test page. Use plain paper or index cards to conserve photo paper.
- 5 Press **OK** to begin printing the test page.

Aligning the print cartridge

The first time you install a print cartridge in the printer, the printer aligns it automatically. However, if colors in the printouts are misaligned, or if the alignment page does not print correctly when you install a new print cartridge, use the following procedure to align the print cartridge.

- 1 Press **Menu**.
- 2 Select **Tools**, then press **OK**.
- 3 Select **Align cartridge**, then press **OK**.
- 4 A message appears on the printer screen reminding you to load plain paper. Load paper so the printer can print a calibration page. Use plain paper or index cards to conserve photo paper.
- 5 Press **OK** to begin aligning the print cartridge.

When the printer finishes aligning the cartridge, it prints an alignment page to confirm that the alignment was successful.



- The check marks verify that the print cartridge is installed correctly and functioning properly.
- If an “x” appears to the left of any of the bars, align the print cartridge again. If the “x” still appears, replace the print cartridge.

Storing the printer and print cartridges

Protect the printer and print cartridges by storing them properly when you are not using them.

Storing the printer

The printer is built to withstand long or short periods of inactivity.

- Close the In and Out tray doors and push the printer screen down into the flat position when the printer is not in use.
- Store the printer indoors out of direct sunlight in a place without temperature extremes.
- If the printer and print cartridge have not been used for one month or more, clean the print cartridge before printing. For more information, see [Automatically cleaning the print cartridge](#).

Storing the print cartridges

When you store or transport the printer, always leave the active print cartridge inside the printer. The printer stores the print cartridge in a protective cap during the power-down cycle.



Caution Make sure the printer completes its power-down cycle before you unplug the power cord or remove the internal battery. This allows the printer to store the print cartridge properly.

Follow these tips to help maintain HP print cartridges and ensure consistent print quality:

- When you remove a print cartridge from the printer, store it in a print cartridge protector to prevent the ink from drying out.
In some countries/regions the cartridge protector is not included with the printer, but comes with the Gray Photo cartridge that can be purchased separately. In other countries/regions, the protector might be included with the printer.
- Keep all unused print cartridges in their original sealed packages until they are needed. Store print cartridges at room temperature (15–35 degrees C or 59–95 degrees F).
- Do not remove the plastic tape covering the ink nozzles until you are ready to install the print cartridge in the printer. If the plastic tape has been removed from the print cartridge, do not attempt to reattach it. Reattaching the tape damages the print cartridge.

Maintaining the quality of photo paper

For best results with photo paper, follow the guidelines in this section.

Storing photo paper

- Store the photo paper in its original packaging or in a resealable plastic bag.
- Store the packaged photo paper on a flat, cool, and dry surface.
- Return unused photo paper to the plastic bag. Paper left in the printer or exposed to the elements may curl.

Handling photo paper

- Always hold photo paper by the edges to avoid fingerprints.
- If the photo paper has curled edges, place it in its plastic storage bag and gently bend it in the opposite direction of the curl until the paper lies flat.

Transporting the printer

It's easy to transport and set up the printer almost anywhere. Take it with you on vacations and to family gatherings and social events to instantly print and share photos with family and friends.

To make it even easier to print on the go, you can purchase these accessories:

- **HP Photosmart Internal Battery:** Power the printer with a rechargeable battery so you can print anywhere
- **HP Photosmart Automobile DC Adapter:** Power the printer from the cigarette lighter in a car.
- **HP Photosmart Carrying Case** for compact photo printers: Carry the printer and printing supplies together in this convenient travel case.

To transport the printer:

- 1 Turn off the printer.
- 2 Remove any memory cards from the memory card slots.
- 3 Remove all paper from the In and Out trays, then close the In and Out tray doors.
- 4 Push the printer screen down into the flat position.

Note Make sure the printer completes its power-down cycle before you unplug the power cord. This allows the printer to store the print cartridge properly.

- 5 Unplug the power cord.
- 6 If the printer is connected to a computer, disconnect the USB cable from the computer.
- 7 Always carry the printer upright.

Note Do not remove the print cartridge when transporting the printer.

Make sure to bring the following items with you:

- Paper
- Power cord
- Digital camera or a memory card containing photos
- Extra print cartridges (if you plan to print a lot of photos)
- Optional printer accessories you plan to use, such as the battery, DC adapter, or HP Bluetooth wireless printer adapter
- If you are going to connect the printer to a computer, bring the USB cable and HP Photosmart printer software CD

Note If you do not take the printer user guide with you, be sure to write down the correct pen numbers for the country/region you plan to visit or purchase enough print cartridges before you go.

6 Troubleshooting

The HP Photosmart printer is designed to be reliable and easy to use. This section answers frequently asked questions about using the printer and printing without a computer. It contains information about the following topics:

- Printer hardware problems
- Printing problems
- Bluetooth printing problems
- Error messages

For troubleshooting information about using the printer software and printing from a computer, see the onscreen HP Photosmart Printer Help. For information about viewing the onscreen Printer Help, see [Welcome](#).

Printer hardware problems

Before contacting Customer Care, read this section for troubleshooting tips or go to the online support services at www.hp.com/support.

Note If you want to connect the printer to a computer, HP recommends using a USB cable of less than 3 meters (10 feet) in length to minimize injected noise due to potentially high electromagnetic fields.

The Status light is flashing green but the printer is not printing.

- If the printer is turned on, it is busy processing information. Wait for it to finish.
- If the printer is turned off, and the optional HP Photosmart Internal Battery is installed, the battery is charging.

The Status light is flashing red.

The printer requires attention. Try the following:

- Check the printer screen for instructions. If you have a digital camera connected to the printer, check the camera screen for instructions. If the printer is connected to a computer, check the computer monitor for instructions.
- Turn off the printer.

If the optional HP Photosmart Internal Battery is **not** installed in the printer:

Unplug the printer power cord. Wait about 10 seconds, then plug the power cord back in. Turn on the printer.

If the optional HP Photosmart Internal Battery is installed in the printer:

Unplug the printer power cord, if it is plugged in. Open the battery compartment cover and remove the battery. Wait about 10 seconds, then reinstall the battery. If desired, plug in the power cord. Turn on the printer.

The Status light flashed amber briefly after I turned the printer off.

This is a normal part of the power-down process. It does not indicate a problem with the printer.

The Status light is flashing amber.

A printer error has occurred. Try the following:

- Check the printer screen for instructions. If you have a digital camera connected to the printer, check the camera screen for instructions. If the printer is connected to a computer, check the computer monitor for instructions.
- Turn off the printer.
If the optional HP Photosmart Internal Battery is **not** installed in the printer:
Unplug the printer power cord. Wait about 10 seconds, then plug the power cord back in. Turn on the printer.
If the optional HP Photosmart Internal Battery is installed in the printer:
Unplug the printer power cord, if it is plugged in. Open the battery compartment cover and remove the battery. Wait about 10 seconds, then reinstall the battery. If desired, plug in the power cord. Turn on the printer.
- If the Status light continues to flash amber, go to www.hp.com/support or contact Customer Care.

The buttons on the control panel do not respond.

A printer error has occurred. Wait for about a minute to see if the printer resets. If it does not, try the following:

- Turn off the printer.
If the optional HP Photosmart Internal Battery is **not** installed in the printer:
Unplug the printer power cord. Wait about 10 seconds, then plug the power cord back in. Turn on the printer.
If the optional HP Photosmart Internal Battery is installed in the printer:
Unplug the printer power cord, if it is plugged in. Open the battery compartment cover and remove the battery. Wait about 10 seconds, then reinstall the battery. If desired, plug in the power cord. Turn on the printer.
- If the printer does not reset, and the control panel buttons still do not respond, go to www.hp.com/support or contact Customer Care.

The printer does not find and display the photos on my memory card.

Try the following:

- Turn off the printer.
If the optional HP Photosmart Internal Battery is **not** installed in the printer:
Unplug the printer power cord. Wait about 10 seconds, then plug the power cord back in. Turn on the printer.

If the optional HP Photosmart Internal Battery is installed in the printer:

Unplug the printer power cord, if it is plugged in. Open the battery compartment cover and remove the battery. Wait about 10 seconds, then reinstall the battery. If desired, plug in the power cord. Turn on the printer.

- The memory card may contain file types the printer cannot read directly from the memory card.
 - Save the photos to a computer, then print them from the computer. For more information, see the documentation that came with the camera and the onscreen HP Photosmart Printer Help.
 - The next time you take photos, set the digital camera to save them in a file format the printer can read directly from the memory card. For a list of supported file formats, see [Specifications](#). For instructions on setting the digital camera to save photos in specific file formats, see the documentation that came with the camera.

The printer is plugged in, but it will not turn on.

- The printer may have drawn too much power.

If the optional HP Photosmart Internal Battery is **not** installed in the printer:
Unplug the printer power cord. Wait about 10 seconds, then plug the power cord back in. Turn on the printer.

If the optional HP Photosmart Internal Battery is installed in the printer:
Unplug the printer power cord, if it is plugged in. Open the battery compartment cover and remove the battery. Wait about 10 seconds, then reinstall the battery. If desired, plug in the power cord. Turn on the printer.
- The printer may be plugged into a power strip that is turned off. Turn on the power strip, then turn on the printer.

The optional HP Photosmart Internal Battery is installed in the printer, but the printer will not turn on using battery power.

- The battery may need to be charged. Plug in the printer power cord to charge the battery. The Status light flashes green to indicate that the battery is charging.
- If the battery is charged, try removing and reinstalling the battery.

The optional HP Photosmart Internal Battery is installed in the printer, but it will not charge.

- Open the battery compartment cover. Remove the battery and reinstall it. For more information on how to install the battery, see the documentation that came with the battery.
- Check that the printer power cord is securely connected to both the printer and the power source. When the printer is turned off, the Status light flashes green to indicate that the battery is charging.
- Turn on the printer. The battery charging icon, a lightning bolt, flashes above the battery icon on the printer screen to indicate that the battery is charging.
- An empty battery should fully charge in approximately four hours when the printer is not in use. If the battery still does not charge, replace it.

The optional HP Photosmart Internal Battery low-power warning appears. I plug the optional HP Photosmart Automobile DC Adapter into the printer, but the printer does not recognize the new power source.

- Before you plug the adapter into the printer, turn the printer off.
- Plug the adapter into the printer.
- Turn the printer on.

The printer makes noises when I turn it on, or starts making noises on its own after it has been sitting unused for a while.

The printer may make noises after long periods of inactivity (approximately 2 weeks), or when its power supply has been interrupted and then restored. This is normal operation—the printer is performing an automatic maintenance procedure to ensure that it produces the best quality output.

Printing problems

Before contacting Customer Care, read this section for troubleshooting tips or go to the online support services at www.hp.com/support.

The printer does not print borderless photos when I print from the control panel.

The borderless printing option may be turned off. To turn on borderless printing, follow these steps:

- 1 Press **Menu** to display the printer menu.
- 2 Select **Preferences**, then press **OK**.
- 3 Select **Borderless**, then press **OK**.
- 4 Select **On**, then press **OK**.

Paper does not feed into the printer correctly.

- Make sure that the paper-width guide fits close to the edge of the paper without bending the paper.
- There may be too much paper loaded in the In tray. Remove some paper and try printing again.
- If sheets of photo paper stick together, try loading one sheet at a time.
- If you are using the printer in an extremely high or low humidity environment, insert the paper as far as it will go into the In tray, and load one sheet of photo paper at a time.
- If you are using photo paper that is curled, place the paper in a plastic bag and gently bend it in the opposite direction of the curl until the paper lies flat. If the problem persists, use paper that is not curled. For information about proper storage and handling of photo paper, see [Maintaining the quality of photo paper](#).
- The paper may be too thin or too thick. Try using HP-designed photo paper. For more information, see [Choosing the right paper](#).

The photo printed at an angle or is off-center.

- The paper may not be loaded correctly. Reload the paper, making sure that the paper is correctly oriented in the In tray and that the paper-width guide fits close to the edge of the paper. For paper-loading instructions, see [Loading paper](#).
- The print cartridge may need to be aligned. For more information, see [Aligning the print cartridge](#).

No page came out of the printer.

- The printer may need attention. Read the printer screen for instructions.
- The power may be off or there may be a loose connection. Make sure that the power is on and the power cord is securely connected. If you are using battery power, make sure the battery is correctly installed.
- You may not have any paper in the In tray. Check that paper is loaded correctly in the In tray. For paper-loading instructions, see [Loading paper](#).
- The paper may have jammed while printing. See the following section for instructions on clearing a paper jam.

The paper jammed while printing.

Check the printer screen for instructions. To clear a paper jam, try the following:

- If the paper came part way through the front of the printer, gently pull the paper towards you to remove it.
- If the paper did not come part way through the front of the printer, try removing it from the back of the printer:
 - Remove the paper from the In tray, then pull down on the In tray to open it fully to a horizontal position.
 - Gently pull the jammed paper to remove it from the back of the printer.
 - Lift the In tray up until it snaps back into paper-loading position.
- If you cannot grasp the edge of the jammed paper to remove it, try the following:
 - Turn off the printer.
 - If the optional HP Photosmart Internal Battery is **not** installed in the printer, unplug the printer power cord. Wait about 10 seconds, then plug the power cord back in.
 - If the optional HP Photosmart Internal Battery is installed in the printer, unplug the printer power cord, if it is plugged in. Open the battery compartment cover and remove the battery. Wait about 10 seconds, then reinstall the battery. If desired, plug in the power cord.
 - Turn on the printer. The printer checks for paper in the paper path and will automatically eject the jammed paper.
- Press **OK** to continue.

Tip If you experience paper jams while printing, try loading one sheet of photo paper at a time. Insert the paper as far as it will go into the In tray.

A blank page came out of the printer.

- Check the ink-level icon on the printer screen. If the print cartridge is out of ink, replace it. See [Inserting print cartridges](#). Print a test page to check the print cartridge. See [Printing a test page](#).
- You may have begun printing and then cancelled the process. If you cancelled the process before the photo started printing, the printer may have already loaded paper in preparation for printing. The next time you print, the printer will eject the blank page before starting the new printing project.

The photo did not print using the printer's default print settings.

You may have changed the print settings for the selected photo. Print settings you apply to an individual photo override the printer's default print settings. Discard all

print settings that have been applied to an individual photo by deselecting the photo. For more information, see [Selecting photos to print](#).

The printer ejects the paper when preparing to print.

Direct sunlight could be interfering with the operation of the automatic paper sensor. Move the printer out of direct sunlight.

Print quality is poor.

- The print cartridge may be running out of ink. Check the ink-level icon on the printer screen, and replace the cartridge if necessary. For more information, see [Inserting print cartridges](#).
- If you used the **Zoom** button on the printer control panel to magnify the photo, you may have magnified it too much. Press **Zoom** ▼ one or more times to reduce the magnification.
- You may have selected a low-resolution setting on the digital camera when you took the photo. For better results in the future, set the digital camera to a higher resolution.
- Make sure you are using the right type of photo paper for the project. Use HP-designed photo paper for best results. For more information, see [Choosing the right paper](#).
- You may be printing on the wrong side of the paper. Make sure the paper is loaded with the side to be printed facing up.
- The print cartridge may need to be cleaned. For more information, see [Automatically cleaning the print cartridge](#).
- The print cartridge may need to be aligned. For more information, see [Aligning the print cartridge](#).

The photos I marked for printing in the digital camera do not print.

Some digital cameras, such as the HP 318 and HP 612, let you mark photos for printing both in the camera's internal memory and on the memory card. If you mark photos in the internal memory, and then move photos from the camera's internal memory to the memory card, the marks do not transfer. Mark photos for printing after you transfer them from the digital camera's internal memory to the memory card.

Bluetooth printing problems

Before contacting Customer Care, read this section for troubleshooting tips, or go to the online support services at www.hp.com/support. Be sure to also read the documentation that came with your HP Bluetooth wireless printer adapter and your device with Bluetooth wireless technology.

My Bluetooth device cannot find the printer.

- Make sure the HP Bluetooth wireless printer adapter is plugged into the camera port on the front of the printer. The light on the adapter flashes when the adapter is ready to receive data.
- Bluetooth **Accessibility** may be set to **Not visible**. Change this setting to **Visible to all** as follows:
 - Press **Menu** to display the printer menu.
 - Select **Bluetooth**, then press **OK**.
 - Select **Accessibility**, then press **OK**.
 - Select **Visible to all**, then press **OK**.

- Bluetooth **Security level** may be set to **High**. Change this setting to **Low** as follows:
 - Press **Menu** to display the printer menu.
 - Select **Bluetooth**, then press **OK**.
 - Select **Security level**, then press **OK**.
 - Select **Low**, then press **OK**.
- The Passkey (PIN) that the device with Bluetooth wireless technology is using for the printer may be incorrect. Make sure the correct Passkey for the printer is entered in the device with Bluetooth wireless technology.
- You may be too far from the printer. Move the device with Bluetooth wireless technology closer to the printer. The maximum recommended distance between the device with Bluetooth wireless technology and the printer is 10 meters (30 feet).

No page came out of the printer.

The printer may not recognize the type of file sent by the device with Bluetooth wireless technology. For a list of the file formats that the printer supports, see Specifications.

Print quality is poor.

The photo you printed may be low resolution. For better results in the future, set the digital camera to a higher resolution. Be aware that photos taken with VGA-resolution cameras, such as those found in wireless phones, may not have high enough resolution to produce a high-quality print.

The photo printed with borders.

The printing application installed on your device with Bluetooth wireless technology may not support borderless printing. Contact the vendor of the device, or go to their support website to obtain the latest updates for the printing application.

My computer cannot set the device name using the Bluetooth wireless connection.

Use a USB cable to connect your computer to the printer in order to set the printer Bluetooth device name using the driver Toolbox. The printer software must already be installed on the computer. See [Installing the software](#) and the onscreen printer Help.

Error messages

Before contacting Customer Care, read this section for troubleshooting tips or go to the online support services at www.hp.com/support.

The following error messages may appear on the printer screen. Follow the instructions to resolve the problem.

Error message: Paper jam. Clear jam then press OK.

To clear a paper jam, try the following:

- If the paper came part way through the front of the printer, gently pull the paper towards you to remove it.
- If the paper did not come part way through the front of the printer, try removing it from the back of the printer:
 - Remove the paper from the In tray, then pull down on the In tray to open it fully to a horizontal position.
 - Gently pull the jammed paper to remove it from the back of the printer.
 - Lift the In tray up until it snaps back into paper-loading position.
- If you cannot grasp the edge of the jammed paper to remove it, try the following:
 - Turn off the printer.
 - If the optional HP Photosmart Internal Battery is **not** installed in the printer, unplug the printer power cord. Wait about 10 seconds, then plug the power cord back in.
 - If the optional HP Photosmart Internal Battery is installed in the printer, unplug the printer power cord, if it is plugged in. Open the battery compartment cover and remove the battery. Wait about 10 seconds, then reinstall the battery. If desired, plug in the power cord.
 - Turn on the printer. The printer checks for paper in the paper path and will automatically eject the jammed paper.
- Press **OK** to continue.

Error message: Automatic paper sensor failed.

The automatic paper sensor is obstructed or damaged. Try moving the printer out of direct sunlight, then press **OK** and try printing again. If this does not work, go to www.hp.com/support or contact Customer Care.

Error message: Cartridge is not compatible. Use appropriate HP cartridge.

Replace the print cartridge with one that is compatible with the printer. For more information, see *Inserting print cartridges*.

Error message: Print cartridge cradle is stuck. Clear jam then press OK.

Follow these steps to clear any obstruction in the path of the print cartridge cradle:

- 1 Open the print cartridge door.
- 2 Clear any obstruction in the cradle path.
- 3 Close the print cartridge door, then press **OK** to continue.

Error message: Cartridge service station is stuck.

The print cartridge service station is the component located beneath the print cartridge cradle that wipes and caps the print cartridge for storage. Follow these steps to clear the obstruction blocking the print cartridge service station:

- 1 Open the print cartridge door.
- 2 Gently push the print cartridge and print cartridge cradle to the left to access the print cartridge service station.
- 3 Remove any obstruction.
- 4 Close the print cartridge door, then press **OK** to continue.

Error message: Memory card in backwards. The black side should face up.

A SmartMedia memory card has been inserted upside down. Gently pull the card out of the slot and reinsert it with the gold contacts facing down.

7 Specifications

This section lists the minimum system requirements for installing the HP Photosmart printer software, and provides selected printer specifications.

For a complete list of printer specifications and system requirements, see the onscreen Help. For information about viewing the onscreen Help, see [Welcome](#).

System requirements

Component	Windows PC minimum	Macintosh minimum
Operating system	Microsoft® Windows 98, 2000 Professional, ME, XP Home, and XP Professional	Mac® OS X 10.1 through 10.3
Processor	Intel® Pentium® II (or equivalent) or higher	G3 or greater
RAM	64 MB (128 MB recommended)	Mac OS 10.1 through 10.3: 128 MB
Free disk space	500 MB	500 MB
Video display	800 x 600, 16-bit or higher	800 x 600, 16-bit or higher
CD-ROM drive	4x	4x
Connectivity	USB: Microsoft Windows 98, 2000 Professional, ME, XP Home, and XP Professional PictBridge: using front camera port Bluetooth: using optional HP Bluetooth wireless printer adapter	USB: Mac OS X 10.1 through 10.3 PictBridge: using front camera port
Browser	Microsoft Internet Explorer 5.5 or later	—

Printer specifications

Category	Specifications
Image file formats	JPEG Baseline TIFF 24-bit RGB uncompressed interleaved

(continued)

Category	Specifications
	TIFF 24-bit YCbCr uncompressed interleaved TIFF 24-bit RGB packbits interleaved TIFF 8-bit gray uncompressed/packbits TIFF 8-bit palette color uncompressed/packbits TIFF 1-bit uncompressed/packbits/1D Huffman
Margins	Borderless printing: Top 0.0 mm (0.0 inch) ; Bottom 12.5 mm (0.50 inch); Left/right 0.0 mm (0.0 inch) Bordered printing: Top 4 mm (0.16 inch); Bottom 12.5 mm (0.50 inch); Left/right 4 mm (0.16 inch)
Media sizes	Photo paper 10 x 15 cm (4 x 6 inches) Photo paper with tab 10 x 15 cm with 1.25 cm tab (4 x 6 inches with 0.5 inch tab) Index cards 10 x 15 cm (4 x 6 inches) Hagaki cards 100 x 148 mm (3.9 x 5.8 inches) A6 cards 105 x 148 mm (4.1 x 5.8 inches) L-size cards 3.5 x 5 inches (90 x 127 mm) L-size cards with tab 90 x 127 mm with 12.5 mm tab (3.5 x 5 inches with 0.5 inch tab)
Media types	Paper (photo) Cards (index, Hagaki, A6, L-size)
Memory cards	CompactFlash Type I and II MultiMediaCard Secure Digital SmartMedia Memory Sticks xD-Picture Card
Memory card-supported file formats	Printing: All supported image and video file formats Saving: All file formats
Operating temperature	0–45 degrees C (32–113 degrees F) [15–35 degrees C (59–95 degrees F) recommended]
Paper tray	One 10 x 15 cm (4 x 6 inch) photo paper tray
Paper tray capacity	20 sheets, maximum thickness 292 µm (11.5 mil) per sheet
Power consumption	U.S.

(continued)

Category	Specifications
	Printing: 12.2 W Idle: 6.76 W Off: 5.16 W International Printing: 12.0 W Idle: 6.06 W Off: 4.53 W
Print cartridge	Tri-color (7 ml) HP #95 (North America, Latin America, Asia Pacific), #135 (Eastern Europe, Russia, Middle East, Africa, Japan), #343 (Western Europe), #855 (China, India) Tri-color (14 ml) HP #97 (North America, Latin America, Asia Pacific), #134 (Eastern Europe, Russia, Middle East, Africa, Japan), #344 (Western Europe), #857 (China, India) Gray Photo HP #100 (worldwide)
USB support	Microsoft Windows 98, 2000 Professional, ME, XP Home, and XP Professional Mac OS X 10.1 through 10.3 HP recommends that the USB cable be less than 3 meters (10 feet) in length
Video file formats	Motion JPEG AVI Motion-JPEG QuickTime MPEG-1

8 Customer Care

If you have a problem, follow these steps:

- 1 Check the documentation that came with the printer.
 - **Setup Guide:** The *HP Photosmart 370 series Setup Guide* explains how to set up the printer and print your first photo.
 - **User's Guide:** The *HP Photosmart 370 series User's Guide* is the book you are reading. This book describes the basic features of the printer, explains how to use the printer without connecting a computer, and contains hardware troubleshooting information.
 - **HP Photosmart Printer Help:** The onscreen HP Photosmart Printer Help describes how to use the printer with a computer and contains software troubleshooting information.
- 2 If you are unable to solve the problem using the information in the documentation, visit www.hp.com/support to do the following:
 - Access online support pages
 - Send HP an e-mail message for answers to your questions
 - Connect with an HP technician by using online chat
 - Check for software updatesSupport options and availability vary by product, country/region, and language.
- 3 **For Europe only:** Contact your local point of purchase. If the printer has a hardware failure, you will be asked to bring the printer to where you purchased it. Service is free during the printer limited warranty period. After the warranty period, you will be quoted a service charge.
- 4 If you are unable to solve the problem using the onscreen Help or HP websites, call Customer Care using the number for your country/region. For a list of country/region phone numbers, see *Customer Care by phone*.

Customer Care by phone

While the printer is under warranty, you can obtain free phone support. For more information, see the warranty included in the box, or go to www.hp.com/support to check the duration of your free support.

After the free phone support period, you can obtain help from HP at an additional cost. Contact your HP dealer or call the support phone number for your country/region for support options.

To receive HP support by phone, call the appropriate support phone number for your location. Standard phone company charges apply.

North America: Call 1-800-HP-INVENT (1-800-474-6836). U.S. phone support is available in both English and Spanish languages 24 hours a day, 7 days a week (days and hours of support may change without notice). This service is free during the warranty period. A fee may apply outside the warranty period.

Western Europe: Customers in Austria, Belgium, Denmark, Spain, France, Germany, Ireland, Italy, Netherlands, Norway, Portugal, Finland, Sweden, Switzerland, and the United Kingdom should go to www.hp.com/support to access phone support numbers in their country/region.



61 56 45 43	الجزائر
Argentina Argentina	(54) 11-4778-8380 0-810-555-5520
Australia	13 10 47
800 171	البحرين
Brasil (dentro da grande São Paulo) Brasil (fora da grande São Paulo)	(11) 3747-7799 0800-15775 1
Canada	(800) 474-6836
Caribbean	1-800-711-2884
Central America	1-800-711-2884
Chile	800-360-999
中国	(8621) 38814518
Columbia	01-800-011-4726
Costa Rica	0-800-011-4114 + 1-800-711-2884
Česká republika	261 307 310
Ecuador (Andinatel)	1-800-711-2884
Ecuador (Pacifitel)	1-800-225528
2 532 5222	مصر
Greece (international) Greece (in-country) Greece (Cyprus)	+ 30 210 6073603 801 11 22 55 47 800 9 2649
Guatemala	1-800-999-5105
香港特別行政區	852-2802 4098
Magyarország	1 382 1111
India	1 600 44 7737
Indonesia	62 (21) 350 3408
(0) 9 830 4848	ישראל
Jamaica	0-800-7112884
日本	0570-000511
日本 (携帯電話の場合)	+81-3-3335-9800

한국	1588-3003
Malaysia	1800-80-5405
México (Ciudad de México) México (fuera de Ciudad de México)	(55)5258-9922 01-800-4726684
22 404747	المغرب
New Zealand	0800 441 147
Nigeria	1 3204 999
Panama	001-800-7112884
Perú	0-800-10111
Philippines	63 (2) 867-3551
Polska	22 5666 000
Puerto Rico	1-877-232-0589
Republica Dominicana	1-800-7112884
România	(21) 315 4442
Russia (Moscow) Russia (St. Petersburg)	095 7973520 812 3467997
800 897 1444	السعودية
Singapore	65 6272 5300
Slovakia	2 50222444
South Africa (Intl.) South Africa (RSA)	+ 27 11 2589301 086 0001030
Rest Of West Africa	+ 351 213 17 63 80
臺灣	(02) 8722-8000
Thailand	66 (2) 353 9000
71 89 12 22	تونس
Trinidad & Tobago	1-800-7112884
Türkiye	(212) 444 7171
Ukraine	(380 44) 4903520
800 4520	الإمارات العربية المتحدة
United States	(800) 474-6836
Venezuela	01-800-4746.8368
Việt Nam	84 (8) 823 4530
For Bangladesh, Brunei, Cambodia, Pakistan, and Sri Lanka	Fax to: +65-6275-6707

Placing a call

Call Customer Care while you are near the computer and printer. Be prepared to provide the following information:

- Printer model number (located on the front of the printer).
- Printer serial number (located on the bottom of the printer).
- Computer operating system.
- Version of printer driver:
 - **Windows PC:** To see the printer driver version, right-click the HP icon in the Windows taskbar and select **About**.
 - **Macintosh:** To see the printer driver version, use the Print dialog box.

- Messages displayed on the printer screen or on the computer monitor.
- Answers to the following questions:
 - Has the situation you are calling about happened before? Can you recreate the situation?
 - Did you install any new hardware or software on your computer around the time that the situation occurred?

a Installing the software

The printer comes with optional software you can install on a computer.

After using the *Setup Guide* instructions to setup the printer hardware, use the instructions in this section to install the software.

Windows users	Macintosh users
<p>Important: Do not connect the USB cable until you are prompted.</p> <p>HP Image Zone software and full printer functionality is installed automatically when you choose the Typical installation of your HP software.</p> <ol style="list-style-type: none">1 Insert the HP Photosmart CD into your computer's CD-ROM drive.2 Click Next and follow the onscreen instructions. If instructions do not appear, locate the setup.exe file on the CD-ROM drive and double-click it. Wait several minutes while the files load. <p>Note If the Found New Hardware screen appears, click Cancel, unplug the USB cable, and restart the installation.</p> <ol style="list-style-type: none">3 When prompted, connect one end of the USB cable to the USB port on the back of the printer, and connect the other end to the USB port on your computer.4 Follow the onscreen instructions until the installation is finished and your computer restarts. When the Congratulations page appears, click Print a demo page.	<p>Important: Do not connect the USB cable until you are prompted.</p> <ol style="list-style-type: none">1 Insert the HP Photosmart CD into your computer's CD-ROM drive.2 Double-click the HP Photosmart CD icon.3 Double-click the HP Photosmart Install icon. Follow the onscreen instructions to install the printer software.4 When prompted, connect one end of the USB cable to the USB port on the back of the printer, and connect the other end to the USB port on your computer.5 Select the printer in the Print dialog box. If the printer does not appear in the list, click Edit Printer List to add the printer.

Index

Symbols/Numerics

9–up view 24

A

accessories 7, 36
aligning print cartridges 17, 34
alignment page 34
antique coloration 26
automobile adapter 8, 36

B

batteries
 compartment 7
 digital camera 29
 model 7
black-and-white photos 16
Bluetooth
 connecting to printer 31
 device name 45
 menu settings 8
 troubleshooting 44
 wireless printer adapter 8
borderless photos
 do not print 42
 print with borders 45
 selecting layout 28
buttons 5

C

cameras
 connecting to printer 31
 photos do not print 44
 port 4
 printing from 29
carrying case
 model 8
 transporting printer 36
cartridges. *see* print cartridges
cleaning
 print cartridges 33
 printer 33
CompactFlash 19
computer
 connecting to printer 31
 installing software 57
 printing from 3

 system requirements 49
control panel 5
cropping photos 26
Customer Care 53

D

date and time stamps 26
digital cameras. *see* cameras
Digital Flash 27
documentation, printer 3

E

e-mailing photos 32
error messages 45

F

file formats, supported 19, 49
framing photos 26

H

help. *see* troubleshooting
help, onscreen 3
HP direct-printing digital cameras 29
HP Instant Share 31, 32

I

ink cartridges. *see* print cartridges
ink level, checking 17, 34
inserting
 memory cards 19
 print cartridges 17

J

JPEG file formats 19

L

layout, selecting 28
lights 5
loading paper 15

M

memory cards
 inserting 19
 photos do not appear 40

 printing from 29
 removing 21
 supported types 19
Memory Sticks 19
menu, printer 8
Microdrive 19
MPEG-1 file format 19
MultiMediaCard 19

O

onscreen Help 3

P

paper
 buying and choosing 15
 loading 15
 maintaining 15, 36
 specifications 49
 trays 4
 troubleshooting 42
photos
 antique coloration 26
 cropping 26
 date and time stamp 26
 e-mailing 32
 framing 26
 improving quality 27
 index 24
 print cartridges,
 choosing 16
 printing 28
 red eye removal 27
 saving to computer 31
 selecting for print 25
 sepia tones 26
 slide show 24
 supported file formats 19
 viewing 24
 zooming 26
PictBridge cameras 29
print cartridges
 aligning 34
 choosing 16
 cleaning 33
 ink level, checking 17
 inserting 17
 replacing 17

- storing 19, 35
- testing 34
- printer
 - accessories 7, 36
 - cleaning 33
 - connecting 31
 - documentation 3
 - error messages 45
 - menu 8
 - parts 4
 - power problems 41
 - specifications 49
 - storing 35
 - transporting 36
 - warnings 4
- printing
 - from cameras 29
 - from computer 3
 - from memory cards 29
 - multiple copies 25
 - multiple photos 25
 - new photos 25
 - photo index 24
 - photos 28
 - range of photos 25
 - selecting layout 28
 - test page 34
 - thumbnails 24
 - without computer 23

Q

- quality
 - photo paper 36
 - photos 27
 - print 28
 - printing test page 34
 - troubleshooting 44

R

- red eye removal 27
- regulatory notices 61
- removing memory cards 21
- replacing print cartridges 17

S

- saving photos to computer 31
- Secure Digital 19
- sepia tones 26
- Smart Focus 27
- SmartMedia 19
- software, installing 57
- specifications 49
- storing

- photo paper 36
- print cartridges 19, 35
- printer 35
- system requirements 49

T

- test page 34
- thumbnails, printing 24
- TIFF file format 19
- transporting printer 7, 36
- trays, paper 4
- troubleshooting
 - Bluetooth 44
 - borderless photos 42
 - buttons do not work 40
 - cannot find photos 40
 - Customer Care 53
 - error messages 45
 - flashing lights 39
 - paper problems 42
 - power problems 41
 - printer noises 42
 - quality problems 44

U

- USB
 - connection type 31
 - port 4
 - specifications 49

V

- viewing photos 24

X

- xD-Picture Card 19

Z

- zooming
 - 9-up view 24
 - and cropping 26

Declaration of conformity

According to ISO/IEC Guide 22 and EN 45014

Manufacturer's name and address:

Hewlett-Packard Company, 16399 West Bernardo Drive, San Diego, CA 92127-1899, USA

Regulatory model number:	SDGOA-0405
--------------------------	------------

Declares that the product:

Product name:	Photosmart 370 series (Q3419A)
Model number(s):	Photosmart 375 (Q3419A)
Power adapters:	HP Part # Q3419-60040 (domestic) HP Part # Q3419-60041 (international)

Conforms to the following product specifications:

Safety:	IEC 60950: 3rd Edition: 1999 EN 60950:2000 UL1950/CSA22.1 No.950, 3rd Edition:1995 NOM 019-SFCI-1993 GB4943:2001
EMC:	CISPR 22: 1997 / EN 55022: 1998, Class B CISPR 24: 1997 / EN 55024: 1998 IEC 61000-3-2: 2000 / EN 61000-3-2: 2000 IEC 61000-3-3/A1: 2001 / EN 61000-3-3/A1: 2001 CNS13438: 1998, VCCI-2 FCC Part 15-Class B/ICES-003, Issue 2 GB9254: 1998

Supplementary Information:

The Product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC and carries the CE marking accordingly.

European Contact for regulatory topics only: Hewlett Packard GmbH, HQ-TRE, Herrenberger Strasse 140, D-71034 Böblingen Germany. (FAX +49-7031-14-3143)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>