Emerson

Bluetooth

Owner's Manual
EM515

Location of controls

EM515

1. **[Power indicator Light]**
2. **[ON/OFF]** Button
3. **[CONTROL WHEEL]**
   • Next Track (▶▶ Quickpull up)
   • Previous Track (◀◀ Quickpull down)
   • Play / Pause (▶❙❙ Quickpress)
   • Volume Up (V+ Push up & HOLD)
   • Volume Down (V- Push down & HOLD)
4. **Audio in jack**
5. Microphone
6. Mini USB charging port

In the box

Wireless Headphones   Owner's Manual

3.5 mm Audio Cable   USB Charging Cable

Charging the EM515

1. Connect the small end of the included USB charging cable into the Mini USB charging port of the EM515.

2. Connect the other end of the USB cable to your PC's USB port.

3. The **[Power indicator Light]** illuminates green while charging.

4. The **GREEN LED [Power indicator Light]** light shuts off when the EM515 is fully charged (approximately 3 hours).
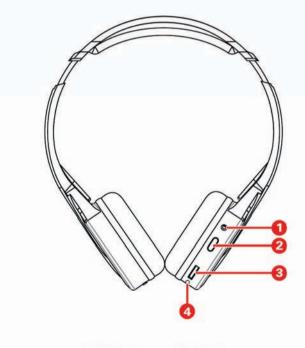
NOTE: Do not over charge.

EM515

USB Charging Port

USB port

USB Cable

NOTE: Make sure you charge your EM515 for a full 4 hours before using it for the first time.

Pairing the EM515
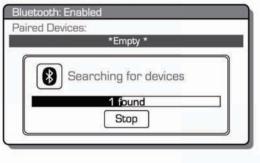
1. Make sure the EM515 is turned off.
2. Keep your EM515 and mobile phone within 3 feet of each other during the pairing process.
3. Press and **HOLD** the **[ON/OFF]** button for 8 seconds until the **[Power indicator Light]** light flashes **RED** and **GREEN** alternately.
4. The EM515 is now in Pairing Mode and ready to connect to your mobile phone.

within 3 feet

[ON/OFF] button
(Press & HOLD)

[Power indicator Light]

NOTE: To enter the Pairing Mode, you must press and HOLD the [ON/OFF] button for approximately 8 seconds. This must be done while the headphones are powered off. Pairing mode will last 2 minutes. After two minutes the headset will return to standby mode.
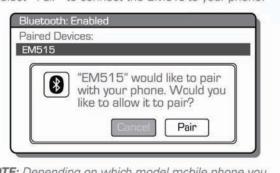
5. Set your mobile phone or other Bluetooth enabled device to search for Bluetooth devices.
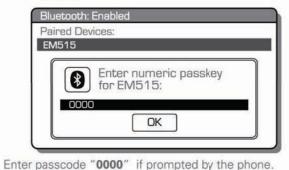

6. When the phone finds the EM515, confirm by selecting EM515 from the list.

7. Select "Pair" to connect the EM515 to your phone.

NOTE: Depending on which model mobile phone you are trying to connect the EM515 to, it may be necessary to enter a passcode and the following message (or similar) may appear on your phone's display:
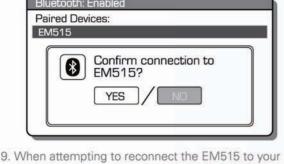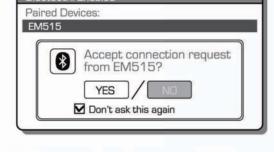

Enter passcode "**0000**" if prompted by the phone.

8. Your mobile phone will confirm that the pairing was completed, and prompt you to accept the connection. Please respond **YES** to connect the EM515 to your mobile phone. If the pairing was successful, the EM515's **[Power Indicator Light]** flashes green slowly every two seconds.

9. When attempting to reconnect the EM515 to your mobile phone, you may see the message below, and your mobile phone will prompt you to accept the connection request to the EM515, and an option not to ask this again. Please accept the connection, and if you select "Don't ask this again," your phone will automatically accept future connection requests from your EM515.

NOTE: The screenshots above are typical of many Bluetooth enabled phones in the market today, and are used to assist in the explanation of the pairing process. Your mobile phone's interface and interaction with the EM515 may be slightly different from the illustrations above.

Pairing with SONY Playstation® (PS3™)

To pair the EM515 with a SONY PlayStation 3, follow the instructions below:

<SET ACCESSORY to BLUETOOTH ON PS3>
1. Go to the PS3 main menu, scroll to and select "**Settings**".
2. Scroll to and select "**Accessory Settings**".
3. Scroll to and select "**Manage Bluetooth Devices**".
4. The menu will ask: "**The Bluetooth device has not been registered. Do you want to register it?**", then select "**YES**".

<REGISTER EM515 to PS3>
Put your EM515 into pairing mode.
(See "Pairing the EM515 with a Bluetooth enabled device")

1. Select "**Start Scanning**" from the PS3 menu.
2. Once the PS3 has discovered the EM515, the screen will read "**Select the Bluetooth device to register**", then select "**EM515**"
3. The PS3 will ask for a passkey. Enter **[0000]** then select "**OK**". Now press [O] (the PS3 circle button) to get back to the previous menu.
4. Scroll to and select "**Audio Device Settings**" to change the "**Input Device**" to "**EM515**".

NOTE: "Input Device" is the microphone, and determines the method of how others will hear you speak. By default, the "Output Device" will now switch to "EM515". "Output Device" is the audio, and determines how you will hear the PS3 audio and others speaking.

To test the connection, speak into the EM515 and you will see the bars above the "Microphone Level" moving, if not, repeat the pairing process.

Press "**OK**" to confirm the new settings. You are now ready to use the EM515 with your PS3 Entertainment System. If you would like to hear the PS3 audio through your TV or Audio System, scroll to "**Output Device**" and switch to "**System Default Device**".

For further assistance with Bluetooth settings on your PS3 please refer to your PS3 instruction manual.

Using our Wireless Headphones

Powering ON/OFF
• To turn **ON**, press and hold the **[ON/OFF]** button for 3 seconds until the **RED [Power Indicator Light]** light blinks.

• To turn **OFF**, press and hold the **[ON/OFF]** button until the **RED [Power indicator Light]** light blinks and shuts off.

• When your EM515 is powered on and connected, the **RED [Power indicator Light]** illuminates periodically two times quickly. When your EM515 is powered on and not connected the **RED [Power indicator Light]** illuminates periodically one time.

Answering/Ending a call
• To answer a call, press the **[ON/OFF]** button once.
• To end a call, press the **[ON/OFF]** button once.

If the EM515 is powered on and a call comes in, the EM515 will beep to indicate the incoming call.

To make a call
Dial the number and press the send button on your mobile phone, the call is automatically transferred to the EM515.

Adjusting the volume
Push up or down and HOLD the **[Control Wheel]** button to adjust the volume to the desired level.

NOTE: You may also adjust the volume from your mobile phone's volume control. A beep will be heard when maximum volume is reached.

Redialing the last number called (Dependent on your phone supporting this feature)
Longpress the **[ON/OFF]** button for two seconds. The last number called will be redialed.

Stereo Bluetooth

These EM515 allows you to listen (in full stereo) and control* the music on your Bluetooth enabled mobile phone, gaming console, computer or mp3 player and supports the following Bluetooth profiles:

• **A2DP - Advanced Audio Distribution Profile**
• **AVRCP - Audio/Video Remote Control Profile**
• **HSP - Headset Profile**
• **HFP - Handsfree Profile**

To use the EM515 to listen/control music, your Bluetooth enabled device must support the A2DP and AVRCP profiles. Please refer to the user guide of your Bluetooth enabled device for more information.

***The EM515 wireless headphones are compatible with any brand of Bluetooth-enabled phone or music device that supports Advanced Audio Distribution Profile (A2DP) and Audio Video Remote Control Profile (AVRCP).**

In order for Bluetooth devices to communicate with one another properly, they must utilize the same Bluetooth profile. To determine the profiles supported by your device (mobile phone, gaming console, computer or mp3 player), please refer to the device's user guide.

Certain Bluetooth features including those listed may not be supported by all compatible Bluetooth-enabled devices, and/or the functionality of such features may be limited in certain devices.

Playing music

To enjoy wireless music on your EM515, you must open the music player or application on your device, then quickpress the **[Control Wheel]** button. Once playback has begun, you can control the music or answer phone calls from the control buttons of the EM515 (not all mobile phones support the control of music using Bluetooth).

NOTE: Some phones or bluetooth enabled media players require that you first quickpress the [Control Wheel] button on your device before you can control the music with the EM515.

Play/Pause*
Quickpress the **[Control Wheel]** button to pause the music. To resume music playback, quickpress the **[Control Wheel]** button again.

Skipping songs*

Quickpull the **[Control Wheel]** down to go to the previous track.

Quickpull the **[Control Wheel]** up to go to the next track.

[Control Wheel]

Location of controls

Adjusting the volume
Push up/down and HOLD the **[Control Wheel]** button to adjust the volume to the desired level.

[Control Wheel]

NOTE: You may also adjust the volume from your mobile phone's volume control.

Using as wired headphones

The EM515 can also be used as wired headphones. This is helpful if the battery is drained and you are not near a charging source.

Audio-In Jack

1. Connect one end of the included Audio Cable to the **Audio-in jack** on the EM515.

2. Connect the other end of the Audio Cable to the headphone jack of your audio device.

3. Control your music with your audio device.

Adjusting your headphones

You can adjust the headphones to fit to your comfort by adjusting both sides.

Storing your Bluetooth EM515

Fold the EM515 as shown below, when traveling with or storing your EM515.

Troubleshooting tips

? I can pair the EM515 with my Bluetooth device, but I cannot hear any music?

• Make sure your Bluetooth device supports A2DP profile.

? I cannot get the EM515 into Pairing Mode.

• Make sure the EM515 is turned off before beginning the pairing process.

• *To enter the Pairing Mode, you must press and HOLD the [ON/OFF] button for approximately 8 seconds. This must be done while the headphones are powered off. Pairing mode will last 2 minutes. After two minutes the headset will return to standby mode.*

? My mobile phone is not able to pair with the EM515.

• Make sure that you fully charged the EM515 before pairing.
• Keep your EM515 and mobile phone within 3 feet of each other during the pairing process.
• Check that your phone's Bluetooth feature is turned **ON**.
• Try repeating the pairing process, see "**Pairing the EM515**".

? After successfully pairing my mobile phone and EM515, when I shut my phone and turn it on again, my EM515 did not automatically connect.

• Try turning the EM515 **OFF**, and then turning them **ON** again.
• Many mobile phones have an auto reconnect option when first attempting to reconnect to a newly paired Bluetooth device. Make sure you accept this option, so that your EM515 automatically reconnects to your mobile phone (check the user guide of your mobile phone for more information regarding this option).
• Try unpairing the EM515 from your phone, and repeat the pairing procedure.

? I hear distortion, and the sound quality is poor.

• Try keeping the EM515 closer to the Bluetooth enabled device.
• Check that the battery is charged enough.

? The sound is very low.

• Try adjusting the volume by using the **[Control Wheel]** on your EM515; make sure the volume on your mobile phone is turned up as well.

Safety information

CAUTION: Do not use this device while operating a motor vehicle. Although the EM515 offers handsfree operation, they cover both ears of the user, and are not suitable for use when driving.

• **Do not use these EM515 while driving.**
• Observe all signs in the designated areas where some electronic devices or RF radio products are required to be switched off. These could include airplanes, hospitals, blasting areas, and potentially explosive atmospheres.

Legal Information

FCC Part 15:
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

Limited warranty

Limited Warranty
In the unlikely event that this product is defective, or does not perform properly, you may within one (1) year from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:
• **Provide proof of the date of purchase within the package (Dated bill of sale).**
• **Prepay all shipping costs to the authorized service center, and remember to insure your return.**
• **Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.**
• **Describe the defect or reason you are returning the product.**

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty:
• THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY SOUTHERN TELECOM INC., IT'S AGENTS, OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

• REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SOUTHERN TELECOM INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

Emerson™

Distributed by Southern Telecom Inc. Brooklyn, NY11232

© 2012 Southern Telecom Inc. All rights reserved.

Emerson and the G-Clef logo are registered trademarks of Emerson Radio Corp. Parsippany, New Jersey USA.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc.

SONY PlayStation® & PS3™ are either trademarks or registered trademarks of SONY.

All other trademarks are trademarks of their respective owners.

www.emersonphones.com

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com