

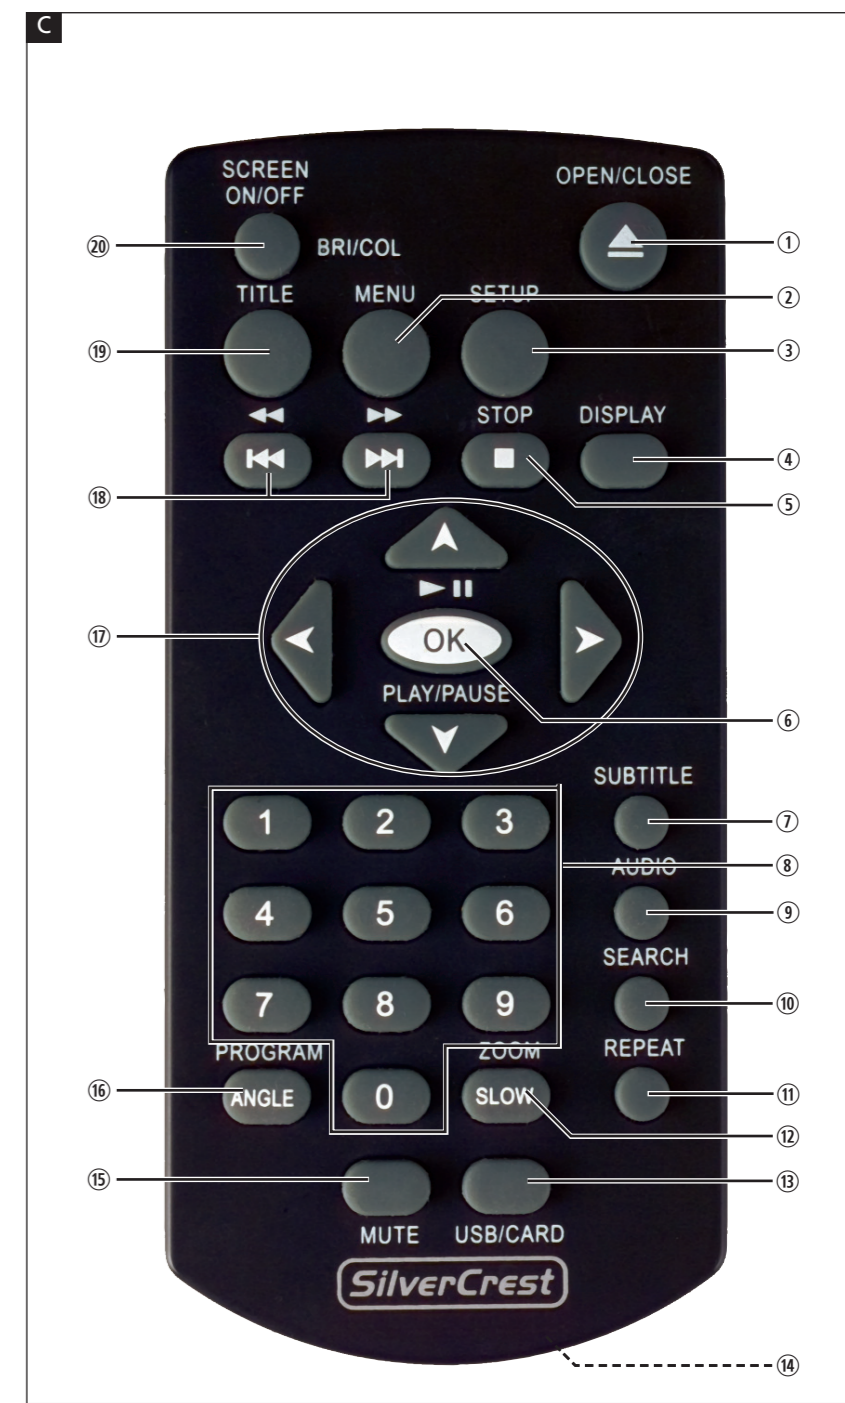
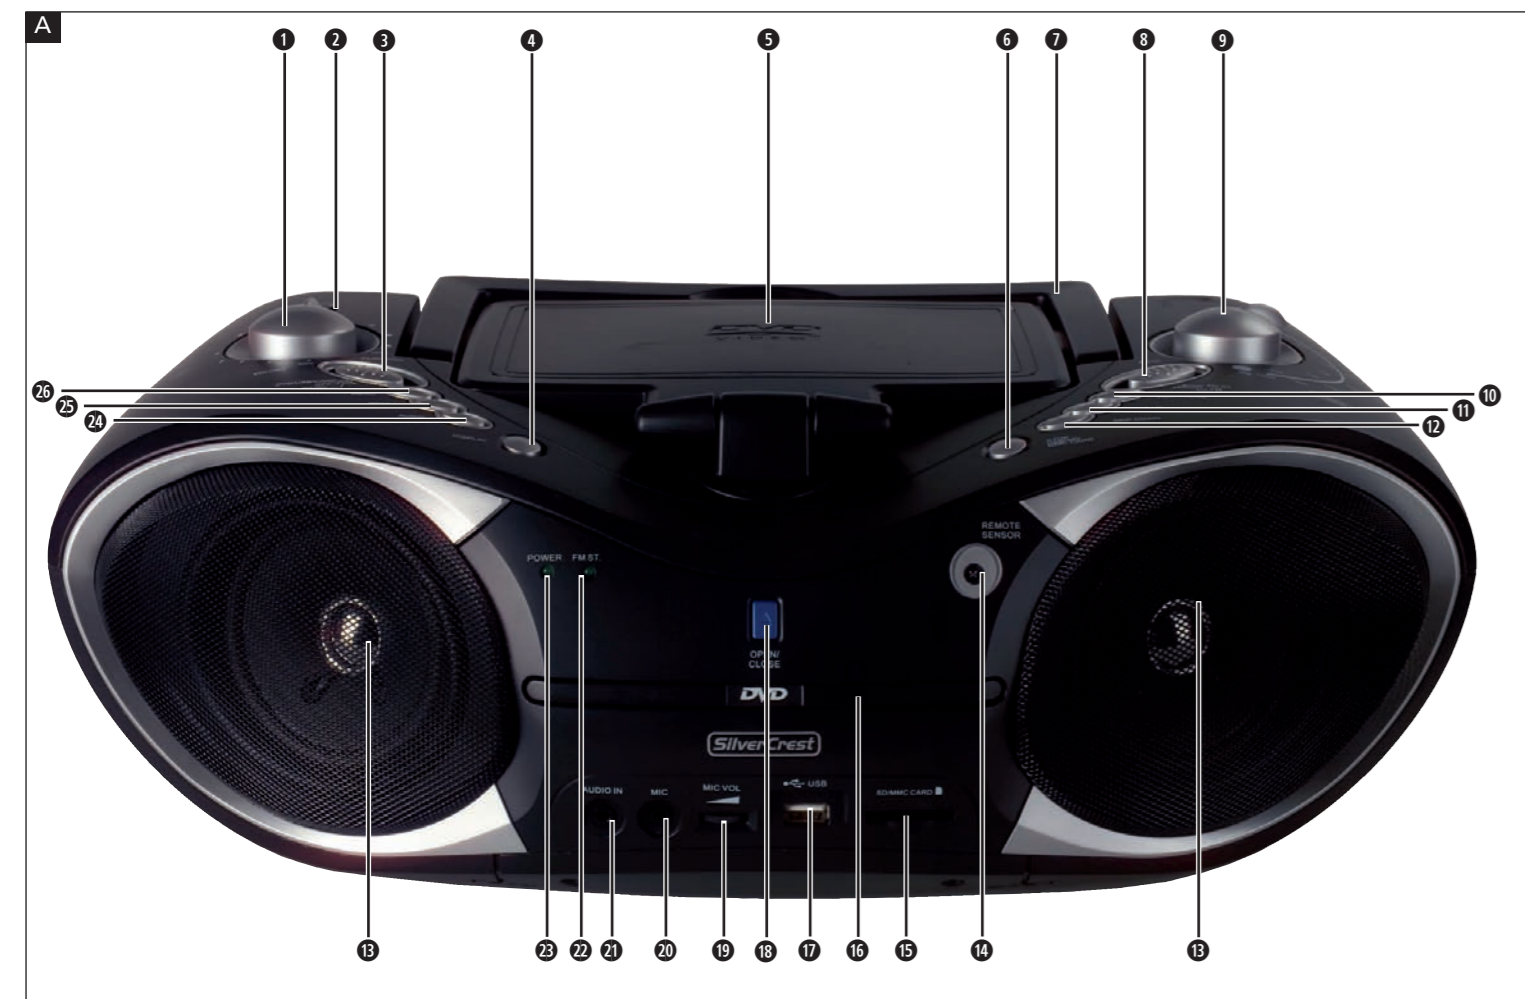


## ■ DVD PLAYER/RADIO



 **DVD PLAYER/RADIO**  
Operating instructions

 **DVD-SPILLER/RADIO**  
Bruksanvisning




<b>1. Technical Data</b>	<b>2</b>
<b>2. Applications and functions</b>	<b>2</b>
<b>3. Package contents</b>	<b>2</b>
<b>4. Operating elements</b>	<b>3</b>
<b>5. Setting up of the DVD player</b>	<b>3</b>
<b>6. Safety instructions</b>	<b>3</b>
<b>7. Inserting batteries into the remote control and DVD player</b>	<b>4</b>
<b>8. Connecting to a television via the video output (Composite Video)</b>	<b>5</b>
<b>9. Connecting audio components to the DVD player</b>	<b>5</b>
<b>10. Operation</b>	<b>6</b>
<b>11. Radio functions</b>	<b>7</b>
<b>12. DVD player functions</b>	<b>7</b>
<b>Setup menu in DVD mode</b>	<b>7</b>
<b>13. Initial operation of the DVD player</b>	<b>10</b>
<b>14. Playing back DVDs, VCDs or S-VCDs</b>	<b>11</b>
Playback start, stop, pause	12
SKIP function (Chapter/Title forward/backward)	12
Search forward/backwards	12
Slow motion function (DVD, VCD, S-VCD and DivX only)	12
Image enlargement (Zoom)	13
Camera position (DVD only)	13
Repeat function for DVDs, VCDs, S-VCDs and Audio CDs	13
Direct Title/Track selection	13
Direct chapter,title or time selection via the search function	13
<b>Display functions</b>	<b>14</b>
Display disc information	14
Accessing the DVD menu	14
Playback Control (PBC) with VCDs/S-VCDs	14
Superimpose and fade out subtitles (DVDs/VCDs/S-VCDs only)	14
Changing playback language (DVDs/VCDs/S-VCDs only)	15
Programme function	15
<b>15. Display of MP3/WMA/JPEG/AVI/MPEG and DivX data</b>	<b>15</b>
Playback of MP3/ WMA/MPEG and DivX discs	16
Repeat function with MP3/WMA/MPEG/ JPEG/DivX discs	16
Playback of JPEG discs	16
<b>16. Cleaning of the DVD player</b>	<b>17</b>
<b>17. Disposal</b>	<b>17</b>
<b>18. Troubleshooting</b>	<b>17</b>
<b>19. Glossary / Key Word Index</b>	<b>18</b>
<b>20. Warranty &amp; Service</b>	<b>19</b>
<b>21. Importer</b>	<b>19</b>

Read these operating instructions carefully before using the appliance for the first time and preserve this manual for later reference. Pass this manual on to whoever might acquire the appliance at a future date.

# DVD-PLAYER/RADIO KH6502

## 1. Technical Data

This device has been tested and approved in accordance with the basic requirements and other relevant regulations of the EMC guidelines 2004/108/EG as well as the guidelines for low voltage appliances 2006/95/EG.

Power supply:	AC 220 V - 240 V ~50 Hz
Power consumption :	25 Watt
Power consumption:	
Standby:	0,7 W
TV standard:	PAL/NTSC
Output level:	2 x 2,5 W
Operating temperature:	+5 ~ +35°C
Humidity:	5 ~ 90% (no condensation)
Measurements	
(L x W x H):	241 x 430 x 50 mm
Weight :	2,1 kg approx.
Protection class:	II 

### Frequency range radio:

MW (AM):	540 - 1600 kHz
UHF (FM):	88 - 108 MHz

### Battery operation

8 x 1,5 V, Type CR14/LR14 (Button cell)

### Remote Control

Batteries : Type AAA/R03 (Micro cell)

### Video Output

Composite video cinch socket

### Audio Output

2 Stereo audio cinch sockets

### Audio input

3,5 mm Stereo jack

### Microphone input

3,5 mm Stereo jack

### USB slot

Readable

USB memory sticks: USB1.1 and 2.0 up to a capacity of 1 GB





### Memory card slot

Readable memory cards: SD (1 GB), MMC (1 GB)

## 2. Applications and functions

The SilverCrest KH 6502 DVD player is intended exclusively for stationary use in enclosed spaces. The device is intended exclusively for private, non-commercial use.

This device is intended for use as an electronic entertainment device for the playback ...

- ...of DVD videos in 12 cm and 8 cm (diameter) formats with Country/Regional code 2 or , designated by the Logo .
- ...of MPEG-4/MPEG-4 ASP video formats and with DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.x, multichannel DivX and DivX Pro.
- ... of video-CDs (VCDs) and Super video-CDs (S-VCDs) in 12 cm and 8 cm (diameter) formats, designated by the Logo .
- ... of audio-CDs in 12 cm and 8 cm (diameter) formats, designated by the Logo .
- ... generally of the data formats CD Audio (.cda), MP3 (.mp3), Windows Media Audio (.wma), DivX (.avi), Nero Digital (.mp4) und JPEG (.jpg) on the storage mediums CD-R, CD-RW, USB memory sticks as well as memory cards of the types SD and MMC.

For image output with the playback of DVDs, VCDs, S-VCDs, Audio CDs and the data format MP3, Windows Media Audio and JPEG you can connect to the SilverCrest KH 6502 DVD player ...

- Stereo and Mono televisions with the formats PAL or NTSC and the picture formats 4:3/16:9.
- LCD/Plasma picture screens or video-projectors, if for this the corresponding connection potential is available and the connection of a DVD player is provided for/allowed by the manufacturer of the playback device

For the output of sound and/or music you can use and/or connect to the Silvercrest KH 6502 DVD-Player ...

- from the speaker of one of the televisions connected to the DVD player
- external audio components such as a HiFi system or receiver

### **Attention!**

*No liability/warranty will be assumed for damage resulting from improper use of the device!*

## 3. Package contents

- DVD-Player
- Power cord
- Infrared remote control
- 2 Batteries for remote control, type AAA/R03 (Micro cells)
- Operating manual

## 4. Operating elements

### A. DVD player front panel

- ① Volume control
- ② Headphone output 3,5 mm
- ③ FUNCTION switch: Switch the device off, switch to DVD or radio operation
- ④ DISPLAY button: Display playback information
- ⑤ LCD display
- ⑥ ■ STOP button  
USB/SD/MMC CARD button: Stop playback/Display USB/  
Memory card contents
- ⑦ Carrying handle
- ⑧ Band selection switch
- ⑨ Frequency control
- ⑩ PLAY/PAUSE button
- ⑪ SKIP UP button: move forward a title/chapter, fast forward
- ⑫ SKIP DOWN button: move back a title/chapter, fast rewind
- ⑬ Loud speaker
- ⑭ IR sensor for the remote control
- ⑮ Memory card slot for SD and MMC cards
- ⑯ Disc tray
- ⑰ USB slot
- ⑱ OPEN/CLOSE: Open/Close the disc tray
- ⑲ MIC VOL: Microphone volume control
- ⑳ MIC: Microphone input 3,5 mm
- ㉑ AUDIO IN: Stereo audio input 3,5 mm
- ㉒ FM ST.: Indicator for FM stereo reception (green light shows stereo reception)
- ㉓ POWER: Power indicator (green light shows when device is switched on)
- ㉔ AUDIO button: Set the audio language/channel
- ㉕ REPEAT button: Set the repeat function
- ㉖ MENU button: Access disc menu

### B. DVD player rear panel

- ㉗ Rear speaker
- ㉘ Telescopic antenna
- ㉙ Battery compartment
- ㉚ VIDEO: Composite video output
- ㉛ AUDIO OUT R: Right audio output
- ㉜ AUDIO OUT L: Left audio output
- ㉝ Power cable connector

### C. Remote control

- ① OPEN/CLOSE: Open/Close the disc tray
- ② MENU: Access disc menu
- ③ SETUP: Access the OSD menu
- ④ DISPLAY: Superimpose disc information
- ⑤ STOP: Stop playback
- ⑥ PLAY/PAUSE button, OK button: Start/Pause playback, confirm input
- ⑦ SUBTITLE: Set the sub-title
- ⑧ Number buttons
- ⑨ AUDIO: Set the audio language/channel
- ⑩ SEARCH: Access the search function
- ⑪ REPEAT: Set the repeat function
- ⑫ ZOOM/SLOW: Set image enlargement, slow motion function
- ⑬ USB/CARD: Playback of USB or memory cards
- ⑭ Battery compartment (on the rear panel)
- ⑮ MUTE: Switch the sound on/off
- ⑯ ANGLE/PROGRAM: Change the camera perspective/  
Access the programme function
- ⑰ Control buttons ◀▶ ▲▼

- ⑱ ▶▶ SKIP UP: move forward a title/chapter, fast forward
- ◀◀ SKIP DOWN: move back a title/chapter, fast rewind
- ⑲ TITLE: Access the title menu
- ⑳ SCREEN ON/OFF: Switch the LCD display on and off/  
set the brightness and colour

## 5. Setting up of the DVD player

1. Carefully remove the DVD player and the supplied accessories from the packing.
2. Remove the protective foil from the LCD display.
3. Place the DVD player on a flat, even and firm base.
4. Plug the DVD player's power cord in the power cord connector on the rear panel of the DVD player.

### ⚠ Attention!

If you want to connect the DVD player to other devices do not plug the power cord into the mains power at this time. Wait until you have connected the other devices.

In the event that you wish to change the type of video or audio connection you must first pull the power plug from the power socket! Otherwise the DVD player and possibly equipment connected to it could become irreparably damaged through voltage peak strikes!

## 6. Safety instructions

- This device is not suitable for children or other persons, whose physical, sensorial or mental abilities, without assistance or supervision, impede the safe operation of the device. Children should be watched-over to ensure that they do not play with the device
- To avoid unintentionally switching on the device pull the power cord from the mains supply after use and before cleaning.
- Check the appliance and all parts for visible damage. The safety concept can work only if the appliance is in a faultless condition.
- The power plug must always be easily accessible, so that the appliance can be quickly separated from the mains in the event of an emergency.

### ⚠ Risk of electrical shocks.

- Connect the appliance only to correctly installed and earthed mains sockets. Ensure that the rating of the local power supply tallies completely with the details given on the rating plate of the appliance.
- Arrange for defective power plugs and/or cables to be replaced at once by qualified technicians or our Customer Service Department.
- Arrange for customer service to repair or replace connecting cables and/or appliances that are not functioning properly or have been damaged.
- ⚠ NEVER submerge the appliance in water. Wipe it only with a slightly damp cloth.
- Do not expose the appliance to rain and never use it in a humid or wet environment.
- Ensure that the power cable never becomes wet during operation.
- You must not open the housing or repair the appliance yourself. Should you do so, appliance safety can no longer be assured and the warranty will become void.
- Protect the appliance against drip and spray water. Do not place any water-filled vessels (e.g. flower vases) on or near the appliance.

### **⚠ Risk of fire!**

- Do not use the appliance in the vicinity of hot surfaces.
- Do not locate the appliance in places exposed to direct sunlight, If you do, it may overheat and become irreparably damaged.
- Do not leave the appliance unattended when in use.
- Never cover the ventilation slots of the appliance while it is being used.
- Do not place open fire sources, such as candles, on or near the device.

### **⚠ Injury hazard**

- Keep children away from the connecting cable and the appliance. Children frequently underestimate the dangers of electrical appliances.
- Ensure that the appliance stands with a safe and secure positioning.
- Do not operate the appliance if it has sustained a fall or is damaged. Arrange for the appliance to be checked and/or repaired by qualified technicians.
- Keep batteries away from children. Children can put batteries into their mouths and swallow them.

### **⚠ Danger! Laser radiation!**

The appliance is fitted with a „Class 1 Laser“.

- Never open the device.
- Never attempt to repair the device.
- There is invisible laser radiation inside the device.  
Do not expose yourself to the laser beam.

### **ⓘ Note:**

Some aggressive furniture finishes can have a destructive influence on the device's rubber feet. If necessary, place the device on a nonslip pad.

### **⚠ Thunderstorms!**

Equipment connected to a power supply can be damaged during a thunderstorm. You should therefore always pull the power plug from the power socket when there is a storm.

### **⚠ Notice regarding surge voltages (FEO / fast electrical overloads):**

In a case of malfunction due to an electrical fast transient (power surge) the product must be returned to default settings in order to re-establish normal operation. Possibly the power supply must be separated and then reconnected. The batteries (if present) must be removed and then reinserted.

### **⚠ Notice regarding separation from mains-power**

The FUNCTION switch for this appliance does NOT completely separate it from the mains-power source. Additionally, the appliance consumes power when in standby-mode. To completely separate the appliance from mains-power, the power plug MUST be removed from the wall socket.

### **⚠ Information regarding the handling of batteries**

The device and the remote control are operated by batteries. For the handling of batteries please observe the following:

### **⚠ Risk of explosion!**

Do not throw batteries into a fire. Do not recharge the batteries.

- Never open batteries, never solder or weld batteries. The risk of explosions and injuries exists!
- Regularly check the condition of the batteries. Leaking batteries can cause damage to the appliance.
- If you do not intend to use the appliance for an extended period, remove the batteries.
- In the event of the batteries leaking acids, wear protective gloves.
- Clean the battery compartment and the battery contacts with a dry cloth.

### **⚠ Attention!**

No liability/warranty will be considered for damage to the DVD player caused by the effects of moisture, water penetration or overheating!

## **7. Inserting batteries into the remote control and DVD player**

---

### **7.1. Inserting the Batteries into the Remote Control**

- 1.** Open the battery compartment on the rear of the remote control.
- 2.** Place the two, supplied in the package, batteries type AAA/R03 (Micro cells) in the battery compartment. Make sure that the batteries are inserted in accordance with the correct polarity.
- 3.** Replace the battery compartment cover.

### **Using the remote control**

In order to guarantee faultless operation when using the remote control...

- Always point the remote control, during use, directly at the DVD player
- Make sure that there are no obstructions between the remote control and the DVD player that will hinder reception
- When using the remote control place yourself not more than 5 metres from the DVD player

Otherwise interferences can occur during operation of the DVD player functions with the remote control.

### **7.2 Inserting the batteries into the DVD player**

The DVD player can be operated by batteries. As soon as the DVD player is connected to a power source via the power cable, power supply from the batteries is switched off.

- 1.** Open the battery compartment on the underside of the DVD player.
- 2.** Now place 8 batteries type CR14/LR14 (Button cells) into the battery compartment. Make sure that the batteries are inserted in accordance with the correct polarity.
- 3.** Replace the battery compartment cover.

### **7.3. Replacing the batteries**


If the operation of the DVD player via the remote control does not function properly or does not function at all the batteries must be replaced

- Always renew all batteries in order to return the DVD player and the remote control to their full performance ability.

## 8. Connecting to a television via the video output (Composite Video)

For this connection variant the television must be equipped with Audio/Video cinch sockets (Composite Video).

To connect the DVD player to a television via composite video you will need an audio/video RCA (cinch) cable.

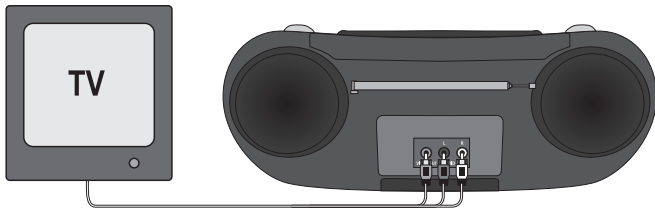

- Connect the yellow socket marked **VIDEO-OUT** to the television's yellow **VIDEO** socket via an audio/video cinch cable.
- Insert the white audio/video cinch cable plug into the cinch socket inscribed **AUDIO OUT L** on the rear panel of the DVD player.
- Then insert the white plug on the other end of the audio/video cinch cable into the left channel audio socket on the television.
- Insert the red audio/video cinch cable plug into the cinch socket inscribed **AUDIO OUT R** on the rear panel of the DVD player.
- Then insert the red plug on the other end of the audio/video cinch cable into the right channel audio socket on the television.
- For playback select the matching channel on your television. Check with the television's instruction manual on how you can set the AV channel.

## 9. Connecting audio components to the DVD player

### 9.1 Connecting a HiFi system or receiver to the DVD player


Besides sound playback of DVDs, VCDs/S-VCDs and audio and MP3 CDs via the speaker of the television, to which the DVD player is connected, sound can also be played back via external audio components such as a HiFi system or receivers.

#### Requirements for the connection of a HiFi system

In order to enjoy a full sound experience when playing DVDs with the DVD player you can connect a HiFi system to the player. Before connecting check with the HiFi system's instruction manual to verify...

- if the HiFi system is suitable for connection to a DVD player. If yes...
- if the HiFi system is equipped with cinch sockets; if yes, you can connect the HiFi system to the DVD player via cinch cables.

#### Connecting a HiFi system:

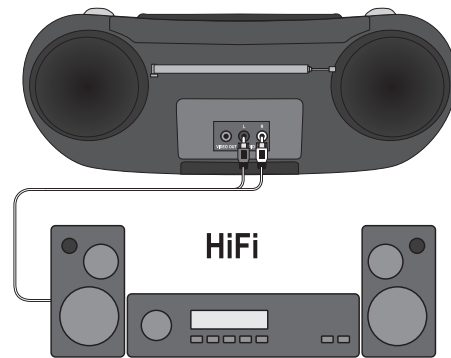

- Insert the white audio/video cinch cable plug into the cinch socket inscribed **AUDIO OUT L** on the rear panel of the DVD player.
- Then insert the white plug on the other end of the audio/video cinch cable into the left channel audio socket of the HiFi system.
- Insert the red audio/video cinch cable plug into the **AUDIO OUT R** inscribed cinch socket on the rear panel of the DVD player.
- Then insert the red plug on the other end of the audio/video cinch cable into the right channel audio socket of the HiFi system.
- Check with the instruction manual which settings on the HiFi system may be necessary in order to reproduce sound via the HiFi system during the playback of a DVD, VCD/S-VCD, Audio or MP3 CD from the DVD player.

#### **i** Note:

*For an optimal sound experience place your HiFi's speakers to the left and right of the DVD player.*

## 9.2 Playback of external devices sound signals

You can playback the sound signals of external devices, for example a portable CD/MP3 player, via the DVD player's speaker.

For this you connect the right and left audio outputs of the external device with a 3.5 mm jack plug to the **AUDIO IN** socket on the front panel of the DVD player. As soon as you have inserted the jack plug into the **AUDIO IN** socket set the DVD player to playback the sound signals from the external device.

- Insert the jack plug into the **AUDIO IN** socket.
- To play the sound of the DVD player pull the jack plug from the **AUDIO IN** socket.

### **Note:**

*As soon as you have inserted the jack plug into the **AUDIO IN** socket, the LCD display switches off automatically.*

## 9.3 Using headphones

You can connect headphones with a 3.5 mm stereo jack plug to the DVD player. The headphone connection **PHONES** is located on the top panel of the DVD player.

When you have connected the headphones, the loudspeakers are disconnected and you will only hear sound via the headphones.

- Before you connect headphones turn the volume down to the lowest level.
- Insert the jack plug of the headphones into the headphone connection.



### **Important!**

*Listening to music with headphones for long periods and at high volume levels can lead to hearing damage!*

## 9.4 Connecting a microphone

You can connect a microphone with a 3.5 mm stereo jack plug to the DVD player. The microphone connection is located on the front panel of the DVD player. When you have connected the microphone you can control the volume of the microphone via the **MIC VOL** control on the front panel of the DVD player. With the microphone you can, for example, use the karaoke function of DVDs.

- Insert the microphones jack plug into the socket **MIC**.

# 10. Operation

## 10.1 Switching the appliance on/off and sound source selection

You switch the device on by selecting a sound source with the **FUNCTION** switch:

- **DVD/USB/CARD**
- **OFF**
- **RADIO**

1. Slide the **FUNCTION** switch to the position of the sound source that you want.
2. To switch the device off slide the **FUNCTION** switch to the **OFF** position.

## 10.2 Adjusting the volume

You can adjust the sound volume with the volume regulator.

1. To increase the sound level, turn the volume controller clockwise.
2. To reduce the sound level, turn the volume controller counterclockwise.

## 10.3 Switch off sound

1. Press the **MUTE** button to switch the sound off. The message **MUTE** appears on the display.
2. To switch the sound on again press the **MUTE** button once more.

### **Note:**

*During operation of the radio the sound can not be switched off with the **MUTE** button.*

## 10.4 Display functions

- You set the display up by flipping it open.

The display can be turned 270° by means of the swivel joint.

### Switching the display on and off

1. Hold the **SCREEN ON** button down briefly to switch off the LCD display.
2. To switch the LCD display back on hold the **SCREEN ON** button down briefly once more.

### Display settings

1. Press the **SCREEN ON** button several times to alternate between the messages **BRI** (Brightness) and **COL** (Colour).
2. With the control buttons ◀ ▶ you can set the brightness and colour values.
3. If you do not press any button for a period of 5 seconds the display settings will again fade out.



## 11. Radio functions

The LCD display remains switched off during operation of the radio.

1. Set the **FUNCTION** switch to the **RADIO** position.
2. Lift the telescopic antenna and pull apart. Adjust the antenna positioning so that radio reception is optimal.

A reception antenna for receiving MW (AM) transmissions is built into the unit. In radio operation, turn the whole appliance to a position where the best radio reception is obtained.

3. Adjust the reception range (**AM/FM/FM ST.**) with the waveband selector. With the adjustment to **FM ST FM ST**, radio programmes transmitted in stereo will be played back in stereo. If the programme is received in stereo with full signal strength the **FM stereo message FM ST.** lights up.

### ⓘ **Note:**

*Should the stereo signal in the reception range **FM ST** be too weak, you can improve it by selecting the adjustment **FM**. In this adjustment the sound is played in Mono.*

4. Set to the desired radio station by turning the frequency knob.

## 12. DVD player functions

- Set the **FUNCTION** switch to the **DVD/USB/CARD** position.

The LCD display switches on and the background image appears.

### Setup menu in DVD mode

#### ⓘ **Note:**

*In these instructions the English setup menu is described. At any time you can set the menu to your country's language as described in "Language Setup > OSD Language".*

In the DVD mode you can access a settings menu, in which you can implement image and sound settings as well as activate other functions. When you carry out changes in the setup menu, these changes are saved even when the device is switched off.


- You can set the default settings at any time in the **SYSTEM SETUP > DEFAULT** menu.
- The setup menu can be accessed during playback.

The setup menu subdivides into the following menus:

- **SYSTEM SETUP**
- **LANGUAGE SETUP**
- **VIDEO SETUP**
- **SPEAKER SETUP**

#### Navigating in the menu

1. Press the **SETUP** button to access the Setup menu. The main menu **SYSTEM SETUP** appears.

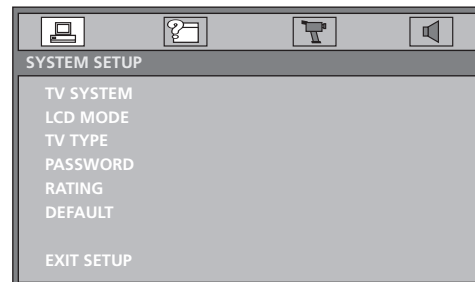

- With the control buttons **◀ ▶ ▲ ▼** and the **OK** button you can carry out all the settings in the menu.
2. With the control buttons **◀ ▶** you can select a menu by moving the yellow mark under the corresponding menu symbol.
3. With the control buttons **▲ ▼** you can select an input in a menu by moving the yellow bar over an input.
4. With the control button **▶** you can alternate in the sub menu of an input and with the control button **◀** you can move back a menu level.
5. To confirm a selection press the **OK** button.


All navigation possibilities in a current menu are displayed at the lower edge of the menu.

#### Exiting the Setup menu (EXIT SETUP)

- You can exit the Setup menu at any time by pressing the **SETUP** button again.

## SYSTEM SETUP menu

When you access the Setup menu of the disc drive with the button **SETUP** the **SYSTEM SETUP** menu appears. Here you can set the video output and video format.

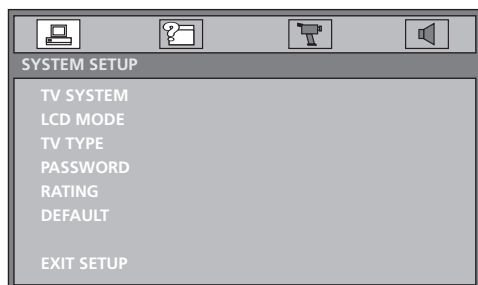

### TV SYSTEM

Here you set the television standard for the video output.

PAL	PAL television standard.
NTSC	NTSC television standard.
AUTO	Automatic setting.

### LCD MODE

In this menu you can set height and width image settings of the LCD display.

4:3:	Playback in 4:3 format
16:9:	Playback in 16:9 format



### TV TYPE


Here you can match the vertical and horizontal image display to the playback device in use.

4:3/PS:	Select this setting to display broadcasts in the usual 4:3 format on a 4:3 television set. Broadcasts in the 16:9 format will be displayed in full screen without the distracting bars although the side edges of the image will be trimmed.
4:3/LB:	Display of a film in 16:9 format on a traditional 4:3 format television. The image is displayed with black bars on the lower and upper edges of the screen.
16:9:	This setting is recommended when using the built in LCD display or for the output of the image on a wide screen television in the 16:9 format.


### PASSWORD


Select this menu item to switch the password lock on and off. To set the child lock in the next menu item **RATING** the password lock must be switched off.

- When the password lock is switched off the open lock symbol  appears behind the four input positions.
- When the password lock is switched on the closed lock symbol  appears behind the four input positions.

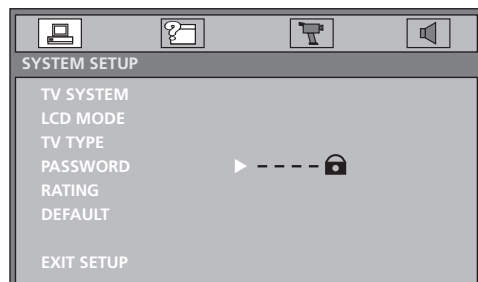

You switch the password lock off as follows:


1. With the control button  move to the input position.
2. With the number buttons enter the factory default password **8200** and confirm with the **OK** button.

The open lock symbol  appears behind the input position. You can now set the age release class in the menu item **RATING**.

When you operate the device for the first time the password lock is already switched off.

You switch the password lock on as follows:

1. With the control button move to the input position.
2. With the number buttons enter the factory default password **8200** and confirm with the **OK** button.

The closed lock symbol  appears behind the input position. The age release class in the menu item **RATING** now can not be set again.

You change the password as follows:

In order to change the password the password lock must be switched off.


1. With the control button move to the input position.
2. With the number buttons enter a new four figure password and confirm with the **OK** button.

The closed lock symbol appears behind the input position. With the new password you can again switch off the password lock.

In the event that you forget the new password you can switch the password lock on or off at any time with the factory default password.

### RATING

Some DVDs and CDs (predominantly DVDs obtained on the US market) are coded with encryption signals. In this way DVDs can be divided into eight different approval classes.

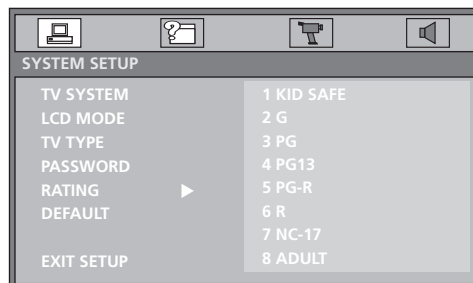

### Note:

*In order to change the age release class the password lock must be switched off.*

1. With the control button move to the right column.
2. Select one of the following age release classes to safeguard the playback of this type of media with a password request and confirm with the **OK** button:

8 ADULT:	for adults only;
7 NC -17:	not for teenagers under 18 years of age;
6 R:	for teenagers under 16, adult supervision is strongly recommended;
5 PG-R:	for teenagers under 16, adult supervision is recommended;
4 PG 13:	adult supervision strongly recommended; some scenes are not suitable for children under 12;
3 PG:	adult supervision recommended;
2 G.:	for all age groups;
1 KID SAFE:	also suitable for small children.

### Example

*If a DVD was encoded with, for example, approval class 7 or 8 and you have an approval class setting between 1 and 6 then a message follows and the password must be entered.*

*Also only parts of the DVD, that is to say certain film scenes, may be encoded with an approval class or various approval classes.*

3. Subsequently switch the password lock on in the menu item **PASSWORD**. The age release class is now set and can be changed only if the password lock is previously switched off.


## DEFAULT

Select the menu item **DEFAULT** and confirm with the **OK** button to reset the DVD mode settings to the factory default settings.

## EXIT SETUP

Select this menu item to exit the Setup menu.

## LANGUAGE SETUP menu

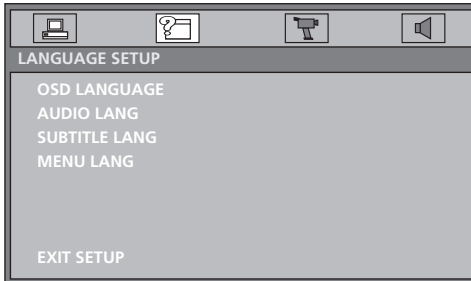

In this menu you can set the language settings for menus and subtitles.

### OSD LANGUAGE

Here you set the language, in which the OSD Menu will be shown on the display.

### AUDIO LANG

Set the audio language here, which should be used as standard when playing back the film.

### SUBTITLE LANG

Set the subtitle language here, which should be used as standard when playing back the film.

### MENU LANG


Set the disc menu language here, which should be used as standard when playing back the film.

## EXIT SETUP

Select this menu item to exit the Setup menu.

## VIDEO SETUP menu

In this menu you set the **Brightness**, **Contrast**, **Hue** and **Saturation** for disc playback.

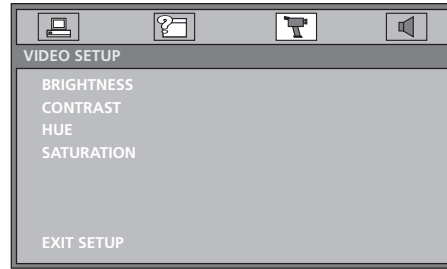

### BRIGHTNESS

With the help of the control buttons **▲ ▼** you can set the brightness.

- Subsequently press the **OK** button to continue.

### CONTRAST

With the help of the control buttons **▲ ▼** you can set the contrast.

- Subsequently press the **OK** button to continue.

### HUE

With the help of the control buttons **▲ ▼** you can set the hue.

The further the controller is pushed up the warmer the entire image becomes.

On the other hand when pushed down the image radiates a cooler mood.

- Subsequently press the **OK** button to continue.

### SATURATION

With the help of the control buttons **▲ ▼** you can set the colour saturation.


- Subsequently press the **OK** button to continue.

## EXIT SETUP

Select this menu item to exit the Setup menu.

## SPEAKER SETUP menu

In this menu you set the stereo output for the system's loud speaker.

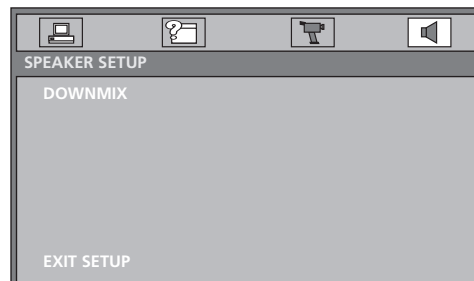

### DOWNMIX

**LT/RT:** Select this setting if the film was recorded in Pro Logic Dolby Digital and you want to hear the sound in cinema quality.

**STEREO:** Select this option to output the left and right sound channels of the DVD. The output with CD playback is a traditional stereo signal.

## EXIT SETUP

Select this menu item to exit the Setup menu.

## 13. Initial operation of the DVD player

After you have ...

- placed the DVD player in a suitable location
- connected the DVD player, if desired, to a television by one of the designated connection options
- connected the DVD player, if desired, to a HiFi system and/or a receiver
- made the remote control ready for operation by inserting the batteries
- and know how to activate and operate the OSD menu with the remote control

... the DVD player is ready for operation.

### 13.1 Inserting the DVD

To play a disc with the DVD player:

- Make sure that the DVD player is ready for operation.
- Switch the DVD player on.

When the DVD player and other potentially connected devices (i.e. an audio component) are ready for operation and are switched on you will now see the Silvercrest logo in the display.

If no disc is inserted into the DVD player's disc tray:

**No Disc** will appear in the display.

- Open the disc tray by pressing the button ▲ "Open/Close" on the remote control or on the front panel of the DVD player. **Open** will appear in the display.
- Insert the disc in the disc tray with the inscribed/labeled side up.  
For twin-sided discs: The side you would like to play must face down.
- After you have inserted the disc press the button ▲ "Open/Close" on the remote control or on the front panel of the DVD player again to close the disc tray.
- The contents of the disc will now be loaded; this may take a few seconds. In the meantime **Loading** will appear in the display.

### 13.2 Inserting memory cards/USB memory sticks with MP3/WMA/ DivX/JPEG data

#### ⓘ **Note:**

*The DVD-Player always starts in DVD mode. In order to read memory cards press the button **USB/CARD** several times on the remote control or the button **USB/SD/MMC CARD** on the device until the message **READ CARD** appears in the display. The DVD player recognizes the data formats JPEG, MP3, WMA und MPEG4 (DivX).*

In order to insert memory cards of the types SD and MMC into the DVD player:

- Make sure that the DVD player is ready for operation.
- Switch the DVD player on.

When the DVD player is switched on and ready for operation you will see the Silvercrest logo in the display.

If no disc is inserted into the DVD player's disc tray: **No Disc** will appear in the display.

- Slide the memory card into the memory card slot. Then proceed with the following steps depending on the type of memory card that you want the device to read.

#### ⚠ **Warning!**

*Always make sure that you insert memory cards into the memory card slot as described hereafter! Under no circumstances bend or buckle the memory card when inserting into the memory card slot! Slide the memory card up to the stop in the memory card slot, with a light pressure.*

Allow the memory card to slide in without force:

- Check to make sure that the memory card is one that the DVD player is capable of reading.  
Do not attempt to insert memory cards of another type in the memory card slot!
- Make sure that you have inserted the memory card into the memory card slot in the correct manner.
- Under no circumstances attempt to force the memory card into the memory card slot!

Otherwise the DVD player, memory card and the data on the memory card could be damaged!

#### **Supported memory card types and capacities**

Memory cards of the types SD (1 GB) and MMC (1 GB) can be played back.

#### **Supported file structure and file formats**


- 2 file levels are supported
- The total file count should be not more than 10 (max. 5 files on each of the 2 file levels)
- A max. of 100 files are supported on the memory media
- Files with mixed file formats are not supported
- A JPEG file larger than 1 MB can lead to faulty images

### MultiMediaCard- /SecureDigital memory cards (MMC/SD)

MultiMediaCard/SecureDigital memory cards must be inserted into the memory card slot. Insert the MMC/SD memory cards with the contacts forward and slide them straight into the memory card slot.

Thereby...

- the side of the memory card with the contacts must face down and
- the slanted corner of the memory card must be on the right side

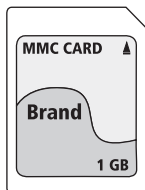

### USB memory sticks (USB)

The DVD player supports USB memory sticks 1.1 and 2.0 up to a capacity of 1GB.

USB memory sticks must be inserted into the USB port.



- Press the **USB/CARD** button on the remote control or the **USB/SD/MMC CARD** button on the device until the message **READ USB** appears in the display. This procedure also applies to particular memory cards.

#### **i Note:**

*If the memory card or USB memory stick does not contain any playable data the memory card and/or USB function is not selectable.*

### 13.3 Removing memory cards/USB memory sticks

Memory cards/USB Memory sticks should only be removed after the memory card/USB slot is deactivated. Thus avoiding the possibility of damage or data loss.

- Press the **USB/CARD** button on the remote control several times or the **USB/SD/MMC CARD** button on the device until the message **DVD** appears in the display to return to the DVD mode.
- You can now remove the memory card/USB memory stick from the memory card/USB slot.

## 14. Playing back DVDs, VCDs or S-VCDs

To play back a DVD/VCD/S-VCD with the DVD player...

- Make sure that the DVD player is ready for operation.
- Switch the DVD player on.

When the DVD player and other potentially connected devices (i.e. an audio component) are ready for operation and are switched on you will now see the Silvercrest logo in the display.



- Open the disc tray on the front panel of the DVD player by pressing the button **▲** "Open/Close" on the front panel of the DVD player or on the remote control.

**Open** will appear in the display.

- Insert a DVD/VCD/S-VCD disc in the disc tray with the inscribed/labeled side up.
- Press the **▲ OPEN/CLOSE** button on the front panel of the DVD player or on the remote control again to close the disc tray.

**Close** shows in the display while the disc tray is closing.


- The contents of the inserted DVD/VCD/S-VCD will now be loaded; this may take a few seconds. In the meantime **Loading** will appear in the display.
- Playback of the inserted DVD/VCD/S-VCD starts automatically.

#### **i Note:**

*DVDs, VCDs and S-VCDs, that you want to playback with the DVD player possibly have a country code, which is printed on the DVD cover.*

*The DVD player can only playback DVDs/VCDs/S-VCDs with the country code 2.*

*If no country code is printed on the cover of a DVD/VCD/S-VCD...*

- *but instead the symbol , then the DVD/VCD/S-VCD can be played back with the DVD player*
- *then the DVD/VCD/S-VCD can possibly not be played back with the DVD player. You can check this by attempting to play back the DVD.*

Depending on the inserted DVD/VCD/S-VCD it is possible that the contents of the DVD/VCD/s-VCD will not playback immediately, rather first a selection menu appears in the display.

In this event select the menu option which will start the playback of the film with the control button **◀▶ ▲▼** on the remote control.

- To begin playback of the film press the **PLAY/PAUSE** button. **Play** is shown briefly in the display.

## Playback start, stop, pause

Depending on the inserted disc it is possible that the contents do not immediately play back, but first a selection menu appears in the display.

- In this case select with the control buttons ◀ ▶ ▲ ▼ the menu item, which starts playback of the film.
- To start playback of the film press the **PLAY/PAUSE** button.

## Pause playback

To pause the playback:

- During playback press the button **PLAY/PAUSE**. The message **PAUSE II** appears in the display.
- The display shows a freeze frame of the scene you have just paused.
- To continue playback of the film press the **PLAY/PAUSE** button.

## Stop playback (STOP)

To stop playback press the **STOP** button.

## Resume function

If you have cancelled playback of the inserted DVD/VCD/S-VCD by pressing the **STOP** button once the DVD automatically saves the position where playback was interrupted. This function is called the "resume function".

**PRE STOP** (Preliminary Stop) is shown in the display.

- As soon as you press the **PLAY/PAUSE** button again, playback will continue from the saved position.
- If you press the **STOP** button a second time the saved position, at which you stopped playback, is deleted.
- As soon as you press the **PLAY/PAUSE** button again playback of the inserted DVD/VCD/S-VCD will start from the beginning.

## SKIP function (Chapter/Title forward/backward)

### **Note:**


*This function may not be available on all DVDs/VCDs/S-VCDs! If you attempt to carry out functions that are not available the message "INVALID KEY" appears in the display.*

- With the buttons **SKIP DOWN/SKIP UP** you can skip, during playback, within the film on the inserted DVD/VCD/S-VCD backwards to the previous chapter/title or to the start of the next chapter/title. The display will show **PREV** and/or **NEXT**.

The respectively selected chapter/title will playback immediately.

## Search forward/backwards

- Hold the **SKIP DOWN/SKIP UP** button down briefly during playback to start a backwards/forwards search.
- Hold the **SKIP DOWN/SKIP UP** button down repeatedly to apply the following search speeds:

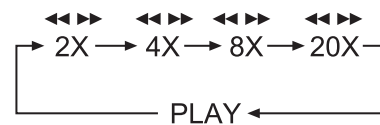

### **Note:**

*During the search no sound will play.*


- To continue playback of the film at normal speed from the selected position press the **PLAY/PAUSE** button during the search.

### **Note:**

*With playback of MPEG4 files the speed of search forward and search backwards can be limited. This is data dependent and not a device malfunction.*

## Slow motion function (DVD, VCD, S-VCD and DivX only)

- Hold the **ZOOM/SLOW** button down briefly during playback to set playback to slow motion. Hold the **ZOOM/SLOW** button down repeatedly to apply the following slow motion speeds:



### **Note:**

*During slow motion playback no sound will be played.*

- To continue playback at normal speed press the **PLAY/PAUSE** button during slow motion playback.

### **Note:**

*With VCDs, S-VCDs and MPEG4 files slow motion backwards is not supported.*


## Image enlargement (Zoom)

### **Note:**

This function may not be available on all DVDs/VCDs/S-VCDs! If you attempt to carry out functions that are not available the message "INVALID KEY" appears in the display.

During playback of an inserted DVD/VCD/S-VCD you can enlarge and reduce the image in the display in three stages.

- Press the **ZOOM/SLOW** button repeatedly to apply the following enlargements and/or reductions:



Sections of the enlarged image can be shunted with the control buttons

◀ ▶ ▲ ▼ .

## Camera position (DVD only)

### **Note:**

This function may not be available on all DVDs/VCDs/S-VCDs! If you attempt to carry out functions that are not available the message "INVALID KEY" appears in the display.

Many films on DVD contain chapters, which were recorded from different viewing angles simultaneously. Films that have such chapters available allow you to observe these chapters from various perspectives.

- For this, during playback of the inserted DVD, hold the **ANGLE/PROGRAM** button on the remote control down briefly. With each further brief hold down of the **ANGLE/PROGRAM** button you can switch to one of the available camera angles.

## Repeat function for DVDs, VCDs, S-VCDs and Audio CDs

With the repeat function you can...

- ... with DVDs selectively repeat title or chapter.
- ... with VCDs/S-VCDs you can repeat individual titles, a folder and/or the entire VCD/S-VCD.
- ... with audio CDs you can repeatedly playback individual titles and/or the entire CD.

### Repeat function

- Press the **REPEAT** button several times during playback.

REP appears in the display with one of the following messages:

<b>CHAPTER</b>	Select <b>CHAPTER</b> to continuously repeat the currently playing back chapter until playback repeat is switched off or playback is stopped by pressing the <b>STOP</b> button twice.
<b>TITLE</b>	Select <b>TITLE</b> to continuously repeat the currently playing back title until playback repeat is switched off or playback is stopped by pressing the <b>STOP</b> button twice.
<b>REP1</b>	Select <b>REP1</b> to continuously repeat the currently playing back track until playback repeat is switched off or playback is stopped by pressing the <b>STOP</b> button twice.

<b>REP ALL</b>	Select <b>REP ALL</b> to continuously repeat all available titles on the disc, thus the entire disc, until playback repeat is switched off or playback is stopped by pressing the <b>STOP</b> button twice.
<b>REP DIR</b>	When you have inserted a disc that contains folders, with this option you can endlessly repeat the contents of the current folder.
<b>OFF</b>	To switch off repeat playback press the <b>REPEAT</b> button several times during playback until the message <b>OFF</b> appears in the display.
<b>REP A-</b>	With this function you can repeat playback of a favourite sequence within a chapter of the current playback disc. Select this input as soon as the desired sequence begins to play back.
<b>REP A-B</b>	Select this input as soon as the end of the desired sequence has played back. With this, bear in mind that the beginning and end of the sequence must fall within the same chapter. Repeat playback of the selected sequence starts immediately.
<b>A-B CANCEL</b>	The sequence will continuously repeat until you select the input <b>A-B CANCEL</b> .

## Direct Title/Track selection

To select a title/track on the disc directly, during playback, enter the title/track number via the number buttons .

If there is more than 9 titles enter the corresponding title/track number by pressing the two numbers one after the other.

### Example

Enter the number 1 followed by the number 2 to playback title/track 12.

## Direct chapter, title or time selection via the search function

### **Note:**

This function may not be available on all DVDs/VCDs/S-VCDs! If you attempt to carry out functions that are not available the message "INVALID KEY" appears in the display.

If you do not want to playback the entire disc you can select a particular chapter/time position.

- To do this press the **SEARCH** button during playback to superimpose, depending on the medium, the following messages:

DVD TT 01/04 CH 005/017 00:00:00

CD Trk 000/06 00:00:00

With the control buttons ◀ ▶ ▲ ▼ select one of the following input fields and then with the number buttons enter the chapter, title or track number and/or a time.

Subsequently confirm your input with the **OK** button.

### DVD

<b>TT:</b>	Enter here a title number from where playback should start.
<b>CH:</b>	Enter here a chapter number from where playback should start.
⌚	Enter here a time position for the currently playing back title from where playback should start.

### CD/VCD/SVCD

<b>Trk :</b>	Enter here a track number from where playback should start.
⌚	Enter here a time position for the currently playing back title from where playback should start.

## Display functions

### Display disc information


**Note:**

This function may not be available on all DVDs/VCDs/S-VCDs! If you attempt to carry out functions that are not available the message "INVALID KEY" appears in the display.

With this function you can, during playback, superimpose in the display the total available information from a DVD/VCD/S-VCD inserted in the disc tray.

- During playback press repeatedly the **DISPLAY** button to superimpose, one after the other, the following information:


#### With DVDs:

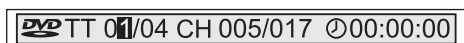


- The played back so far time of the current chapter




- Audio language, Dolby settings, subtitle language and camera position

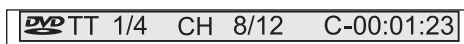

- The remaining time of the current chapter

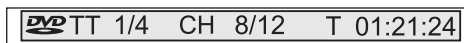

- The played back so far time of the current title

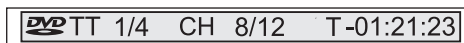

- The remaining time of the current title

#### With VCDs/S-VCDs/DivX/MPEG CDs



- The played back so far time of the current title/track



- The remaining time of the current title

#### Fading out disc information

- To fade out the disc information press the **DISPLAY** button again.

## Accessing the DVD menu

**Note:**

This function may not be available on all DVDs/VCDs/S-VCDs! If you attempt to carry out functions that are not available the message "INVALID KEY" appears in the display.

With many films on DVD there is a main menu on the disc that apart from the option of playing the main film enables you, for example...

- to choose the language for subtitles and film dialogue
- direct chapter selection
- to playback the films bonus material (Background information, "Making of" etc.)

If such a menu is present on the DVD that is inserted in the disc tray then you can access it during playback by pressing the **MENU** button.

- The individual menu items can be selected by pressing the control buttons ◀ ▶ ▲ ▼ ; to confirm the selected menu item press the **PLAY/PAUSE** button.

To return to playback press the **MENU** button again.

**Note:**

If you cancel playback by pressing the **STOP** button twice (Playback stop without resume function), activation of the main menu from the disc is not possible.

### Playback Control (PBC) with VCDs/S-VCDs

Many VCDs/S-VCDs have Playback Control (in short "PBC"). Playback Control indicates a main menu that allows operation of several functions of the VCD/S-VCD.

If PCB is available on a VCD/S-VCD inserted in the disc tray you must first activate it in order to be able to superimpose the menu.

To activate PBC...

- During playback or when playback is stopped press the **MENU** button. The message **PBC:OFF** appears in the display.
- Press the **MENU** button again. The message **PBC ON:** appears in the display. PBC is now switched on the discs main menu can be accessed with the **MENU** or **TITLE** buttons.

**Note:**

If you switch on PBC during playback then it is possible that playback will stop and start again from the beginning and/or with the main menu.

### Superimpose and fade out subtitles (DVDs/VCDs/S-VCDs only)

**Note:**

This function may not be available on all DVDs/VCDs/S-VCDs! If you attempt to carry out functions that are not available the message "INVALID KEY" appears in the display.

If the film on the inserted DVD/VCD/S-VCD has subtitles available you can superimpose these, during playback, in the display by pressing the **SUBTITLE** button.

- With the first press of the **SUBTITLE** button the subtitle of the first available language is superimposed in the display.
- With each further press of the **SUBTITLE** button other available subtitle languages, one after the other, are superimposed in the display.

In the display the number of the currently superimposed subtitle is superimposed (i.e. "6" for the sixth available subtitle language).

- When the last of the available subtitle languages is superimposed then you can switch off the subtitle function by pressing the **SUBTITLE** button again. **OFF** is superimposed in the display.



## Changing playback language (DVDs/VCDs/S-VCDs only)

### **i** Note:

This function may not be available on all DVDs/VCDs/S-VCDs! If you attempt to carry out functions that are not available the message "INVALID KEY" appears in the display.

- With many films on DVD/VCD/S-VCD you can select another playback language, during playback, by pressing the **AUDIO** button.
- With the first press of the **AUDIO** button the first available playback language will be switched on. With each further press of the **AUDIO** button other available playback languages, one after the other, are switched on.

The respectively switched on playback language and the sound format (i.e. 5.1CH) are superimposed in the display.

### Programme function

You can programme a playback sequence for the titles and chapters that are available on the DVD, VCD, S-VCD disc.

For this, during playback, press the **ANGLE/PROGRAM** button to superimpose the following window:

### Programming window

Prog	TC	TC	TC	TC
1	--:--	5 --:--	9 --:--	13 --:--
2	--:--	6 --:--	10 --:--	14 --:--
3	--:--	7 --:--	11 --:--	15 --:--
4	--:--	8 --:--	12 --:--	16 --:--
	Play		Clear	

The programme positions 1-16 are listed. Each programme position contains the input field for a title (T) and a chapter (C).

1. Select with the control buttons **◀ ▶ ▲ ▼** in the first programme position the input field T for the title.
2. With the number buttons enter the number of the title that is to be played back first.
3. Select with the control buttons **◀ ▶ ▲ ▼** in the first programme position the input field C for the chapter.
4. With the number buttons enter the number of the chapter that is to be played back.
5. Select with the control buttons **◀ ▶ ▲ ▼** further programme positions and enter title and chapter numbers for the programme position.
  - To delete the programme list select the input **Clear** and press the **OK** button.
  - To cancel the programming function press the **ANGLE/PROGRAM** button.
6. You start playback of the programme positions by selecting the **Play** field and pressing the **OK** button.

During the programmed playback the message **PROGRAM PLAY** appears in the display.


The programme list will be deleted as soon as you press the **STOP** button.

## 15 Display of MP3/WMA/JPEG/AVI/MPEG and DivX data


- Place a memory medium, on which MP3, WMA, JPEG, AVI, MPEG or DivX data is present, in the disc tray.

The contents of the data medium will be shown on the display:


### Display of MP3 data

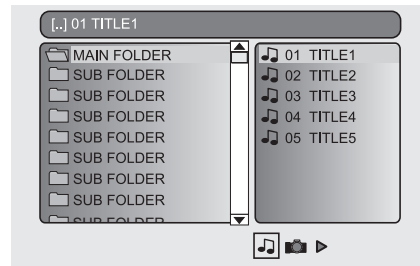

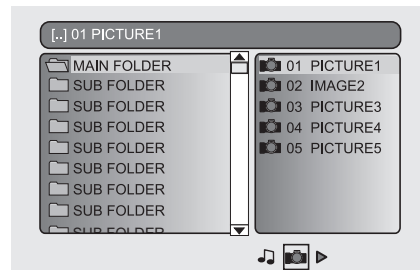

### Display of JPEG data

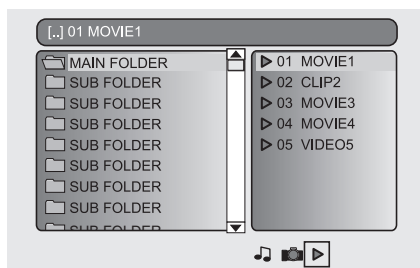

### Display of AVI, MPEG and DivX data



- Folders are listed on the left (folder window) and data on the right (data window). Folders will be depicted with the symbol .
- At the bottom right the available formats on the data carrier (MP3, JPEG or MPEG/AVI/DivX) are shown.
- Select with the control buttons **▲ ▼** a folder and press the **PLAY/PAUSE** button. The contents of the folder appears in the data window.
- To reach a higher folder level select the symbol  with the input **..** and press the **PLAY/PAUSE** button.
- With the **▶** button move to the area on the right select with the control buttons **▲ ▼** a data and press the **PLAY/PAUSE** button. The music/video data will playback and/or the JPEG image will be displayed.

## Playback of MP3/ WMA/MPEG and DivX discs

- Select a data with the help of the control buttons ◀ ▶ ▲ ▼ . By pressing the **PLAY/PAUSE** button you confirm your selection. Playback starts immediately. With the playback of music or video data the following functions can be used:

### Play/Pause

See "14 Playing back DVDs, VCDs or S-VCDs"

### Stop

See "14 Playing back DVDs, VCDs or S-VCDs"

### Skip

See "14 Playing back DVDs, VCDs or S-VCDs"

### Search

See "14 Playing back DVDs, VCDs or S-VCDs"

### Slow (with MPEG and DivX data only)

See "14 Playing back DVDs, VCDs or S-VCDs"

### Zoom (with JPEG, MPEG and DivX data only)

See "14 Playing back DVDs, VCDs or S-VCDs"

### AB Repeat

See "14 Playing back DVDs, VCDs or S-VCDs"

## Repeat function with MP3/WMA/MPEG/ JPEG/DivX discs

During playback press the **REPEAT** button several times to apply the following repeat functions (the set function appears in the display):

### REPEAT 1

Endless repeat of the current title/image.

### FOLDER

### REPEAT

Repeat the current folder.

### REPEAT

### ALL

Repeat all titles on the disc and/or data carrier.

## Playback of JPEG discs

- With the control buttons ▲ ▼ mark an image and press the **PLAY/PAUSE** button to open that image.

The image is shown on the display

Subsequently change the view to the next available image on the disc/in the folder.

- To show the currently displayed image longer press the **PLAY/PAUSE** button.
- To continue with playback press the **PLAY/PAUSE** button.
- You can access an image direct by entering the image data number with the number buttons and then confirm by pressing the **PLAY/PAUSE** button.
- With the control buttons ◀ ▶ you can rotate the image in increments of 90° during playback.
- With the control buttons ▲ ▼ you can mirror the image horizontally and vertically during playback.

## Selection of slide show transitions:

You can select different transitions for changing from one image to the next.

- During the slide show press the **ANGLE/PROGRAM** button until the name of the transition appears in the top left corner of the screen.

## Enlargement and reduction of the image display

- With the **ZOOM** button you can enlarge or reduce the image.

## 16. Cleaning of the DVD player

Clean the housing of the DVD player with a slightly damp cloth and a mild cleanser only. When cleaning, make sure that no moisture gets into the DVD player!


Clean the inside of the disc tray, if necessary, exclusively with a clean dry brush (i.e. a lens brush obtainable from a photographic dealer). Never clean the inside of the disc tray with anything moist!

### **Warning!**

Moisture penetrating into the DVD player creates the risk of an electric shock! The DVD player may also be irreparably damaged!

## 17. Disposal

### Disposing of the appliance

 Do not, under any circumstances, discard the appliance in the household refuse.

 This product is subject to the European directive 2002/96/EC.

Dispose of the appliance through an approved disposal centre or at your community waste facility.

Observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre.


### Disposing of batteries!

Do not dispose of the batteries with household waste. Every consumer is legally obliged to dispose of batteries at a collection site of his community/city district or at a retail store.

This obligation is intended to ensure that batteries are disposed of in an environmentally safe fashion.

Only dispose of batteries when they are fully discharged.

### Disposal of packaging

 Dispose of the packaging materials in an environmentally responsible manner.

## 18. Troubleshooting

### Display is blank/DVD player shows no functions even though it is switched on

- A** Check to see that the power cord is properly plugged into the power socket.
- B** Check to make sure that there is power at the power socket, in which you have plugged the DVD player's power cord, by connecting another appliance to the socket. If necessary plug the DVD player's power cord into another power socket.
- C** Check to see if the display is switched off. For this press the **SCREEN ON/OFF** button on the remote control.
- D** Switch off the DVD player with the **FUNCTION** switch and then wait ten seconds. Subsequently switch the DVD player back on with the **FUNCTION** switch.

### The display shows "No Disc" even though there is a disc inserted


- A** The disc is dirty, scratched or damaged.
- B** The Country/Region code on the inserted DVD/VCD/S-VCD does not correspond to the Country/Region code of the DVD player. In this case the DVD/VCD/S-VCD cannot be played with the DVD player.

### Inserted disc will not playback


It is possible that a layer of condensation has built up on the DVD player's laser scan lens. This can be the case especially if the DVD player has been subjected to strong temperature fluctuations.

If this is the case place the DVD player in a dry environment at normal room temperature. First remove the currently inserted disc from the disc tray. Then leave the DVD player switched off for at least one hour without using until the condensation film has evaporated.

### No image or Black/White image only

- A** Check to make sure that all connection cables between the DVD player and the television (or Video projector) are firmly inserted into the corresponding sockets
- B** Check to make sure that the settings in the OSD menu match the connections variant, with which you have connected the DVD player to the television (or Video projector).
  -  For this see chapter 8. „Connecting the DVD player to a television“.
- C** Check by means of the televisions (or Video projectors) operating instructions to see if settings to the television (or Video projector) may be necessary in order to use the DVD player with the television.

### No sound

- A** Check to see if the DVD player is possibly switched to mute.
- B** Check to see that all connecting cables between the DVD player and potentially connected audio components are firmly plugged into the corresponding sockets
- C** Check to make sure that the settings in the OSD menu match the connections variant, with which you have connected the audio component to the DVD player.
  -  For this see chapter 9. „Connecting an audio component to the DVD player“.

**D** Check by means of the televisions operating instructions to see if settings to the television may be necessary in order to use the DVD player with the television.

**E** Check by means of the operating instructions for a potential connected audio component if settings to it are necessary in order to use it with the DVD player.

#### No 4:3 or 16:9 image

**A** Check by means of the televisions operating instructions, which image formats the television has at its disposal.

**B** Check to see if the settings in the OSD menu match the available image format of the television.

#### Remote control not functioning

**A** Check to make sure that the remote control batteries have been inserted into the battery compartment with the correct polarity.

**B** Check to see if the remote control batteries are exhausted and, if necessary, change both batteries.

**C** Make sure that there are no obstacles located between the remote control and the DVD player.

**D** Be situated no more than five meters from the DVD player when using the remote control.

#### Playback language/ Subtitle language do not correspond to the settings in the OSD menu

The playback language/Subtitle language setting in the OSD menu is not available on the inserted disc.

#### One or several functions can not be switched on

The selected function may not be available on all DVDs/VCDs/S-VCDs!

If you attempt to carry out a function that is not available the message "INVALID KEY" appears in the display.

#### None of the buttons on the appliance or on the remote control are functioning/other malfunctions

**A** Switch the DVD player off with the **FUNCTION** switch. Wait ten seconds and then switch the DVD player back on with the **FUNCTION** switch.

**B** If the malfunction is still present: Reset the DVD player to its default settings.

Contact one of our service partners in your area if ...

- the stated function defect can not be resolved as described or
- other functional defects arise.

**i** For this see chapter 20 "Warranty and service".

## 19. Glossary / Key Word Index

### What are DVDs, VCDs and S-VCDs?

#### DVDs

DVD is the short form for "Digital Versatile Disc". DVDs are a storage medium for audio and video data; they are available in 8 cm and 12 cm (Diameter) formats. Because of the much higher storage capacity as compared to CD-Rs/CD-RWs DVDs can provide a playback duration of up to eight hours for the audio and video data stored on them.

#### VCDs/S-VCDs

"Video CD" (VCD) and "Super Video CD" (S-VCD) are designations for two processes of compressed storage, thus space saving, of films on CDs. VCDs and S-VCDs are available in 8 cm and 12 cm (Diameter) formats. Their storage capacity is a great deal lower than that of DVDs. For this reason they only offer a playback duration, for the saved audio and video data on them, of 20 minutes (8 cm format) and/or 74 minutes (12 cm format).

VCDs are available in two versions:

- Only audio and video data can be played back on version 1.1 VCDs/S-VCDs.
- PBC (Playback control) functions are available on version 2.0 VCDs/S-VCDs. In addition still images can be played back in a higher resolution.

#### Playback Control (PBC)

Version 2.0 VCDs/S-VCDs have Playback Control (in short "PBC") at their disposal. Then on the VCD/S-VCD a main menu is available, by which various functions of the VCD/S-VCD are allowed to be operated.

#### What are Title and Chapter?

Title is the name given to the largest units of image and sound units on DVDs; on many DVDs the (Main) film has the title number 01. For bonus material (i.e. Film trailer, background information etc.), that is available on many DVDs, other possible title numbers can be used.

Chapter is the name given to the next smaller image and sound units beneath title. If the DVD/VCD/S-VCD or its title is divided into chapters, numbers are assigned to you, through the input of which the chapter can be selected direct.

Bear in mind that not on all DVDs ...

- are the DVD or the title divided into (numbered) chapters
- Chapters are also designated as "Scenes" (i.e. in the main menu of DVDs)

#### What is composite video?

##### Composite video

Video signal or FBAS signal; thereby it involves an image signal, in which colour and brightness information are included at the same time.

#### What are PAL, NTSC and SECAM?

##### PAL

PAL is the abbreviation for "Phase Alternation Line". PAL is the mid and west Europe (Exception: France, see the heading "SECAM") customary and most wide spread colour television standard.

##### NTSC

NTSC is the abbreviation for "National Television System Committee". NTSC is a colour television standard that is primarily used in the USA and Japan.

## SECAM

SECAM is the abbreviation for the french "système en couleur avec mémoire". SECAM is the customary colour television norm in France and many east European countries and at present still the most widely spread system in those countries.

## Audio CDs

Audio CDs contain exclusively audio data; they are also available in 8 cm and 12 cm (Diameter) formats. The playback duration for the audio data stored on them amounts to 20 minutes (8 cm format) and/or 74 minutes (12 cm format). Audio data is stored on audio CDs in CDA format.

## MP3

MP3 denotes a process and/or format developed by the Fraunhofer Institute for the compression of audio data. In the MP3 format compressed music pieces are only a fraction of their original size, which, for example, on CD-Rs/CD-RWs allows for storage of a considerably greater volume of music than on commercially available audio CDs, on which audio data is stored in the CDA format.

## WMA

WMA ("Windows® Media Audio") is a data format developed by Microsoft® for audio data.

## JPEG

JPEG ("Joint Photographics Expert Group") denotes a wide spread graphic format, developed by the organization with the same name, with which image data of the colour and grey scales are compressed.

## DivX

DivX is a coding format for videos and multimedia data, invented by the DivX Networks, Inc company.

## MPEG

MPEG ("Moving Picture Experts Group") refers to a video compression format.


## USB memory sticks

The term USB memory stick refers to a plugable USB device, which is approximately the size of a cigarette lighter. The expression is only colloquial and not a designation for a type of product. For the most part with this expression is meant a USB device that serves as an interchangeable storage media.

## What are files?

As opposed to audio CDs the title on a CD-R/CD-RW with MP3-, WMA- or JPEG data can be stored in files, for example, in order to file titles from different genres.

The structure of an MP3-CD can, for example, appear as follows, if the MP3 data is stored in files:

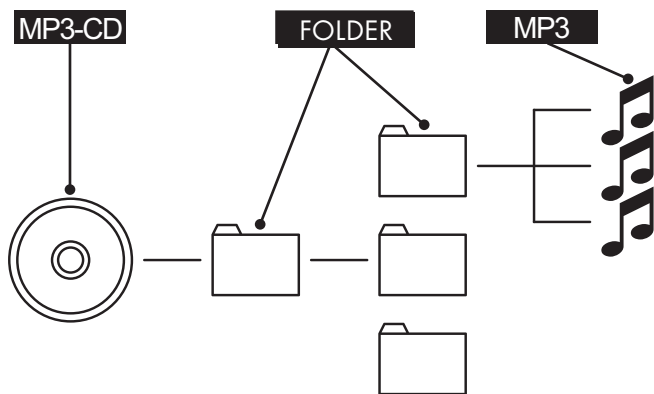

## 20. Warranty & Service

The warranty for this appliance is for 3 years from the date of purchase. Should you have grounds for complaint, despite our high quality standards, please contact our Service Hotline.

In the event that your complaint cannot be resolved over the telephone, you will receive from them

- a processing number (RMA number) as well as
- an address, to which you can send your product for warranty processing.

In the case of a mail-in shipment please enclose a copy of the purchase receipt (sales slip). The appliance must be securely packed and the RMA number clearly visible. Shipments without an RMA number can not be processed.

### **Note:**

*The warranty provisions cover only material or factory defects.*

*The warranty provisions do not cover*

- worn out parts
- damage to breakable parts like switches or rechargeable batteries.

This product is for private use only and is not intended for commercial use. The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch. Your statutory warranty claims are not restricted by this warranty.

## 21. Importer

KOMPERNASS GMBH  
BURGSTRASSE 21  
D-44867 BOCHUM

[www.kompernass.com](http://www.kompernass.com)





# Warranty

## DVD-Player/Radio KH6502

In order to guarantee a cost free repair procedure please get in touch with the service hotline. Make sure you have your sales slip handy.

Irish Connection

Tel.: 00353 (0) 87 99 62 077

Fax: 00353 18398056

[www.mysilvercrest.de](http://www.mysilvercrest.de)

Sender, please write clearly:

Last name \_\_\_\_\_

First name \_\_\_\_\_

Street \_\_\_\_\_

City/Town \_\_\_\_\_

Country \_\_\_\_\_

Telephone \_\_\_\_\_

Date/Signature \_\_\_\_\_

**Description of fault:**

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_







# INNHALDSFORTEGNELSE

**SIDE**

<b>1. Tekniske spesifikasjoner</b>	<b>24</b>
<b>2. Påregnet bruk og funksjon</b>	<b>24</b>
<b>3. Leveringsomfang</b>	<b>24</b>
<b>4. Kontrollelementer</b>	<b>25</b>
<b>5. Sette opp DVD-spilleren</b>	<b>25</b>
<b>6. Sikkerhetshenvisninger</b>	<b>25</b>
<b>7. Legge batterier inn i fjernkontrollen og DVD-spilleren</b>	<b>26</b>
<b>8. Koble til et TV-apparat via videoinngang (Composite Video)</b>	<b>27</b>
<b>9. Tilkobling av audiokomponenter til DVD-spilleren</b>	<b>27</b>
<b>10. Betjening</b>	<b>28</b>
<b>11. Radiofunksjoner</b>	<b>29</b>
<b>12. DVD-spillerfunksjoner</b>	<b>29</b>
<b>Setup-meny i DVD-modus</b>	<b>29</b>
<b>13. Ta DVD-spilleren i bruk</b>	<b>32</b>
<b>14. Spille DVD-er, VCD-er eller S-VCD-er</b>	<b>33</b>
Starte, stoppe og avbryte avspilling	34
SKIP-funksjon (kapittel/tittel fram/tilbake)	34
Søk forover/bakover	34
Slow-motion-funksjon (kun DVD, VCD, SVCD og DivX)	34
Bildeforstørrelse (zoom)	35
Kameraposisjon (kun DVD)	35
Repetisjonsfunksjon for DVD, VCD, SVCD og audio-CD	35
Direkte tittel-/sporvalg	35
Direkte kapittel-, tittel- eller tidsvalg med søkefunksjonen	35
<b>Anvisningsfunksjoner</b>	<b>36</b>
Vise plateinformasjon	36
Starte DVD-meny	36
Playback Control (PBC) for VCD/SVCD-er	36
Blende inn og ut undertittel (kun DVD/VCD/SVCD)	36
Endre avspillingspråk (kun DVD/VCD/SVCD)	37
Programmeringsfunksjon	37
<b>15. Vise MP3-/WMA-/JPEG-/AVI-/MPEG-/ og DivX-filer</b>	<b>37</b>
Avspilling av MP3-/ WMA-/MPEG- og DivX-plater	38
Repetisjonsfunksjon for MP3-/WMA-/MPEG-/ JPEG/DivX-plater	38
Avspilling av JPEG-plater	38
<b>16. Rengjøring av DVD-spilleren</b>	<b>38</b>
<b>17. Deponering</b>	<b>38</b>
<b>18. Reparering av feil og forstyrrelser</b>	<b>39</b>
<b>19. Ordliste/stikkordfortegnelse</b>	<b>40</b>
<b>20. Garanti &amp; service</b>	<b>41</b>
<b>21. Importør</b>	<b>41</b>

Les bruksanvisningen nøye før første gangen apparatet tas i bruk og oppbevar den for senere bruk.  
Dersom apparatet gis videre til andre, lever også bruksanvisningen videre.

# DVD-SPILLER/RADIO KH6502

## 1. Tekniske spesifikasjoner

Dette apparatet er kontrollert og godkjent i overensstemmelse med de grunnleggende kravene og de relevante forskriftene i EMC-direktivet 2004/108/EF og lavspenningsdirektivet 2006/95/EF.

Strømforsyning: AC 220 V - 240 V ~50 Hz

Wattforbruk : 25 Watt

Wattforbruk

Standby: 0,7 W

TV-standard: PAL/NTSC

Utgangseffekt: 2 x 2,5 W

Driftstemperatur: +5 ~ +35 °C

Fuktighet: 5 ~ 90 % (ingen kondensasjon)

Mål

(L x B x H): 241 x 430 x 50 mm

Vekt : ca 2,1 kg

Beskyttelsesklasse : II 

### Frekvensområde radio:

MW (AM): 540 - 1600 kHz

FM: 88 - 108 MHz

### Batteridrift

8 x 1,5 V, type C R14/LR14 (lite celledatter)

### Fjernkontroll

Batterier : type AAA/R03 (mikrocellebatteri)

### Videoutgang

Composite Video cinchterminal

### Audio-utgang

2 stereo-audio cinchterminaler

### Audio-inngang

3,5 mm stereojack

### Mikrofoninngang

3,5 mm stereojack

### USB-port

Lesbare

USB-minnepinner: USB1.1 og 2.0 opp til en kapasitet på 1 GB





### Minnekortspor

Lesbare minnekort: SD (1 GB), MMC (1 GB)

## 2. Påregnet bruk og funksjon

Silvercrest KH 6502 DVD-spiller er utelukkende ment for stasjonær bruk i lukkede rom. Apparatet er utelukkende ment for privat, ikke-kommersiell bruk.

Apparatet er ment for bruk som et underholdningsapparat for avspilling...

- ... av DVD-videoer i formatene 12 cm (diameter) og 8 cm (diameter) med land-/regionalkode 2 eller  kjennetegnet med logoen .
- ...av videoformatene MPEG-4/MPEG-4 ASP og video som er komprimert med DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.x, multichannel DivX og DivX Pro.
- ... av video-CD-er (VCD-er) og Super Video-CD-er (S-VCD-er) i formatene 12 cm (diameter) og 8 cm (diameter) kjennetegnet med logoen .
- ... av audio-CD-er i formatene 12 cm (diameter) og 8 cm (diameter) kjennetegnet med logoen .
- ... generelt av filformatene CD Audio (.cda), MP3 (.mp3), Windows Media Audio (.wma), DivX (.avi), Nero Digital (.mp4) og JPEG (.jpg) på minnemediene CD-R og CD-RW, USB-minnepinner og minnekort av typene SD og MMC.

For bildeavspilling av DVD, VCD, S-VCD, audio-CD og avspilling av filformatene MP3, Windows Media Audio og JPEG kan du tilkoble det etterfølgende til DVD-spilleren SilverCrest KH 6502 ...

- Stereo- og mono-TV med TV-formatene PAL eller NTSC og bildeformatene 4:3/16:9.
- LCD/plasmasjærmer eller videoprojektorer hvis disse har de tilsvarende tilkoblingsmulighetene og tilkobling av en DVD-spiller er tilsiktet/tillatt av produsenten av avspillingsenheten.

For avspilling av lyd eller musikk kan man benytte eller koble til Silvercrest KH 6502 DVD-spilleren...

- høyttalere til et TV-apparat som er koblet til DVD-spilleren
- eksterne audiokomponenter som Hi-Fi-anlegg eller mottakere

### **Advarsel!**

For skader som oppstår av uhensiktsmessig bruk av apparatet overtar vi intet ansvar og ingen garanti!

## 3. Leveringsomfang

- DVD-spiller
- Strømledning
- Infrarødfjernkontroll
- 2 batterier for fjernkontroll, type AAA (microceller)
- Bruksanvisning

## 4. Kontrollelementer

### A. DVD-spiller forside

- 1 Volumkontroll
- 2 Hodetelefonutgang 3,5 mm
- 3 Bryter **FUNCTION**: Slå av apparatet, slå over til DVD- eller radiodrift
- 4 Tast **DISPLAY**: Vise avspillingsinformasjoner
- 5 LCD-display
- 6 Tast **■ STOP**,  
Tast **USB/SD/MMC CARD**: Stoppe avspillingen/USB/vis minnekortinnhold
- 7 Bærehåndtak
- 8 Båndvalgryter
- 9 Frekvensbryter
- 10 Tast **PLAY/PAUSE**
- 11 Tast **SKIP UP**: en tittel/et kapittel fram, rask spoling framover
- 12 Tast **SKIP DOWN**: en tittel/et kapittel tilbake, rask spoling bakover
- 13 Høytaler
- 14 IR-sensor for fjernkontroll
- 15 Minnekortspor for SD- og MMC-kort
- 16 Plateskuff
- 17 USB-port
- 18 **OPEN/CLOSE**: Åpne/lukke plateskuffen
- 19 **MIC VOL**: Volumkontroll for mikrofon
- 20 **MIC**: Mikrofoninngang 3,5 mm
- 21 **AUDIO IN**: Stereo-audioinngang 3,5 mm
- 22 **FM ST.**: Anvisning for FM-stereomottak (lyser grønt ved stereomottak)
- 23 **POWER**: Power-anvisning (lyser grønt når apparatet er slått på)
- 24 Tast **AUDIO**: Stille inn audiospråk/-kanal
- 25 Tast **REPEAT**: Stille inn repetisjonsfunksjon
- 26 Tast **MENU**: Starter platemenyen

### B. DVD-spiller bakside

- 27 Høytaler bakside
- 28 Teleskopantenne
- 29 Batterihus
- 30 **VIDEO**: Composite-videoutgang
- 31 **AUDIO OUT R**: Høyre audioutgang
- 32 **AUDIO OUT L**: Venstre audioutgang
- 33 Tilkobling for strømledning

### C. Fjernkontroll

- 1 **OPEN/CLOSE**: Åpne/lukke plateskuffen
- 2 **MENU**: Starte platemenyen
- 3 **SETUP**: Starte OSD-meny
- 4 **DISPLAY**: Blende inn plateinformasjon
- 5 **STOP**: Avslutte avspilling
- 6 Tast **PLAY/PAUSE**, Tast **OK**: Starte/avbryte avspilling, bekrefte inntasting
- 7 **SUBTITLE**: Stille inn undertitler
- 8 Talltaster
- 9 **AUDIO**: Stille inn audiospråk/-kanal
- 10 **SEARCH**: Starte søkefunksjon
- 11 **REPEAT**: Stille inn repetisjonsfunksjon
- 12 **ZOOM/SLOW**: Stille inn bildeforstørring, slow-motion-funksjon
- 13 **USB/CARD**: USB- eller minnekortavspilling
- 14 Batterihus (på baksiden)
- 15 **MUTE**: Slå lyden av/på
- 16 **ANGLE/PROGRAM**: Endre kameraperspektiv/  
starte programmeringsfunksjonen
- 17 Piltaster ◀ ▶ ▲ ▼

- 18 ▶▶ **SKIP UP**: en tittel/et kapittel fram, rask spoling framover
- ◀◀ **SKIP DOWN**: en tittel/et kapittel tilbake, rask spoling bakover
- 19 **TITLE**: Starte tittelmeny
- 20 **SCREEN ON/OFF**: Slå av/på LCD-displayet/stille inn lysset og farge

## 5. Sette opp DVD-spilleren

1. Ta DVD-spilleren og det medleverte tilbehøret forsiktig ut av emballasjen.
2. Dra beskyttelsesforlien av LCD-displayet.
3. Plasser DVD-spilleren på et jevnt, flatt og sklissikkert underlag.
4. Stikk strømledningen på DVD-spilleren inn i tilkoblingen for strømledningen på baksiden av DVD-spilleren.

### ⚠ Advarsel!

Dersom du ønsker å koble DVD-spilleren til andre apparater, må du vente med å plugge støpselet i stikkontakten. Vent med det til du har koblet til de andre apparatene.

Hvis du vil endre type video- eller audiotilkobling, må du først dra støpselet ut av stikkontakten, ellers kan det skje at DVD-spilleren og eventuelt apparater som er koblet til den får uopprettelige skader på grunn av spenningstopper!

## 6. Sikkerhetshenvisninger

- Dette apparatet er ikke egnet for barn eller andre personer som har forminskete fysiske, sensoriske eller mentale evner som gjør det nødvendig at de overvåkes og understøttes når de bruker apparatet. Barn skal overvåkes slik at de ikke bruker apparatet som et leketøy.
- For å unngå at apparatet slås på uforvarende skal du dra støpselet ut av stikkontakten etter hver bruk og før hver rengjøring.
- Undersøk apparatet og alle deler med hensyn til synlige skader. Sikkerhetskonseptet til apparatet kan bare fungere når apparatet er i feilfri tilstand.
- Støpselet må alltid være lett tilgjengelig slik at apparatet kan kobles raskt fra elektrisitetsnettet i nødtilfeller.

### ⚠ Fare for elektriske støt!

- Apparatet må kun kobles til en forskriftsmessig installert og jordet stikkontakt. Nettspenningen må stemme overens med opplysningene på identifikasjonsskiltet.
- Skadete støpsler eller strømledninger må med en gang skiftes ut av autorisert fagpersonale eller kundeservice for å unngå farer.
- Ledninger eller apparater som ikke fungerer feilfritt eller har blitt skadet må med en gang repareres eller skiftes ut av kundeservice.

⚠ Aldri dypp apparatet i vann. Bare rengjør det med en lett fuktet klut.

- Apparatet må aldri utsettes for regn og må aldri brukes i fuktige eller våte omgivelser.
- Sørg for at strømledningen aldri blir fuktig eller våt under drift.
- Apparathuset må ikke åpnes eller repareres. Skjer dette, eksisterer ingen sikkerhetsgaranti og garantien forfaller.
- Beskytt apparatet mot dryppende eller sprutende vann. Derfor må du ikke plassere væskefylte beholdere (f.eks. blomstervaser) oppå eller ved siden av apparatet.

### **⚠ Brannfare!**

- Ikke benytt apparatet i nærheten av varme overflater.
- Ikke plasser apparatet på steder som er utsatt for direkte sollys, ellers kan det bli overopphetet og få uopprettelige skader.
- Aldri la apparatet stå uten oppsikt mens det er i drift.
- Dekk aldri til luftslissene på apparatet når det er i drift.
- Ikke plasser åpne flammekilder, f.eks. stearinlys, oppå eller ved siden av apparatet.

### **⚠ Fare for personskader**

- Hold barn unna strømledningen og apparatet. Barn undervurderer ofte farene som går ut fra elektriske apparater.
- Pass på at apparatet står stødig.
- I tilfelle apparatet har falt ned eller har blitt skadet, må det ikke tas i bruk igjen. Apparatet må da sjekkes av kvalifisert personale og repareres hvis nødvendig.
- Batterier må ikke havne i hendene på barn. Barn kan ta batteriene i munnen og svelge dem.

### **⚠ Fare! Laserstråling!**

Apparatet inneholder en "Klasse 1 laser".

- Apparatet må aldri åpnes.
- Prøv aldri å reparere apparatet.
- På innsiden av apparatet finnes det usynlig laserstråling. Aldri utsett deg for laserstrålen.

### **ⓘ Henvisning:**

Noen aggressive møbellakker kan angripe gummiføttene til apparatet. Hvis det er nødvendig må du plassere apparatet på et sklissikkert underlag.

### **⚠ Uvær!**

Ved uvær kan apparater som er koblet til strømmettet skades. Derfor er det viktig alltid å dra støpselet ut av stikkkontakten når det er uvær.

### **⚠ Henvisning angående støtspenninger (EFT/elektrisk rask overgangsbegivenhet):**

I tilfelle en feilfunksjon opptrer på grunn av en elektrisk rask overgangsbegivenhet (støtspenning), må apparatet settes tilbake til forhåndsinnstillinger for å fortsette normal drift. Muligens må strømforsyningen frakobles og så tilkobles igjen. Batteriene (dersom det er noen i apparatet) må tas ut og settes inn igjen.

### **⚠ Henvisning om frakobling**

FUNCTION-bryteren på dette apparatet vil ikke skille apparatet fullstendig fra elektrisitetstettet. Utover dette forbruker apparatet elektrisitet i standby-drift. Hvis apparatet skal skilles fra nettet fullstendig må støpselet trekkes ut av stikkkontakten.

### **⚠ Henvisninger for omgang med batterier**

Apparatet og fjernkontrollen drives med batterier. I omgang med batterier/akkumulatorer må du observere følgende:

### **⚠ Eksplosjonsfare!**

Kast ingen batterier inn i ild. Batteriene må ikke lades opp.

- Batteriene må aldri åpnes, loddet eller sveises. Det er stor fare for eksplosjoner og skader!
- Batterier må kontrolleres regelmessig. Tomme batterier kan gi skader på apparatet.
- Ta ut batteriene når du ikke skal bruke apparatet på lengre tid.
- Bruk beskyttelseshansker hvis batterier er lekket ut.
- Rengjør batterihuset og batterikontaktene med en tørr klut.

### **⚠ Advarsel!**

Vi overtar ingen ansvar/garanti for skader på DVD-spillere som oppstår på grunn av fuktighetspåvirkning, vanninntrenging eller overoppheting!

## 7. Legge batterier inn i fjernkontrollen og DVD-spillere

### 7.1. Innlegging av batteriene i fjernkontrollen

1. Åpne batterihuset på baksiden av fjernkontrollen.
2. Legg nå inn de to batteriene av type AAA (mikroceller) som er medlevert med apparatet inn i batterihuset. Sørg for at batteriene legges inn med riktig polaritet.
3. Lukk batterihusdekslet igjen.

### Bruk av fjernkontrollen

For å få feilfri funksjon ved bruk av fjernkontrollen...

- Alltid pek fjernkontrollen rett mot DVD-spillere når du bruker den.
- Vær sikker på at det ikke er noen hindringer mellom fjernkontrollen og DVD-spillere som kan forstyrre mottakingen.
- Aldri bruk fjernkontrollen med mer enn 5 meters avstand fra DVD-spillere, ellers kan forstyrrelser oppstå ved bruk av DVD-spiller-funksjonen med fjernkontrollen.

### 7.2. Legge batterier inn i DVD-spillere

DVD-spillere kan drives av batterier. Så snart DVD-spillere er koblet til strømmettet med strømledningen, kobles strømforsyningen via batteriene ut.

1. Åpne batterihuset på undersiden av DVD-spillere.
2. Legg nå 8 batterier av typen C R14/LR14 (lite cellebatteri) inn i batterihuset. Sørg for at batteriene legges inn med riktig polaritet.
3. Lukk batterihusdekslet igjen.

### 7.3 Bytte batteriene


Hvis kontroll av DVD-spillere via fjernkontrollen ikke fungerer riktig eller overhodet ikke fungerer, må batteriene byttes ut.

- Alle batteriene må alltid fornyes for å kunne bruke DVD-spillere og fjernkontrollen igjen med full funksjonalitet.

## 8 Koble til et TV-apparat via videoinngang (Composite Video)

For denne tilkoblingsvarianten må TV-apparatet ha audio/video-cinchterminaler (Composite Video).

For å kunne koble DVD-spilleren til TV-apparatet via Composite Video, trenger du en audio/video-RCA (cinch)-ledning.

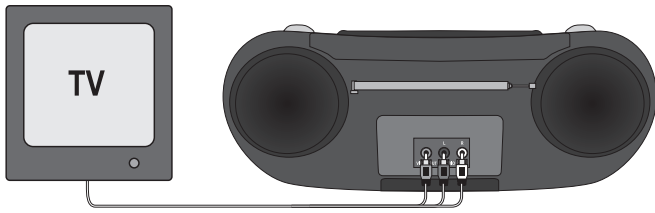

- Koble den gult markerte **VIDEO-OUT**-terminalen til den gule **VIDEO**-terminalen på TV-apparatet ved hjelp av en audio/video-cinchledning.
- Stikk den hvite kontakten på audio/video-cinchledningen inn i cinchterminalen som er merket **AUDIO OUT L** på baksiden av DVD-spilleren. Stikk så den hvite stikkkontakten på den andre enden av audio/video-cinch-ledningen inn i audioterminalen for den venstre kanalen på TV-apparatet.
- Stikk den røde kontakten på audio/video-cinchledningen inn i cinchterminalen som er merket **AUDIO OUT R** på baksiden av DVD-spilleren. Stikk så den røde stikkkontakten på den andre enden av audio/video-cinch-ledningen inn i audioterminalen for den høyre kanalen på TV-apparatet.
- Velg passende AV-kanal på TV-en din for avspillingen. Les i bruksanvisningen til TV-apparatet hvordan du stiller inn AV-kanalen.

## 9. Tilkobling av audiokomponenter til DVD-spilleren

### 9.1 Koble Hi-Fi-anlegg eller mottaker til DVD-spilleren


I tillegg til å spille av musikk fra DVD-er, VCD-er/S-VCD-er og audio- og MP3-CD-er over høyttalerne på TV-apparatet som DVD-spilleren er koblet til, kan du også spille av lyd over eksterne audiokomponenter som Hi-Fi-anlegg eller mottakere.

#### Krav for tilkoblingen av et Hi-Fi-anlegg

For å kunne nyte en full lyd ved avspilling av DVD med DVD-spilleren kan du koble et Hi-Fi-anlegg til DVD-spilleren. Før tilkobling må det med hjelp av bruksanvisningen til Hi-Fi-systemet undersøkes...

- om Hi-Fi-systemet er egnet for tilkobling til en DVD-spiller; hvis dette er tilfellet...
- om Hi-Fi-systemet disponerer cinchkontakter; hvis dette er tilfellet kan du tilkoble Hi-Fi-systemet til DVD-spilleren med en cinchledning.

#### Koble til et Hi-Fi-anlegg:

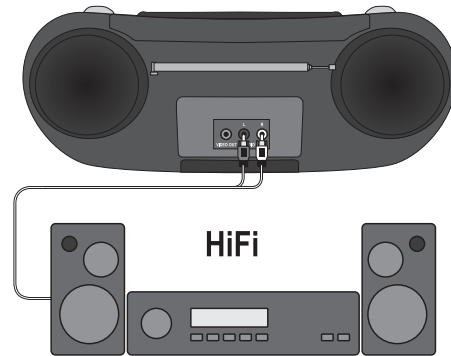

- Stikk den hvite kontakten på audio/video-cinchledningen inn i cinchterminalen som er merket **AUDIO OUT L** på baksiden av DVD-spilleren.
- Stikk så den hvite stikkkontakten på den andre enden av audio/video-cinch-ledningen inn i audioterminalen for den venstre kanalen på Hi-Fi-anlegget.
- Stikk den røde kontakten på audio/video-cinchledningen inn i cinchterminalen som er merket **AUDIO OUT R** på baksiden av DVD-spilleren.
- Stikk så den røde stikkkontakten på den andre enden av audio/video-cinch-ledningen inn i audioterminalen for den høyre kanalen på Hi-Fi-anlegget.
- Se etter i bruksanvisningen for opplysninger om hvilken justering eventuelt er nødvendige å foreta på Hi-Fi-systemet for å gjengi lyden av en DVD, VCD/S-VCD, audio- eller MP3-CD via Hi-Fi-systemet.

#### **i** **Henvisning:**

For optimal lydopplevelse må du plassere høyttalerne til Hi-Fi-anlegget til venstre og høyre for DVD-spilleren.

## 9.2 Spille av lydsignaler fra eksterne apparater

Du kan spille av lydsignaler fra eksterne apparater, f.eks. en bærbar CD/MP3-spiller, over høyttalerne på DVD-spilleren.

Koble den høyre og venstre audioutgangen på det eksterne apparatet ved hjelp av en 3,5 mm stereo-jack til **AUDIO IN**-terminalen på forsiden av DVD-spilleren.

Når du har koblet stereo-jacken til **AUDIO IN**-terminalen, slår DVD-spilleren over til avspilling av lydsignalet fra det eksterne apparatet.

- Plugg stereo-jacken inn i **AUDIO IN**-terminalen.
- For å gå tilbake til å spille av lyden fra DVD-spilleren, må du trekke stereo-jacken ut av **AUDIO IN**-terminalen.

### ⓘ **Henvisning:**

Når du har koblet stereo-jacken til **AUDIO IN**-terminalen, slås **LCD**-displayet av.

## 9.3 Bruke hodetelefoner

Du kan tilkoble hodetelefoner til DVD-spilleren med 3,5 mm stereo-jack.

Hodetelefonterminalen **PHONES** befinner seg på oversiden av DVD-spilleren.

Hvis du har tilkoblet hodetelefonen, deaktiveres høyttalerne automatisk og du vil kun høre lyden via hodetelefonene.

- Før du kobler til hodetelefoner må du justere volumet ned til minimum.
- Stikk jackkontakten til hodetelefonene inn i hodetelefonterminalen.



### **Forsiktig!**

Hvis du hører på musikk gjennom hodetelefoner over lengre tid og med full lydstyrke, kan hørselen din bli skadet!

## 9.4 Koble til mikrofon

Du kan koble hodetelefoner til DVD-spilleren med 3,5 mm stereo-jack. Mikrofonterminalen befinner seg på forsiden av DVD-spilleren. Når du har koblet til mikrofonen, kan du justere volumet til mikrofonen med bryteren **MIC VOL** på forsiden av DVD-spilleren.

Med mikrofonen kan du f.eks. bruke karaokefunksjonen på DVD-er.

- Plugg jackkontakten på mikrofonen inn i **MIC**-terminalen.

# 10. Betjening

## 10.1 Aktivere/deaktivere apparatet/Velge lydkilde

Du slår på apparatet når du velger en lydkilde med bryteren **FUNCTION**:

- **DVD/USB/CARD**
- **OFF**
- **RADIO**

**1.** Skyv bryteren **FUNCTION** til posisjonen for ønsket lydkilde.

**2.** For å slå av apparatet igjen må du skyve bryteren **FUNCTION** til posisjonen **OFF**.

## 10.2 Stille inn volumet

Du kan justere volumet med volumbryteren.

**1.** For å øke lydstyrken må du skru volumbryteren med klokken.

**2.** For å redusere volumet må du skru volumbryteren mot klokken.

## 10.3 Slå av lyden

**1.** Trykk på tasten **MUTE** for å slå av lyden. På displayet står det **MUTE**.

**2.** For å slå på lyden igjen må du trykke på tasten **MUTE** igjen.

### ⓘ **Henvisning:**

Du kan ikke slå av lyden med tasten **MUTE** i radiomodus.

## 10.4 Displayfunksjoner

- Rett ut displayet ved å klappe det ut.

Displayet kan dreies 270° med dreieleddet.

### Slå displayet på og av

**1.** Hold tasten **SCREEN ON** trykt inn en liten stund for å slå av **LCD**-displayet.

**2.** Hold tasten **SCREEN ON** trykt inn på ny for å slå på **LCD**-displayet igjen.

### Displayinnstillinger

**1.** Trykk flere ganger på tasten **SCREEN ON** for å bytte mellom anvisningene **BRI** (Brightness=lyshet) og **COL** (Color=farge).

**2.** Med piltastene ◀ ▶ kan du stille inne lyshets- og fargeverdiene.

**3.** Dersom du ikke trykker på en tast i løpet av 5 sekunder, blendes displayinnstillingene ut igjen.

## 11. Radiofunksjoner

LCD-displayet forblir avslått i radiomodus.

1. Still bryteren **FUNCTION** inn på posisjonen **RADIO**.
2. Rett opp teleskopantennen og trekk den ut. Juster teleskopantennen slik at mottakingen er optimal.

For mottaking av AM-kanaler er en mottakerantenne bygd inn i apparatet. I radiodrift må hele apparatet dreies helt til mottakingen er best.

3. Still inn mottaksområdet (**AM/FM/FM ST.**) med båndvalgbyteren. I innstillingen **FM ST.** spilles radioprogrammer som kringkastes i stereo av i stereo. Når radioprogrammet mottas i stereo med full signalstyrke vil FM stereo-indikatoren **FM ST.** lyse.

### ⓘ **Henvisning:**

Hvis stereosignalet er for svak i mottakingsområdet **FM ST** kan du muligens forbedre mottaket ved å velge innstillingen **FM**. I denne innstillingen spilles lyden av i mono.

4. Still inn den ønskete radiokanalen ved å skru på frekvensbryteren.

## 12. DVD-spillerfunksjoner

- Still bryteren **FUNCTION** inn på posisjonen **DVD/USB/CARD**. LCD-displayet aktiveres og bakgrunnbildet vises.

## Setup-meny i DVD-modus

### ⓘ **Henvisning:**


I denne bruksanvisningen er den engelske setup-menyen beskrevet. Du kan når som helst stille inn menyen på ditt eget språk, slik det er beskrevet under "Language Setup > OSD Language".

I DVD-modus kan du starte innstillingsmenyen der du foretar bilde- og lydinnstillinger samt aktiverer videre funksjoner. Dersom du foretar endringer i Setup-menyen, blir disse lagret, selv når apparatet blir slått av.

- Du kan når som helst stille inn grunninnstillingene i menyen **SYSTEM SETUP > DEFAULT**.
- Setup-menyen kan startes under avspilling. Setup-menyen er delt inn i følgende menyer:
  - **SYSTEM SETUP**
  - **LANGUAGE SETUP**
  - **VIDEO SETUP**
  - **SPEAKER SETUP**

### Navigere i menyene

1. Trykk på tasten **SETUP** for å starte setup-menyen. Hovedmenyen **SYSTEM SETUP** vises.

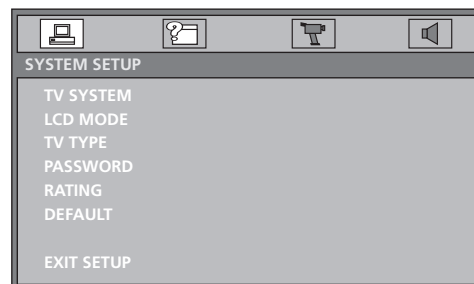


- Med piltastene **◀ ▶ ▲ ▼** og tasten **OK** foretar du alle innstillingene i menyene.
2. Med piltastene **◀ ▶** velger du en meny ved å bevege den gule markeringen under det tilsvarende menysymbolet.
3. Med piltastene **▲ ▼** velger du i menyen ved å bevege den gule baren over det du ønsker å velge.
4. Med piltastene **▶** bytter du valg i undermenyen og med piltasten **◀** går du tilbake et menynivå.
5. Trykk på tasten **OK** for å bekrefte et valg. Alle navigasjonsmulighetene innenfor en aktuelt meny angis på den nedre menykanten.

### Gå ut av setup-menyen (EXIT SETUP)

- Du kan når som helst gå ut av setup-menyen ved å trykke på tasten **SETUP** igjen.

## Meny SYSTEM SETUP

Når du starter setup-menyen for platedrift med tasten **SETUP**, vises menyen **SYSTEM SETUP**. Her kan du stille inn videoutgang og videoformater.

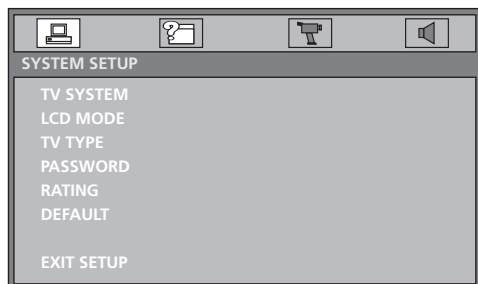

### TV SYSTEM

Her stiller du inn TV-normen for videoutgangen.

PAL	TV-norm PAL.
NTSC	TV-norm NTSC.
AUTO	Automatisk innstilling

### LCD MODE

I denne menyen kan du stille inn høyden og bredden til bildevisningen på LCD-displayet.

4:3:	Avspilling i formatet 4:3
16:9:	Avspilling i formatet 16:9



### TV TYPE


Her kan du stille inn høyden og bredden for bildevisningen og tilpasse avspilingsenheten som brukes.

4:3/PS:	Velg denne innstillingen for å vise programmer i regulær 4:3 format på en 4:3 TV-skjerm. Programmer i 16:9-format vises uten forstyrrende linjer på full skjerm, men sidene kappes på venstre og på høyre side.
4:3/LB:	Viser en film i 16:9 format på en tradisjonell skjerm med 4:3-format. Bildet gjengis med svarte bjelker på den øver og den nedre skjermkanten.
16:9:	Denne innstillingen anbefales hvis du bruker det innebygde LCD-displayet eller for å vise bildet på en widescreen-TV i 16:9-format.

### PASSWORD


Velg dette meny punktet for å slå av eller på passordsperrer. For å kunne stille inn barnesikringen i neste meny punkt **RATING**, må du ha slått av passordsperrer.

- Når passordsperrer er slått av, vises det åpne låssymbolet  bak de fire inntastingsplassene.
- Når passordsperrer er slått på, vises det låste låssymbolet  bak de fire inntastingsplassene.

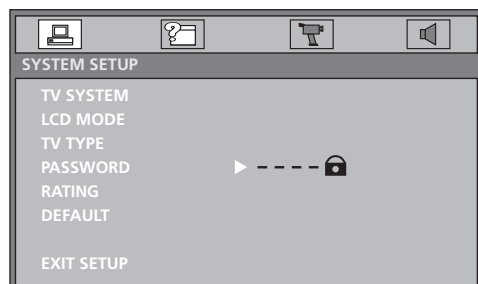

Sånn slår du av passordsperrer:


1. Bruk piltasten for å bytte inntastingsplass.
2. Bruk talltastene for å taste inn det fabrikkinnstilte passordet **8200** og bekreft med tasten **OK**.

Det åpne låssymbolet  vises bak inntastingsplassene. Du kan nå stille inn aldersgrensene i meny punktet **RATING**.

Når du tar apparatet i bruk for første gang, er passordsperrer allerede slått av.

### Sånn slår du på passordsperrer:


1. Bruk piltasten for å bytte inntastingsplass.
2. Bruk talltastene for å taste inn det fabrikkinnstilte passordet **8200** og bekreft med tasten **OK**.

Det låste låssymbolet  vises bak inntastingsplassene. Nå kan du ikke stille inn aldersgrensene i meny punktet **RATING** lenger.

### Sånn endrer du passordet:

For å kunne endre passordet må passordsperrer være slått av.


1. Bruk piltasten for å bytte inntastingsplass.
2. Bruk talltastene for å taste inn et nytt firesifret passord og bekreft med tasten **OK**.

Det låste låssymbolet  vises bak inntastingsplassene. Med det nye passordet kan du slå av passordsperrer igjen.

Dersom du har glemt det nye passordet, kan du når som helst slå passordsperrer av eller på med det fabrikkinnstilte passordet.

### RATING

Noen DVD-er og CD-er (overveiende DVD-er man får tak i på det amerikanske markedet) er kodet med forvrengte signaler. Ved dette kan DVD-er inndeles i åtte forskjellige klasser for frigivelse.

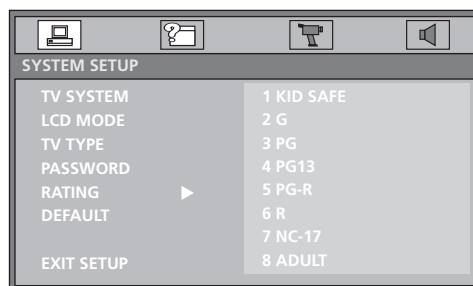

### Anvisning:

For å kunne endre aldersgrensen må passordsperrer være slått av.

1. Bruk piltaster for å bytte til høyre spalte.
2. Velg en av de følgende aldersgrensene for å beskytte avspilling av medier i denne gruppen med et passord og bekreft med tasten **OK**:
  - 8 ADULT: kun for voksne;
  - 7 NC -17: ikke for ungdommer under 18 år;
  - 6 R: for ungdommer under 16 anbefales streng oppsikt av foreldre.
  - 5 PG-R: for ungdommer under 16 anbefales oppsikt av foreldre.
  - 4 PG 13: oppsikt av foreldre anbefales strengt; noen scener er ikke egnet for ungdommer under 12;
  - 3 PG: oppsikt av foreldre anbefales;
  - 2 G.: for alle aldersgrupper;
  - 1 KID SAFE: også egnet for små barn.

### Eksempel

Hvis en DVD f.eks. er tildelt klasse 7 eller 8 og du har innstilt klasse 1 til 6 for frigivelse, så vil apparatet gi melding om at passordet må testes inn.

Det er mulig at bare deler av DVD-en, dvs. bestemte scener, er kodet med en klasse for frigivelse.

3. Slå deretter på passordsperrer i meny punktet **PASSWORD**. Aldersgrensene er nå stilt inn og kan kun endres dersom passordsperrer først slås av.




## DEFAULT

Velg menypunktet **DEFAULT** og bekreft med tasten **OK** for å gå tilbake til fabrikkinnstillingene i DVD-modus.

## EXIT SETUP

Velg dette menypunktet for å gå ut av setup-menyen.

## Meny LANGUAGE SETUP

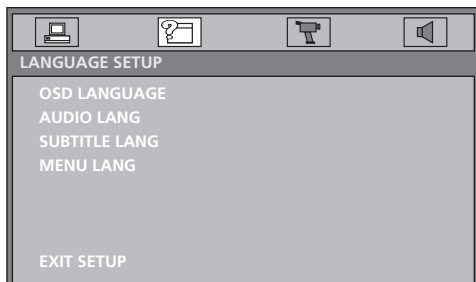

I denne menyen kan du stille inn språkinnstillingene for menyer og undertitler.

## OSD LANGUAGE

Her stiller du inn språket som OSD-menyen skal vises i på displayet.

## AUDIO LANG

Her stiller du inn audiospråket som skal brukes standardmessig ved avspilling av film.

## SUBTITLE LANG

Her stiller du inn undertittelspråket som skal brukes standardmessig ved avspilling av film.

## MENU LANG


Her stiller du inn diskmenyspråket som skal brukes standardmessig ved avspilling av film.

## EXIT SETUP

Velg dette menypunktet for å gå ut av setup-menyen.

## Meny VIDEO SETUP

I denne menyen stiller du inn **Brightness (lyshet)**, **Contrast (kontrast)**, **Hue (fargetone)** og **Saturation (metning)** for plateavspillingen.

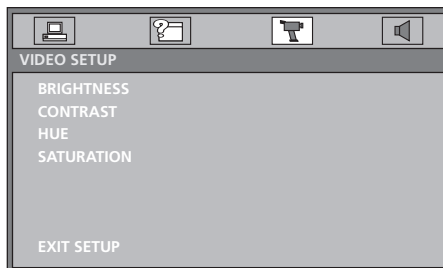

## BRIGHTNESS

Bruk piltastene **▲ ▼** for å stille inn lysheten.

- Trykk deretter på tasten **OK** for å gå videre.

## CONTRAST

Bruk piltastene **▲ ▼** for å stille inn kontrasten.

- Trykk deretter på tasten **OK** for å gå videre.

## HUE

Bruk piltastene **▲ ▼** for å stille inn fargetonen.

Jo lenger opp du skyver bryteren, desto varmere blir totalfremstillingen. Nedover utstråler derimot bildet en kjøligere stemning.

- Trykk deretter på tasten **OK** for å gå videre.

## SATURATION

Bruk piltastene **▲ ▼** for å stille inn fargemetningen.


- Trykk deretter på tasten **OK** for å gå videre.

## EXIT SETUP

Velg dette menypunktet for å gå ut av setup-menyen.

## Meny SPEAKER SETUP

I denne menyen stiller du inn stereoutgangen for anleggets høyttalere.

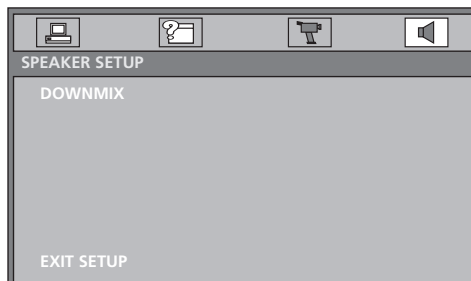

## DOWNMIX

**LT/RT:** Velg denne innstillingen hvis filmen ble opptegnet i Pro Logic Dolby Digital og du vil høre lyden i kinokvalitet.

**STEREO:** Velg dette alternativet for å gjengi den venstre og den høyre lydkanalen på DVD-en. Ved avspilling av CDer gjengis et tradisjonelt stereosignal.

## EXIT SETUP

Velg dette menypunktet for å gå ut av setup-menyen.

## 13. Ta DVD-spilleren i bruk

Etter at du nå...

- har satt opp DVD-spilleren på et egnet sted
  - har koblet DVD-spilleren til et TV-apparat med et av de nevnte tilkoblingsalternativene, dersom dette er ønskelig
  - har koblet DVD-spilleren til et Hi-Fi-anlegg eller en mottaker, dersom dette er ønskelig
  - har gjort fjernkontrollen klar til drift ved å legge inn batteriene
  - og vet hvordan du starter og betjener OSD-menyen med fjernkontrollen
- ...er DVD-spilleren nå klar til bruk..

### 13.1 Legge inn DVD-en

For å spille av en plate med DVD-spilleren:

- Sørg for at DVD-spilleren er klar til bruk.
- Slå på DVD-spilleren.

Når DVD-spilleren og eventuelt tilkoblede apparater (f.eks. en audiokomponent) er klare til bruk og slått på, ser du Silvercrest-logoen på displayet.

Hvis ingen plate er lagt inn i plateskuffen til DVD-spilleren:

På displayet står det **No Disc**.

- Åpne plateskuffen ved å trykke på tasten **▲ OPEN/CLOSE** på fjernkontrollen eller på forsiden av DVD-spilleren. På displayet står det **Open**.
- Legg platen inn i plateskuffen med den merkete/etiketterte siden oppad. For dobbeltsidige plater: Siden som du vil spille må vise nedover.
- Etter at du har lagt inn platen, må du igjen trykke på tasten **▲ OPEN/CLOSE** på fjernkontrollen eller på forsiden av DVD-spilleren for å lukke plateskuffen.
- Innholdet på platen blir nå lastet; dette kan ta et par sekunder. Imens står det **Loading** på displayet.

## 13.2 Legge inn minnekort/USB-minnepinner med MP3-/WMA-/DivX-/JPEG-filer

### ⓘ **Henvising:**

DVD-spilleren starter alltid i DVD-modus. For å lese minnekort, må du trykke flere ganger på tasten **USB/CARD** på fjernkontrollen eller tasten **USB/SD/MMC CARD** på apparatet, helt til det står **READ CARD** på displayet. DVD-spilleren kjenner igjen filformatene JPEG, MP3, WMA og MPEG4 (DivX).

For å legge inn minnekort av typen SD og MMC i DVD-spilleren:

- Sørg for at DVD-spilleren er klar til bruk.
- Slå på DVD-spilleren.

Når DVD-spilleren er slått på og klar til bruk, ser du Silvercrest-logoen på displayet.

Hvis ingen plate er lagt inn i plateskuffen på DVD-spilleren: På displayet står det **No Disc**.

- Skyv minnekortet inn i minnekortleseren. Følg de følgende trinnene - avhengig av typen minnekort du vil spille av.

### ⚠ **Advarsel!**

Pass alltid på at minnekort skyves inn i minnekortleseren slik det er beskrevet her! Ikke knekk minnekort når de skyves inn i minnekortleseren! Skyv minnekortene med et lett trykk inn i minnekortleseren så langt det går.

Hvis ikke minnekortet lar seg skyve inn uten bruk av kraft:

- Kontroller at det virkelig er et minnekort som kan spilles av med DVD-spilleren.  
Forsøk aldri å skyve minnekort av andre typer inn i minnekortleseren!
- Kontroller om minnekortet er skjøvet inn i minnekortsporet riktige vei.
- Forsøk aldri å skyve minnekort inn i minnekortsporet med vold, ellers kan DVD-spilleren, minnekortet og data som er på minnekortet ta skade!

### Støttete minnekorttyper og kapasiteter.

Minnekort av typen SD (1 GB) og MMC (1 GB) kan spilles av.

### Mappestrukturer og filformater som støttes


- 2 mappenivåer støttes
- I det hele må det ikke være mer enn 10 mapper (maks. 5 mapper på det andre mappenivået)
- Maksimum 100 filer på lagringsmediet støttes
- Mapper med forskjellige filformater støttes ikke
- For JPEG-filer med en størrelse på over 1 MB kan det oppstå feilaktige gjengivelser på skjermen.

### MultiMediaCard-/SecureDigital-minnekort (MMC/SD)

MultiMediaCard-/SecureDigital-minnekort må skyves inn i minnekortleseren. Skyv MMC-/SD-minnekort rett fram inn i minnekortleseren med kontaktene foran.

Derved må...

- siden til minnekortet der kontaktene er vende nedover og
- det skjeve hjørnet på minnekortet peke til høyre.

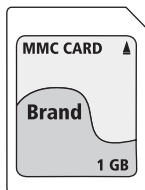

### USB-minnepinner (USB)

DVD-spilleren støtter USB-minnepinner 1.1 og 2.0 opp til en kapasitet på 1 GB. USB-minnepinner må skyves inn i USB-porten.



- Trykk på tasten **USB/CARD** på fjernkontrollen eller tasten **USB/SD/MMC CARD** på apparatet, helt til det står **READ USB** på displayet.

Denne fremgangsmåten gjelder også for de enkelte minnekortene.

#### **i** **Henvisning:**

*Dersom et minnekort eller en USB-minnepinne ikke inneholder noen lesbare filer, kan du ikke velge minnekort- eller USB-funksjonen.*

### 13.3 Ta ut minnekort/ USB-minnepinner

Minnekort/USB-minnepinner skal bare fjernes når minnekortleseren/USB-porten er deaktivert. Slik kan eventuelle skader eller datatap unngås.

- For å gå tilbake til DVD-modus må du trykke flere ganger på tasten **USB/CARD** på fjernkontrollen eller tasten **USB/SD/MMC CARD** på apparatet, helt til det står **DVD** på displayet.
- Fjern nå minnekortet/USB-minnepinnen fra minnekortleseren/USB-porten.

## 14. Spille DVD-er, VCD-er eller S-VCD-er

For å bruke DVD-spilleren til å spille en DVD/VCD/S-VCD...

- Sørg for at DVD-spilleren er klar til bruk.
- Slå på DVD-spilleren.

Når DVD-spilleren og eventuelt tilkoblede apparater (f.eks. en audiokomponent) er klare til bruk og slått på, ser du Silvercrest-logoen på displayet:



- Åpne plateskuffen på forsiden av DVD-spilleren ved å trykke på tasten **▲ OPEN/CLOSE** på forsiden av DVD-spilleren eller på fjernkontrollen.

På displayet står det **Open**.

- Legg en DVD/VCD/S-VCD inn i plateskuffen med den merkete/etiketterte siden opp.
- Trykk igjen på **▲ OPEN/CLOSE** på forsiden av DVD-spilleren eller på fjernkontrollen for å lukke plateskuffen.

Det står **Close** på displayet mens plateskuffen lukkes.


- Innholdet av DVD/VCD/S-VCD-en som er lagt inn blir nå lastet; dette kan ta et par sekunder. Imens står det **Loading** på displayet.
- Gjengivelsen av DVD/VCD/S-VCD-en som er lagt inn starter automatisk.

#### **i** **Henvisning:**

*DVD-, VCD- og S-VCD-er som skal spilles av med DVD-spilleren har muligens en landkode. Denne er trykt på DVD-omslaget.*

*Kun DVD/VCD/S-VCD-er med landkoden 2 kan spilles av på DVD-spilleren.*

*Hvis ingen landkode er trykt på omslaget til en DVD/VCD/S-VCD...*

- men symbolet , så kan DVD/VCD/S-VCD-en spilles av på DVD-spilleren
- så kan DVD/VCD/S-VCD-en eventuelt ikke spilles av på DVD-spilleren. Dette kan du sjekke ved å forsøke å spille DVD-en.

Avhengig av DVD/VCD/S-VCD-en som er lagt inn er det mulig at innholdet på DVD/VCD/S-VCD-en ikke spilles av med en gang, og at en valgmeny vises på skjermen først.

I dette tilfellet bruker du piltastene **◀▶ ▲▼** på fjernkontrollen for å velge meny-punktet som starter avspilling av filmen.

- Trykk på tasten **PLAY/PAUSE** for å starte avspillingen av filmen. På displayet blendes det raskt inn **Play**.

## Starte, stoppe og avbryte avspilling

Avhengig av den innlagte platen er det mulig at innholdet ikke spilles av med en gang, men at du ser en valgmeny på displayet

- I så fall bruker du piltastene ◀ ▶ ▲ ▼ for å velge menyunktet som starte avspillingen av filmen.
- Trykk på tasten **PLAY/PAUSE** for å starte avspillingen av filmen.

## Stoppe avspillingen (PAUSE)

For å stanse avspillingen:

- Under avspillingen trykker du på tasten **PLAY/PAUSE**. På displayet står det **PAUSE II**.

På displayet ser du stillbildet av scenen som nettopp har blitt stanset.

- For å fortsette avspillingen av filmen trykker du på tasten **PLAY/PAUSE**.

## Stoppe avspillingen (STOP)

Trykk på tasten **STOP** for å stoppe avspillingen.

## Resume-funksjon

Når du har stoppet avspillingen av DVD/VCD/S-VCD-en som er lagt inn ved å trykke på tasten **STOP** en gang, vil DVD-spilleren automatisk lagre stedet der avspillingen ble avbrutt. Denne funksjonen heter „Resume-funksjon“.

Det står **PRE STOP (Preliminary Stop=foreløpig stopp)** på displayet.

- Så snart du igjen trykker på tasten **PLAY/PAUSE**, fortsetter avspillingen på det lagrede stedet.
- Når du trykker på tasten **STOP** for andre gang, sletter du det lagrede stedet der avspillingen ble avbrutt.
- Så snart du trykker på tasten **PLAY/PAUSE** igjen, vil avspillingen av DVD/VCD/S-VCD-en som er lagt inn begynne på begynnelsen.

## SKIP-funksjon (kapittel/tittel fram/tilbake)

### Henvisning:


Denne funksjonen er muligens ikke tilgjengelig for alle DVD/VCD/S-VCD-er! Dersom du forsøker å utføre utilgjengelige funksjoner, vises meldingen "INVALID KEY" på displayet.

- Med tasten **SKIP DOWN/SKIP UP** kan du innenfor filmen på den innlagte DVD/VCD/ S-VCD-en under avspillingen bytte tilbake til forrige kapittel/tittel eller til begynnelsen av neste kapittel/tittel. På displayet står det **PREV** eller **NEXT**.

Det valgte kapitlet/den valgte tittelen spilles av med en gang.

## Søk forover/bakover

- Hold tasten **SKIP DOWN/SKIP UP** trykt en liten stund under avspillingen for å starte et søk bakover/framover.
- Trykk på tasten **SKIP DOWN/SKIP UP** flere ganger for å bruke følgende søkehastigheter:

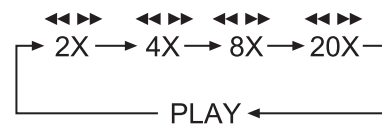

### Henvisning:

Mens apparatet er i søkemode vil ingen lyd gjengis.


- For å fortsette avspillingen av filmen på det valgte stedet i normal hastighet må du trykke på tasten **PLAY/PAUSE** under søket.

### Henvisning:

Ved avspilling av MPEG4-filer kan hastigheten på fram- og tilbakespilingen være innskrenket. Dette er filavhengig og ingen feilfunksjon på apparatet.

## Slow-motion-funksjon (kun DVD, VCD, SVCD og DivX)

- Hold tasten **ZOOM/SLOW** raskt inne under avspillingen for å stille avspillingen inn på slow-motion. Trykk på tasten **ZOOM/SLOW** flere ganger for å bruke følgende slow-motion-hastigheter:



### Henvisning:

Under slow motion-avspilling vil ingen lyd gjengis.

- For å fortsette avspillingen i vanlig hastighet trykker du på tasten **PLAY/PAUSE** under den langsomme avspillingen.

### Henvisning:

For VCD-er, SVCD-er og MPEG4-filer er ikke slow-motion-funksjonen bakover støttet.


## Bildeforstørrelse (zoom)

### **i** Henvisning:

Denne funksjonen er muligens ikke tilgjengelig for alle DVD/VCD/S-VCD-er!  
Dersom du forsøker å utføre utilgjengelige funksjoner, vises meldingen "INVALID KEY" på displayet.

Under avspillingen av en innlagt DVD/VCD/S-VCD kan du forstørre og forminske bildet på displayet i tre nivåer.

- Trykk flere ganger på tasten ZOOM/SLOW for å bruke følgende forstørrelser eller forminskinger:



Med piltastene ◀ ▶ ▲ ▼ kan utsnittet av forstørrelsen forskyves.

## Kameraposisjon (kun DVD)

### **i** Henvisning:

Denne funksjonen er muligens ikke tilgjengelig for alle DVD/VCD/S-VCD-er!  
Dersom du forsøker å utføre utilgjengelige funksjoner, vises meldingen "INVALID KEY" på displayet.

Mange filmer på DVD inneholder kapitler ble tatt opp samtidig fra ulike synsvinkler. På filmer med slike kapitler, kan du betrakte dette kapitlet fra ulike perspektiver.

- Da må du under avspillingen av den innlagte DVD-en trykke raskt på tasten ANGLE/PROGRAM på fjernkontrollen. Med ethvert videre trykk på tasten ANGLE/PROGRAM byttes det til en av de tilgjengelige synsvinklene.

## Repetisjonsfunksjon for DVD, VCD, SVCD og audio-CD

Med repetisjonsfunksjonen kan du ...

...på DVD-er repetere enten tittel eller kapittel.

...på VCD/S-VCD-er repetere enkelte titler, en mappe eller hele VCD/S-VCD-en.

... på audio-CD-er repetere enkelte titler eller hele CD-en.

### Repetisjonsfunksjon

- Under avspillingen må du trykke flere ganger på tasten REPEAT.

På displayet står det REP med en av de følgende anvisningene:

**CHAPTER** Velg CHAPTER for å repetere det kapitlet som spilles av i det øyeblikket helt til repetisjonen blir slått av eller avbrytes med to trykk på tasten STOP.

**TITLE** Velg TITLE for å repetere den tittelen som spilles av i øyeblikket helt til repetisjonen blir slått av eller avbrytes med to trykk på tasten STOP.

**REP1** Velg REP1 for å repetere det sporet som spilles av i øyeblikket helt til repetisjonen blir slått av eller avbrytes med to trykk på tasten STOP.

**REP ALL** Velg REP ALL for å repetere alle titlene på platen - altså hele platen - helt til repetisjonen blir slått av eller avbrytes med to trykk på tasten STOP.

**REP DIR** Når du har lagt inn en plate som inneholder mapper, kan du med dette valget repetere innholdet i den aktuelle mappen så lenge du ønsker.

**OFF** For å slå av den repeterte avspillingen må du trykke flere ganger på tasten REPEAT under avspillingen helt til det står OFF på displayet.

**REP A-** Med denne funksjonen kan du repetere en valgt sekvens innenfor et kapittel på en aktuell avspilt plate. Velg denne muligheten når den ønskede begynnelsen på sekvensen blir avspilt.

**REP A-B** Velg denne muligheten når slutten på den ønskede sekvensen blir avspilt. Pass på at begynnelsen og slutte på sekvensen må ligge innenfor samme kapittel. Den repeterte avspillingen av den valgte sekvensen begynner med en gang.

**A-B CANCEL** Sekvensen blir repetert helt til A-B CANCEL velges bort.

## Direkte tittel-/sporvalg

For å velge en tittel/et spor på platen direkte må du taste inn tittel-/spornummeret med talltastene.

Dersom det er mer enn 9 titler, taster du inn de tilsvarende tallene etter hverandre.

### Eksempel:

Tast inn tallet 1 og deretter tallet 2 for å spille av tittel/spor 12.

## Direkte kapittel-, tittel- eller tidsvalg med søkefunksjonen

### **i** Henvisning:

Denne funksjonen er muligens ikke tilgjengelig for alle DVD/VCD/S-VCD-er!  
Dersom du forsøker å utføre utilgjengelige funksjoner, vises meldingen "INVALID KEY" på displayet.

Dersom du ikke ønsker å spille av hele platen, kan du velge ut et bestemt kapittel/en tidsposisjon.

- Trykk under avspillingen på tasten SEARCH for å blende inn følgende anvisning, avhengig av medium:

DVD TT 01/04 CH 005/017 00:00:00

CD Trk 000/06 00:00:00

Med piltastene ◀ ▶ ▲ ▼ velger du et av de følgende inntastingsfeltene og taster så inn kapittel-, tittel- eller spornummer, alternativt et tidspunkt inn med talltastene.

Bekreft inntastingen med tasten OK .

### DVD

**TT:** Skriv her inn et tittelnummer, der avspillingen skal starte.

**CH:** Skriv her inn et kapittelnummer der avspillingen skal starte.

**⌚** Skriv her inn en tidsposisjon for den aktuelle tittelen der avspillingen skal starte.

### CD/VCD/SVCD

**Trk :** Skriv her inn et spornummer der avspillingen skal starte.

**⌚** Skriv her inn en tidsposisjon for den aktuelle tittelen der avspillingen skal starte.

## Anvisningsfunksjoner

### Vise plateinformasjon

#### **Henvisning:**

Denne funksjonen er muligens ikke tilgjengelig for alle DVD/VCD/S-VCD-er!  
Dersom du forsøker å utføre utilgjengelige funksjoner, vises meldingen "INVALID KEY" på displayet.

Med denne funksjonen kan du blende inn samtlige tilgjengelige informasjonen på displayet for den innlagte DVD/VCD/S-VCD-en under avspillingen.

- Trykk flere ganger på tasten **DISPLAY** under avspilling for å blende inn følgende informasjonen etter hverandre:

#### For DVD-er:



- avspilt tid i aktuelle kapittel




- audiospråk, dolbyinnstilling, undertittelspråk og kameraposisjon



- resterende tid i aktuelle kapittel



- avspilt tid i aktuelle tittel

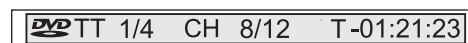

- resterende tid i aktuelle tittel

#### For VCD/SVCD/DivX/MPEG-CD-er



- avspilte tid i aktuelle tittel/spor



- resterende tid i aktuelle tittel

### Blende ut plateinformasjon

- For å blende ut plateinformasjonen trykker du igjen på tasten **DISPLAY**.

## Starte DVD-meny

#### **Henvisning:**

Denne funksjonen er muligens ikke tilgjengelig for alle DVD/VCD/S-VCD-er!  
Dersom du forsøker å utføre utilgjengelige funksjoner, vises meldingen "INVALID KEY" på displayet.

I mange filmer på DVD finnes det en hovedmeny på platen som, ved siden av valget å spille av hovedfilmen, f.eks. gjør det mulig å...

- velge språk for undertittel og filmlyd
- velge kapitler direkte
- spille av bonusmaterialer til filmen (bakgrunnsinformasjon, "Filmen blir til" osv.)

Dersom en slik meny er tilgjengelig på DVD-en du har lagt inn i plateskuffen, kan du trykke på tasten **MENU** under avspilling for å starte menyen.

- De enkelte menyene kan du velge med å trykke på piltastene **◀ ▶ ▲ ▼**; trykk på tasten **PLAY/PAUSE** for å bekrefte det valgte menypunktet.

Trykk på tasten **MENU** igjen for å gå tilbake til avspillingen.

#### **Henvisning:**

Når du har avbrutt avspillingen ved å trykke to ganger på tasten **STOP** (avspillingsstopp uten gjenoptakelsesfunksjon), er det ikke mulig å starte hovedmenyen på platen.

## Playback Control (PBC) for VCD/SVCD-er

Mange VCD/S-VCD-er har Playback Control (forkortet til „PBC“). Playback Control betegner en hovedmeny der man kan betjene ulike funksjoner på VCD/S-VCD-en.

Dersom VCD/S-VCD-en i plateskuffen har PBC, så må du først aktivere funksjonen for å kunne blende inn menyen.

For å aktivere PBC...

- Trykk på tasten **MENU** en gang til. På displayet står det **PBC: OFF**.
- Trykk på tasten **MENU** en gang til. På displayet står det **PBC: ON**. PBC er slått på. Hovedmenyen på platen kan startes med tasten **MENU** eller **TITLE**.

#### **Henvisning:**

Hvis du aktiverer PBC under avspilling kan det skje at avspillingen avbrytes og vender tilbake til begynnelsen eller hovedmenyen.

## Blende inn og ut undertittel (kun DVD/VCD/SVCD)

#### **Henvisning:**

Denne funksjonen er muligens ikke tilgjengelig for alle DVD/VCD/S-VCD-er!  
Dersom du forsøker å utføre utilgjengelige funksjoner, vises meldingen "INVALID KEY" på displayet.

Dersom filmen på den innlagte DVD/VCD/S-VCD-en har undertittel, kan du blende den inn på displayet under avspillingen ved å trykke på tasten **SUBTITLE**.

- Ved første trykk på tasten **SUBTITLE** blendes undertittelen inn i det første tilgjengelige språket på displayet.
- Med hvert videre trykk på tasten **SUBTITLE** blendes undertittlene i andre tilgjengelige språk inn etter hverandre på displayet.

På displayet blendes nummeret på det aktuelle innblendede undertittelspråket inn (f.eks. "6" for det tilgjengelige undertittelspråket).

- Når det siste tilgjengelige undertittelspråket er blendet inn, kan du slå av undertittelfunksjonen ved å trykke på tasten **SUBTITLE** igjen. På displayet står det **OFF**.

## Endre avspillingspråk (kun DVD/VCD/SVCD)

### **i** Henvisning:

Denne funksjonen er muligens ikke tilgjengelig for alle DVD/VCD/S-VCD-er! Dersom du forsøker å utføre utilgjengelige funksjoner, vises meldingen "INVALID KEY" på displayet.

- På mange filmer på DVD/VCD/S-VCD kan du velge et annet avspillingspråk under avspillingen ved å trykke på tasten **AUDIO**.
- Ved første trykk på tasten **AUDIO** slås det første tilgjengelige avspillingspråket seg på. Med hvert nye trykk på tasten **AUDIO** slås de andre tilgjengelige avspillingspråkene på etter hverandre.

På displayet blendes det innkoblede avspillingspråket og lydformatet (z. B. 5.1CH).

## Programmeringsfunksjon

Du kan programmere en spillerekkefølge for titlene som er tilgjengelige på DVD, VCD, S-VCD-platen.

Trykk under avspillingen på tasten **ANGLE/PROGRAM** for å blende inn følgende vindu:

### Programmeringsvindu

Prog	TC	TC	TC	TC
1	--:--	5 --:--	9 --:--	13 --:--
2	--:--	6 --:--	10 --:--	14 --:--
3	--:--	7 --:--	11 --:--	15 --:--
4	--:--	8 --:--	12 --:--	16 --:--
	Play		Clear	

Programplassene 1-16 er listet opp. Hver programplass inneholder inntastingsfelt for en tittel (T) og et kapittel (C).

- Bruk piltastene **◀ ▶ ▲ ▼** for å velge inntastingsfeltet T for tittelen.
- Bruk talltastene for å taste inn nummeret på tittelen som skal spilles av først.
- Bruk piltastene **◀ ▶ ▲ ▼** for å velge inntastingsfeltet C for kapittelet.
- Bruk talltastene for å taste inn nummeret på kapittelet som skal spilles av først.
- Bruk piltastene **◀ ▶ ▲ ▼** for å velge andre programplasser og tast inn tittel- og kapittelnummer for programplassen.
  - For å slette programlisten velger du **Clear** og trykker på tasten **OK**.
  - For å avbryte programmeringsfunksjonen trykker du på tasten **ANGLE/PROGRAM**.
- Start avspillingen av programplassene ved å velge **Play** og trykke på tasten **OK**.

Under programmert avspilling står det **PROGRAM PLAY** på displayet.


Programlisten slettes når du trykker på tasten **STOP** drücken.

## 15. Vise MP3-/WMA-/JPEG-/AVI-/MPEG-/ og DivX-filer


- Legg lagringsmediet som MP3-, WMA-, JPEG-, AVI-, MPEG- eller DivX-filene er på inn i plateskuffen.

Innholdet av dette mediet vises i displayet:


### Visning av MP3-filer

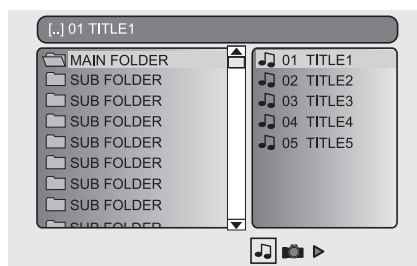

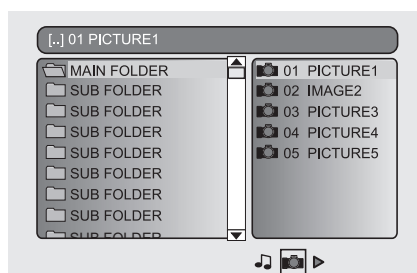

### Visning av JPEG-filer

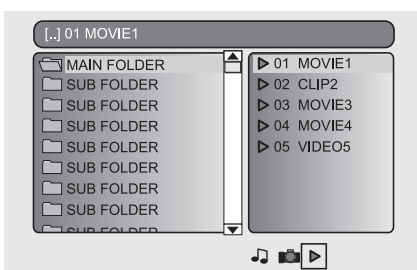

### Visning av AVI-, MPEG- og DivX-filer



- Til venstre er mappene listet opp (mappevindu) og til høyre filene (filvindu). Mapper symboliseres ved symbolet .
- Nede til høyre vises formatene som er tilgjengelige på minnemediet (MP3, JPEG eller MPEG/AVI/DivX).
- Bruk piltastene **▲ ▼** for å velge en mappe og trykk på tasten **PLAY/PAUSE**. Innholdet i mappen vises i filvinduet.
- For å gå til et høyere mappenivå, velger du symbolet  med inntastingen „..“ og trykker på tasten **PLAY/PAUSE**.
- Bruk tasten **▶** for å bytte til det høyre området, bruk piltastene **▲ ▼** for å velge en fil og trykk på tasten **PLAY/PAUSE**. Musikkfilen/videofilen spilles av, eller JPEG-bildet vises.

## Avspilling av MP3-/ WMA-/MPEG- og DivX-plater

- Velg en fil ved hjelp av piltastene ◀ ▶ ▲ ▼ . Ved å trykke på tasten **PLAY/PAUSE** bekrefter du valget. Avspillingen starter med en gang.
- Ved avspilling av musikk- eller videofiler kan de etterfølgende funksjonene brukes:

### Play/Pause

Se „14 Spille av DVD-er, VCD-er eller SVCD-er“

### Stop

Se „14 Spille av DVD-er, VCD-er eller SVCD-er“

### Skip

Se „14 Spille av DVD-er, VCD-er eller SVCD-er“

### Search

Se „14 Spille av DVD-er, VCD-er eller SVCD-er“

### Slow (kun ved MPEG- og DivX-filer)

Se „14 Spille av DVD-er, VCD-er eller SVCD-er“

### Zoom (kun for JPEG-, MPEG- og DivX-filer)

Se „14 Spille av DVD-er, VCD-er eller SVCD-er“

### AB Repeat

Se „14 Spille av DVD-er, VCD-er eller SVCD-er“

## Repetisjonsfunksjon for MP3-/WMA-/MPEG-/JPEG/DivX-plater

Trykk flere ganger på tasten **REPEAT** under avspillingen for å bruke følgende repetisjonsfunksjon (den innstilte funksjonen vises på displayet):

#### REPETERE 1

Uendelig repetisjon av den aktuelle tittelen/bildet.

#### REPETERE

#### MAPPE

Repeter den aktuelle mappen.

#### REPETERE

#### ALLE

Repeterer alle titlene på platen eller filholderen.

## Avspilling av JPEG-plater

- Bruk piltastene ▲ ▼ for å markere et bilde og trykk på tasten **PLAY/PAUSE** for å åpne bildet.

Bildet vises på displayet.

Etterpå skifter visningen til det neste tilgjengelige bildet på platen/i mappen.

- For å vise det aktuelle bildet lenger, trykker du på tasten **PLAY/PAUSE**.
- For å fortsette avspillingen trykker du på tasten **PLAY/PAUSE**.
- Du kan starte et bilde direkte ved å taste inn filnummeret til bildet med talltastene og deretter bekrefte med tasten **PLAY/PAUSE** .
- Bruk piltastene ◀ ▶ for å rotere bildet under avspilling i 90° trinn.
- Bruk piltastene ▲ ▼ for å speile bildet horisontalt eller vertikalt under avspilling.

### Velge lysbildeframvisningsoverganger :

Du kan velge ulike overganger for bytte fra et bilde til det neste.

- Trykk under lysbildeframvisningen på tasten **ANGLE/PROGRAM** helt til navnet på overgangen vises øverst i venstre hjørne.

### Forstørre og forminske bildeanvisningen

- Med tasten **ZOOM** kan du forstørre eller forminske bildet.

## 16. Rengjøring av DVD-spilleren

Rengjør huset på DVD-spilleren utelukkende med en lett fuktet klut og mildt såpevann. Pass på at ingen fuktighet kommer inn i DVD-spilleren under rengjøringen!

Rengjør innsiden av plateskuffen - dersom det er nødvendig - utelukkende med en ren, tørr kost (f.eks. objektivkost, fås kjøpt i fotoforretninger). Aldri rengjør innsiden av plateskuffen med væske!

### ⚠ Advarsel!

*Dersom det trenger fuktighet inn i DVD-spilleren, er det fare for elektrisk støt! Utenom det kan DVD-spilleren få uopprettelige skader!*

## 17. Deponering

### Kaste apparatet



Kast aldri apparatet i den alminnelige husholdningsøppelen.

Dette produktet ligger under de europeiske retningslinjene i EF-direktiv 2002/96/EC om kasserte elektriske og elektroniske produkter (EE-avfall).

Kast apparatet via et godkjent avfallsmottak eller via kommunalt mottak for spesialavfall.

Ta hensyn til de gjeldende forskriftene. I tvilstilfeller, kontakt det lokale renholdsverket.

### Kaste batteriene!

Batterier skal ikke kastes i husholdningsavfallet. Hver forbruker har plikt til å levere batterier/akkumulatorer som spesialavfall (returpunkt), eller til en elektrobutikk.

Denne forpliktelsen gjelder for å sørge for at batterier kastes på en miljøvennlig måte.

Batterier/akkumulatorer må bare returneres i helt utladet tilstand.

### Fjerne emballasjen



Kildesorter all emballasje før du kaster den.



## 18. Reparering av feil og forstyrrelser

**Displayet viser ingenting/DVD-spilleren viser ingen funksjon, selv om den er slått på.**

- A** Kontroller om strømledningen er koblet ordentlig til stikkontakten.
- B** Kontroller at stikkontakten der strømledningen til DVD-spilleren er satt inn har strøm ved å koble til et annet apparat. Stikk strømledningen til DVD-spilleren inn i en annen stikkontakt.
- C** Kontroller at displayet er slått av. Trykk på tasten **SCREEN ON/OFF** på fjernkontrollen.
- D** Slå av DVD-spilleren med bryteren **FUNCTION** og vent i ti sekunder. Slå DVD-spilleren bare på igjen med bryteren **FUNCTION**.

**Displayet viser „No Disc“ selv om det er plate i skuffen**

- A** Platen er skitten, skrapet eller skadet. Rengjør platen eller legg inn en annen plate.
- B** Land-/regionalkoden på den innlagte DVD/VCD/S-VCD-en stemmer ikke overens med regional-/landkoden til DVD-spilleren. DVD/VCD/S-VCD-en kan da ikke spilles av med DVD-spilleren.

**Innlagt plate blir ikke avspilt**

Eventuelt har en kondensvannfilm dannet seg på laseravtastningslinsen til DVD-spilleren. Dette kan spesielt være tilfellet når DVD-spilleren har vært utsatt for sterke temperaturforskjeller.

I dette tilfellet må DVD-spilleren stilles opp i tørre omgivelser med vanlig romtemperatur. Ta først ut en plate som eventuelt er lagt inn i skuffen. La DVD-spilleren deretter stå innkoblet i minst en time uten at den brukes for å fjerne kondenseringen som har dannet seg i apparatet.

**Intet bilde eller kun svart/hvitt-bilde**

- A** Kontroller om alle forbindelseskablene mellom DVD-spilleren og TV-apparatet (eller videoprojektoren) er plugget inn i de tilsvarende kontaktene.
- B** Kontroller om innstillingene i OSD-menyen passer til tilkoblingsvarianten du har brukt for å tilkoble DVD-spilleren til TV-apparatet (eller videoprojektoren).
  - i** I denne sammenheng henvises det til kapittel 8: „Tilkobling av DVD-spilleren til et TV-apparat“.
- C** Se etter i bruksanvisningen for TV-apparatet (eller videoprojektoren) om det eventuelt er nødvendig med innstillinger på TV-apparatet (eller videoprojektoren) for å bruke DVD-spilleren sammen med TV-apparatet.

**Ingen lyd**

- A** Kontroller om DVD-spilleren er stilt på lydløs.
- B** Kontroller om alle koblingsledningene mellom DVD-spilleren og eventuelt tilkoblede audiokomponenter er plugget godt inn i de tilsvarende terminalene.
- C** Kontroller om innstillingene i OSD-menyen passer til tilkoblingsvarianten du har brukt for å tilkoble audiokomponentene til DVD-spilleren..
  - i** Se i kapittel 9: „Tilkobling av audiokomponenter til DVD-spilleren“.

- D** Se etter i bruksanvisningen for TV-apparatet om det eventuelt er nødvendig med innstillinger på TV-apparatet for å bruke DVD-spilleren sammen med TV-apparatet.
- E** Se etter i bruksanvisningen for en eventuelt tilkoblet audiokomponent om det er nødvendig å foreta innstillinger på audiokomponenten for å bruke den sammen med en DVD-spiller.

**Intet 4:3 eller 16:9-bilde**

- A** Les bruksanvisningen til TV-apparatet for å finne ut hvilket bildeformat TV-skjermen har.
- B** Kontroller om innstillingene i OSD-menyen passer til det tilgjengelige bildeformatet på TV-apparatet.

**Fjernkontrollen virker ikke**

- A** Kontroller om batteriene i fjernkontrollen er satt inn i batterihuset med riktig polaritet.
- B** Kontroller om batteriene i fjernkontrollen er utbrukt, og skift ut begge batterier hvis det er nødvendig.
- C** Vær sikker på at det ikke er noen hindringer mellom fjernkontrollen og DVD-spilleren som kan forstyrre mottakingen.
- D** Ikke gå lenger bort enn fem meter fra DVD-spilleren med fjernkontrollen.

**Avspillingspråket eller undertittelspråket tilsvarer ikke innstillingene i OSD-menyen**

Avspillingspråket/undertittelspråket som er innstilt i OSD-menyen er ikke tilgjengelig på platen som er lagt inn i apparatet.

**En eller flere funksjoner kan ikke aktiveres.**

Den valgte funksjonen er eventuelt ikke tilgjengelig på alle DVD/VCD/S-VCD-er! Når du prøver å utføre en utilgjengelig funksjon, vises anvisningen **INVALID KEY** på displayet.

**Ingen taster på apparatet eller fjernkontrollen fungerer/andre feil-funksjoner**

- A** Slå DVD-spilleren av med bryteren **FUNCTION**. Vent i ti sekunder og slå DVD-spilleren på igjen med bryteren **FUNCTION**.
- B** Dersom forstyrrelsen fremdeles er der etterpå: Sett DVD-spilleren tilbake til fabrikkinnstillinger.

Ta kontakt med en av våre servicepartnere i nærheten av der du bor dersom...

- de nevnte funksjonsfeilene ikke lar seg reparere som beskrevet, eller
- andre enn de nevnte funksjonsfeilene opptrer

**i** Se kapittel 20 "Garanti & service".

## 19. Ordliste/stikkordfortegnelse

### Hva er DVD-er, VCD-er og S-VCD-er?

#### DVD-er

DVD er den engelske forkortelsen for „Digital Versatile Disc“. DVD-er brukes for lagring av audio- og videodata; de kommer i formatene 8 cm og 12 cm (diameter). DVD-er har en spilletid på opptil åtte timer for audio- og videodata på grunn av deres økte lagringskapasitet sammenlignet med CD-R/CD-RW.

#### VCD/S-VCD

Med „Video-CD“ (VCD) og „Super Video-CD“ (S-VCD) betegnes to metoder for komprimering, dvs. plasssparende lagring av filmer på CD. VCD og S-VCD finnes i formatene 8 cm og 12 cm (diameter). Deres minnekapasitet er mye mindre en kapasiteten på en DVD. Derfor har de bare en avspillingstid for audio- og videodata som er lagret på dem på 20 minutter (8 cm-format) eller 74 minutter (12 cm-format).

VCD-er finnes i to versjoner:

- På VCD-er/S-VCD-er versjon 1.1 kan bare audio- og videodata spilles av.
- På VCD-er/S-VCD-er versjon 2.0 kan PBC (Playback Control)-funksjoner brukes. I tillegg kan stasjonære bilder spilles av i høy oppløsning.

#### Playback Control (PBC)

VCD/S-VCD-er versjon 2.0 disponerer en funksjon som heter Playback Control („PBC“). Da er en hovedmeny tilgjengelig på VCD/S-VCD-en som kan brukes for å betjene forskjellige funksjoner på VCD/S-VCD-en.

### Hva er titler og kapitler?

Titler er navnet på de største enhetene av bildenheter og lydenheter på DVD-er; på mange DVD-er har hovedfilmen tittelnummer 01. For bonusmateriale (f.eks. filmtrailer, bakgrunninformasjoner osv.) som er tilgjengelig på mange DVD-er kan eventuelt andre tittelnumre brukes.

Kapittel kaller man de mindre bilde- og lydenheter under titler. Hvis den ene eller den andre tittelen på en DVD/VCD/S-VCD er delt i kapitler, så vil disse kapitlene ha numre som man kan bruke for å velge kapitlene direkte.

Observer at ikke hver DVD...

- har titler som er oppdelt i (nummererte) kapitler
- kapitler også kalles "scener" (f.eks. i hovedmenyen på DVD-er)

### Hva er Composite-Video?

#### Composite-video

Videosignal eller FBAS-signal; dette er et bildesignal som inneholder farge- og lysstyrkesignaler samtidig.

### Hva er PAL, NTSC og SECAM?

#### PAL

PAL er forkortelsen for det engelske uttrykket „Phase Alternation Line“. PAL er fargestandarden som anvendes i Midt- og Vest-Europa (unntak: Frankrike, se stikkordet „SECAM“).

#### NTSC

NTSC er forkortelsen for det engelske uttrykket „National Television System Committee“. NTSC er en TV-fargestandard som brukes i USA og i Japan.

#### SECAM

SECAM er forkortelsen for det franske uttrykket „système en couleur avec mémoire“. SECAM er TV-fargestandarden som anvendes i Frankrike og i mange østeuropeiske land.

### Audio-CD

Audio-CD-er inneholder utelukkende audiodata; disse kommer også i formatene 8 cm og 12 cm (diameter). Avspillingstiden for audiodata som er lagret på dem er 20 minutter (8 cm-format) eller 74 minutter (12 cm-format). På audio-CD-er lagres audiodata i CDA-formatet.

### MP3

MP3 henviser til en metode for komprimering av audiodata som ble utviklet av Fraunhofer-instituttet. Musikkstykker som er komprimert i MP3-format har kun en brøkdel av deres opprinnelige størrelse, og dermed kan mye mer musikk lagres på CD-R/CD-RW enn på audio-CD-er fra handelen, der audiodata er lagret i CDA-format.

### WMA

WMA (engelsk for „Windows® Media Audio“) er et filformat for audiodata utviklet av Microsoft®.

### JPEG

JPEG (engelsk, „Joint Photographics Expert Group“) betegner et grafikkformat som er utviklet av organisasjonen med det samme navnet og som er ganske vanlig. I dette formatet vil fargeskalaer eller monokromskalaer komprimeres.

### DivX

DivX er et kodingsformat for video og multimediale data, utviklet av firmaet DivX Networks, Inc.

### MPEG

MPEG („Moving Picture Experts Group“) betegner et videokomprimeringsformat.


### USB-minnepinne

En USB-minnepinne er et USB-apparat med en pinne som er omtrent så stor som en lighter. Uttrykket er et rent hverdagsbegrep og ingen offisiell betegnelse for en produktklasse. For det meste mener man et USB-apparat som brukes som et utskiftbart lagringsmedium.

### Hva er mapper?

I motsetning til audio-CD-er kan titlene på en CD-R/CD-RW med MP3-, WMA- eller JPEG-filer lagres i mapper, f.eks. for å ordne titler med forskjellige musikkstiler.

Strukturen av en MP3-CD kan f.eks. se ut som dette, hvis MP3-filene er lagret i mapper:

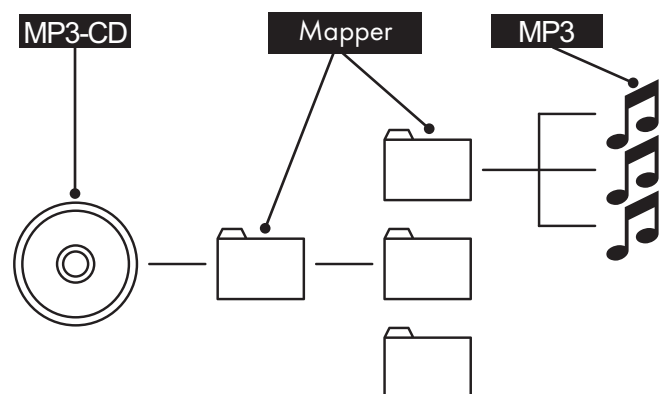

## 20. Garanti & service

---

Du får garanti på dette apparatet som gjelder i 3 år etter kjøpsdato. Dersom du, på tross av vår høye kvalitetsstandard, kontakt oss via vår service-hotline. Dersom problemet ikke kan løses over telefonen, vil du få

- et behandlingsnummer (RMA-nummer) og
- en adresse som du kan sende produktet til for å få garantibehandling.

Hvis det blir nødvendig å sende inn apparatet må du vedlegge en kopi av kvitteringen. Apparatet må pakkes godt for transporten, og RMA-nummeret må være lett å se. Innsendinger uten RMA-nummer kan ikke bearbeides.

### **Henvisning:**

*Garanti gis kun for material- eller fabrikkasjonsfeil.*

*Garantien gjelder ikke*

- for slipedeler
- for skader på knuselige deler som brytere eller batterier.

Dette produktet er ment kun for privat og ikke for yrkesmessig bruk. Ved uriktig og ufagmessig behandling, bruk av vold og ved inngrep som ikke har blitt utført av vår autoriserte servicefilial forfaller garantien.

Dine lovfestede garantikrav innskrenkes ikke av denne garantien.

## 21. Importør

---

KOMPERNASS GMBH  
BURGSTRASSE 21  
D-44867 BOCHUM

[www.Kompernass.com](http://www.Kompernass.com)



Fyll ut dette avsnittet nøyaktig og legg det ved apparatet!



# Garanti

## DVD-spiller/radio KH6502

For å sikre gratis reparasjon må du først kontakte vår service-hotline. Hold kassakvitteringen klar.

NO Kompernaß Service Norway

Tel.: 0047 35 58 35 50

[www.mysilvercrest.de](http://www.mysilvercrest.de)

Skriv avsenderen tydelig:

Etternavn \_\_\_\_\_

Fornavn \_\_\_\_\_

Gate \_\_\_\_\_

Postnummer/-sted \_\_\_\_\_

Land \_\_\_\_\_

Telefon \_\_\_\_\_

Dato/underskrift \_\_\_\_\_

### Beskrivelse av feilen:

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>