


## SUPPLIED ACCESSORIES

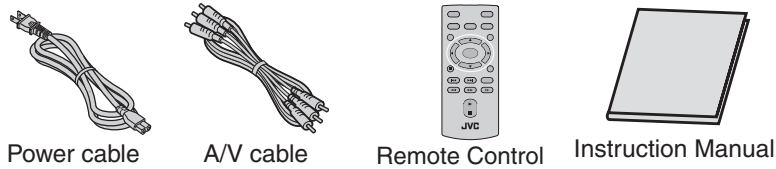

"To order additional accessories please visit [www.JVC.com](http://www.JVC.com) or call 1-800-858-6442"

## RECOMMENDED SD CARDS

Memory Cards	Capacity	Class	Manufacturers
<b>SDHC</b> <SD High-Capacity>	supports 4 to 32 GB	4 or 6	•Panasonic •Sandisk
<b>SD</b>	supports 256MB to 32 GB	4 or 6	•Toshiba •ATP

NOTE: Use of this player may not be possible or optimal performance may not be achieved if the recommended SD cards are not used.


## PLAYABLE FILE TYPES

The file types below have compatibility with this unit.


	FORMAT	FILE EXTENSION	FORMAT RESTRICTIONS
MOVIES	AVCHD	.m2ts or .mts	(V)MPEG-4 AVC/H.264 (A)Dolby Digital
	H.264	.tod	(V)MPEG-2 TS (A) MPEG-1 Audio Layer2 2 ch
	SD-VIDEO	.mod, .mpg or .mpeg	(V)MPEG-2 PS (A) Dolby Digital
MUSIC	WAV	.wav	Sampling: 44.1 kHz
	MP3	.mp3	Sampling: 32, 44.1 or 48 kHz
PHOTOS	JPEG	.jpg or jpeg	Maximum resolution: See Instructions.(p.18)

NOTE: Progressive JPEG files cannot be played back.

## 1.Pull out the insulating sheet the first time you use the remote control.

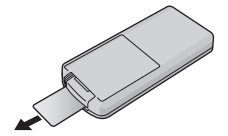

## 2.Connect the Unit to a TV using an A/V or HDMI cable.

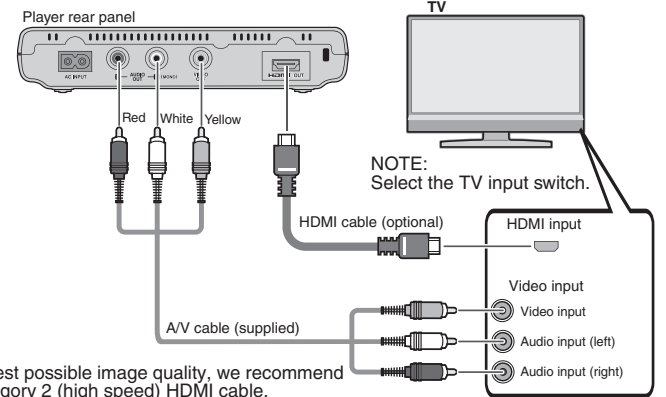


NOTE: To get the best possible image quality, we recommend using a Category 2 (high speed) HDMI cable.

## BASIC OPERATION



### 1. Turn the player on by pressing power (ON/OFF).

### 2. Insert an SD card into the SD card slot.

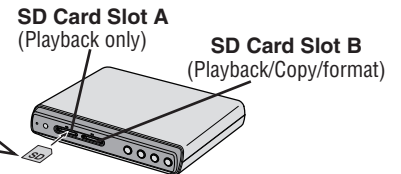

Push the card in until you hear a click

### 3.The content menu appears 4.Use to select a file and press ENTER to start playback.

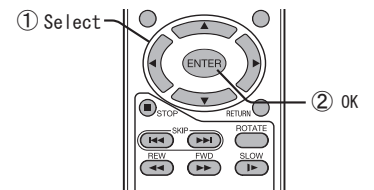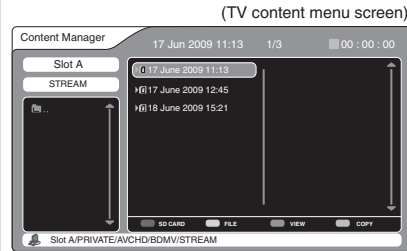


NOTE: Only the files compatible with this unit will be shown.

Press STOP to end playback

## SWITCH SD CARDS

- 1 Press the SD CARD button on the remote.
- 2 Use ▲ / ▼ to select the slot.
- 3 Press (ENTER).



NOTE: This is only available when SD cards are inserted into both slots of the player.

## COPYING SD CARDS

### To Copy All Files

- 1.Insert the SD card containing files to copy into slot A(copy source) , and the destination SD card into slot B.
- 2.Press the SD CARD button and select "Slot A".Then press ENTER.
- 3 Press COPY and select "All".



### To Select Files For Copying

- 1.Insert the SD card containing files to copy into slot A(copy source) , and the destination SD card into slot B.
- 2.Press the SD CARD button and select "Slot A".
- 3 Press COPY and select "Select".




- 4.Press (ENTER).
- 5.Press ENTER and select "Yes".
- 6.Press ENTER again to start copying.


- Only the files compatible with this unit can be copied.
- To cancel copying Press RETURN, then press ◀/▶ to select "Yes" and press ENTER.

## SIMULTANEOUS PLAYBACK OF MUSIC AND PHOTO FILES

- 1.Select a music file and press (ENTER).
- 2.Select a photo file and press (ENTER).
- 3.Press (ENTER) to stop playback.

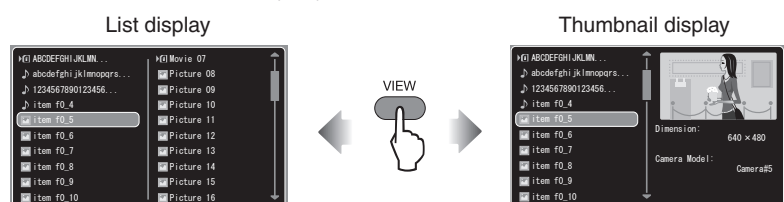


NOTES•The unit should be set to "list display" to allow simultaneous playback.  
•If the unit is set to "thumbnail display" the music will be stopped.

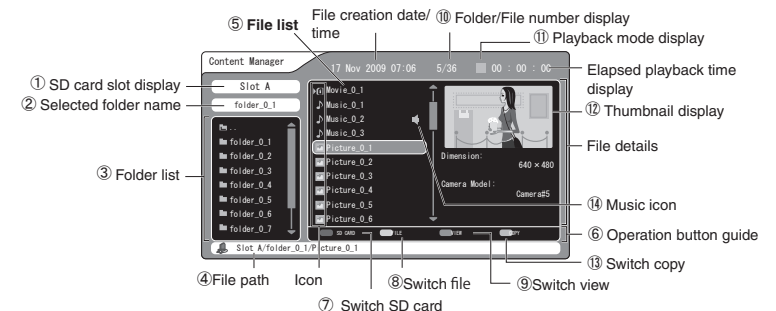


- 1.SD card slot display**  
The slot currently displayed in the content menu.
- 2.Selected folder name**  
The name of the folder that is currently selected.
- 3.Folder list**  
Shows the folders contained in the folder displayed in the selected folder name field listed in the order that they are recorded on the SD card. (Can display up to 100 folders)  
If there are too many folders to fit in the displayed list, a scroll bar appears that allows you to view the folders not shown. The folder shown at the top of the list is the UP folder icon. Select this icon and press ENTER to view the next level up.
- 4.File path**  
Shows the location of the currently selected file.
- 5.File list**  
Shows the files contained in the currently selected folder listed in the order that they are recorded on the SD card.
- 6.Operation button guide**  
Indicates whether, depending on the condition of the player, the SD CARD, FILE, VIEW and COPY buttons of the remote control can be utilized or not.  
• Grayed out buttons cannot be used.  
• When the guide is the same color as the button, that button can be used.
- 7.Switch SD CARD**  
This is only available when SD cards are inserted in the player.
- 8.Switch files**  
Use this to select the type of file displayed in the file list.  
Press FILE, use ▲ / ▼ to select the file type and then press ENTER to switch the display mode.  
If there are no files of the specified type in the selected folder, "No content..." is displayed.  
Video: Displays movie fi les.  
Music: Displays music fi les.  
Picture: Displays photo fi les.  
All: Displays all the fi les. (Factory preset)  
• Switching files is not possible when displaying AVCHD format or SD-VIDEO format video fi les.
- 9.Switch View**  
This allows you to choose whether thumbnails are displayed in the file list.
- 10.Folder/File count display**  
Displays the total number of items in the folder or file list along with the number of the currently selected folder or file. Currently selected folder or file number/ Total number of items displayed in the folder or file list.
- 11. Playback mode display**  
Displays the current playback mode.
- 12.Thumbnail display**
- 13.Switch copy**  
Switches between All copy and Select copy.
- 14.Music icon**  
Appears during the time the music file is being played back. The file list can be moved while the music file is being played.

### 1. La primera vez que utilice el control remoto. Extraiga la película aislante.

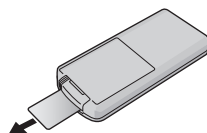

### 2. Conexión del reproductor a un TV con entrada HDMI/AV.

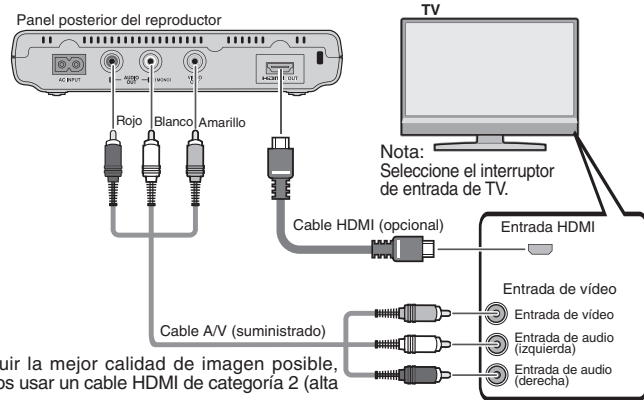

Nota: Para conseguir la mejor calidad de imagen posible, recomendamos usar un cable HDMI de categoría 2 (alta velocidad).


## Funcionamiento básico

### 1. Encienda el reproductor pulsando el botón power (ON/OFF).

### 2. Inserte una tarjeta SD en la ranura para tarjetas SD.


Ranura A para tarjetas SD (Sólo reproducción)  
Ranura B para tarjetas SD (Reproducción / Copiar / formato)

Presione sobre la tarjeta hasta que oiga un clic.

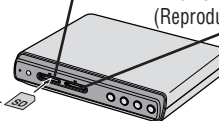


### 3. Aparecerá el menú de contenido en la pantalla de TV. 4. Utilice para seleccionar un archivo y luego pulse ENTER.

(Pantalla del menú de contenido en el TV)

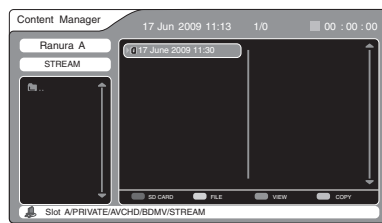


Nota: Sólo los archivos compatibles con esta unidad se mostrará

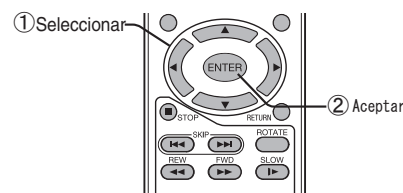

Pulse STOP para finalizar la reproducción

## Cambiar de TARJETA SD

- 1 Pulse SD CARD.
- 2 Utilice ▲ / ▼ para seleccionar ranura.
- 3 Pulse (ENTER).



Nota: Sólo está disponible cuando las tarjetas SD se inserta en las dos ranuras del jugador.

## Copiar tarjetas SD

### Para copiar los archivos

1. Inserte la tarjeta SD que contenga los archivos que desea copiar (origen de copia) en la ranura A y la tarjeta SD de destino en la ranura B.
2. Pulse SD CARD, seleccione la Ranura A con ▲/▼ y pulse ENTER.
3. Pulse COPY y seleccione "Todo".



4. Pulse (ENTER).
5. Pulse ENTER y seleccione "Si".
6. A pulsar ENTER para iniciar la copia.

- Sólo los archivos compatibles con esta unidad pueden ser copiados.
- Para cancelar la copia Pulse RETURN, luego pulse ▲/▼ para seleccionar "Si" y pulse ENTER.

### Copiar los archivos seleccionados

1. Inserte la tarjeta SD que contenga los archivos que desea copiar (origen de copia) en la ranura A y la tarjeta SD de destino en la ranura B.
2. Pulse SD CARD, seleccione la Ranura A con ▲/▼ y pulse ENTER.
3. Pulse COPY y seleccione "Selec".





4. Pulse (ENTER).
5. Utilice ▲/▼/◀/▶ para seleccionar el archivo que desea copiar.
6. Pulse (ENTER).
7. Pulse COPY y seleccione "Si".
8. A pulsar ENTER para iniciar la copia.

## Reproducir simultáneamente fotos y archivos de música


1. Seleccione un archivo de música y pulse (ENTER).
2. Seleccione un archivo de foto y pulse (ENTER).
3. Pulse (ENTER) para detener la reproducción.

Visualización en lista

Visualización con imágenes en miniatura

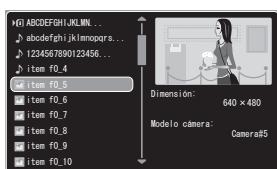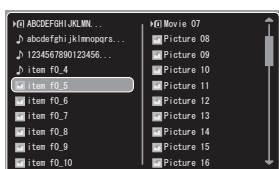

NOTES • La unidad debe ser ajustado a (visualización de la lista) para permitir la reproducción simultánea de. • Si la unidad se establece en (visualización en miniatura) la música se detendrá.

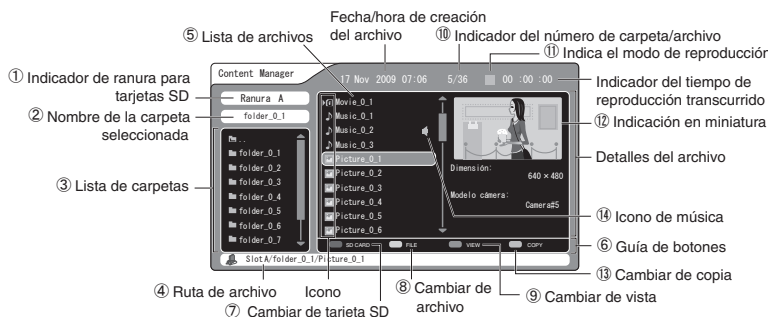

- 1. Indicador de ranura para tarjetas SD**  
La ranura mostrada actualmente en el menú de contenido.
- 2. Nombre de la carpeta seleccionada**  
Nombre de la carpeta seleccionada actualmente.
- 3. Lista de carpetas**  
Muestra las carpetas incluidas en la carpeta que aparece en el campo de nombre de carpeta seleccionada y aparecen en el orden en el que se grabaron en la tarjeta SD. (Puede mostrar hasta 100 carpetas) Si hay demasiadas carpetas en la lista mostrada, aparecerá una barra de desplazamiento que le permitirá ver las carpetas que no se muestran en pantalla. La carpeta que aparece en la parte superior de la lista es el icono de carpeta ARRIBA. Seleccione este icono y pulse ENTER para ver el nivel inmediatamente superior.
- 4. Ruta de archivo**  
Muestra la ubicación del archivo seleccionado actualmente.
- 5. Lista de archivos**  
Muestra los archivos incluidos en la carpeta seleccionada actualmente en el orden en el que se grabaron en la tarjeta SD.
- 6. Guía de botones**  
Indica si, dependiendo del estado del reproductor, se pueden utilizar o no los botones SD CARD, FILE, VIEW y COPY del mando a distancia.
  - Los botones desactivados no se pueden usar.
  - Cuando la guía tenga el mismo color que el botón, significa que ese botón se puede usar.
- 7. Cambiar de TARJETA SD**  
Esta función solo está disponible cuando haya varias tarjetas SD insertadas en el reproductor.
- 8. Cambiar de archivo**  
Utilice esta opción para seleccionar el tipo de archivo que aparece en la lista de archivos. Pulse FILE, utilice ▲/▼ para seleccionar el tipo de archivo y luego pulse ENTER para cambiar el modo de visualización. Si no hay archivos del tipo especificado en la carpeta seleccionada, se muestra "Sin contenido...".  
Video: Muestra archivos de vídeo.  
Música: Muestra archivos de música.  
Imagen: Muestra archivos de fotos.  
Todo: Muestra todos los archivos. (Opción predeterminada de fábrica)  
• No se puede cambiar de archivo cuando se visualizan archivos de vídeo de formato AVCHD o SD-VIDEO.
- 9. Cambiar de vista**  
Esta función le permite elegir si quiere que aparezcan imágenes en miniatura en la lista de archivos.
- 10. Indicador del total de carpetas/archivos**  
Muestra el número total de elementos en la lista de carpetas o archivos junto con el número de la carpeta o el archivo seleccionado actualmente. Número de la carpeta o archivo seleccionado actualmente/Número total de elementos mostrados en la lista de carpetas o archivos.
- 11. Indicador del modo de reproducción**  
Muestra el modo de reproducción actual.
- 12. Indicador en miniatura**
- 13. Cambiar de copia**  
Cambie entre Copia total y Copia selectiva.
- 14. Icono de música**  
Aparece mientras se reproduce el archivo de música. La lista de archivos no se puede mover mientras se reproduce el archivo de música.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>