

# DVD Player KiSS DP-508




## Congratulations on your new KiSS DP-508

The many different functions provided by your new DVD Player will be a source of pleasure to you for many years to come. Naturally, you can play and watch DVD films with superb audio and visual quality. You can watch films in many other formats than DVD, such as MPEG-4, XviD, DivX. The audio features also give you the option of playing music CDs, MP3 or Ogg Vorbis files. The DP-508 automatically recognises each format and can read CD-RW and DVD-RW alike. Your new DP-508 also supports Picture CDs (.jpg), which means that you can display your photos directly on the TV screen. This includes the pictures developed at the photo shop and any photos you have scanned and saved on a CD yourself.

Note: Do not use the DVD Player until you have studied the quick setup menu. To do so, the DVD Player must be connected to a TV set.

## accessories

Make sure the following accessories are included with your DVD Player.

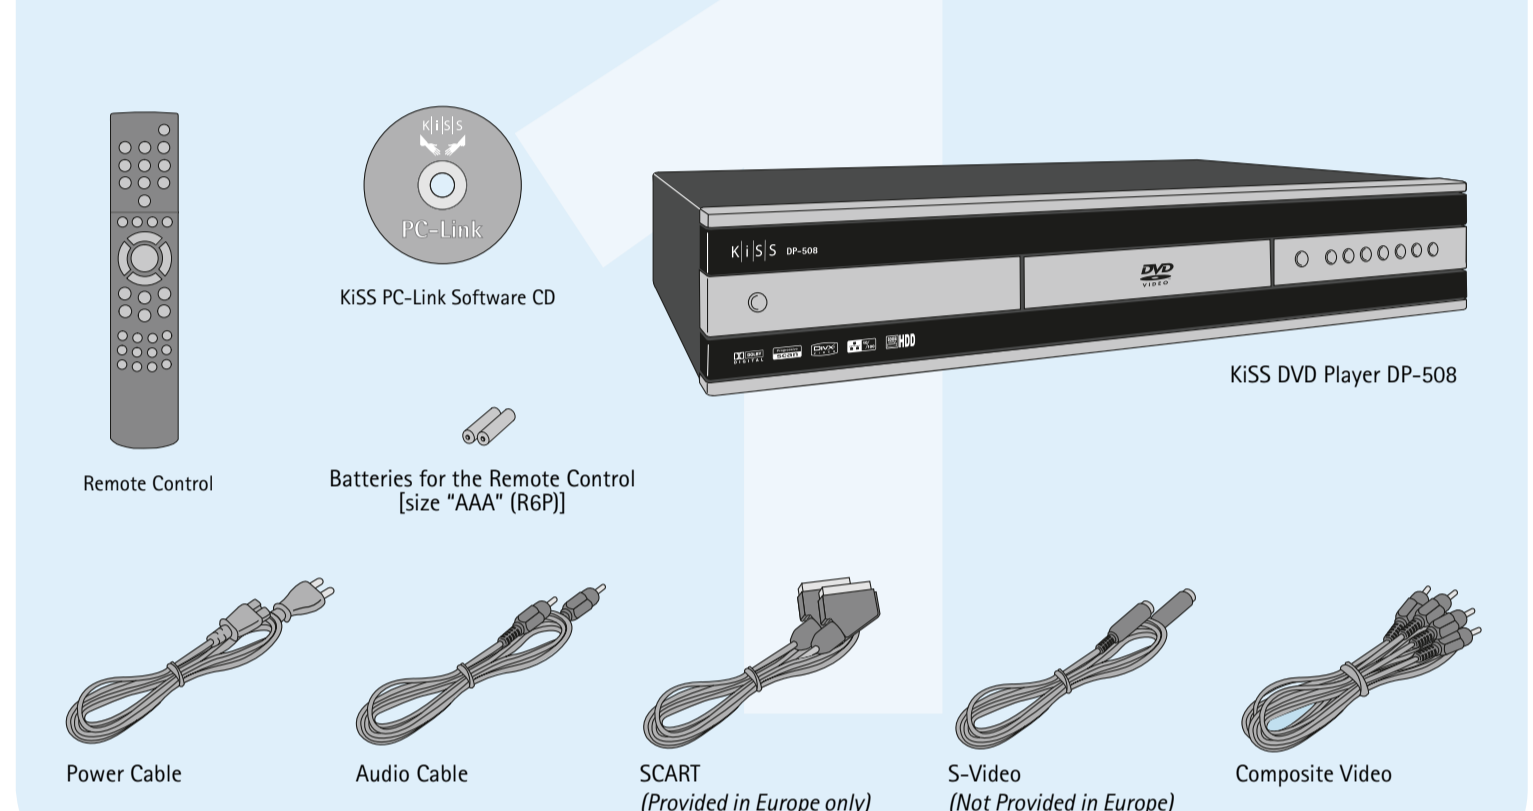

## playing medias

The DVD Player supports the following media: DVD Video, DivX, XviD, ISO MPEG-4, Audio CD, MP3, Ogg Vorbis and JPG.

**DVD Menu**  
If you have adjusted your DVD Player according to the instructions above, you can now insert a DVD into your DVD Player. A moment later, the DVD menu will appear. Use the arrow buttons to navigate in the menu and start the film.

*Note: As this menu is part of the DVD itself, it will vary from one DVD to another.*

**CD, MP3 and Ogg Vorbis**  
When you insert an audio CD or a disc with MP3 or Ogg Vorbis files, the player will automatically recognise the format and start playing it. You can use next/previous track or you can use the menu to navigate through the file structure, and select the song you want to hear by pressing enter.

**DivX, XviD and MPEG-4**  
The DP-508 recognises the format and automatically starts playing the CD when you insert it into the drive. Use the counter in the display to help to see where you are in the film. You have access to the usual playback options, such as stop, pause, go to next, time search, etc.

**Photo CD and Jpeg**  
The DP-508 can show photos on your TV. The photos must be stored in JPEG format on a Disc. The player will automatically recognise the files, and start showing them as a slide show. In the menu you can navigate to find a specific photo, and start the slide show from here by pressing enter.

## advanced functions

A number of advanced functions are located on the lower section of the remote control. These functions are described below. Some functions may not work with all media formats.

**STEP**  
This function is not used.

**AUDIO**  
Press the (AUDIO) button to change the sound format. The audio format options, such as two-channel stereo and six-channel surround, are determined by the film producer.

**ZOOM**  
When watching the film, you can zoom in on specific areas. You can zoom in either as the film is playing or after you have paused it. Activate the function by pressing the (ZOOM) button, and return to the normal picture by pressing the button again.

**TIP**  
Use the arrow buttons to move around the enlarged screen display.

**REPEAT**  
As the film is playing, press the (REPEAT) button and three options will appear on the screen: MODE: Shuffle (random chapter playing) or OFF (deactivated). Repeat: Lets you decide whether to repeat the section or the entire film.

**DELETE**  
Use this function to delete any files stored on the players' hard disk. To do so, just view the list of items already saved, and select the one to remove.

**SRCH**  
Use (SRCH) to find a specific spot on the disk. Time: Specify time, minutes and seconds. Title/Chapter: Find the title or the chapter.

**ANGLE**  
If the film supports more than one camera angle, you can switch from one angle to another by pressing the (ANGLE) button.

**SUBPIC**  
Use this button to change the film's subtitles. If you press the (SUBPIC) button, a message will appear in the top left corner of the screen indicating the number of available languages and the language that is currently active. If you press the (SUBPIC) button again, you go to the next language option. The number of languages is also determined by the film's producer.

**SETUP**  
If the DVD Player is in the process of showing a film or playing music, press the (SETUP) button to see the available options on the disk. For instance, if you are watching a DVD film, the left-hand side of the screen will show information about the film's length, the number of chapters, the language options and the number of subtitles.

If the DVD player is turned on, but not playing films or other media, pressing this button will take you to a menu, where you can configure your DVD player. Here you can select the default settings for language, sound, video, parental level, etc.

These buttons are used for increasing and decreasing the sound volume.

**MARK**  
This button is used to select files for copy or deletion.

## overview

Discover the player in all its angles

**Front panel**  
The front panel has the standard buttons listed below. When the disk tray is open, push the end of the tray to close it.

1. On/Off	9. Fast Forward	Option on the Setup Menu
2. CD Tray	10. Menu	11. Enter
3. Open/Close		12. Navigate Left
4. Play/Pause		13. Navigate Right
5. Stop		14. Navigate Up
6. Previous Chapter		15. Navigate Down
7. Next Chapter		16. Close
8. Rewind		

**Back panel**  
Detailed overview of the back panel

1. Ordinary Stereo Output	2. Composite Video Output for TV	3. S-Video Output for TV	4. Coaxial Output for Amplifier	5. Optical Output for Amplifier	6. SCART for TV	7. AC Input	8. Ethernet
---------------------------	----------------------------------	--------------------------	---------------------------------	---------------------------------	-----------------	-------------	-------------

**Display**  
The DVD Player is equipped with a VFD display which indicates the current ongoing activities.

1. Indicates the selection of the disk being played	2. Indicates the track, chapter or program being played	3. Indicates the status on the source or the media playing	4. Indicates the type of media being played
---	---	--	---

**Remote**  
The Player is delivered with a standard remote control. All the player's functions can be performed from it.

1. Standby	9. Right Arrow	17. Select lang/Audio	25. Delete
2. Open/Close	10. Down Arrow	18. Next Picture	26. Search
3. Title/Menu	11. Rewind	19. Select Subtitle	27. Volume +
4. Menu	12. Play/Pause	20. Select Angle	28. Volume -
5. Return	13. Fast Forward	21. Zoom	
6. Up Arrow	14. Previous Chapter	22. Repeat	
7. Left Arrow	15. Stop	23. Unused	
8. Enter	16. Next Chapter	24. Setup	

*Note: Certain functions will only work if supported by the media.*



## connecting

Refer to the illustration below to connect your Player to any video or audio system. The PC to DVD illustration will also show you how to adapt your player to your current network settings.

**Video Connection**  
Connecting your KiSS DP-508 DVD player to your TV can be done with any of the cables below. (Only one cable can be connected at a time)

**Audio Connection**  
Connecting your KiSS DP-508 DVD player to your amplifier can be done with any of the cables below. (Only one cable can be connected at a time)

**PC to DVD Connection**  
Below are four examples of connection for your DP-508 to a PC enabling use of all its features and programmes.

- Connection to Router with Built-in Switch**  
Connection with a Router Based Internet Connection (illustration: 1 and 2)  
**Needed Equipment**  
1. A router, with a built-in switch or a separate switch/hub.  
2. 2 or 3 straight Ethernet cables.  
3. A Windows PC with an Ethernet connection.  
4. The KiSS PC-link program.
- Connection to Router and Switch**  
**Step by Step Guide**  
1. Connect both the PC and the player to the router or switch/hub with straight cables.  
2. Connect the router to the switch/hub via the uplink connection.  
3. Install the PC-link program on the PC.  
4. Check which IP address is given to the PC in the PC-link program under info.  
5. Insert this IP in the DP-508 and try to connect to the PC-link program.
- Connection to Switch**  
(The DHCP Server needs to be installed on the PC)  
**Now the DP-508 should be connected**  
**Possible errors.**  
• Cable problem, check that there is light in all the parts in the switch/hub.  
• There is installed a firewall on the PC, that blocks the ports that the PC-link program uses (port 8000 must be open)  
• The player and the PC are not on the same subnet (problem with playing video)  
• Your PC has been assigned a new IP address from the DHCP server, which differs from the one entered in the player. (Solution use a static IP on the PC)
- Straight Connection with Cross-Over Cable**  
(The DHCP Server needs to be installed on the PC)  
**Possible errors.**  
• Cable problem, check that there is light in all the parts in the switch/hub.  
• There is installed a firewall on the PC, that blocks the ports that the PC-link program uses (port 8000 must be open)

## webradio

**Webradio** enables you to listen to a great number of radio stations via the internet. Remember that all the functions discussed below are only available if your player is properly connected (see connecting section).

**Accessing Webradio**  
Webradio, comes as a user friendly way of listening to internet radio on your DP-508 DVD Player. Just select the Webradio function on the player's main screen.

**Listening Webradio**  
The Webradio interface is relatively simple to use. It enables you to browse and select any internet radio station available. The browsing is done by genre (Pop/Rock, Classical, Jazz...) or by country. Once selected, just press "enter".

**Favorites**  
The radio stations can also be saved in the "favorites" menu, enabling you to reach them quickly.

**Help and Info**  
More info, news about updates and full help will be available from: webradio2.kiss-technology.com

## hard disk functions

**KiSS DP-508** holds an 80GB Hard Disk enabling you to store Audio/Video/Picture content on it. Only computer generated files can be stored on the Hard Disk. DVDs, Audio CDs, SVCDs (all type of SVCDs), VCDs can not be copied.

**Access the Hard Disk**  
The DP-508 is equipped with a built-in 80GB Hard Disk. To access it, select the Hard Disk icon on the main screen. You can now make your selection between playing video, listening to audio, view pictures or view hard Disk's info.

**Copying files on the Hard Disk**  
There are two ways of copying files on the DP-508's Hard Disk.  
1. From a CD. Insert a CD in the Player's drive. The DP-508 will automatically recognise the format and start to play the disc's content. Press the "Menu" button on the remote to access the list of files stored on the CD, select the file(s) to copy using the "Mark" button, and press the "Enter" button on the remote. This will instantly copy the file from the CD to the Hard Disk. If the CD contains MP3 files, there is no need to press the "Menu" button on the remote, as the list of files will appear automatically.  
2. From PC-Link Software. Once PC-Link is correctly running (see the connection and PC-Link sections for details). Press the "Menu" button on the remote, choose KiSS PC-Link from the left list of icons. Make your selection between audio/video/picture files, and choose the file to be copied using the "Mark" button. Once selected, hit the "Enter" button from the remote. The file is being copied from the PC to the Player over the network. In these two cases, both files or folders can be copied.

**Deleting files on the Hard Disk**  
To delete files on the hard Disk, press "Menu" on the remote to access the hard Disk functions. Choose within Audio/Video/Picture the file to delete. Once selected, press the "Delete" button of the remote. The file will instantly be removed.

**Getting info and Formatting the Hard Disk**  
To format the Hard Disk (Erasing all its content). Press "Menu" on the remote control, and, choose Hard Disk from the left list of icons. The Player will ask you to choose between Audio/Video/Picture or Info. Select info. This menu shows you how much space available the hard Disk holds. An option, at the bottom also enables you to "Clean the Hard Disk" (Format). Selecting this function will erase all content stored on the Player's Hard Disk.

## quick setup

If your DVD Player is correctly connected (see the chapter on cable connections), a menu will appear when you turn on the DVD Player. The menu installs the most important settings for your TV set and language. Note: If this menu does not appear when you start the DVD Player, recheck the cable connections. Note: Try connecting your TV set using the Composite Video cables. Composite Video always produces a picture.

- Language**  
Select the language that will be used whenever you open the DP-508's built-in menus. Use the arrow buttons on the remote control to move the rectangular frame to the language you wish to select and press ENTER.
- Video**  
Select the video connection your DVD Player is plugged with. Your options are SCART, S-Video or Component video. Composite video is always available, but the quality level is not as good as the other connections.
- TV**  
This screen presents two different types of TV formats: 4:3 (normal) or 16:9 (wide screen). Note: Some 4:3 TV screens can display 16:9 format.
- Audio**  
If your TV set is connected via SCART, your TV is automatically provided with sound. If you would rather use an amplifier to reproduce the sound, you have two options to choose from: the phono jack or one of the two digital outputs. Note: The default Audio choice should be stereo unless your player is bestereo or a digital amplifier.
- IP Address**  
In order to use the KiSS PC-Link software, you need to provide your DVD player with your computer IP address. To easily find this number, first install the KiSS PC-Link software on your computer. Once this step is completed, you will find the number under the Info Panel. Type it on the provided screen. Leave it blank if you do not want to set up your PC connection for the moment. You can always go back to the quick setup menu if you want to provide the IP address at a later stage.

You can always go back and start again if you happen to do something wrong. Just press on the setup button of your remote, go to miscellaneous settings and select Quick Setup.  
Note: Your KiSS PC-Link software will ONLY work if the KiSS DP-508 is provided with a valid IP address.

## advanced setup

You can always access the Setup menu and adjust the DP-508 to your specific requirements and hardware. Select "Setup" from the main screen or press the SETUP button on your remote control, and a menu will appear with the available options. The orange frame shows your position on the menu. Use the arrow buttons to move the frame and select by pressing the ENTER button. The settings on some of the menus have already been determined under Quick setup, but there are several settings available under Advanced setup as well.

**Language Settings**  
The first menu is the Language settings menu. Here you select the language you wish to use for the menus, that will appear on the screen, and your preferred language when playing a DVD film - for subtitles, speech and menus (they will only be used if the film supports the language).

**Video Settings**  
You can select the TV type (16:9 or 4:3 aspect ratio), video system (PAL or NTSC) and video output (SCART, S-Video, Component Video or Component Progressive (Progressive Scan)). Composite video is available in all modes except in progressive scan mode. Component Progressive delivers the best video quality, but be aware that if your TV does not support Progressive Scan the picture (and menu) will disappear. You can reset this to the factory settings by pressing: LOAD, INFO, 1, 2, 3 on the remote control.

**Miscellaneous Settings**  
This display lets you set your preferred level of protection on the films. Some films are divided into levels, so that parents can prevent their children from seeing a specific type of film. In the next menu item, you create a password that is required for editing this setup. The light in the DVD Player's display can be modified from max to normal to min or off. All Settings can be reset in the "Restore settings" menu, and the Quick setup can be re-initiated from the last menu.  
If you wish to modify this setup later on, you must re-enter the password.

**Audio Settings**  
This display lets you give your preferred level of protection on the films. Some films are divided into levels, so that parents can prevent their children from seeing a specific type of film. In the next menu item, you create a password that is required for editing this setup. The light in the DVD Player's display can be modified from max to normal to min or off. All Settings can be reset in the "Restore settings" menu, and the Quick setup can be re-initiated from the last menu.  
If you wish to modify this setup later on, you must re-enter the password.

Note: Progressive scan only works on Component video output. This connection gives the best video quality. Only select Component Progressive if your TV supports it. To leave a menu, press the left arrow on the remote control.

# Lecteur DVD KiSS DP-508




## Félicitations pour l'achat de votre nouveau player de DVD

Votre nouveau lecteur présente un grand nombre de fonctions qui vous donneront satisfaction pendant de longues années. Vous apprécierez notamment le niveau de qualité audio et vidéo des films visionnés. En plus des DVD, vous pouvez regarder des films aux formats MPEG-4, XviD ou DivX. Les fonctions audio vous permettent également d'écouter des fichiers MP3, Ogg Vorbis ou des CD de musique. Le récepteur DP-508 reconnaît chaque format automatiquement et prend en charge les disques CD-RW et DVD-RW. Votre nouveau DP-508 accepte également les CD de photos (jpg), ce qui vous permet de regarder vos photos directement sur l'écran de votre téléviseur. Vous pouvez bien entendu regarder les photos qui ont été développées en laboratoire ou celles que vous avez numérisées et enregistrées vous-même sur un CD.

Note : N'utilisez pas le lecteur de DVD avant d'avoir pris connaissance du menu de configuration. Pour ce faire, le récepteur de DVD doit être connecté à un téléviseur.


## accessoires

Vérifiez que les accessoires suivants accompagnent votre lecteur de DVD.

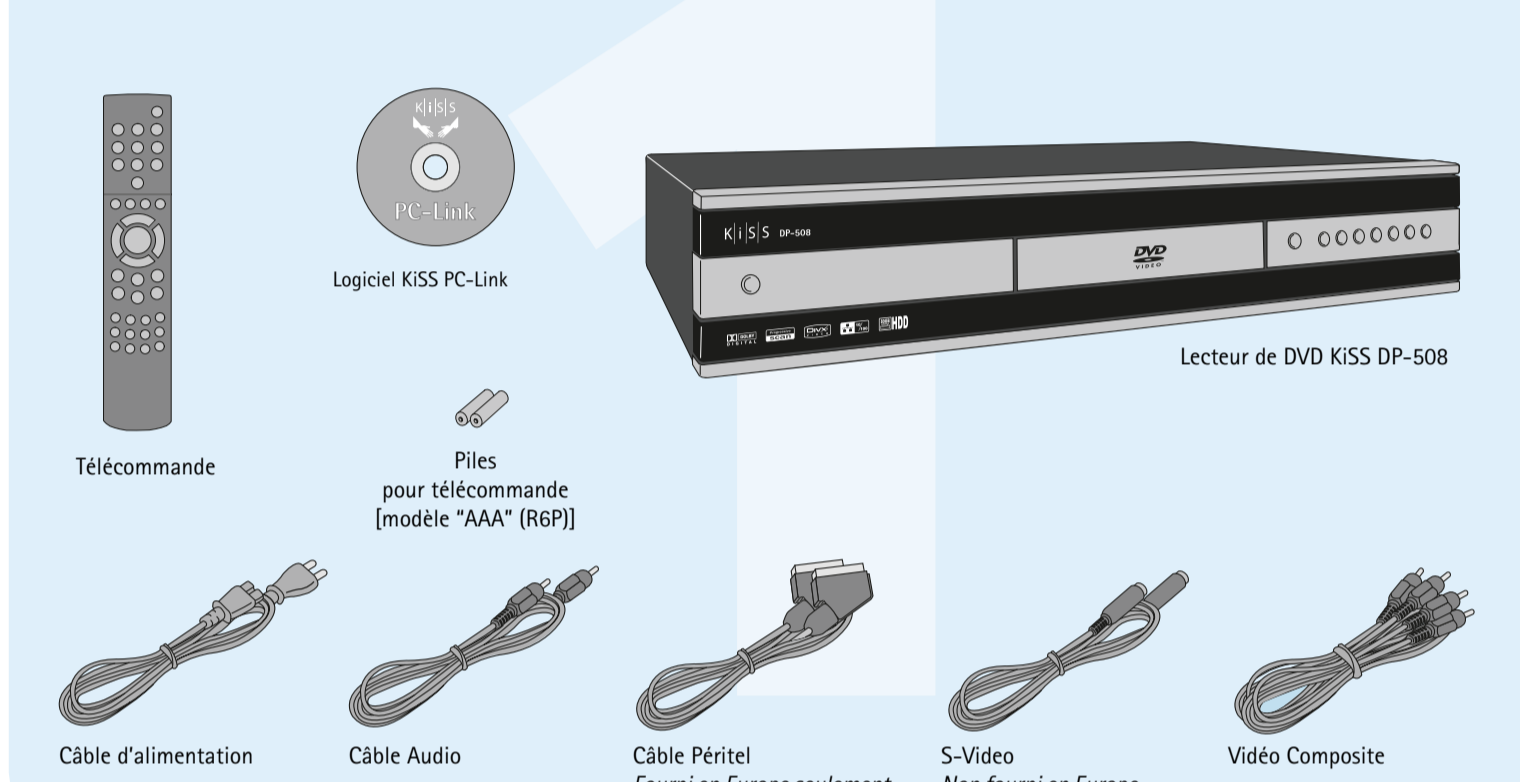

## lecture de médias

Allumez l'appareil et sélectionnez le DVD, la radio, la vidéo et le téléviseur en appuyant sur les boutons de sélection la source.

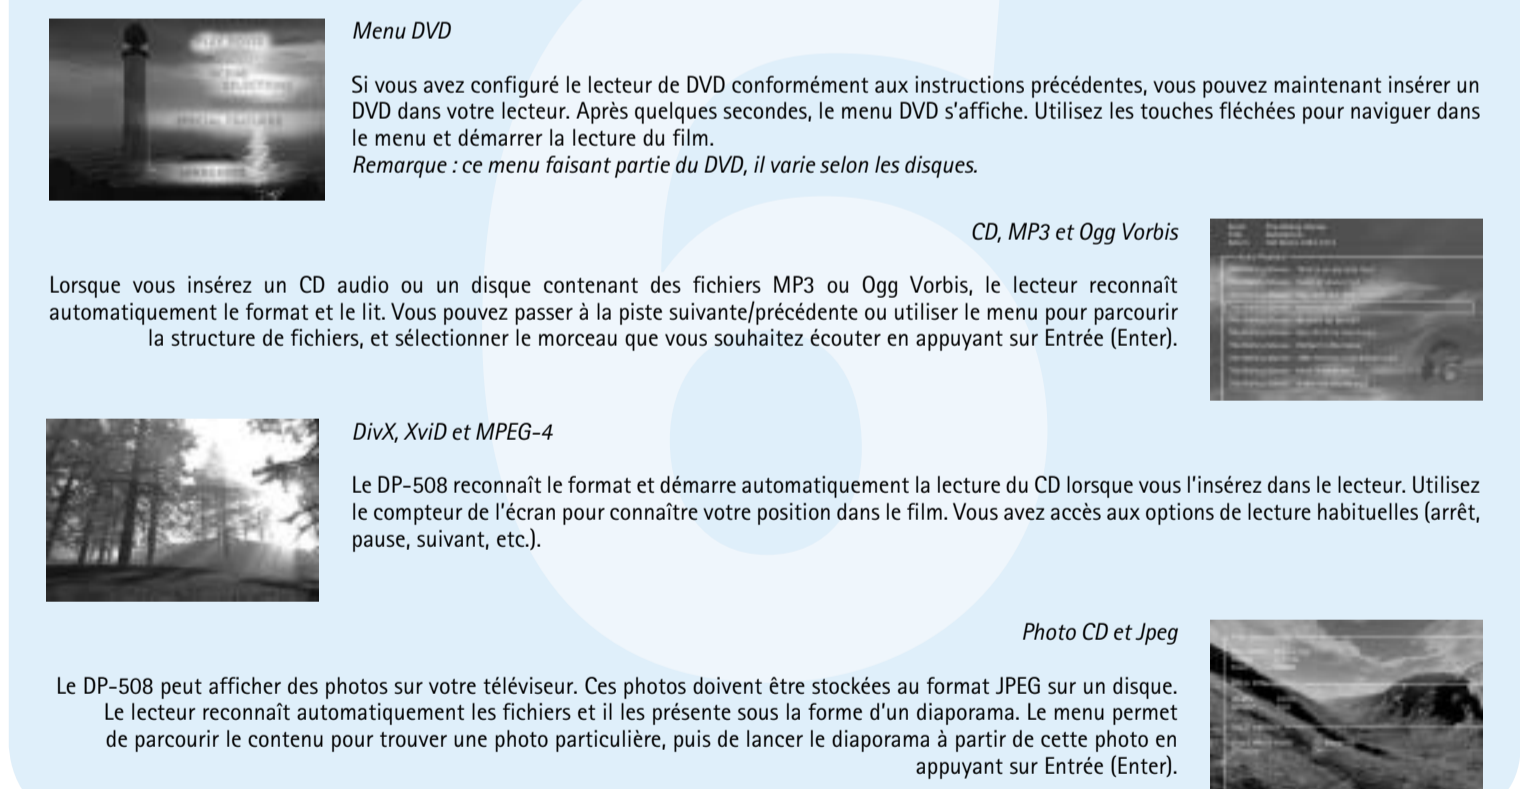

## fonctions avancées

Pour simplifier la télécommande, nous avons placé toutes les fonctions avancées dans le bouton Liste (List). Appuyez sur Liste jusqu'à ce vous trouviez la fonction souhaitée. Appuyez sur Entrée (Enter) pour l'activer.

**STEP**  
Cette fonction n'est pas utilisée.

**AUDIO**  
Appuyez sur le bouton [AUDIO] pour changer le format audio. Les options de format audio disponibles (par ex. stéréo 2 canaux ou 6 canaux à effet surround) sont déterminées par les éditeurs du film.

**ZOOM**  
Pendant que vous visionnez un film, vous pouvez effectuer un zoom avant sur certaines zones de l'image. C'est possible pendant la lecture du film ou en mode Pause. Pour activer la fonction, appuyez sur le bouton [ZOOM], puis revenez à l'image normale en appuyant autant de fois que nécessaire sur le même bouton.

**CONSEIL :** Pour naviguer dans l'image agrandie, utilisez les touches fléchées.

**REPEAT**  
Si vous appuyez sur le bouton [REPEAT] lors de la lecture du film, trois options s'affichent à l'écran.  
MODE : lecture aléatoire (des chapitres) ou Désactivé.  
Répétition : vous permet de répéter la lecture de la section ou du film dans son intégralité.

**SUPPRIMER**  
Cette fonction permet de supprimer des fichiers stockés sur le disque dur du lecteur. Pour ce faire, consultez la liste des éléments enregistrés et sélectionnez celui que vous souhaitez supprimer.

**SRCH**  
Utilisez [SRCH] pour rechercher un passage spécifique sur le disque. Heure : permet de définir les heures, les minutes et les secondes.  
Titre/Chapitre : permet de rechercher le titre ou le chapitre.

**ANGLE**  
Si le film a été filmé sous plusieurs angles, vous pouvez passer d'un angle de caméra à un autre grâce au bouton [ANGLE].

**SUBPIC**  
Ce bouton vous permet de modifier les sous-titres du film. Lorsque vous appuyez sur le bouton [SUBPIC], un message s'affiche dans le coin supérieur gauche de l'écran. Il indique le nombre de langues disponibles et la langue actuellement sélectionnée. Pour passer à la langue suivante disponible, appuyez à nouveau sur le bouton [SUBPIC]. Le nombre de langues disponibles est également déterminé par les éditeurs du film.


**SETUP**  
Si le lecteur de DVD lit un film ou un enregistrement musical, appuyez sur le bouton [SETUP] pour voir les options disponibles sur le disque. Par exemple, si vous visionnez un film sur DVD, le côté gauche de l'écran affiche des informations sur la durée du film, le nombre de chapitres, les options de lecture et le nombre de sous-titres. Si le lecteur de DVD est sous tension, mais qu'aucun film ou média n'est en cours de lecture, le fait d'appuyer sur ce bouton vous permet d'accéder au menu de configuration de votre lecteur de DVD. De là, vous pouvez sélectionner les paramètres par défaut pour la langue, le son, la vidéo, le contrôle parental, etc.

**CONSEIL :** Ces boutons vous permettent d'augmenter et de diminuer le volume sonore.


**MARK**  
Ce bouton sert à sélectionner de fichiers en vue d'une copie ou d'une suppression.

## vue d'ensemble


Découvrez le lecteur sous tous ses angles

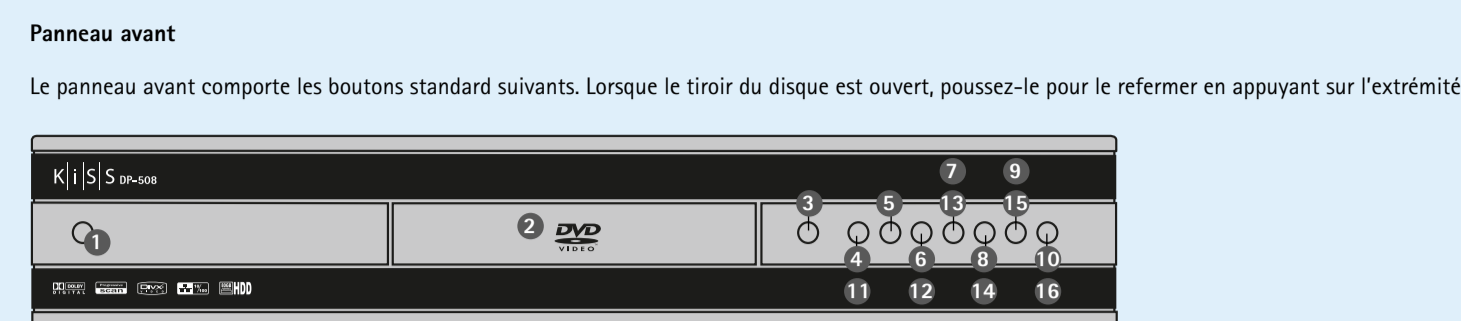

- 1. Marche/Arrêt 2. Tirer du CD 3. Ouverture/Fermeture 4. Lecture/Pause 5. Stop 6. Chapitre précédent 7. Chapitre suivant 8. Retour arrière 9. Avance rapide 10. Menu Options du menu de configuration: 11. Entrée 12. Navigation gauche 13. Navigation droite 14. Navigation haut 15. Navigation bas 16. Fermeture

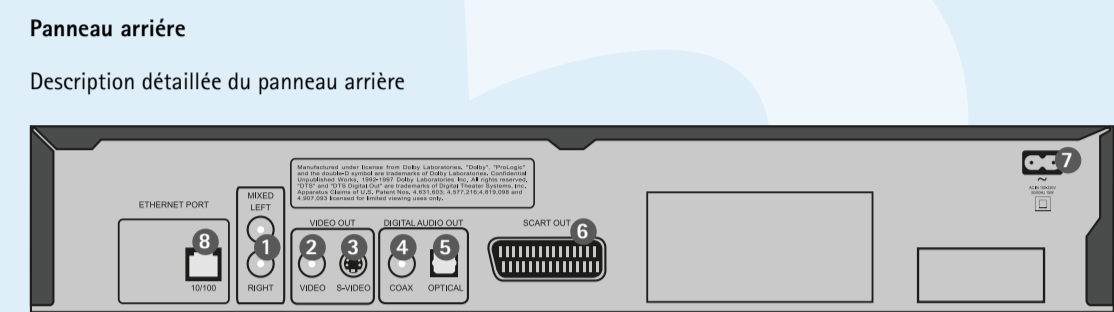

- 1. Sortie Stéréo 2. Sortie vidéo composite pour téléviseur 3. Sortie S-vidéo 4. Sortie coaxiale pour amplificateur 5. Sortie optique pour amplificateur 6. Câble PériTel pour téléviseur 7. Alimentation 8. Ethernet

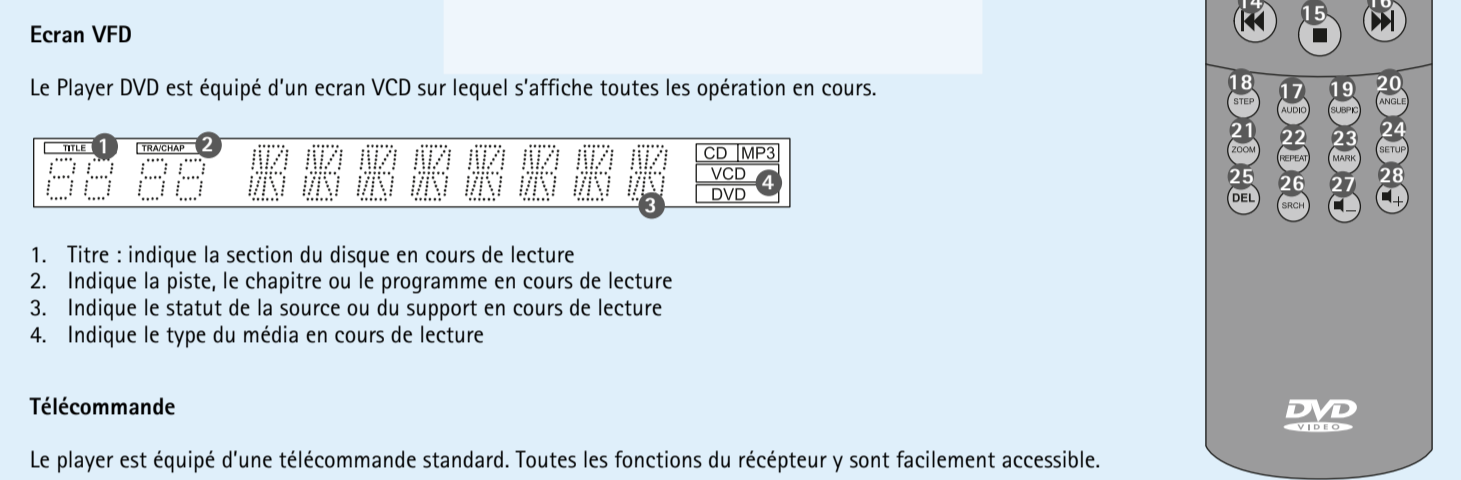

- 1. Veille 2. Ouverture/Fermeture 3. Titre/Menu 4. Menu 5. Retour 6. Flèche haut 7. Flèche gauche 8. Entrée 9. Flèche droite 10. Flèche bas 11. Retour arrière 12. Lecture/Pause 13. Avance rapide 14. Chapitre précédent 15. Stop 16. Chapitre suivant 17. Sélection langue/son 18. Image suivante 19. Sélection sous-titres 20. Sélection de l'angle 21. Zoom 22. Répétition 23. Non utilisé 24. Réglage 25. Supprimer 26. Recherche 27. Aug. du volume 28. Baisse du volume


Remarque : Certaines fonctions ne sont disponibles que si le média le permet

## connexion

Reportez-vous aux illustrations ci-après pour raccorder votre lecteur à un système vidéo ou audio. L'illustration PC à DVD indique également comment adapter le lecteur à vos paramètres réseau en cours.

### Connexion Vidéo

Le raccordement de votre lecteur de DVD KISS DP-508 à votre téléviseur peut s'effectuer avec n'importe lequel des câbles présentés ci-dessous. (Un seul câble peut être branché à la fois).

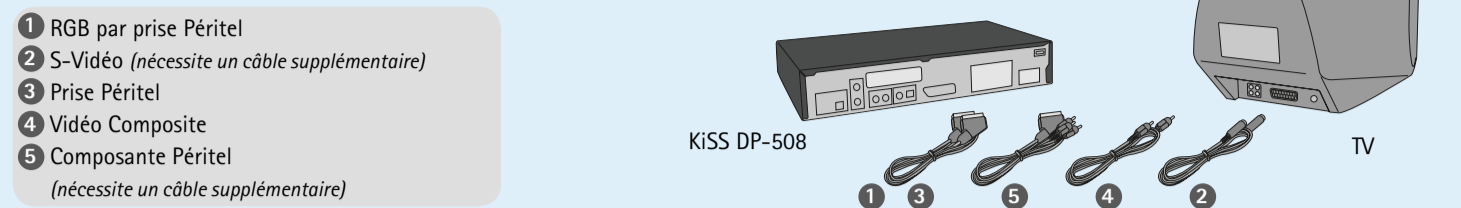


### Connexion Audio

Le raccordement de votre lecteur de DVD KISS DP-508 à votre amplificateur peut s'effectuer avec n'importe lequel des câbles présentés ci-dessous. (Un seul câble peut être branché à la fois).



### Connexion PC à DVD

Voici quatre exemples de raccordement du DP-508 à un PC, qui permettent d'utiliser l'ensemble de ses fonctionnalités et de ses programmes.

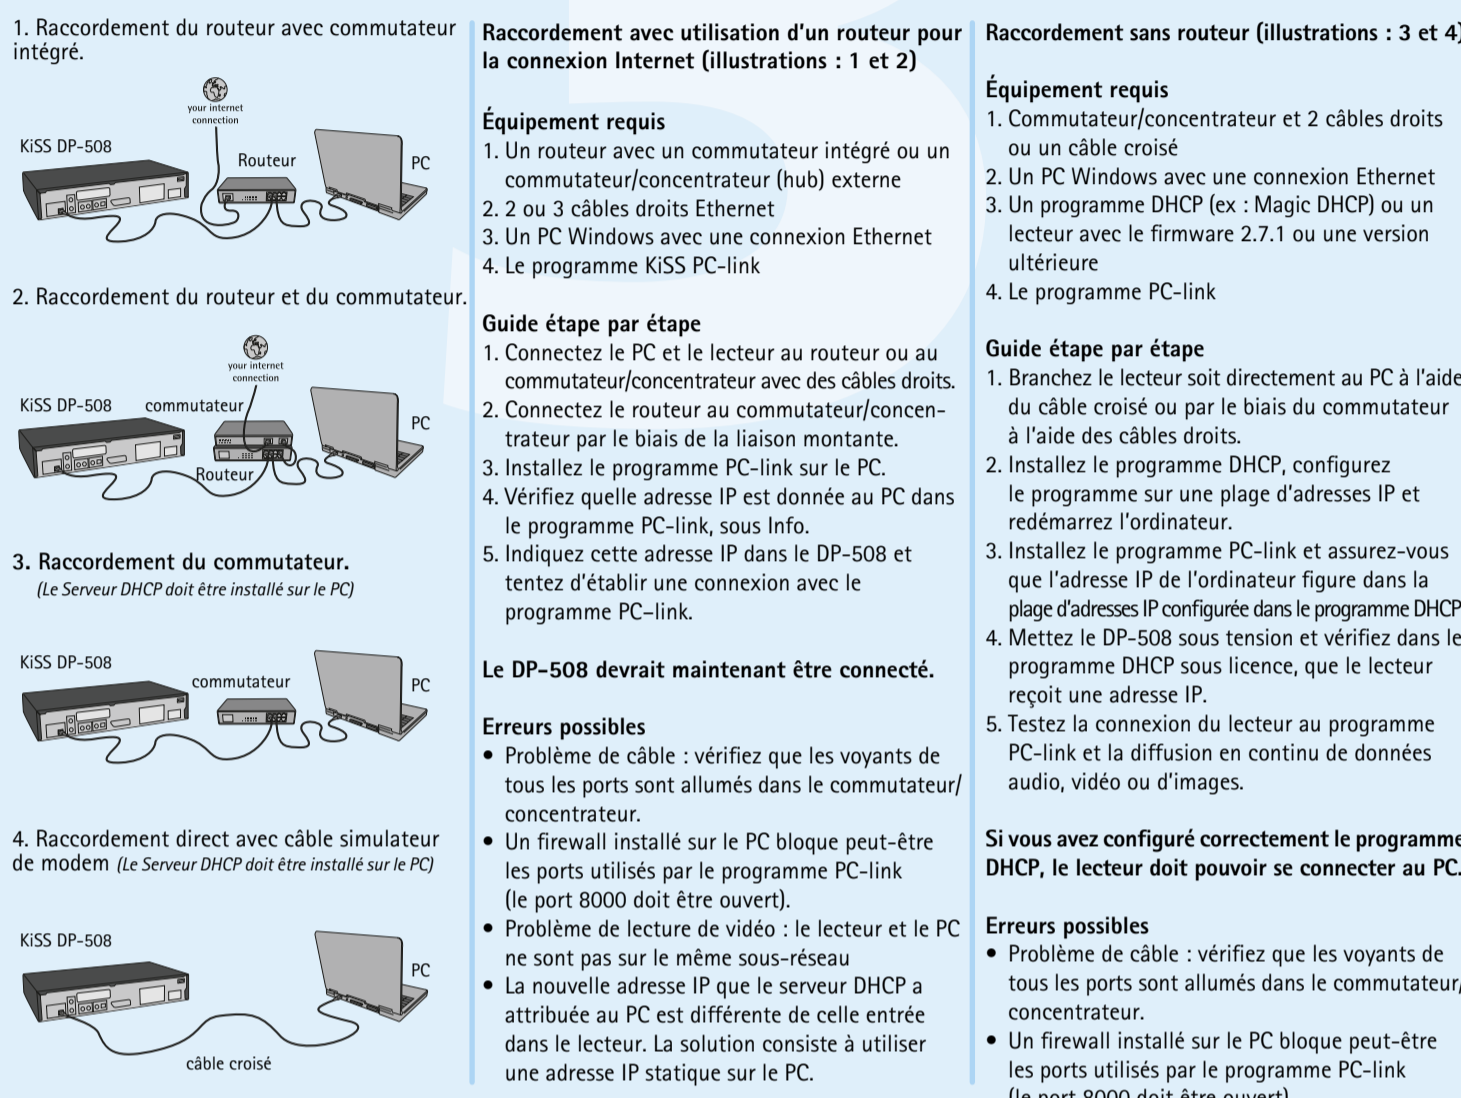

## webradio

Webradio vous permet d'écouter d'innombrables stations de radio via Internet. N'oubliez pas que toutes les fonctions décrites ci-après ne sont disponibles que si votre lecteur est raccordé correctement (voir la section relative au raccordement).



## KISS PC-Link

Le logiciel KiSS PC-Link vous permet de connecter votre ordinateur au lecteur de DVD. Vous pouvez alors lire, regarder ou écouter vos fichiers informatiques sur votre téléviseur à l'intermédiaire du KISS DP-508.

Remarque : utiliser la fonction de recherche pour aider l'ordinateur à retrouver vos fichiers multimédias.

**Installation du logiciel**  
Vous devez installer le logiciel KiSS PC-Link sur votre ordinateur. Il est compatible PC et nécessite une machine exécutant au minimum Microsoft Windows 98, Internet Explorer 4. Dès que vous insérez le disque, le programme d'installation démarre automatiquement ; sinon, double-cliquez sur son icône dans la fenêtre du CD. Sélectionnez la langue de votre choix et cliquez sur "Suivant". À la fin de l'installation, le programme KiSS PC-Link s'ouvre. La fenêtre principale comporte quatre dossiers : Audio, Vidéo, Images et Info.

**Accès à vos fichiers sur le DP-508**  
Une fois que vous avez connecté votre ordinateur à votre lecteur DP-508 (reportez-vous au chapitre traitant de la connexion) et spécifié l'adresse IP de l'ordinateur sur le lecteur de DVD (reportez-vous au chapitre consacré à la configuration rapide), appuyez sur le bouton "Menu" de la télécommande et choisissez PC-Link. Le sous-menu suivant vous permet d'accéder aux fichiers audio, vidéo ou d'images. Si plusieurs ordinateurs exécutent KiSS PC-Link, un menu du lecteur vous permet de naviguer dans le réseau pour identifier les autres PC connectés. Vous pouvez également cliquer sur l'icône de navigation sur le réseau, dans l'écran principal.

**KISS PC-Link Audio**  
Transférez avec la souris les fichiers audio auxquels vous aimeriez accéder depuis votre DP-508. Vous pouvez créer des dossiers pour vos musiques préférées, ou pour les classer par genre. Vous pouvez ajouter, supprimer ou déplacer facilement les fichiers à l'aide des boutons de la fenêtre ou en cliquant avec le bouton droit et en choisissant l'action appropriée dans le menu contextuel.

**KISS PC-Link Vidéo**  
C'est là que vous trouverez l'adresse IP de votre ordinateur. Vous devez la spécifier dans le menu de la configuration rapide (reportez-vous au chapitre traitant du Réglage rapide). Ce menu vous permet également de vérifier s'il existe des mises à jour et d'accéder au site Web de KiSS.


cliquant dessus avec le bouton droit de la souris.

**KISS PC-Link Images**  
Vous avez directement accès à vos fichiers graphiques stockés sur l'ordinateur. Sélectionnez-les ou faites-les glisser avec la souris. Vous pouvez aussi les ranger dans des dossiers à partir de la fenêtre de KiSS PC-Link.

**KISS PC-Link Info**  
C'est là que vous trouverez l'adresse IP de votre ordinateur. Vous devez la spécifier dans le menu de la configuration rapide (reportez-vous au chapitre traitant du Réglage rapide). Ce menu vous permet également de vérifier s'il existe des mises à jour et d'accéder au site Web de KiSS.


## fonctions du disque dur

Le KISS DP-508 intègre un disque dur de 80 Go, qui vous permet de stocker un contenu audio/vidéo/image. Seuls les fichiers générés électroniquement peuvent être stockés sur le disque dur Les DVD, les CD audio, les SVCD (tous les types de SVCD) et les VCD ne peuvent pas être copiés.

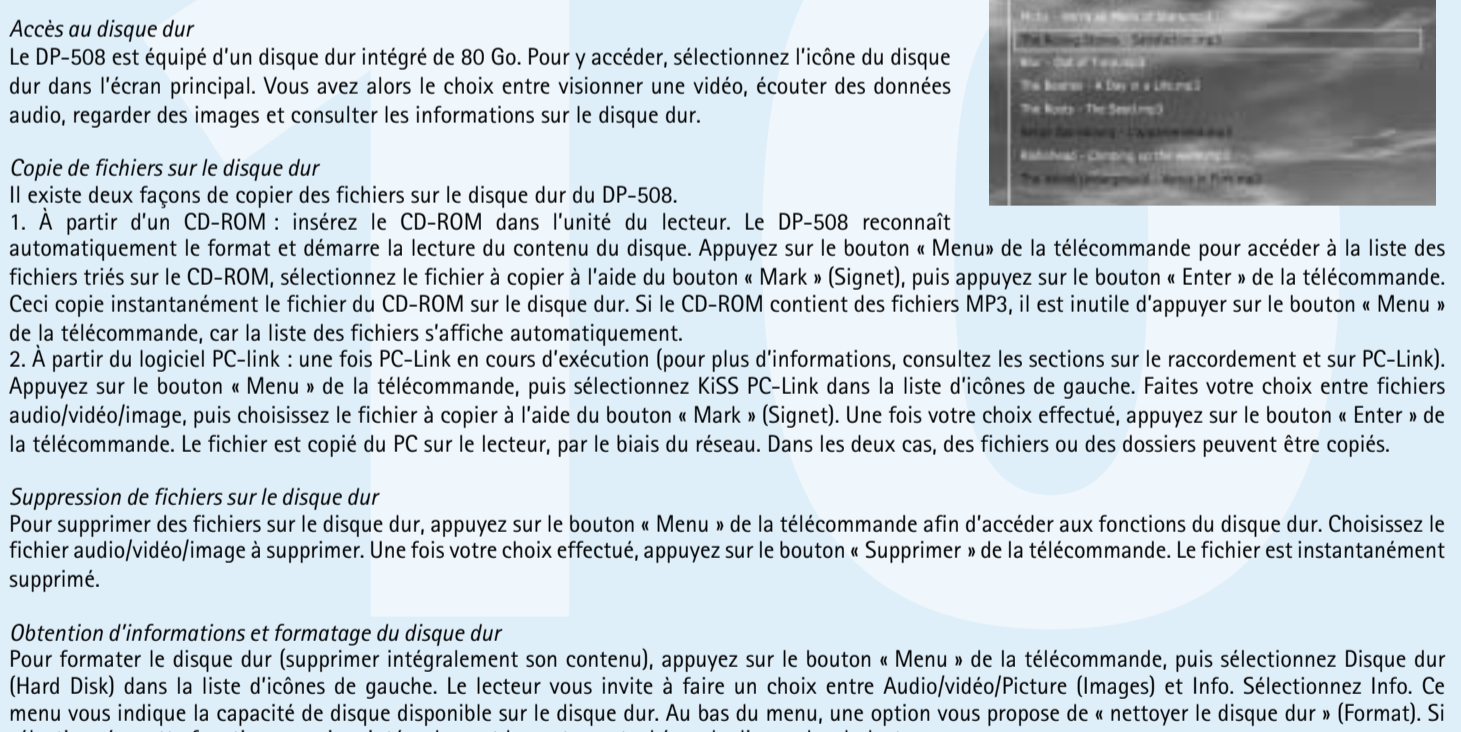


## Mise à jour du logiciel

Les lecteurs KiSS sont régulièrement mis à jour pour permettre l'utilisation de nouvelles fonctions et d'améliorations. Cette opération nécessite une connexion Internet et un graveur de CD-ROM.

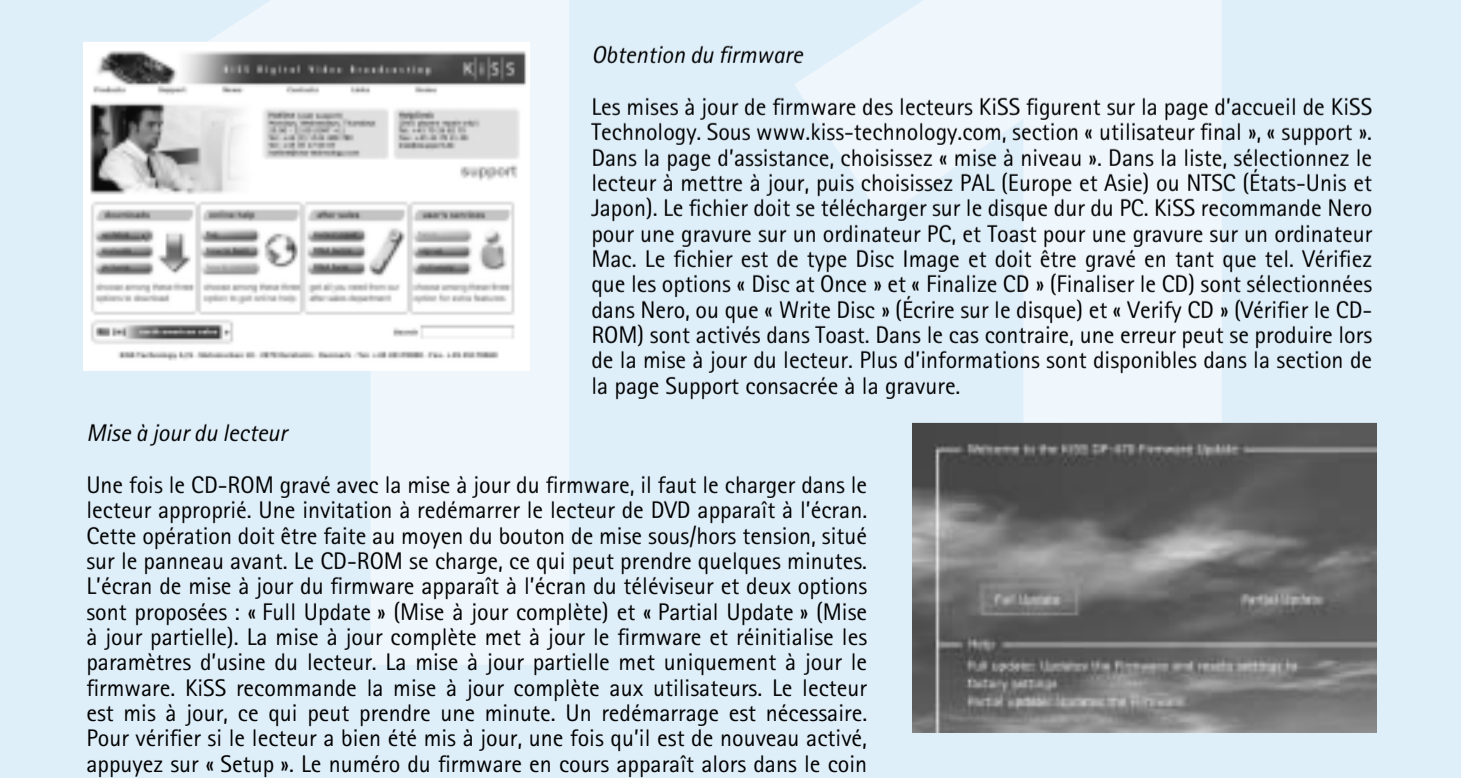


## réglage rapide

Si votre récepteur de DVD est branché correctement (reportez-vous au chapitre consacré à la connexion des câbles), un menu s'affiche lors de la mise sous tension. Ce menu permet de configurer les paramètres les plus importants pour le téléviseur et le câble à la langue. Remarque : si ce menu ne s'affiche pas lors du démarrage du player DVD, vérifiez à nouveau la connexion des câbles. Remarque : essayez de connecter le téléviseur à l'aide des câbles vidéo composite. Cette solution permet d'obtenir une image à coup sûr.

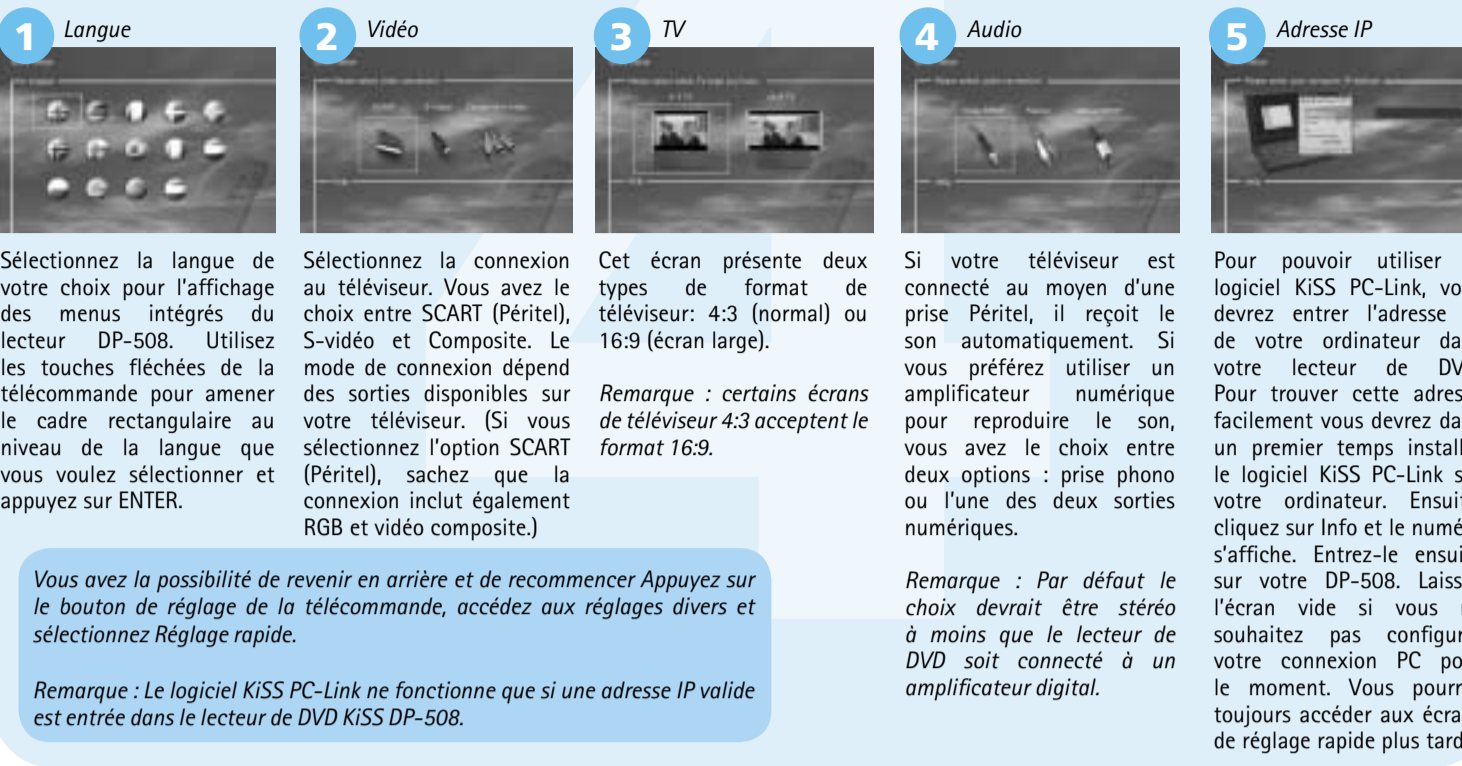

## réglages avancés

Vous pouvez accéder au menu de configuration à tout moment afin de régler les paramètres de votre player DP-508 en fonction de vos besoins. Sélectionnez « Setup » (Réglage) dans l'écran principal ou appuyez sur le bouton SETUP de la télécommande afin d'afficher un menu présentant toutes les options disponibles. Le cadre orange indique votre position dans le menu. Utilisez les touches fléchées pour déplacer ce cadre et effectuez votre sélection en appuyant sur le bouton ENTER. Les paramètres de certains menus ont déjà été déterminés sous Réglage rapide, mais plusieurs autres peuvent également être définis sous Réglages Avancés.

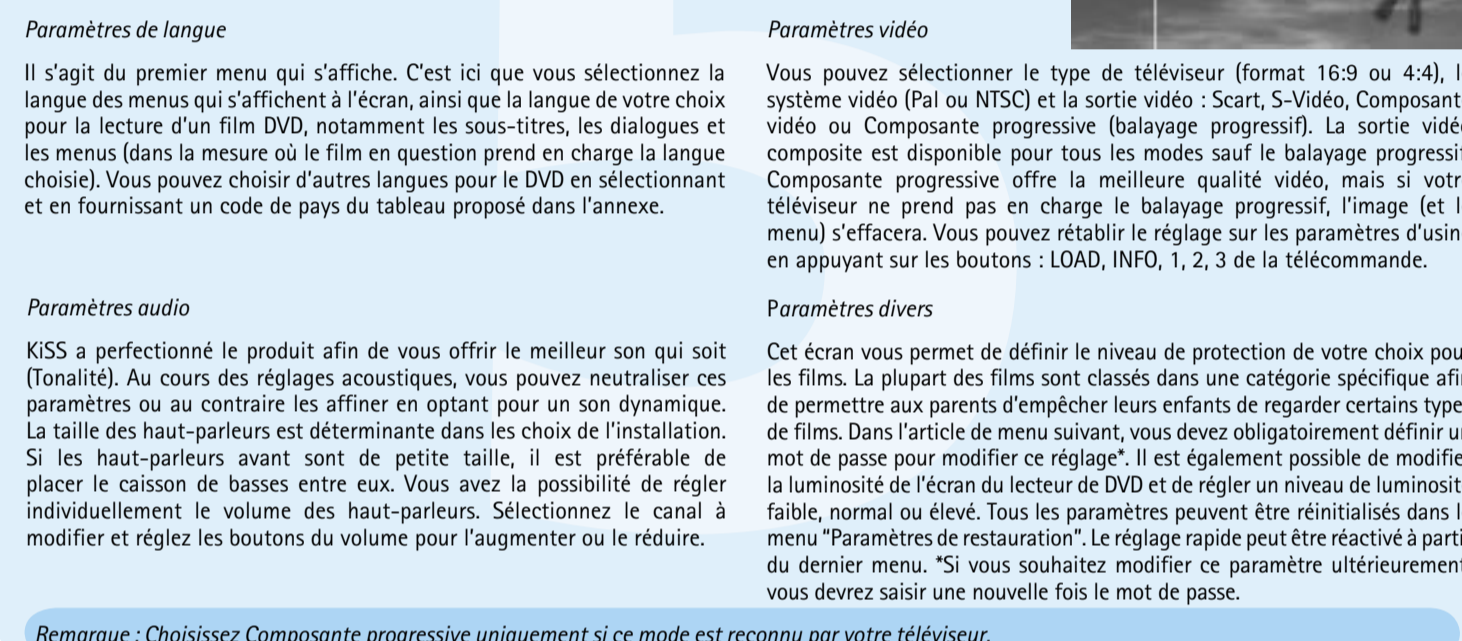



# DVD afspiller KiSS DP-508




## Tillykke med din nye DVD afspiller

Den vil i mange år frem være dig til glæde med alle de mange funktioner, den tilbyder dig. Du kan naturligvis afspille og se DVD-film i en fremragende kvalitet både med hensyn til lyd og billede. Du kan se en film i mange andre formater end DVD, f.eks. MPEG-4, XviD eller DivX. På lydsiden har du ligeledes mulighed for afspilning af musik-CD'er, Ogg Vorbis eller MP3-filer. DP-508 vil automatisk genkende de enkelte formater og kan læse både CD-RW og DVD-RW. Din nye DP-508 understøtter også Photo CD (jpg), hvilket betyder, at du kan vise dine billeder direkte på TV-skærmen, både dem, du har fået fra fotohandleren, og dem, du selv har scannet og gemt på CD.

Bemærk: DVD afspilleren kan først benyttes, når hurtig konfigurationsmenuen er gennemgået. Dertil skal DVD afspilleren være tilsluttet et TV.

## tilbehør

Du bør undersøge om alt tilbehøret er inkluderet med din DVD afspiller.

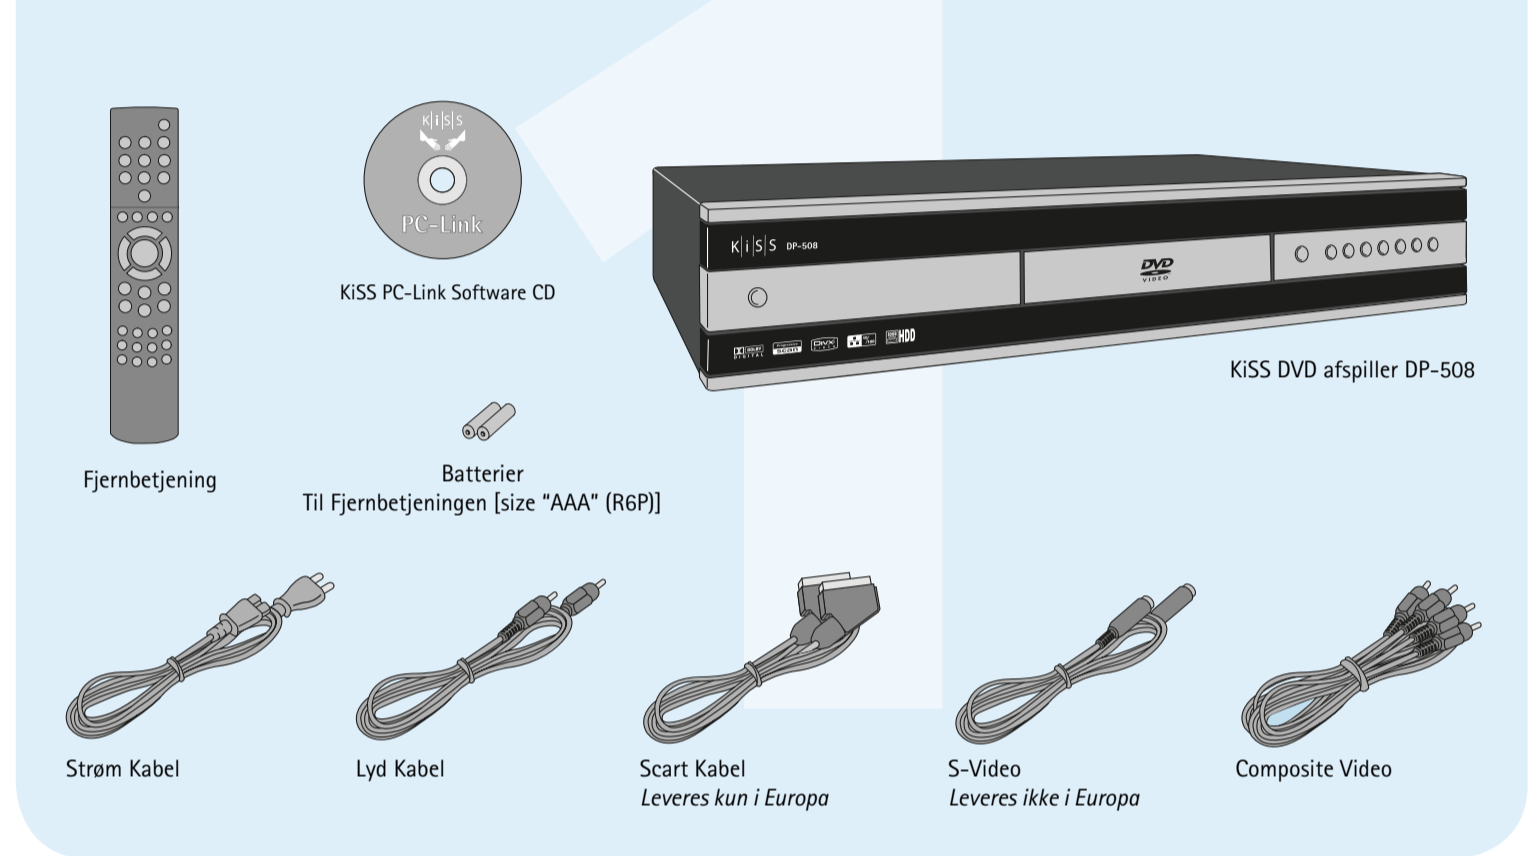

Strøm Kabel, Lyd Kabel, Scart Kabel, S-Video, Composite Video.

## afspilning af medier

DVD-afspilleren understøtter følgende medier: DVD-Video, DivX, XviD, ISO MPEG-4, Audio CD, MP3, Ogg Vorbis og JPG

Sections for DVD-Menu, CD, MP3 og Ogg Vorbis, DivX, XviD og MPEG-4, and Photo-CD og Jpeg.


## avancerede funktioner

I bunden af fjernbetjeningen findes en række avancerede funktioner, som beskrives i kapitlet nedenfor.


- STEP: Denne funktion kan ikke anvendes.
AUDIO: Ved at trykke på knappen [AUDIO] skifter du lydmaterialet.
ZOOM: Når filmen afspilles, kan du zoome ind på enkelte områder.
REPEAT: Mens filmen afspilles, kan du trykke på knappen [REPEAT].
MODE: Shuffle (tilfældig afspilning af kapitler) eller Off (slået fra).
SETUP: Hvis DVD-afspilleren er i gang med at vise en film...

## oversigt

Oversigt over afspilleren fra alle vinkler

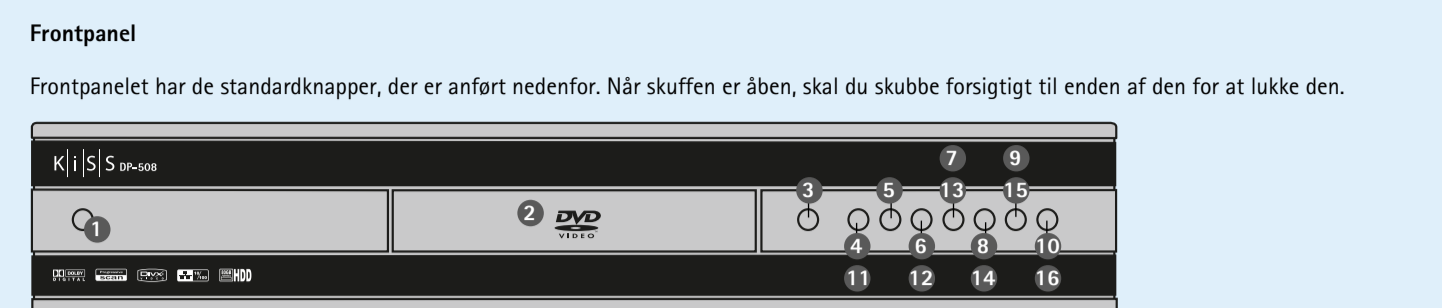

- 1. Tænd/Sluk, 2. DVD/CD-skuffe, 3. Åbn/Luk, 4. Afspil/Pause, 5. Stop, 6. Forrige kapitel, 7. Næste kapitel, 8. Tilbagespoling, 9. Fremadspoling, 10. Menu, 11. Enter, 12. Naviger til venstre, 13. Naviger til højre, 14. Naviger op, 15. Naviger ned, 16. afslut, 17. Tilbage til indstillingsmenuen, 18. Næste billede, 19. Væg indertekster, 20. Væg vinkel, 21. Zoom, 22. Gentag, 23. Ikke anvendt, 24. Indstilling, 25. Slet, 26. Sag, 27. Lydstyrke op, 28. Lydstyrke ned.

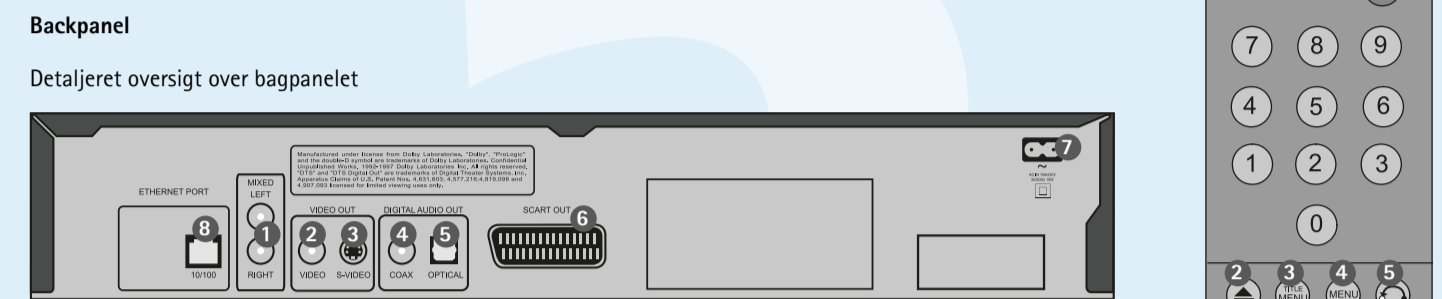

- 1. Almindelig Stereo-udgang, 2. Composite Video-udgang til TV, 3. S-Video-udgang til TV, 4. Koaksial udgang til forstærker, 5. Optisk udgang til forstærker, 6. SCART til TV, 7. Indgang til strøm, 8. Ethernet, 9. Pi til højre, 10. Pi ned, 11. Tilbagespoling, 12. Afspil/Pause, 13. Fremadspoling, 14. Forrige kapitel, 15. Stop, 16. Næste kapitel, 17. Væg sprog/Lyd, 18. Næste billede, 19. Væg undertekster, 20. Væg vinkel, 21. Zoom, 22. Gentag, 23. Ikke anvendt, 24. Indstilling, 25. Slet, 26. Sag, 27. Lydstyrke op, 28. Lydstyrke ned.

Display section showing the DVD player's display and various functions like Fjernbetjening and Fjernbetjening.

## webradio

Section for Webradio, including text about using the function to listen to radio stations and a screenshot of the web interface.

## KiSS PC-Link

Section for KiSS PC-Link, including text about connecting the DVD player to a PC and screenshots of the software interface.

## tilslutning

På illustrationen herunder vises, hvordan du tilslutter afspilleren til et video- eller audiosystem. Illustrationen, der viser tilslutning af computeren til dvd-afspilleren, viser også, hvordan du tilpasser afspilleren til netværksindstillingerne.

Diagram showing connections for Video Tilslutning, Audio Tilslutning, and Tilslutning mellem PC og DVD.

Diagram showing connections for Tilslutning til router med indbygget switch, Tilslutning til router og en switch, Tilslutning til en switch, and Direkte tilslutning via et krydskabel.

## hurtig konfiguration

Hvis din DVD-afspiller er korrekt tilsluttet (se kapitel om kabelforbindelser), vil der, når du tænder for DVD-afspilleren, starte en menu, som installerer de vigtigste opsætninger i forhold til dit fjernsyn og sprog.

Diagram showing the steps for quick configuration: 1. Sprog, 2. Tilslutning, 3. TV, 4. Lyd, 5. IP-Adresse.

## avanceret opsætning

Section for advanced setup, including text about adjusting settings like Sprog indstillinger, Video Indstillinger, and Audio Indstillinger.

## Harddisk funktioner

Section for hard disk functions, including text about using the hard disk to store files and a screenshot of the interface.

## support

Section for support, including text about contacting support and a list of contact information.

## software update

Section for software updates, including text about updating the DVD player's software and a screenshot of the update process.





## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>