


Operating Instructions

Cosmetic Groomer


ES107

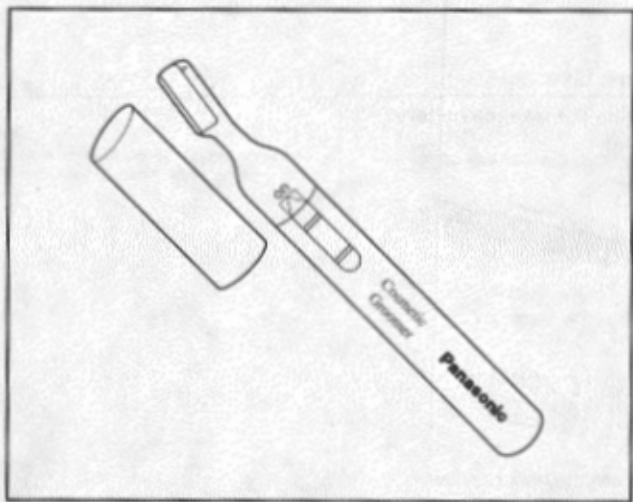

Panasonic®

Before operating this unit, please read these instructions completely.


Parts Identification

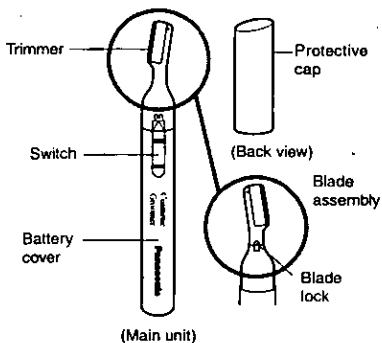

- Do not use rechargeable battery.
- A single AAA alkaline battery will last approximately one month (when used for two 5-minute sessions each week).
- When the trimmer begins losing power, replace the battery.

How to use

Move the switch to the "on" position to activate trimmer.

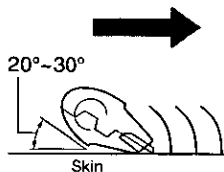

Angle the trimmer so that the side is close to the skin and the blade moves almost parallel to the skin.


Before Use

Inserting the alkaline battery

1. Remove the battery cover.



2. Insert the battery.



3. Attach the battery cover.



Trimming Instructions

Face: From the area of growth towards the center of the face. And then in the reverse direction.



Above the eyebrows: Stop 1/16" above the eyebrows.




Below the eyebrows: Press the eyelid to smooth out the skin.




Between the eyebrows: Change your grip.



Cheeks: From the center of the face outwards.

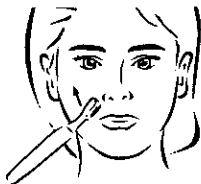

Below the nose: Stretch the area below the nose.

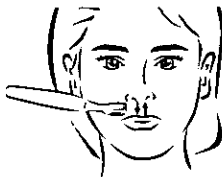


Trimming the neck and neck line hairs: Hold back your hair with one hand, taking care not to push too hard, move the trimmer from top to bottom to trim the downy hairs at the nape of the neck.



Maintenance

Cleaning the blade

Move the switch to the OFF position.



Removing the Blade


1. Slide the blade lock in the direction indicated below.



2. Remove the blade by pulling it in the direction indicated below.




Clean the inside of the blade.



- Do not use water to clean, as this will damage the unit.

Installing the Blade

1. Align the hole in the blade with the projection at the end of the holder.

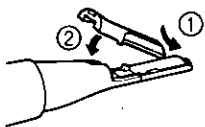

2. Slide the blade lock in the direction indicated below.




- The button is easier to slide if you use your fingernail.

Cautions

- When cleaning the outside of the unit, use a dry cloth or a cloth moistened in liquid soap to wipe dirt. Never use thinner, benzene or alcohol.
- The micro fine trimmer is very thin. If handled roughly, it can be damaged and cause skin injury.
- If you have sensitive skin, use care when trimming the sensitive areas around the mouth and eyebrows.
- When the trimmer begins losing power, replace the battery. The battery may leak if not replaced promptly when it reaches the end of its life span.

- Use the trimmer only on clean skin. If you wear makeup, be sure to wash it off and dry your face well before using the trimmer.
- Do not use with any soap or cream on the face. This reduces blade performance and weakens the battery.


Identificación de las piezas

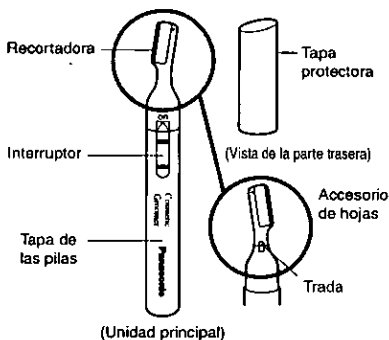

- No utilice pila recargable.
- Las pilas alcalinas tipo AAA duran un mes aproximadamente (si se utiliza el aparato dos veces por semana en sesiones de 5 minutos cada una).
- Cuando la recortadora comience a perder potencia, reemplace las pilas.

Modo de empleo

Coloque el interruptor en la posición "on" para activar la recortadora.

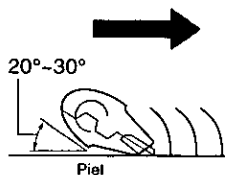


Antes de utilizar el aparato

Colocación de la pila alcalina

1. Extraiga la tapa de la pila.



2. Inserte la pila.



3. Coloque la tapa de la pila.



Coloque la recortadora en ángulo de forma que quede del lado de la piel y la hoja se desplace casi paralelamente a la piel.

Instrucciones de la recortadora

Cara: desde la zona de crecimiento hasta el centro de la cara, y luego en la dirección contraria.



Sobre las cejas: deténgase a 1/16 in. sobre las cejas.



Debajo de las cejas: presione el párpado para alisar la piel.




Entre las cejas: cambie el mango.



Mejillas: desde el centro de la cara hacia fuera.



Debajo de la nariz: estire la parte que está debajo de la nariz.

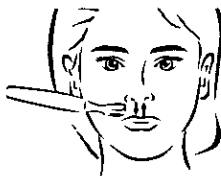


Recorte del pelo delantero y trasero del cuello: Sujete el pelo con una mano tratando de no tirar del mismo con mucha fuerza y mueva la recortadora de arriba hacia abajo para recortar el vello de la nuca.



Mantenimiento

Limpieza de la hoja

Coloque el interruptor en la posición OFF.



■ Extracción de la hoja


1. Deslice la trada en el sentido indicado a continuación.



2. Extraiga la hoja tirando de la misma en el sentido indicado a continuación.




Limpie el interior de la hoja.



• No utilice agua para la limpieza del aparato ya que podría dañarlo.

Colocación de la hoja

1. Alinee el orificio de la hoja con la parte saliente del extremo del soporte.

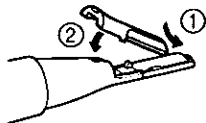

2. Deslice la trada en el sentido indicado a continuación.



• El botón se deslizará con mayor facilidad si utiliza la uña de su dedo.

Precauciones

- Utilice un paño seco o un paño humedecido con jabón líquido para limpiar la parte exterior del aparato. No utilice nunca diluyente, benceno ni alcohol.
- La recortadora de gran precisión es muy delgada. Si la sujeta con fuerza, podría estropearse y producir daños en la piel.
- Si tiene la piel sensible, tenga cuidado al utilizar este aparato en las zonas sensibles como alrededor de la boca y las cejas.
- Cuando el aparato comience a perder potencia, reemplace las pilas. Las pilas pueden tener pérdidas de líquido si no se reemplazan cuando finaliza su duración.

- Sólo utilice la recortadora con la piel limpia. Si lleva puesto maquillaje, asegúrese de lavarse y secarse la cara antes de utilizar este aparato.
- No utilice la recortadora si tiene jabón o crema en la cara. El funcionamiento de la hoja podría disminuir y podrían debilitarse las pilas.

IN USA CONTACT:
PANASONIC PERSONAL AND
PROFESSIONAL PRODUCTS COMPANY
One Panasonic Way 4A-3
Secaucus, NJ 07094

IN PUERTORICO CONTACT:
PANASONIC SALES COMPANY
DIVISION OF MATSUSHITA
ELECTRIC OF PUERTO RICO, INC.
San Gabriel Industrial Park
65th Infantry Avenue KM9.5
Carolina, Puerto Rico 00630

Questions, Comments ?
Call 1-800-338-0552

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>