




user manual
manual de usuario
guide de l'utilisateur

Product registration
Thank you for purchasing an RCA product. We pride ourselves on the quality and reliability of all our electronic products...



Enregistrement du produit
Gracias por comprar un producto RCA. Nos enorgullecamos la calidad y fiabilidad de todos nuestros productos electrónicos...

EN/FR

It is important to read this manual prior to using your new product for the first time.
Es importante leer este manual antes de usar por vez primera su equipo.
Nous vous recommandons de lire le manuel d'instructions avant d'utiliser votre nouveau produit pour la première fois.

Radio

Turning on/off the Radio
In clock mode, press AM/FM to turn on the radio. Press OFF to turn off the radio.

Switching radio bands
Press AM/FM to switch between FM and AM bands.

Tuning the radio
Press CLOCK TUNE to adjust the radio frequency. Press and hold CLOCK TUNE for two seconds to automatically search for the next available station.

Built-in AFC
The Built-In Automatic Frequency Control (AFC) helps to reduce drift on FM reception and keeps the radio locked on the FM station to which it is tuned.

This unit is equipped with an FM antenna at the back.
Inclure l'antenne à sa full length for best reception.
Tape the end of the antenna onto the wall if possible to improve reception.

Station presets
To store a station preset:
1. Tune to a radio station.
2. Press and hold STORE. Preset location PD 1 flashes on the display. Press CLOCK TUNE to select desired preset number, then press STORE again to save the station to that preset. This unit can store up to 10 stations. Your presets are stored one by one from PD 1 to PD 10.
To recall a preset station:
1. In radio mode, press RECALL.
2. Press RECALL repeatedly to select a desired preset station.

Setting alarms


Setting alarm time
This unit allows two alarms to be set.
1. In clock mode, press and hold SET AL 1 to Set Alarm 1.
2. Press CLOCK TUNE to set the wake time. Press and hold CLOCK TUNE to increase or decrease the time value quickly.
3. To confirm this wake time, press SET AL 1.
4. Select wake source.

Selecting wake source
You may choose beep or radio as your wake up source.
Before setting the time, make sure no audio is playing through the FM radio by pressing the OFF button, then press SET AL 1 to toggle desired wake source (beep, radio, or off).
BEEP - Wake to beep tone.
RADIO - Wake to radio. You will wake up to your most recently tuned radio station(s).
After setting Alarm 1, press SET AL 2 repeatedly to select wake source for Alarm 2.
• To set Alarm 2, follow the steps listed above using the SET AL 2 button.
• Tune to a valid desired station before you select wake to Radio.

Wake to radio
To set wake radio station:
1. Turn on the radio and tune to the desired station.
2. Turn off the radio and press SET AL 1 to set the alarm wake mode to radio.
3. Press and hold SET AL 1 to adjust the alarm time. Press CLOCK TUNE to set the time.
4. Press SET AL 1 to store the alarm time.

Ways to turn off alarm
• To silence the wake function momentarily, press SNOOZE. The BEEP or RADIO wake mode indicator will be flashing during the snooze period. The alarm or radio will turn on again when the snooze period (9 minutes) is over.
• To turn off the alarm, press OFF. The wake alarm or radio will activate again the next day.
• To disable the wake function completely, from clock mode press SET AL 1 or SET AL 2 repeatedly until no wake mode indicator shows on the display.

English

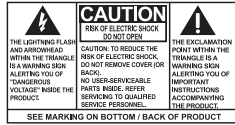

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

Some of the following information may not apply to your particular product, however, with any electronic product, precautions should be observed during handling and use.
• Read these instructions.
• Do not use this apparatus near water.
• Heed all warnings.
• Follow all instructions.
• Do not use this apparatus near water.
• Clean only with a dry cloth.
• Do not use this apparatus outdoors.
• Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
• Do not defeat the safety purpose of the polarized or two-prong power cord.
• Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
• Only use attachments/accessories specified by the manufacturer.
• Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
• Use caution when moving the cart.

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ AND SAVE THIS FOR FUTURE REFERENCE

apparatus combination to avoid lightning from tip-over.
• Unplug this apparatus during lightning storms or when unused for long periods of time.
• Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power supply cord or plug has been damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

ADDITIONAL SAFETY INFORMATION
• The AC/DC adapter supplied with this product is intended to be correctly oriented in a vertical or floor mount position.
• Do not use unauthorized chargers or power adapters.
• Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, bookcase or cabinet that may prevent air flow through vent openings.
• Do not place lighted candles, cigarettes, cigars, etc. on the product.
• Care should be taken so that objects do not fall into the product.
• Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
• The marking information located at bottom of the product.
• To completely disconnect the power input, the AC/DC grounding type plug. A polarized plug should be easily disconnected after intended use.
• Do not attempt to be impeded by covering the ventilation openings with items such as newspaper, table-cloth, curtains, etc.
• To naked flame sources such as lit candles should be placed on the apparatus.
• Only use this in moderate climates.
• Use only with this in moderate climates.

Electrical consumption
AC/DC adapter:
Input: 120 ~ 50 Hz 110 mA
Output: 9 V ~ 1000 mA

FCC Information

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to the radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by VOXAC Accessories Corporation could void the user's authority to operate the equipment.


Industry Canada Regulatory Information
CAN ICES-3 (B)/NMB-3 (B)
Avis de l'industrie Canada
CAN ICES-3 (B)/NMB-3 (B)

Before you begin

Plugging in for power
• Connect the supplied power adapter to the unit's power jack, and connect the other end to a convenient wall outlet.
• Once connected with power, the clock flashes. Refer to the Setting clock time section for instructions on properly setting the clock.

Battery back-up operation
• This clock is equipped with a timekeeping system that can be powered with 2 AA batteries (not included). The power failure protection circuit will not operate unless batteries are installed.
• When normal household power is interrupted, the batteries will power the clock to keep track of time and alarm settings programmed into memory.
• Normal operation will resume after AC power is restored so you will not have to reset the time or the alarm.


To install the batteries:
1. Remove battery compartment door (located at the bottom of the clock) by applying thumb pressure to the tab on the battery door and then lift the door out and off the cabinet.
2. Insert 2 AAA batteries (not included) to the battery compartment.
3. Replace the compartment door.



Power failure indicator
If you have not installed 2 AAA batteries in the product, or if the batteries run out while power is interrupted, all of the settings (clock and alarm) will be lost. After AC power is restored, the digital display will flash to indicate that power was interrupted and that you should adjust the time settings.

Note: It is recommended to replace the batteries at least once per year even if no power failures have occurred.

General controls

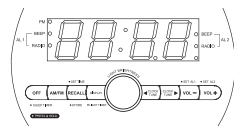

Front view
OFF/SLEEP TIMER - Press to turn the alarm off; press and hold to activate sleep function.
AM/FM - Press to turn the radio on; select between AM and FM bands.

RECALL/STORE/SET TIME - In radio mode, press to recall a stored radio station; press and hold to store a radio station. In clock set mode, press and hold to set clock time.


DISPLAY/LIGHT TIMER - Press to adjust the display brightness; press and hold to set the light timer.

LIGHT BRIGHTNESS (ROTARY KNOB) - Adjust light brightness.

CLOCK TUNE - Select radio frequency; when setting clock or alarm time, press and hold to increase/decrease time, or press and hold to increase/decrease time rapidly. When setting light timer, press and hold to adjust the time.

VOL - /SET AL 1 - Press to select Alarm 1 wake source (beep, radio, or off). Press and hold to set Alarm 1 wake time. In radio mode, press to decrease volume.

VOL - /SET AL 2 - Press to select Alarm 2 wake source (beep, radio, or off). Press and hold to set Alarm 2 wake time. In radio mode, press to increase volume.

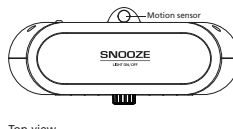

Top view
SNOOZE/LIGHT ON/OFF - Turn off the alarm momentarily (9 minutes). Turn the light on/off permanently.

Motion sensor - Turn the motion actuated light on when motion is detected. The light will remain on for 5 seconds by default. For details on changing the light timer duration refer to the Light Timer section.

Back view
MOTION SENSOR ON/OFF - Turn the motion sensor of the light on/off.

Input 9Vdc - Connect to the supplied power adapter.

Setting clock time

- 1. In clock mode, press and hold SET TIME until the clock flashes to enter the clock time setting mode.
2. Press CLOCK TUNE to set the time.
3. Press and hold CLOCK TUNE to decrease or increase the time value quickly.
4. The clock time is displayed in 12 hour format. The PM indicator appears to show PM time.
5. Press SET TIME to confirm and exit clock setting mode.

Español

IMPORTANTE INSTRUCCIONES DE SEGURIDAD

FAVOR DE GUARDAR ESTO PARA UNA REFERENCIA FUTURA



ADVERTENCIA! PARA EVITAR PELIGRO DE CHOQUE ELÉCTRICO O INCENDIO, NO EXPONGA ESTE PRODUCTO A LA LLUVIA O LA HUMEDAD.

Alguna de la siguiente información quizás no se aplique a su producto en particular. Sin embargo, como con cualquier producto electrónico, se deben tomar precauciones durante su manejo y uso.

- Lea estas instrucciones.
• Conserve estas instrucciones.
• Tome en cuenta todas las advertencias.
• Siga todas las instrucciones.
• No use este aparato cerca del agua.
• Limpie solamente con un paño seco.
• No bloquee ninguna de las aperturas de ventilación.
• Instale de acuerdo con las instrucciones del fabricante.
• No instale cerca de fuentes de calor tales como radiadores, registros de calor, estufas, u otros aparatos (incluyendo amplificadores) que produzcan calor.
• No elimine el propósito de seguridad de la clavija polarizada o del tipo a tierra. Una clavija polarizada tiene dos cuchillas, una más ancha que la otra. Una clavija del tipo a tierra tiene dos cuchillas y una tercera punta para conexión a tierra. La cuchilla ancha o la tercera punta son suministradas para su seguridad. Si la clavija suministrada no se adapta dentro de su toma de corriente, consulte a un electricista para que reemplace la toma de corriente obsoleta.
• Proteja el cable de corriente de pliomones o machucos particularmente en las clavijas, receptáculos de

conveniencia, y en punto donde salen del aparato.
• Use solamente accesorios/adaptamientos especificados por el fabricante.
• Use solamente con el cable, soporte, trípode, consola, o mesa especificados por el fabricante, o vendidos con el aparato. Cuando se utiliza un carro, tenga precaución al mover la combinación de carro/aparato para evitar lesión ocasionada por volcaduras.
• Desconecte este aparato durante tormentas eléctricas o cuando no sea utilizado por largos periodos de tiempo.
• Refiera todo el servicio a personal de servicio calificado. El servicio es requerido cuando el aparato ha sido dañado de alguna forma, tal como daño a la clavija o al cable de corriente, cuando se ha derramado líquido o han caído objetos dentro del aparato, el aparato ha sido expuesto a lluvia o humedad, no funciona normalmente, o ha sido tirado.

CONSUMO ELÉCTRICO
Adaptador CA/CA:
Entrada: 120 ~ 60 Hz 110 mA
Salida: 9 V ~ 1000 mA
No contiene componentes que requieran servicio por parte del cliente.
• La información de enlramiento está ubicada en la parte inferior del aparato.
• Para desconectar completamente la entrada de corriente, el adaptador CA/CA del aparato deberá desconectarse de la toma de corriente.
• El adaptador CA/CA es un dispositivo de desenergía. El adaptador CA/CA no deberá ser bloqueado O deberá ser fácilmente accesible durante el uso para el cual está diseñado.
• No se deberá obstruir la ventilación cubriendo las aperturas de ventilación con elementos tales como periódicos, papeles, cortinas, etcétera.
• Ninguna fuente de flama abierta, tal como velas encendidas, deberá colocarse sobre el aparato.
• Se deberá poner atención a los aspectos ambientales al eliminar las baterías.
• El uso del aparato en climas moderados.
INFORMACION ADICIONAL DE SEGURIDAD
• El adaptador CA/CA suministrado con este producto está diseñado para estar orientado correctamente en una posición de montaje vertical u en el piso.
• No use cargadores o adaptadores de corriente no autorizados. Sólo utilice cargadores o adaptadores de corriente que vengan con su producto o que estén listados en la guía del usuario.
• El aparato no debe quedar expuesto a goteros o salpicaduras de líquidos, y por lo tanto, no se deben colocar sobre el aparato objetos que contengan líquidos, como por ejemplo vasos.
• Siempre deje suficiente espacio para ventilación alrededor del producto. No ponga el producto en la tierra, alfombra, libro o cualquier que pueda obstruir la corriente de aire a través de aperturas de ventilación.
• No pongan velas, cigarrillos o cigarreros encendidos encima de producto.
• Tome precauciones para evitar que caigan objetos dentro del producto.
• No intente desensamblar el gabinete. Este producto



## Temporizador de luz

Si el interruptor **MOTION SENSOR** en la parte posterior de la unidad está encendido, entonces la luz puede ser encendida mediante el movimiento. Usted puede establecer la duración que la luz permanece encendida al ser activada por el sensor de movimiento. Para hacer eso, presione y mantenga presionado el botón **DISPLAY/LIGHT TIMER**. Luego presione **CLOCK TUNE** ◀/▶ para moverse a través de las duraciones disponibles para el temporizador de luz (2 segundos, 5 segundos, 10 segundos, 30 segundos, 1 minuto, 2 minutos, 5 minutos, 10 minutos, ∞). Cuando la duración de la luz esté fija en ∞ la luz no se apagará hasta que usted presione manualmente el botón **SNOOZE/LIGHT ON/OFF**.

## Garantía limitada

### Garantía Limitada de 12 Meses Aplica a Radios Reloj RCA

VOXX Accessories Corporation (la Compañía) garantiza al comprador al menudeo original de este producto que en el caso de que se compruebe que este producto o alguna parte del mismo, bajo condiciones y uso normales, sea defectuoso en material o mano de obra en un plazo de doce meses desde la fecha de compra original, tal(es) defecto(s) será(n) reparado(s) o reemplazado(s) con producto reacondicionado (a opción de la Compañía) sin cargo por las partes y la labor de reparación.

Para obtener el reemplazo o reparación dentro de los términos de esta Garantía, el producto debe ser entregado con prueba de cobertura de la garantía (por ejemplo, la nota de venta fechada), especificación de defecto(s), flete prepagado, a la Compañía en la dirección que se muestra más adelante.

Esta Garantía no se extiende a la eliminación de ruido o estática generados externamente, a la corrección de problemas de antenas, interrupciones/pérdida de transmisión o de servicio de internet, a costos incurridos por instalación, remoción o reinstalación de producto, a corrupciones causadas por virus de computadoras, spyware u otro malware, a pérdida de medios, archivos, datos o contenido, o a daño a cintas, discos, tarjetas o dispositivos de memoria removibles, bocinas, accesorios, computadoras, periféricos de computadora, otros reproductores de medios, redes en el hogar o sistemas eléctricos en vehículos.

Esta Garantía no aplica a algún producto o parte del mismo que, en opinión de la Compañía, haya sufrido o haya sido dañado mediante alteración, instalación inadecuada, mal manejo, mal uso, negligencia, accidente, o por la remoción o eliminación de etiqueta(s) con el número de serie de fábrica/código de barras. LA EXTENSIÓN DE LA RESPONSABILIDAD DE LA COMPAÑÍA BAJO ESTA GARANTÍA ESTÁ LIMITADA A LA REPARACIÓN O REEMPLAZO PROVISTOS ANTERIORMENTE Y, EN NINGÚN CASO, LA RESPONSABILIDAD DE LA COMPAÑÍA EXCEDERÁ EL PRECIO DE COMPRA PAGADO POR EL COMPRADOR.

Esta Garantía substituye todas las otras garantías o responsabilidades específicas. CUALQUIER GARANTÍA IMPLÍCITA, INCLUYENDO CUALQUIER GARANTÍA IMPLÍCITA DE APTITUD PARA COMERCIALIZACIÓN, ESTARÁ LIMITADA A LA DURACIÓN DE ESTA GARANTÍA ESCRITA. CUALQUIER ACCIÓN POR VIOLACIÓN DE ALGUNA GARANTÍA BAJO LA PRESENTE, INCLUYENDO CUALQUIER GARANTÍA IMPLÍCITA DE APTITUD PARA COMERCIALIZACIÓN DEBE SER PRESENTADA DENTRO DE UN PERIODO DE 24 MESES DESDE LA FECHA DE COMPRA ORIGINAL. EN NINGÚN CASO LA COMPAÑÍA SERÁ RESPONSABLE POR ALGÚN DAÑO CONSECUCIONAL O INCIDENTAL POR LA VIOLACIÓN DE ESTA O DE CUALQUIER OTRA GARANTÍA. Ninguna persona o representante está autorizado para asumir por parte de la Compañía alguna responsabilidad distinta que lo expresado en este documento en relación con la venta de este producto.

Algunos estados no permiten limitaciones en cuanto a la duración de una garantía implícita o la exclusión o limitación de daño consecuencial o incidental, por lo tanto las limitaciones o exclusiones anteriores pueden no ser aplicables a usted. Esta Garantía le otorga derechos legales específicos y puede ser que usted tenga también otros derechos que varíen de estado a estado.

### Recomendaciones antes de enviar su producto para una reclamación en garantía:

- Empaque apropiadamente su unidad. Incluya cualquier control remoto, tarjetas de memoria, cables, etc. que fueron originalmente suministrados con el producto. Sin embargo NO regrese baterías removibles, incluso si las baterías fueron incluidas con la compra original. Recomendamos usar los materiales de empaque y la caja originales. Envíe a la dirección que se muestra a continuación.
- Tome nota de que el producto será regresado con las configuraciones predeterminadas de fábrica. El cliente será responsable de restaurar cualquier configuración de su preferencia personal.

**Audiovox Return Center**  
**Atn: Departamento de Servicio.**  
**150 Marcus Blvd.**  
**Hauppauge N.Y. 11788**

1-800-645-4994

Para clientes en Canadá, favor de enviar a:  
Audiovox Return Centre  
c/o Genco  
6685 Kennedy Road,  
Unit#3, Door 16,  
Mississauga, Ontario  
L5T 3A5





## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>