

Radio Cassette Player

Operating Instructions
Инструкция по эксплуатации
Operating Instructions

WALKMAN WALKMAN is a registered trademark of Sony Corporation. WALKMAN является зарегистрированным товарным знаком корпорации Sony.
WM-FX479/FX477 WALKMAN is a registered trademark of Sony Corporation.





Sony Corporation © 1998 Printed in Malaysia

Sony online http://www.world.sony.com/

The instructions in this manual are for WM-FX479 and WM-FX477. Before you start reading, check your model number. WM-FX479 is the model used for illustration purposes. Any differences in operation are clearly indicated in the text, for example, "FX479 only".

Инструкции в данном руководстве предназначены для WM-FX479 и WM-FX477. Перед тем как Вы приступите к чтению проверьте номер Вашей модели. Модель WM-FX479 использована в иллюстративных целях. Любые различия в работе четко указаны в тексте, как например, "только FX479".

The instructions in this manual are for WM-FX479 and WM-FX477. Before you start reading, check your model number. WM-FX479 is the model used for illustration purposes. Any differences in operation are clearly indicated in the text, for example, "FX479 only".

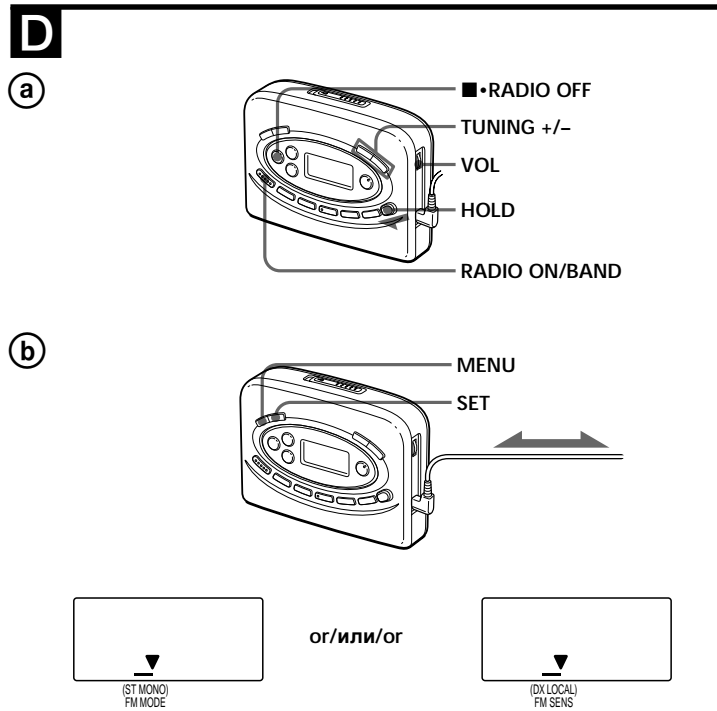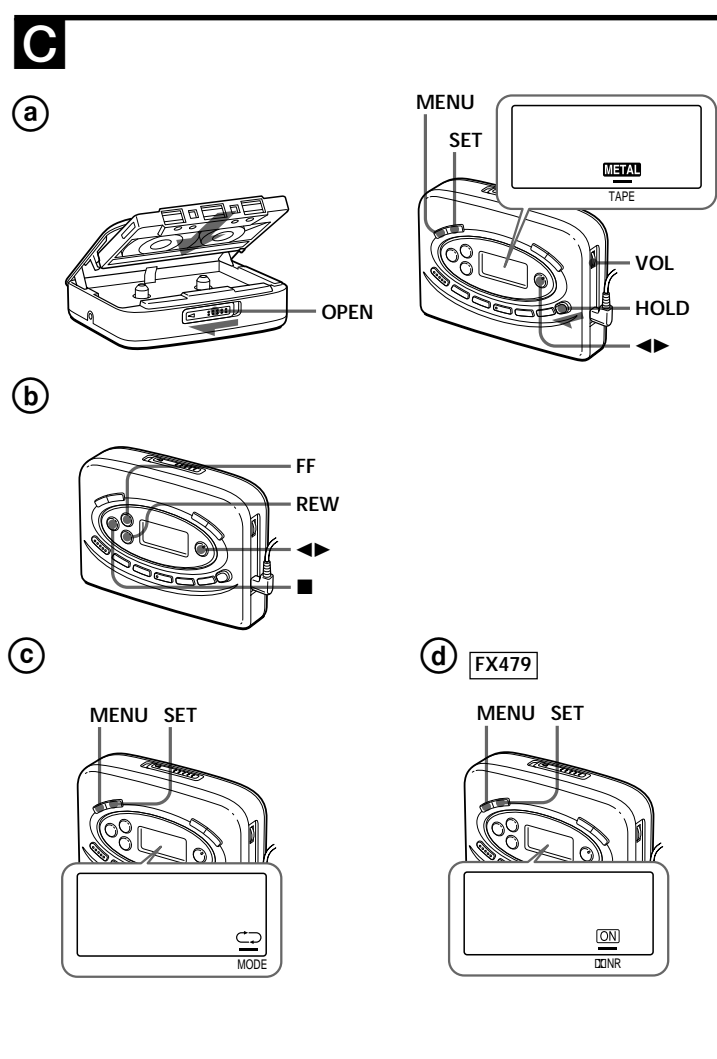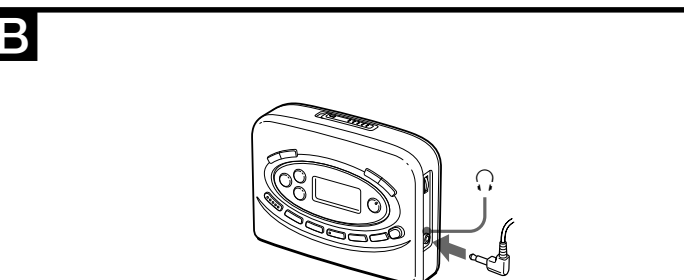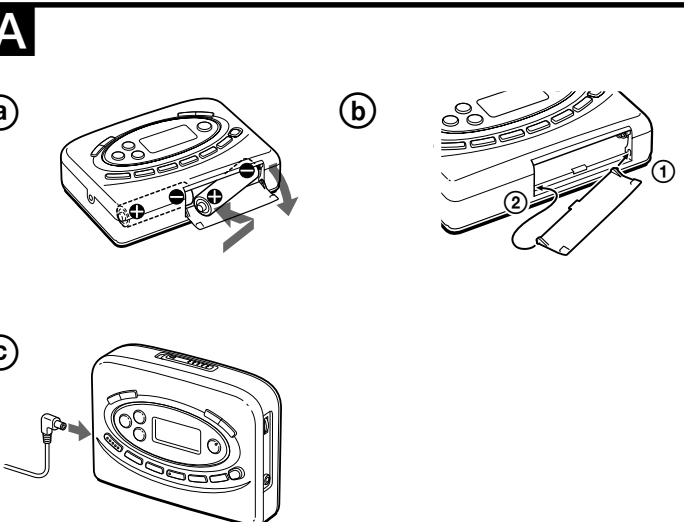

Getting Started

Preparing a Power Source

Dry Battery (see Fig. A-ⓐ)
Open the battery compartment lid, and insert two R6 (size AA) dry batteries with correct polarity.

Note

• For maximum performance we recommend that you use Sony alkaline batteries.

When to replace the batteries

Replace the batteries when "▢" flashes in the display. The battery remainder mark has 3 steps to show the remaining battery power.

Display	Condition
	The battery power is full.
	The battery power is decreasing.
	The batteries are exhausted. Replace them with new ones.

Notes

- The battery remainder mark may temporarily show a lower level during fast forwarding or rewinding or use in extremely low temperatures.
- When replacing batteries, replace both batteries within 30 seconds; otherwise all the memories including the preset radio stations will be canceled.

Battery life (Approx. hours) (EIAJ)*

	Sony alkaline LR6 (SG)	Sony R6P (SR)
Tape playback	24	7.5
Radio reception	40	14

* Measured value by the standard of EIAJ (Electronic Industries Association of Japan). (Using a Sony HF series cassette tape)

Note


• The battery life may shorten depending on the operation of the unit.

If the battery compartment lid comes off

Attach it as shown (see Fig. A-ⓐ).

House Current (mains) (see Fig. A-ⓑ)

Connect the AC power adaptor AC-E30HG (not supplied) to the DC IN 3V jack and to the mains. Do not use any other AC power adaptor. Specifications for AC-E30HG vary for each area. Check your local voltage and the shape of the plug before purchasing.



Connecting the Headphones/ Earphones (see Fig. B)

- 1 Connect the headphones/earphones to ⓐ.
- 2 Wear the "L" marked side to the left ear and the "R" marked side to the right ear. If the earphones do not fit to your ears or the sound is unbalanced, adjust the earphones to fit to your ears firmly.

Operating the Walkman

Playing a Tape (see Fig. C-ⓐ-ⓓ)

- 1 Open the cassette holder and insert a cassette.
- 2 Make sure the HOLD function is turned off. If it is on, slide the HOLD switch to turn it off.
- 3 Press MENU repeatedly to set the cursor to TAPE in the display. Then press SET to select the tape type. No message: normal (TYPE I) METAL: CrO₂ (TYPE II) or metal (TYPE IV)
- 4 Press ◀▶ (play) to start playing then adjust the volume.

Note on the cassette holder
When opening the cassette holder, press the ■ (stop) button and make sure the tape is stopped by checking through the cassette window, then slide the OPEN switch. If the cassette holder is opened before the tape is stopped, the tape may loosen and be damaged.

To	Press (see Fig. C-ⓐ)
play the other side	◀▶ (play) during playback
stop playback	■
fast forward	FF during stop
rewind	REW during stop
play the same side from the beginning (Rewind Auto Play function)	REW during playback
play the other side from the beginning (Skip Reverse function)	FF during playback

To select playback mode (see Fig. C-ⓐ-ⓓ)
Press MENU repeatedly to set the cursor to MODE in the display. Then press SET to select the desired mode.

To play	Select
both sides repeatedly	◀▶
both sides once from the side facing the cassette holder	◀▶

To play a tape recorded with Dolby® NR system (FX479 only) (see Fig. C-ⓐ-ⓓ)
Press MENU repeatedly to set the cursor to DD NR (Dolby noise reduction) in the display. Then press SET to show "ON".

* Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation. "DOLBY" and the double-D symbol DD are trademarks of Dolby Laboratories Licensing Corporation.

Listening to the Radio (see Fig. D-ⓐ-ⓓ)

- 1 Make sure the HOLD function is turned off. If it is on, slide the HOLD switch to turn it off.
- 2 Press RADIO ON/BAND to turn on the radio.
- 3 Press RADIO ON/BAND repeatedly to select AM, FM1, FM2, FM3, FM4 or FM5.
- 4 Press TUNING+/- to tune in to the desired station. If you hold down TUNING+/- for a few seconds, the Walkman will start tuning to the stations automatically.

To turn off the radio

Press ■ RADIO OFF.

To improve the broadcast reception
• For AM: The Walkman has a built-in antenna. Reorient the Walkman horizontally to obtain optimum AM reception.
• For FM (see Fig. D-ⓑ-ⓓ): Extend the headphones/earphones cord, which serves as the aerial. If the reception is still not good, press MENU repeatedly to set the cursor to FM MODE or FM SENS in the display. Then press SET to choose the mode for best reception.

To	Press (see Fig. C-ⓐ)
play the other side	◀▶ (play) during playback
stop playback	■
fast forward	FF during stop
rewind	REW during stop
play the same side from the beginning (Rewind Auto Play function)	REW during playback
play the other side from the beginning (Skip Reverse function)	FF during playback

Note
• The battery life may shorten depending on the operation of the unit.

House Current (mains) (see Fig. A-ⓑ)

Connect the AC power adaptor AC-E30HG (not supplied) to the DC IN 3V jack and to the mains. Do not use any other AC power adaptor. Specifications for AC-E30HG vary for each area. Check your local voltage and the shape of the plug before purchasing.

(turn over)

Подготовка к эксплуатации

Подготовка источника питания

Сухие батарейки (см. рис. A-ⓐ)

Откройте крышку батарейного отсека и вставьте две сухие батарейки R6 (размера AA) с правильной полярностью.

Примечание
• Для получения максимальных рабочих характеристик мы рекомендуем Вам использовать щелочные батарейки Sony.

Когда заменять батарейки
Замените батарейки, когда "▢" будет мигать на дисплее. Указатель оставшегося батарейного заряда имеет три ступени для показания оставшейся мощности батареек.

Дисплей	Состояние
	Батарейки полностью заряжены.
	Мощность батареек ослабла.
	Батарейки разрядились. Замените их новыми батарейками.

Примечания

- Указатель оставшегося батарейного заряда может временно показывать более низкий уровень во время ускоренной перемотки вперед или назад или использования при слишком низкой температуре.
- При замене батареек их следует заменить в течение 30 секунд; в противном случае все содержащиеся в памяти установки, включая предварительно установленные радиостанции, будут аннулированы.

Срок службы батареек (Приблизительно в часах) (EIAJ)*

	Щелочные батарейки Sony LR6 (SG)	Батарейки R6P (SR)
Воспроизведение ленты	24	7,5
Радиоприем	40	14

* Значение измерено по стандарту EIAJ (Electronic Industries Association of Japan). (С использованием кассетной ленты Sony серии HF)

Примечание
• Срок службы батареек может стать короче в зависимости от эксплуатации аппарата.

Если крышка батарейного отсека отсоединится
Прикрепите ее как показано на рисунке (см. рис. A-ⓑ).

Внешнее питание (электрическая сеть) (см. рис. A-ⓑ)

Подсоедините сетевой адаптер переменного тока AC-E30HG (не прилагается) к гнезду постоянного тока DC IN 3V и к электрической сети. Не используйте какой-либо другой сетевой адаптер переменного тока. Технические характеристики адаптера AC-E30HG варьируются для каждой области. Проверьте Ваше местное напряжение и форму штепсельного разъема перед покупкой адаптера.



Подсоединение головных телефонов/наушников (см. рис. B)

- 1 Подсоедините головные телефоны/наушники к гнезду ⓐ.
- 2 Используйте сторону со знаком "L" для левого уха, а сторону со знаком "R" для правого уха. Если наушники не соответствуют Вашим ушам или звучание не сбалансировано, приспособьте (отрегулируйте) наушники в точности к Вашим ушам.

Эксплуатация аппарата Walkman

Воспроизведение ленты (см. рис. C-ⓐ-ⓓ)

- 1 Откройте держатель кассеты и вставьте кассету.
- 2 Убедитесь что функция HOLD выключена. Если она включена передвиньте HOLD для ее выключения.
- 3 Повторно нажимайте MENU для установки курсора в положение TAPE на дисплее. Затем нажмите SET для выбора типа ленты. Нет сообщения: нормальная лента (TYPE I) METAL: Лента CrO₂ (TYPE II) или металлическая (TYPE IV)
- 4 Нажмите ▶ (воспроизведение) для начала воспроизведения, а затем отрегулируйте громкость.

Примечание относительно кассетного держателя
При открывании кассетного держателя нажмите кнопку ■ (остановки) и убедитесь в том, что лента остановилась, проверив через окошко кассеты, а затем передвиньте выключатель OPEN. Если кассетный держатель открыт до остановки ленты, то натяжение ленты может быть ослаблено и лента повредится.

Для	Нажмите (см. рис. C-ⓐ-ⓓ)
Воспроизведения другой стороны	◀▶ (воспроизведение) во время воспроизведения
Остановка воспроизведения	■
Ускоренной перемотки вперед	FF в режиме остановки
Ускоренной перемотки назад	REW в режиме остановки
Воспроизведения той же самой стороны от начала (функция автоматического воспроизведения после перемотки назад)	REW во время воспроизведения
Воспроизведения другой стороны от начала (Функция реверсирования с пропуском).	FF во время воспроизведения

Для выбора режима воспроизведения (см. рис. C-ⓐ-ⓓ)
Повторно нажимайте MENU для установки курсора в положение MODE на дисплее. Затем нажмите SET для выбора желаемого режима.

Для воспроизведения ленты, записанной с использованием системы шумоподавления Dolby® (Только FX479) (см. рис. C-ⓐ-ⓓ)
Повторно нажимайте MENU для установки курсора в положение DD NR (шумоподавление долби) на дисплее. Затем нажмите SET для показания "ON".

* Система Долби для снижения шума, изготовленная по лицензии фирмы Долби Лабораториз Лайсенсинг Корпорэйшн. Слово DOLBY, ДОЛБИ, и состоящий из двух букв D символ DD являются товарными фирмы Долби Лабораториз Лайсенсинг Корпорэйшн.

Для воспроизведения Выберете
Обеих сторон повторно

Для улучшения приема радиопередачи
• Для AM: Аппарат Walkman имеет встроенную антенну. Переориентируйте Walkman горизонтально для получения оптимального приема AM.
• Для FM (см. рис. D-ⓑ-ⓓ): Удлиняйте шнуры головных телефонов/наушников, которые служат в качестве антенны. Если прием все еще нехороший, повторно нажимайте MENU для установки курсора в положение FM MODE или FM SENS на дисплее. Затем нажмите SET для выбора режима с наилучшим приемом.

House Current (mains) (see Fig. A-ⓑ)

Connect the AC power adaptor AC-E30HG (not supplied) to the DC IN 3V jack and to the mains. Do not use any other AC power adaptor. Specifications for AC-E30HG vary for each area. Check your local voltage and the shape of the plug before purchasing.

Getting Started

Preparing a Power Source

Dry Battery (see Fig. A-ⓐ)
Open the battery compartment lid, and insert two R6 (size AA) dry batteries with correct polarity.

Note

• For maximum performance we recommend that you use Sony alkaline batteries.

When to replace the batteries

Replace the batteries when "▢" flashes in the display. The battery remainder mark has 3 steps to show the remaining battery power.

Display	Condition
	The battery power is full.
	The battery power is decreasing.
	The batteries are exhausted. Replace them with new ones.

Notes

- The battery remainder mark may temporarily show a lower level during fast forwarding or rewinding or use in extremely low temperatures.
- When replacing batteries, replace both batteries within 30 seconds; otherwise all the memories including the preset radio stations will be canceled.

Battery life (Approx. hours) (EIAJ)*

	Sony alkaline LR6 (SG)	Sony R6P (SR)
Tape playback	00	00
Radio reception	00	00

* Measured value by the standard of EIAJ (Electronic Industries Association of Japan). (Using a Sony HF series cassette tape)

Note


• The battery life may shorten depending on the operation of the unit.

If the battery compartment lid comes off

Attach it as shown (see Fig. A-ⓐ).

House Current (mains) (see Fig. A-ⓑ)

Connect the AC power adaptor AC-E30HG (not supplied) to the DC IN 3V jack and to the mains. Do not use any other AC power adaptor. Specifications for AC-E30HG vary for each area. Check your local voltage and the shape of the plug before purchasing.



Getting Started

Preparing a Power Source

Dry Battery (see Fig. A-ⓐ)
Open the battery compartment lid, and insert two R6 (size AA) dry batteries with correct polarity.

Note

• For maximum performance we recommend that you use Sony alkaline batteries.

When to replace the batteries

Replace the batteries when "▢" flashes in the display. The battery remainder mark has 3 steps to show the remaining battery power.

Display	Condition
	The battery power is full.
	The battery power is decreasing.
	The batteries are exhausted. Replace them with new ones.

Notes

- The battery remainder mark may temporarily show a lower level during fast forwarding or rewinding or use in extremely low temperatures.
- When replacing batteries, replace both batteries within 30 seconds; otherwise all the memories including the preset radio stations will be canceled.

Battery life (Approx. hours) (EIAJ)*

	Sony alkaline LR6 (SG)	Sony R6P (SR)
Tape playback	00	00
Radio reception	00	00

* Measured value by the standard of EIAJ (Electronic Industries Association of Japan). (Using a Sony HF series cassette tape)

Note

• The battery life may shorten depending on the operation of the unit.

If the battery compartment lid comes off

Attach it as shown (see Fig. A-ⓐ).

House Current (mains) (see Fig. A-ⓑ)

Connect the AC power adaptor AC-E30HG (not supplied) to the DC IN 3V jack and to the mains. Do not use any other AC power adaptor. Specifications for AC-E30HG vary for each area. Check your local voltage and the shape of the plug before purchasing.



To select playback mode (see Fig. C-ⓐ-ⓓ)
Press MENU repeatedly to set the cursor to MODE in the display. Then press SET to select the desired mode.

To play	Select
both sides repeatedly	◀▶
both sides once from the side facing the cassette holder	◀▶

To play a tape recorded with Dolby® NR system (FX479 only) (see Fig. C-ⓐ-ⓓ)
Press MENU repeatedly to set the cursor to DD NR (Dolby noise reduction) in the display. Then press SET to show "ON".

* Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation. "DOLBY" and the double-D symbol DD are trademarks of Dolby Laboratories Licensing Corporation.

Listening to the Radio (see Fig. D-ⓐ-ⓓ)

- 1 Make sure the HOLD function is turned off. If it is on, slide the HOLD switch to turn it off.
- 2 Press RADIO ON/BAND to turn on the radio.
- 3 Press RADIO ON/BAND repeatedly to select AM, FM1, FM2, FM3, FM4 or FM5.
- 4 Press TUNING+/- to tune in to the desired station. If you hold down TUNING+/- for a few seconds, the Walkman will start tuning to the stations automatically.

To turn off the radio

Press ■ RADIO OFF.

To improve the broadcast reception
• For AM: The Walkman has a built-in antenna. Reorient the Walkman horizontally to obtain optimum AM reception.
• For FM (see Fig. D-ⓑ-ⓓ): Extend the headphones/earphones cord, which serves as the aerial. If the reception is still not good, press MENU repeatedly to set the cursor to FM MODE or FM SENS in the display. Then press SET to choose the mode for best reception.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>