


Blu-ray Disc Remote Control
Télécommande Blu-ray Disc
Mando a distancia de Blu-ray Disc

Instruction Manual / Mode d'emploi / Manual de instrucciones

CECHZR1U

3-097-863-13(1)

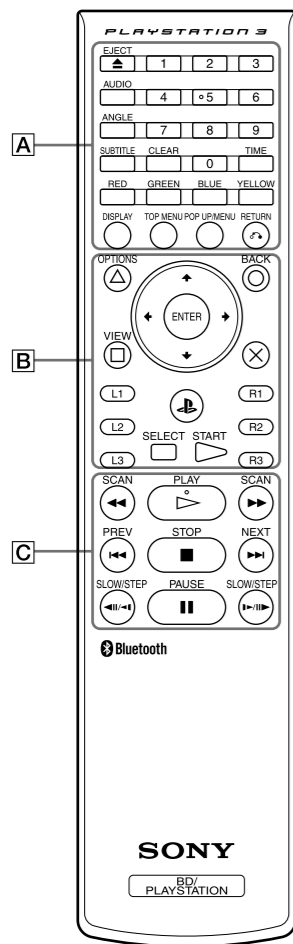

WARNING

- Before using this product, carefully read this manual and retain it for future reference. Read also the instructions for the PLAYSTATION®3 system.
- Do not handle damaged or leaking batteries.

Precautions

Battery use

- Never throw batteries into a fire.
- Do not use batteries other than those specified, and always replace with the same type of battery. Do not mix old and new batteries.
- Insert batteries with the plus and minus ends in the correct direction.
- Remove batteries when they have reached the end of their life, or if the BD remote control is to be stored for an extended period of time.

Use and handling

- Do not expose the BD remote control to high temperatures, high humidity or direct sunlight.
- Do not allow liquid or small particles to get into the product.
- Do not put heavy objects on the product.
- Never disassemble or modify the product.
- Do not throw or drop the product, or subject it to strong physical shock.
- Do not place any rubber or vinyl materials on the product exterior for an extended period of time.
- When cleaning the product, use a soft, dry cloth. Do not use solvents or other chemicals.

Preparing for use

Inserting the batteries

Remove the cover from the BD remote control rear and insert the supplied batteries. Set the batteries in the correct position.

Updating the PS3™ system

PS3™ system software version 1.30 or later is required to use the BD remote control. To check the system software version, from the PS3™ system's home menu, select (Settings) > (System Settings) > "System Information".

You must update the system software if it is a version earlier than 1.30. Use any of the following methods to perform the update.

■ Network update

Download the update data directly to the PS3™ system. From the system's home menu, select (Settings) > (System Update) > "Update via Internet".

■ Update using a PC

Use a PC to download the update data to compatible storage media. For details, visit <http://www.us.playstation.com>.

For other update methods, visit <http://www.us.playstation.com> or contact SCEA Consumer Services at 1-800-345-7669.

Registering the BD remote control with the PS3™ system

Before using the BD remote control, you must register ("pair") the remote control with the PS3™ system. This operation is performed only once when you are using the remote control for the first time.

- 1 Turn on the PS3™ system.**
- 2 From the system's home menu, select (Settings) > (Accessory Settings) > "Register BD Remote Control", and then press the × button.**
- 3 Follow the on-screen instructions.**

Hints

- If "Register BD Remote Control" is not displayed in step 2, select "Manage Bluetooth® Devices".
- The registration process may vary depending on the version of the system software in use. For the latest usage instructions, refer to the user's guide for the PS3™ system (<http://manuals.playstation.net/document/>).
- Only one BD remote control can be registered with the PS3™ system.
- If you register the BD remote control with another PS3™ system, you will have to re-register if you want to use the remote control again with the first PS3™ system.

Basic operations

Basic operation of the BD remote control

This manual explains button operations for Blu-ray Disc (BD) playback. The same operations can also be performed when playing DVD videos, videos saved on the hard disk drive or audio CDs, with the exception of some functions.

Notice
Some content may have preset playback conditions set by the content developer. In this case, some button operations of the remote control may not be available.

A) button operations (refer to diagram)

EJECT button	Eject the disc.
AUDIO button	Change audio on BDs with multiple audio tracks recorded.
ANGLE button	Change viewing angles on BDs with multiple angles recorded on the same scene.
SUBTITLE button	Change the language for subtitles on BDs with subtitles recorded.
CLEAR button	Clear entered numbers.
TIME button	View the elapsed time or remaining time of a title or chapter.
0-9 button	Enter numbers.
RED, GREEN, BLUE, YELLOW button	Perform functions assigned to each button. (Assigned functions vary depending on the content being played.)
DISPLAY button	View status information or other information on the content being played.
TOP MENU button	View the content's top menu.
POP UP/MENU button	View the content's pop-up menu.
RETURN button	Return to a specific point in the video.

B) button operations (refer to diagram)

△/OPTIONS, □/VIEW, ×, ○/BACK button	Perform the same operations as the wireless controller for the PS3™ system.
Directional buttons	
(PS button)	
L1, R1, L2, R2, L3, R3 button	
SELECT, START button	Perform the same operation as the × button on the wireless controller for the PS3™ system.
ENTER button	

C) button operations (refer to diagram)

PLAY button	Start playback.
STOP button	Stop playback.
PAUSE button	Stop playback temporarily.
◀◀SCAN, ▶▶SCAN button	Fast forward or fast reverse playback. Playback speed changes each time you press the button.
◀◀PREV, ▶▶NEXT button	Move to the previous or next chapter.
◀ /▶ SLOW/STEP, ▶ ▶SLOW/STEP button	Play content one frame at a time. If you press and hold down the button, content plays in slow motion.

Hint

Pressing any button on the BD remote control when the PS3™ system is turned off (in standby mode) will turn on the system.

If the battery charge is low

When the battery charge is low, the remote control may not operate properly or the distance within which you can operate the remote control may become shorter. In this case, replace both batteries with new ones.

Specifications

Power source	Size AA batteries (2)
External dimensions	Approx. .51 × 25.5 × 219 mm / 2 × 1 × 8.6 in (w × h × d)
Operating temperature	5°C – 35°C / 41°F – 95°F

Design and specifications are subject to change without notice.

About national export control

This product may fall within the scope of national export control legislation. You must comply fully with the requirements of such legislation and of all other applicable laws of any jurisdiction in relation to this product.

Notice about U.S. Export Administration Regulations

This product contains components and software that are subject to certain restrictions under the U.S. Export Administration Regulations, and may not be exported or re-exported to U.S. embargoed destinations. In addition this product may not be exported or re-exported to persons and entities prohibited by the U.S. Export Administration Regulations.

AVERTISSEMENT

- Avant d'utiliser ce produit, lisez attentivement ce manuel et conservez-le pour pouvoir le consulter ultérieurement. Lisez aussi les instructions pour le système PLAYSTATION®3.
- Ne manipulez aucune pile endommagée ou qui présente une fuite.

Précautions

Utilisation des piles

- Ne jetez jamais les piles au feu.
- Utilisez exclusivement les piles spécifiées et remplacez-les toujours par des piles du même type. Ne mélangez pas des piles neuves avec des piles usées.
- Insérez les piles en plaçant les pôles positif et négatif dans le bon sens.
- Retirez les piles lorsqu'elles sont complètement déchargées ou si vous rangez la télécommande BD pour une période prolongée.

Utilisation et manipulation

- N'exposez pas la télécommande BD à des températures élevées, à une humidité excessive ou aux rayons directs du soleil.
- Ne laissez pas de liquide ou de petites particules s'introduire dans le produit.
- Ne placez pas d'objets lourds sur le produit.
- Ne désassemblez ou ne modifiez jamais le produit.
- Ne lancez pas le produit, et évitez de le laisser tomber ou de le soumettre à des chocs violents.
- Ne placez aucun matériau en caoutchouc ou en vinyle sur l'extérieur du produit pendant une période prolongée.
- Pour nettoyer le produit, utilisez un linge doux et sec. N'utilisez aucun solvant ou autre produit chimique.

Préparatifs pour l'utilisation

Insérer les piles

Retirez le couvercle à l'arrière de la télécommande BD et insérez les piles fournies en vous assurant de bien respecter les polarités.

Mettre à jour le système PS3™

La version 1.30 du système PS3™ ou une version ultérieure est requise pour utiliser la télécommande BD. Pour vérifier la version du logiciel système, sélectionnez (Paramètres) > (Paramètres système) > "Informations système" dans le menu d'accueil du système PS3™.

Vous devez mettre à jour le logiciel système s'il s'agit d'une version antérieure à 1.30. Utilisez l'une ou l'autre des méthodes suivantes pour effectuer la mise à jour.

■ Mise à jour réseau

Téléchargez les données de mise à jour directement sur le système PS3™. Dans le menu d'accueil du système, sélectionnez (Paramètres) > (Mise à jour système) > "Mise à jour par Internet".

■ Mise à jour au moyen d'un ordinateur

Utilisez un ordinateur pour télécharger les données de mise à niveau pour les supports de stockage compatibles. Pour plus de détails, visitez <http://www.us.playstation.com>.

Pour d'autres méthodes de mise à jour, visitez le site <http://www.us.playstation.com> ou contactez le Service consommateurs SCEA au 1-800-345-7669.

Enregistrer la télécommande BD pour le système PS3™

Avant d'utiliser la télécommande BD, vous devez enregistrer ("associer") la télécommande avec le système PS3™. Cette opération n'est effectuée qu'une seule fois, lors de la première utilisation de la télécommande.

- 1 Mettez le système PS3™ sous tension.**
- 2 Dans le menu d'accueil du système, sélectionnez (Paramètres) > (Paramètres accessoires) > "Enregistrer la télécommande BD", puis appuyez sur la touche ×.**
- 3 Suivez les instructions qui s'affichent.**

Conseils

- Si "Enregistrer la télécommande BD" ne s'affiche pas lors de l'étape 2, sélectionnez "Gérer les périphériques Bluetooth®".
- La procédure d'enregistrement peut varier selon la version du logiciel système utilisé. Pour les dernières instructions en date, veuillez consulter le mode d'emploi du système PS3™ (<http://manuals.playstation.net/document/>).
- Il n'est possible d'enregistrer qu'une seule télécommande BD avec le système PS3™.
- Si vous enregistrez la télécommande BD avec un autre système PS3™, vous devez la réenregistrer si vous désirez utiliser la télécommande à nouveau avec le premier système PS3™.

Commandes de base

Commande de base de la télécommande BD

Ce manuel explique les commandes de touche pour la lecture des disques Blu-ray (BD). Les mêmes commandes sont également exécutables lors de la lecture des disques DVD-Vidéo, des vidéos enregistrées sur le disque dur ou des CD audio, à l'exception de certaines fonctions.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>