HANNspree *Quick Start Guide*
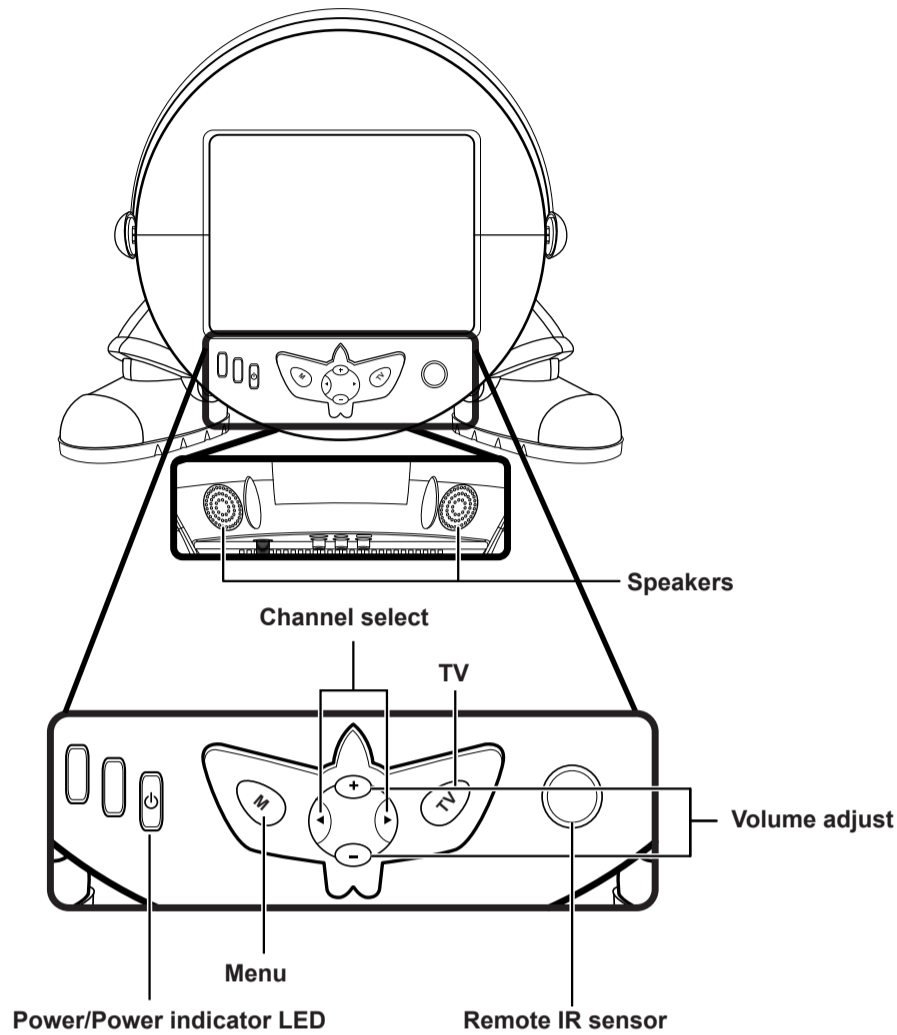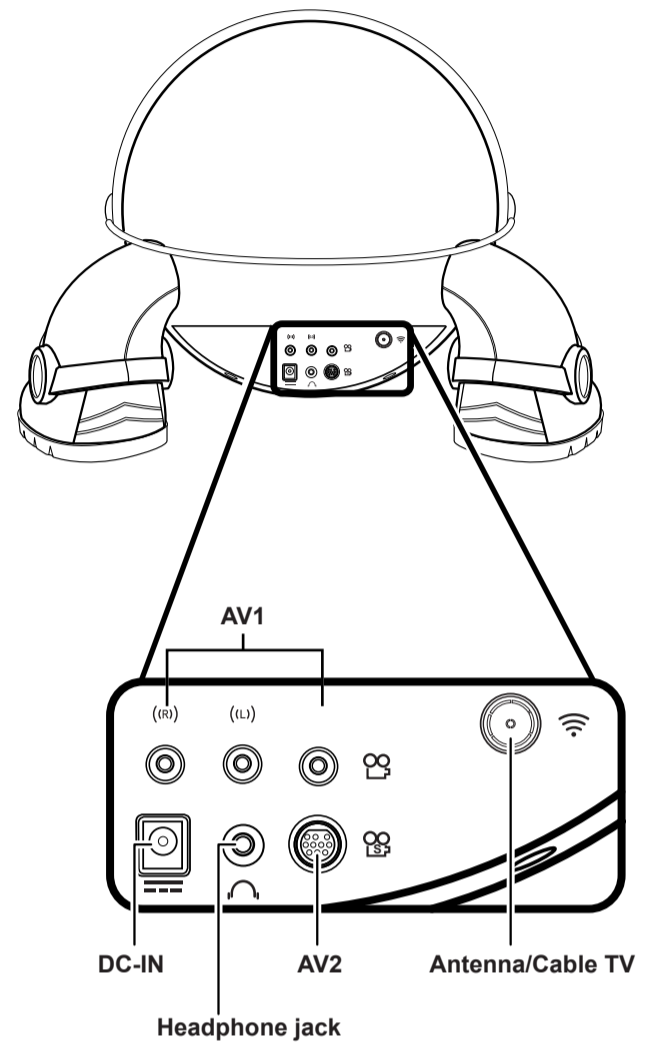
DT02-10C1 9.6" Liquid Crystal Display TV

This guide is designed as a reference to help you start using your LCD TV quickly. Please refer to the User's Manual for more detailed installation and safety instructions.
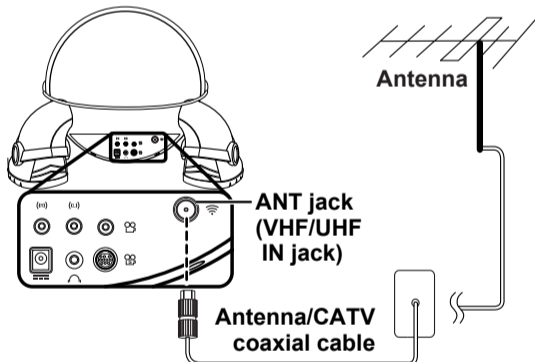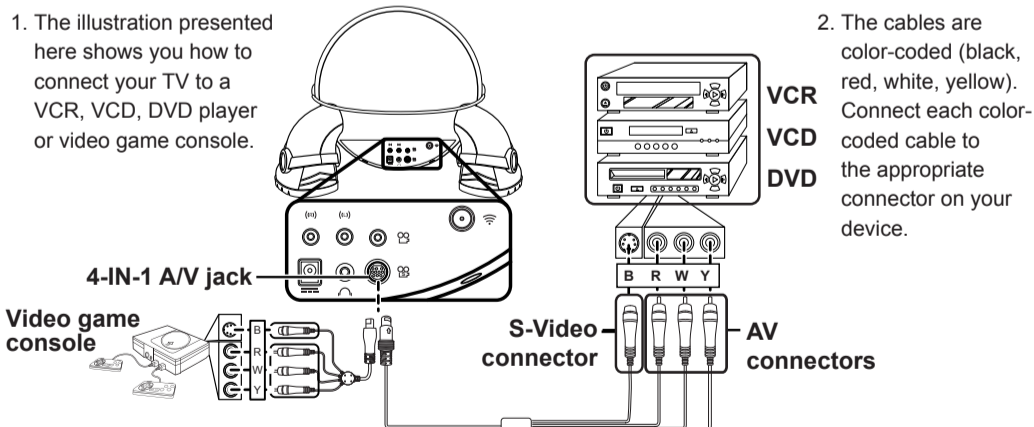
Front View

- Speakers
- Channel select
- TV
- Volume adjust
- Menu
- Power/Power indicator LED
- Remote IR sensor

Rear View

- AV1
- DC-IN
- AV2
- Antenna/Cable TV
- Headphone jack

Making Connections

Connecting to Antenna/Cable TV

- Antenna
- ANT jack (VHF/UHF IN jack)
- Antenna/CATV coaxial cable

1. Connect one end of the VHF/UHF (Antenna) or CATV cable to ANT Jack (VHF/UHF IN Jack) on the back of the TV.

2. Connect the other end of the VHF/UHF (Antenna) or CATV cable to the Antenna or CATV socket.
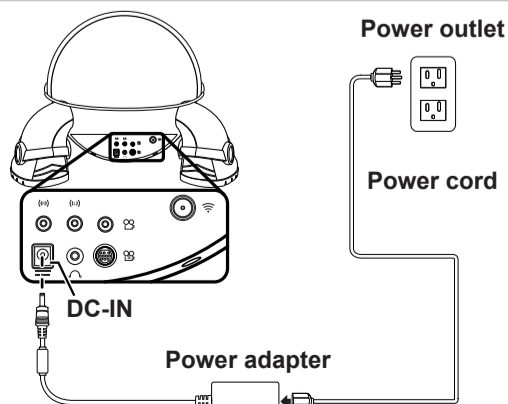
Connecting to a VCR, VCD, DVD Player, or Video Game Console

1. The illustration presented here shows you how to connect your TV to a VCR, VCD, DVD player or video game console.

- 4-IN-1 A/V jack
- Video game console
- S-Video connector
- AV connectors
- VCR
- VCD
- DVD
- B R W Y

2. The cables are color-coded (black, red, white, yellow). Connect each color-coded cable to the appropriate connector on your device.

Connecting the Power Adapter

- Power outlet
- Power cord
- DC-IN
- Power adapter

1. Connect the power cord to the power adapter as illustrated.
2. Plug the power adapter connector into the DC-IN input jack on the rear panel of the TV.
3. Insert the three-pronged plug at the other end of the power cord into a power outlet.
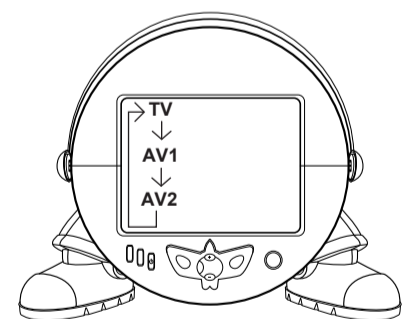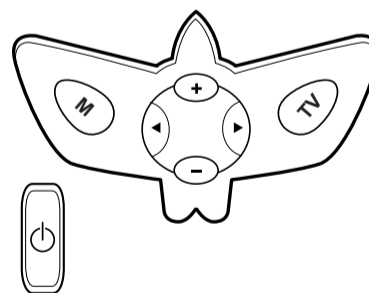
Note :
Images are for illustration only and may vary by model or region.

A/V and Channel Setup

Selecting A/V Sources

1. Make sure your TV is turned on and a device such as a DVD player is connected.

2. Press the **SOURCE** button on the control panel to select different source signals. TV channel number, AV1, AV2 or AV2s appear on the screen.

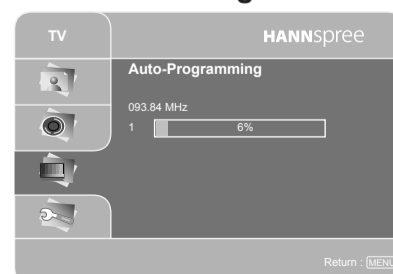Note : AV2s only appears on the screen when S-Video is connected.

- TV
- AV1
- AV2

Auto Channel Setup

Please follow the instructions by using the control panel.
1. Press the **MENU** button to enter the OSD menu.
2. Use the **CH◄** button to select "TV".
3. Press the **VOL ✚** button to enter the TV setting.
4. Press the **CH ◄** button until the "Auto Program" feature is selected.
5. Press the **VOL ✚** button to begin "Auto Program".
6. Your television will begin automatically memorizing the available channels.

Auto Program

- TV
- HANNspree
- Auto-Programming
- 093.84 MHz
- 1   6%
- Return [MENU]

© Disney/Pixar

MAD-001403

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com