OMRON

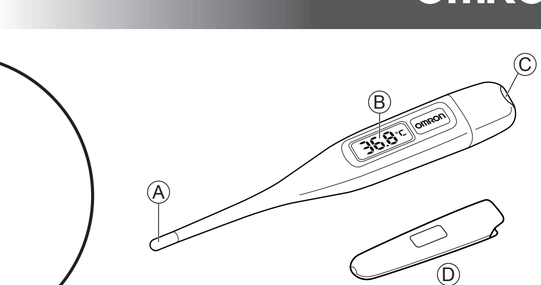

Digital thermometer

Model Eco Temp II (Water-resistant)

- Digitales Fieberthermometer
- Thermomètre digital
- Termometro digitale
- Termómetro digital
- Termómetro digital
- Digitalt termometer
- Digitaalinen kuumemittari
- Digitalt termometer
- Digitalt feberthermometeret
- Digitale koortsthermometer
- Ψηφιακό θερμόμετρο
- Dijital klinik termometresi
- Цифровой термометр

DE FR IT ES PT DK FI NO SE NL EL TR RU

A Good Sense of Health

IM-MC-241W-E-03-08/08
1664195-7C

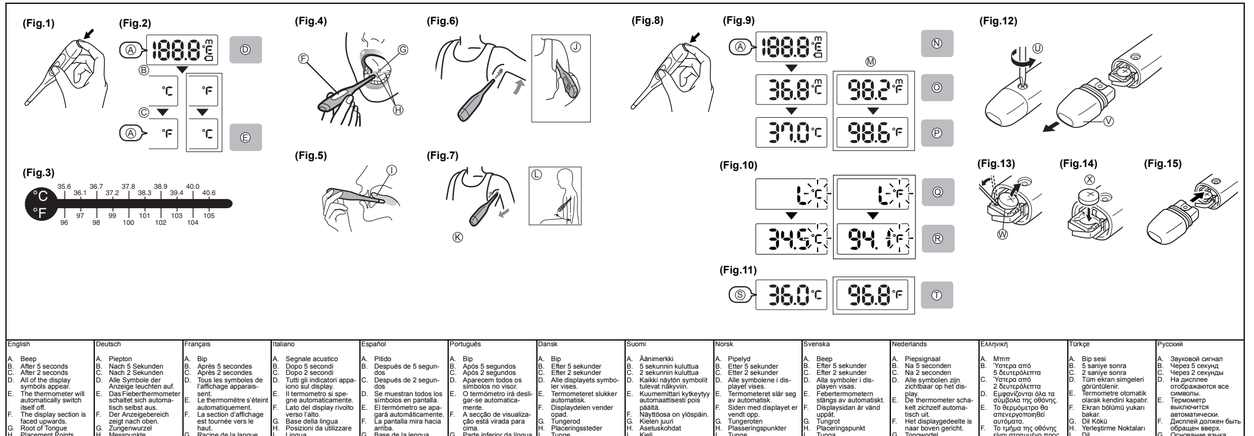

English	Deutsch	Français	Italiano	Español	Português	Dansk	Suomi	Norsk	Svenska	Nederlands	Ελληνική	Türkçe	Русский
A. Beep B. After 5 seconds C. After 2 seconds D. All of the display symbols appear. E. The thermometer will automatically switch itself off. F. The display section is faced upwards. G. Root of Tongue H. Placement Points I. Tongue J. Turn the display so that it faces the arm. K. * In the case of infants and very young children, gently hold the arm to prevent movement. L. The angle should be 35-45 degrees in relation to the arm. M. °F N. All of the display symbols appear. O. The most recently measured temperature is displayed together with the M indicator. P. Waiting for use. Q. When the [°C/°F] indicator symbol blinks on and off, the thermometer is ready for use. R. Temperature measurement will commence and the [°C/°F] indicator symbol will blink on and off. S. Beep-beep-beep T. The [°C/°F] indicator symbol will stop blinking and stay on when the reading is ready. U. Remove the screw. V. Battery Cover W. Battery X. The "+" mark faces upwards	A. Piepton B. Nach 5 Sekunden C. Nach 2 Sekunden D. Alle Symbole der Anzeige leuchten auf. E. Das Fieberthermometer schaltet sich automatisch selbst aus. F. Der Anzeigebereich zeigt nach oben. G. Zungenwurzel H. Messpunkte I. Zunge J. Drehen Sie die Anzeige so, dass diese nach oben zeigt. K. * Im Falle Säuglingen und sehr kleinen Kindern den Arm vorsichtig festhalten, um Bewegung zu verhindern. L. Der Winkel in Bezug auf den Arm sollte 35 bis 45° betragen. M. °F N. Alle Symbole der Anzeige leuchten auf. O. Die zuletzt gemessene Temperatur wird zusammen mit dem M-Symbol angezeigt. P. Vor der Anwendung. Q. Wenn das [°C/°F]-Symbol blinkt, ist das Fieberthermometer einsatzbereit. R. Die Temperaturmessung beginnt und das [°C/°F]-Symbol blinkt weiterhin. S. Piep-Piep-Piep T. Das [°C/°F]-Symbol hört auf zu blinken und leuchtet ständig, wenn die Messung abgeschlossen ist. U. Entfernen Sie die Schraube. V. Batterieabdeckung W. Batterie X. Die Markierung „+" zeigt nach oben	A. Bip B. Après 5 secondes C. Après 2 secondes D. Tous les symboles de l'affichage apparaissent. E. Le thermomètre s'éteint automatiquement. F. La section d'affichage est tournée vers le haut. G. Racine de la langue H. Points de placement I. Langue J. Orientez l'affichage afin qu'il soit tourné vers l'utilisateur. K. * Pour des nourrissons et de très jeunes enfants, maintenir délicatement le bras pour empêcher tout mouvement. L. Le thermomètre doit être placé à un angle de 35 à 45 degrés par rapport au bras. M. °F N. Tous les symboles de l'affichage apparaissent. O. La dernière température mesurée est affichée avec l'indicateur M. P. En attente d'utilisation. Q. Lorsque le symbole [°C/°F] clignote, le thermomètre est prêt à l'emploi. R. La mesure de la température commence et le symbole [°C/°F] clignote. S. Bip-bip-bip T. Le symbole [°C/°F] cesse de clignoter et reste allumé en continu lorsque la mesure est terminée. U. Retirer la vis. V. Couvercle du compartiment de la pile W. Pile X. Le signe « + » est tourné vers le haut	A. Segnale acustico B. Dopo 5 secondi C. Dopo 2 secondi D. Tutti gli indicatori appaiono sul display. E. Il termometro si spegne automaticamente. F. Lato del display rivolto verso l'alto. G. Base della lingua H. Posizioni da utilizzare I. Lingua J. Posizionare il display in modo che sia rivolto verso l'interno. K. * Nell'uso con neonati o bambini molto piccoli, tenere fermo il braccio con delicatezza per evitare movimenti. L. L'angolazione rispetto al braccio deve essere di 35-45 gradi. M. °F N. Tutti gli indicatori appaiono sul display. O. Valore della temperatura rilevato, viene mostrato assieme all'indicatore M. P. Attesa per l'utilizzo. Q. Quando l'indicatore [°C/°F] lampeggia, il termometro è pronto per l'uso. R. La misurazione della temperatura ha inizio e l'indicatore [°C/°F] lampeggia. S. Tre segnali acustici T. Al termine della misurazione, l'indicatore [°C/°F] smette di lampeggiare e rimane fisso. U. Rimuovere la vite. V. Coperchio della batteria W. Batteria X. Il simbolo "+" deve essere rivolto verso l'alto	A. Pitido B. Después de 5 segundos C. Después de 2 segundos D. Se muestran todos los símbolos en pantalla. E. El termómetro se apaga garà automáticamente. F. La pantalla mira hacia arriba. G. Base de la lengua H. Puntos de colocación I. Lengua J. Gire la pantalla para que mire hacia dentro. K. * En lactantes y niños muy pequeños, sostenga el brazo con cuidado para que no se mueva. L. El ángulo debería ser de entre 35-45 grados respecto al brazo. M. °F N. Se muestran todos los símbolos en pantalla. O. Se muestra la temperatura medida inmediatamente antes junto con el indicador M. P. En espera de uso. Q. El termometro está listo para usar cuando parpadea el símbolo indicador [°C/°F]. R. Comienzará la medida de temperatura y el indicador [°C/°F] parpadeará. S. Pip-pip-pip T. El indicador [°C/°F] dejará de parpadear y quedará fijo cuando la medida esté lista. U. Retire el tornillo. V. Tapa de las pilas W. Pila X. La marca "+" mira hacia arriba	A. Bip B. Após 5 segundos C. Após 2 segundos D. Aparecem todos os símbolos no visor. E. O termómetro irá desligar-se automaticamente. F. A secção de visualização está voltada para cima. G. Parte inferior da língua H. Pontos de colocação I. Língua J. Rodeie o visor para que fique virado para dentro. K. * Ao usar com bebés e crianças muito pequenas, segure cuidadosamente o braço para impedir movimentos. L. O ângulo deverá ser entre 35 e 45 graus relativamente ao braço. M. °F N. Aparecem todos os símbolos no visor. O. A temperatura medida mais recentemente é apresentada juntamente com o indicador M. P. A aguardar utilização. Q. Quando o símbolo indicador [°C/°F] piscar, o termómetro está pronto a ser utilizado. R. A medição da temperatura começa e o símbolo [°C/°F] pisca. S. Bip-bip-bip T. O símbolo indicador [°C/°F] pára de piscar e fica aceso quando a leitura está concluída. U. Retire o parafuso. V. Tampa da pilha W. Pilha X. A marca "+" está virado para cima	A. Bip B. Efter 5 sekunder C. Efter 2 sekunder D. Alle symboler i displayet vises. E. Termometeret slukker automatisk. F. Displayelelen vender opad. G. Tungerod H. Placeringspunkt I. Tunge J. Vend displayet, så det vender indad. K. * Hvis der er spædbørn og meget små børn, holdes armen forsigtigt for at forhindre bevægelse. L. Vinklen skal være 35-45 grader i forhold til armen. M. °F N. Alle displayets symboler vises. O. Den seneste målte temperatur vises sammen med M-indikatoren. P. Venter på brug. Q. Når [°C/°F] indikatorsymbolet blinker for tændt og slukket, er termometret klar til brug. R. Temperaturmålingen begynder, og [°C/°F] indikatorsymbolet blinker fortsat og slukket. S. Bip-bip-bip T. [°C/°F] indikatorsymbolet holder op med at blinke og forbliver tændt, når aflæsningen er klar. U. Fjern skruen. V. Batteridækksel W. Batteri X. "+" mærket vender opad	A. Äänimerkki B. 5 sekunnin kuluttua C. 2 sekunnin kuluttua D. Kaikki näytön symbolit tulevat näkyviin. E. Kuumemittari sulkeutuu automaattisesti pois päältä. F. Näyttöosa on ylöspäin. G. Kielen juuri H. Asetuskohdat I. Kieli J. Käänna näyttö sisäänpäin. K. * Jos mittaria käytetään vauvoilla ja pienillä lapsilla, pitele varovasti käsivarresta kiinni, ettei niitä pääse liikkumaan. L. Kulman tulee olla 35–45 asteita käsivarteen nähden. M. °F N. Kaikki näytön symbolit tulevat näkyviin. O. Viimeksi mitattu lämpötila ja M-merkki näkyvät yhdessä. P. Odottaa käyttöä. Q. Kun [°C/°F]-merkki vilkkuu näkyvin ja pois, mittari on valmiina käyttöön. R. Lämpötilan mittaus alkaa ja [°C/°F]-merkki vilkkuu näkyvin ja pois. S. Kolme äänimerkkiä [°C/°F]-merkki lakkaa vilkkumasta ja jää näkyviin, kun lukema on valmis. T. Poista ruuvi. U. Paristokeloon kansi V. Paristo X. "+"-merkki on ylöspäin	A. Pipesignal B. Etter 5 sekunder C. Etter 2 sekunder D. Alle symbolene vises. E. Termometeret slås av automatisk. F. Displayet vender opp. G. Tungerot H. Plasseringspunkt I. Tunge J. Plasser termometeret slik at displayet vender inn. K. * Hold armen på spedbarn og svært små barn forsiktig fast for å hindre bevegelse. L. Vinkelen skal være 35-45 grader i forhold til armen. M. °F N. Alle symbolene i displayet vises. O. Den sist målte temperaturen vises sammen med indikatoren M. P. Venter på å bli brukt. Q. Når indikatorsymbolet [°C/°F] blinker, er termometeret klar til bruk. R. Målingen av temperaturen starter, og indikatorsymbolet [°C/°F] blinker. S. Tre Pip T. Indikatorsymbolet [°C/°F] slutter å blinke og lyser fast når resultatet er klart. U. Skru løs skruen. V. Batteridekksel W. Batteri X. Skyvemarket vender opp	A. Piepsignaal B. Na 5 seconden C. Na 2 seconden D. Alle symbolen zijn zichtbaar op het display. E. De thermometer schakelt zich uit. F. Het display gedeelte is naar boven gericht. G. Tongwortel H. Plaatsingspunten I. Tong J. Draai het display zo dat het naar binnen wijst. K. * Houd bij baby's en heel jonge kinderen de arm voorzichtig vast, zodat deze niet kan bewegen. L. De hoek ten opzichte van de arm moet 35 tot 45 graden zijn. M. °F N. Alle symbolen zijn zichtbaar op het display. O. De laatst gemeten temperatuur wordt op het display weergegeven, samen met de indicator "M". P. Wacht op gebruik. Q. Als het indicatorsymbool [°C/°F] knippert, is de thermometer klaar voor gebruik. R. De temperatuurmeting begint en het indicatorsymbool [°C/°F] knipert. S. Piep-piep-piep T. Het indicatorsymbool [°C/°F] stopt met knipperen en blijft branden wanneer de meting is voltooid. U. Verwijder de schroef. V. Kapje van batterijvak W. Batterij X. Het "+"teken wijst naar boven	A. Ήχος B. Μετά 5 δευτερόλεπτα C. Μετά από 2 δευτερόλεπτα D. Εμφανίζονται όλα τα σύμβολα της οθόνης. E. Το θερμόμετρο θα απενεργοποιηθεί αυτόματα. F. Το τμήμα της οθόνης είναι στραμμένο προς τα επάνω. G. Ρίζα της γλώσσας H. Σημεία τοποθέτησης I. Γλώσσα J. Γυρίστε την οθόνη έτσι ώστε να είναι στραμμένη προς τα μέσα. K. * Στην περίπτωση των βρεφών και των πολύ μικρών παιδιών, κρατήστε μαλακά τον βραχίονα για να αποτρέψετε τις κίνηση. L. Η γωνία πρέπει να είναι 35-45 μοίρες σε σχέση με τον βραχίονα. M. °F N. Εμφανίζονται όλα τα σύμβολα της οθόνης. O. Η θερμοκρασία που μετρήθηκε που πρόσφατα εμφανίζεται μαζί με την ένδειξη M. P. Αναμονή για χρήση. Q. Όταν το ενδεικτικό σύμβολο [°C/°F] αναβοσβήνει, το θερμόμετρο είναι έτοιμο για χρησιμοποίηση. R. Η μέτρηση της θερμοκρασίας θα ξεκινήσει και το ενδεικτικό σύμβολο [°C/°F] θα συμπεριφερεί με αναβοσβήνει και σβήνει. S. Πιπ-πιπ-πιπ T. Το ενδεικτικό σύμβολο [°C/°F] θα σταματήσει να αναβοσβήνει και θα παραμείνει αναμμένο όταν η μέτρηση είναι έτοιμη. U. Αφαίρεση της βίδας V. Κάλυμμα μπαταρίας W. Μπαταρία X. Το σύμβολο "+" είναι στραμμένο προς τα επάνω	A. Bip sesi B. 5 saniye sonra C. 2 saniye sonra D. Tüm ekran simgeleri görüntülenir. E. Termometre otomatik olarak kendini kapatır. F. Ekran bölümü yukarı bakar. G. Dil Kökü H. Yerleştirme Noktaları I. Dil J. Ekranı içeriye bakacak şekilde döndürün. K. * Bebeklerde ve çok küçük çocuklarda kullanırken, hareket etmemesi için kolu hafifçe tutun. L. Kola göre 35-45 derece açıyla tutulmalıdır. M. °F N. Tüm ekran simgeleri görüntülenir. O. En son ölçülen ateş değeri M göstergesiyle birlikte görüntülenir. P. Kullanım için bekliyor. Q. [°C/°F] göstergesi simgesi açık ve kapalı olarak yanıp söndüğünde termometre kullanıma hazırdır. R. Ateş ölçüm işlemi başlar ve [°C/°F] göstergesinin simgesi yanıp söner. S. Bip-bip-bip T. [°C/°F] göstergesinin simgesi yanıp sönmeyi durdurur ve ölçüm değeri hazır olduğunda yanık kalır. U. Vidayı çıkarın. V. Pil Kapağı W. Pil X. "+" işareti yukarı bakar	A. Звуковой сигнал B. Через 5 секунд C. Через 2 секунды D. Все дисплеи отображаются все символы. E. Термометр выключается автоматически. F. Дисплей должен быть обращен вверх. G. Основание языка H. Места измерения I. Язык J. Поверните термометр так, чтобы дисплей смотрел внутрь. K. * При измерении температуры у младенца или маленького ребенка необходимо мягко придерживать его руку, чтобы не допускать движений. L. По отношению к плечу угол должен составлять 35–45 градусов. M. °F (на шкале Фаренгейта) N. На дисплее отображены все символы. O. Сигнал «М» обозначает последнее измеренное значение температуры. P. Режим ожидания. Q. Мигающий [°C/°F] на дисплее означает, что термометр готов к измерению. R. После начала измерения температуры символ [°C/°F] продолжает мигать на индикаторе. S. Звуковой сигнал повторяется три раза. T. После получения результата измерения символ [°C/°F] перестает мигать и отображается на дисплее непрерывно. U. Выкрутите винт. V. Крышка батареи W. Батарея X. Знак «+» должен быть обращен вверх

Digital Thermometer English

A. Sensor Tip
B. Display Window
C. ON/OFF Button
D. Storage Case

Introduction

Thank you for purchasing an OMRON Eco Temp II Digital Thermometer.
The thermometer you purchased offers a safe, accurate and quick temperature reading. You can measure your temperature either in the anus (rectally), in the mouth (orally) or in the armpit (axillary).
Thoroughly read this instruction manual before using your OMRON Eco Temp II Digital Thermometer. Contact your doctor if you have any questions regarding specific temperatures.

Important Safety Notes

To assure the correct use of the product basic, safety measures should always be followed including the precautions listed below.

⚠Warning

- Please note that the temperature reading can be affected by various physical circumstances. Please consult a doctor if the thermometer measures abnormal temperatures over a prolonged period of time.
- Please keep still during measuring.
- Keep the thermometer and its small parts out of reach of children. Do not allow children to take their temperatures unattended.
- Do not attempt measurements when the thermometer is wet.
- Do not attempt rectal measurements on persons with rectal disorders.

⚠Caution

Do handle the thermometer with care and do not use the thermometer for anything else than the intended use on human beings. Do not expose the thermometer to shocks. Changing and disposal of the battery has to be handled with reference to this manual and has to take place in accordance with the regulations of the country. Do not attempt to disassemble or repair the thermometer. After each use, disinfect the thermometer especially in case the device is used by more than one person. Please refer to "7. Cleaning and Disinfecting".

1. Switching between Fahrenheit/Centigrade (Celsius)

While the thermometer is switched off, press the ON/OFF button for 5 seconds. Keep the ON/OFF button pressed, while the current metric system is displayed. After another 2 seconds it will switch to the other system.
(Fig. 1, 2, 3)

2. Correct measurement

Measurement accuracy cannot be assured when the method used to measure the temperature is incorrect.

Rectal use:

- Commonly used for small children when it is difficult to take an oral or armpit temperature.
- Lubricate with non-irritating skin-friendly gel.
- Gently insert the probe tip no more than 1.3 cm into the rectum. Do not force the tip into the rectum if resistance is encountered.
- Disinfect the thermometer after use.

Oral use (for ages 4 and older):

- The mouth should remain closed up to 5 minutes before starting a reading.
- Place the thermometer in the mouth under the tongue so that it rests to the left or right of the root of the tongue. **(Fig. 4)**
- Use downward pressure to hold the thermometer in place.
- Hold the thermometer to keep it from sliding around in the mouth. **(Fig. 5)**

Armpit (axillary) use:

- Place the sensor tip in the centre of the armpit. **(Fig. 6)**
- Lock the sensor tip under the arm, using the arm to slightly apply pressure inwards. **(Fig. 7)**

The following may result in incorrect measurements.

- Heavy armpit perspiration
  Correct: Wipe off any armpit perspiration before taking the temperature.
- Taking the temperature after being under the blankets for a long time.

3. Use of the temperature

1. Press the ON/OFF button. **(Fig. 8)**
   The result of the previous measurement is displayed for a few seconds. Then 37.0°C(98.6°F) is displayed as an internal test-function. **(Fig. 9)**
   Note: When a temperature other than 37.0°C(98.6°F) is displayed, please refer to the "Troubleshooting" section for details to correct the problem.
2. Apply the thermometer to the measurement site as described in "2. Correct measurement".
   Note: Either temperature or "L" is displayed while taking a measurement. **(Fig. 10)**
3. When the reading is ready, the thermometer will emit a [beep] sound three times after approx. 60 to 120 seconds (depending on place of measurement and environmental temperature). Remove the thermometer from the measurement site and read the result. **(Fig. 11)**

Buzzer notification timing

Armpit: approx. 120 seconds /
Rectal: approx. 60 seconds /
Oral: approx. 60 seconds

Notes:
- The buzzer notification timing is based on an environmental temperature of 23 degrees without the probe cover.
- Since oral and armpit may give lower measurement results it is recommended to apply the device rectally to get the most accurate result.

4. Turn off the thermometer and remove probe cover (if applicable). Clean and disinfect before returning it to its protective case.

Notes:
- The reading will automatically be stored in memory.
- Turn off the thermometer manually to conserve the battery. It will automatically switch off 30 minutes after use or 3 minutes when turned on but not used.

4. Battery replacement

Battery: Alkaline-Magnesium Button Battery LR41 (available commercially)

Battery Replacement Indicator (▭):
Replace the battery when the battery replacement indicator appears when the thermometer is switched on.

1. Remove the screw holding down the battery cover on the underside of the thermometer with a small screwdriver and take off the cover. **(Fig. 12)**
2. Use a thin stiff rod to remove the battery.
   Note: Take caution as battery may pop out. **(Fig. 13)**
3. Insert the new battery with the "+" pole facing up as shown in the diagram. Make sure the battery is put in with the right polarity. **(Fig. 14)**
4. Replace the battery cover and reinsert and fasten screw. **(Fig. 15)**
   Note: Do not loose the black O-ring around the screw. Waterproofness will fail and can lead to misreadings and failure of the unit.

5. Display Indications and Troubleshooting

Indicator	Cause	Remedy
L (low)	Displayed when the temperature of the sensing section is less than 32°C(89.6°F).	This is not an error so it may be ignored and the temperature taken.
H (high)	Displayed when the temperature of the sensing section is higher than 42°C(107.6°F).	Cool the sensing section and then take the temperature.
Air Temperature Displayed	Displayed when the surrounding temperature exceeds 32°C(89.6°F).	Turn the thermometer on and off several times. If a temperature other than that in the range from [36.9°C(98.4°F)] to [37.1°C(98.8°F)] is displayed as a test display, please contact your nearest authorized OMRON dealer.
[37.0°C(98.6°F)] is not displayed during the measurement preparation period as a test display, after the most recent measurement result is displayed.		

6. Care and maintenance

Keep the thermometer clean.
Do not use any other method than wiping with a soft clean cloth for cleaning. Please refer to "7. Cleaning and Disinfecting" section for further instructions.

Store the thermometer in its storage case.

- Do not store the thermometer in the following types of places. Doing so may damage the thermometer.
  - Wet locations.
  - Locations with high heat and humidity or those that are exposed to direct sunlight. Areas close to heating equipment, dusty locations, or environments where there are high salt concentrations in the air.
  - Locations where the unit will be subjected to leaning, shock or vibration.
  - Pharmaceutical storage areas or locations where corrosive gases are present.

7. Cleaning and Disinfecting

OMRON recommends to wipe the device with damp cloth. For disinfection, 70% Ethanol or Isopropyl alcohol can be used. Do not attempt to disinfect the sensing section of the thermometer by immersing in alcohol or in hot water (water over 50°C).
Do not submerge this thermometer deeper than 15 cm and longer than 30 minutes.

⚠Caution

The tip of the thermometer contains Nickel.

8. Specifications

Product type:	Digital thermometer
Product Name:	Eco Temp II
Product Number:	MC-241W-E
Power Supply:	1.5V DC, 1.1.6R41 Alkaline-Magnesium Button Battery
Power Consumption:	0.1mW
Battery Life:	Approx. 1100 readings (if used for 10 minutes per day).
Sensing Unit:	Thermistor
Measurement Method:	Actual measurement (non-predictive)
Temperature Display:	4-digit, +°C (°F) display in 0.1 degree increments
Measurement Accuracy:	±0.1°C (32.0 to 42.0°C) ±0.2°F (89.6 to 107.6°F) (when measured at a standard room temperature of 23°C (73.4°F) in a test tank held at constant temperature)
Measurement Range:	32.0 to 42.0°C (89.6 to 107.6°F)
Usage Environment Temp and Humidity:	Surrounding temperature +10 to +40°C (+50 to +104°F), Relative Humidity 30-85%RH
Storage Environment Temp and Humidity:	Surrounding temperature -20 to +60°C (-4 to +140°F), Relative Humidity 10-95%RH
Weight:	Approx. 11g (with battery installed)
External Dimensions:	14.4mm(w) × 130.0mm(l) × 11.3mm(d)
Package Content:	Test Battery (Alkaline-Magnesium Button Battery LR41), Storage Case, Instruction Sheet.

Notes:
- This OMRON product is produced under the strict quality system of OMRON Healthcare Co. Ltd., Japan.
- The specifications may be changed without prior notice.
- This unit is water-resistant.
- This thermometer does not contain any serviceable part. OMRON recommends that the accuracy is verified every two years by OMRON's representative.

Warranty

This product is guaranteed by Omron for 3 years after date of purchase. Any damage caused by improper handling shall not be covered by warranty.
Batteries and packaging are also excluded from the warranty. All other damage claims excluded. A warranty claim must be submitted with the purchase receipt.

= Type B CE 0197

Read the Instructions in this manual carefully.

This device fulfills the provisions of the EC directive 93/42/EEC (Medical Device Directive) and the European Standard EN12470:2000, Clinical thermometers - Part 3: Performance of compact electrical thermometers (non-predictive and predictive) with maximum device.

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com