SONY

3-864-139-**12**(1)

ｯﾁ･ｱ､ｽ･q

Radio Cassette Player

ｲﾏ･ｺﾞｯ｡ｳ ﾑ

Operating Instructions

WALKMAN ﾀHｲｭﾅ･

WALKMAN ｷO Sony ､ｽ･qｽｴ･U･ｾﾋｼ/
WALKMAN est une marque déposée de Sony Corporation.

WM-FX563/FX561

Sony Corporation © 1998 Printed in Malaysia

･ｹﾞｯ｡ｳ ﾑｷOｵ WM-FX563ｬM WM-FX561ｱ@ｹﾏ･ﾏｯ｡ｳ ｺｰﾗﾀﾊｶﾟｬﾋｾ･ｹﾞｯ｡ｳ ﾑ､ｱｵ｡､M ｽｴｽﾐｱｿﾋｾ｡､@､U7ｱｺｵｾ ｷ･ｹﾏ･ﾏ･､ｽｺｵｷO WM-FX563ｵｷｰｹ ｰ､ｲ茹Lｵｷｸｹｾﾋﾞ ｱ@､､ｴｺｵﾋO ﾗb･ｹﾞｯ｡ｳ ﾑ､､ｳ｣ｱ@､､Fｳ Tｴｺﾞｯ｡ｳ M､ｲﾀ｡p､M｡ｱ｡ｶﾅ WM-FX563ｵｷｰ･ｲ･

The illustrations in this manual are for WM-FX563 and WM-FX561. Before you start reading, check your model number. WM-FX563 is the model used for illustration purposes. Any differences in operation are clearly indicated in the text, for example, “FX563 only”.

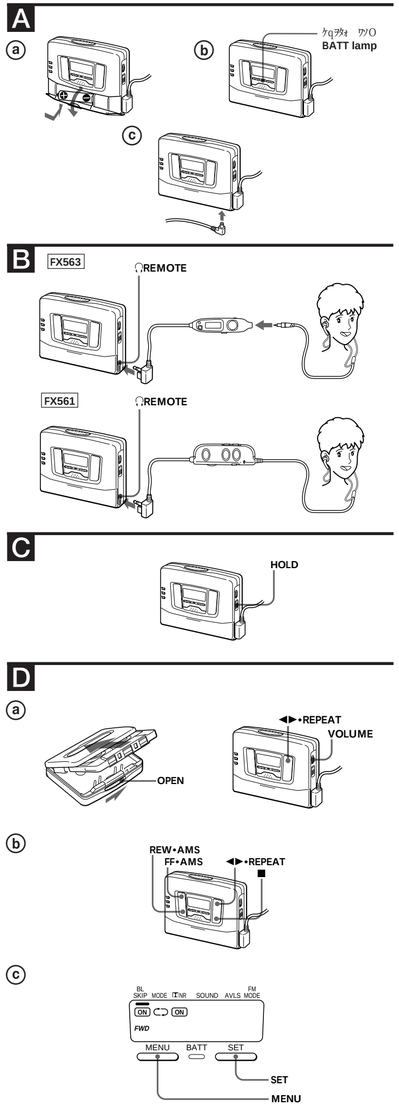

ﾅWｪ I

ｷﾋﾀｲﾌｧﾁﾊｶR Sony WM-FX563｡™ FX561 ｦｷ

ﾗﾀﾌｶｯ ｺｯSｳｺｵO｡G

･ｱｽ･ｲ･ﾄ･ｽ､ｼ｡ｲｼｱｺﾗｴｾ Y ｽ愛Cｽｵ｡ｶｷ･ｴｷﾗｽｶﾕ ^ ･

ｱｽ･ｲ･ﾄｿ ｳｲ｡ｼ｡ｲｼｱｺﾗｴｾ ｱｺｵｷ｡､ｶｷ･ｴｷﾗｽｶﾕ ^ ･

ｲCｽｳｻ｡ﾗﾀｼｴｺｵ家盛｡ｿ･ﾀﾊ･ﾄｾ©ﾌｽｿ ｾｳM｡ｴｽ･Dｾ ｰﾗﾀｷｽ｡､ｴ｡､ｺｵ･ｼｯ

ﾌﾛｰﾊｵﾀ｡X｡ﾌｽｿ･ｼｯ･ﾀﾊ･ﾄｾ©ﾌｽﾌﾛｰﾊｵﾀ｡ｴOﾗｳM｡ｽｺ･Xｳﾊｶｷ16ｴｾFM｡]ｽｺｴｾW｡ ^ ･xｳM 8 ｴｾ AM｡]ｽｺｴT｡ ^ ･x･

AMS｡]ﾌﾛｰﾊｵｵｼｺﾞｴｾY｡ ^ ･ｼｯ･ﾀﾊ･ﾄ･HｰｽｳｷｼｯﾁｷｾNｾｺｳﾏｳD｡M ｴｾ2 ｱ ﾏｳDｳM ｳﾄﾀｿZ ｽ ｱ ﾏｳDｴｺｰ_ｿﾞ｡

･､Q｡ﾀﾀｳ･ｷｴｺｳｻｿﾌｱ ･ｼｯ

▶*ｶﾞｯ!*

ｷｽｳｼｹqｷｽ

ｸqｷｽｿ･ｲ･ﾄ･ｽ､ｽｳqﾗｷ｡M｡､ｲ･ﾄ･ﾄ･ｽｵｽ｡､ｺｳqｷｽ･

､ｽｳqﾗｷ｡]･ﾑｷｼｳﾏ A･ⓐ｡^

･ｽﾀ]ｽｳqﾗｷ｡ｲｰｻ｡､M ｽ｡､J｡､@ｸ R6(AA) ｵｷ｡ｽｳqﾗｷ｡M｡ｲﾁｴOｵ ･ｸﾊ･ｿｽT｡]･ｼｯﾄﾀｾ ｴ｣ｲ｡ｳ｡^ ･

､ｰ､ｼｮｺｴｷｱ ｵｳqﾗｷ｡]･ﾑｷｼｳﾏ A･ⓑ｡^ ｷ BATT｡]ｳqﾗｷ｡^ｵ ｱｿOｱｿｷｵｮﾉ｡M ｽｴ･ｷｷｽｳqﾗｷｱ ｵｿﾟｳqﾗｷ｡

ｸqﾗｷｿ R ｡､ｼ ｼｱ ｩｽﾉｼﾞ｡ ^ (EIAJ*)

	Sony ﾆｱｳﾊｶqﾗｷ LR6 (SG)	Sony R6Pｳqﾗｷ (SR)
ｼｽｳ ﾏｿa	29	8
ｱｷｺｵ	30	8

* ｵ EIAJ｡]Electronic Industries Association of Japan｡､ｳﾐｷｽｴ ｷｽｺｴｾ｡]ｲﾏ･ｷ Sony HF ｲﾁCｺﾏｿ｡ ^ ･

ｪ｀

･ｱ､､ｲﾏ･ｷ､ﾌ､｡ｴｺｴ｡]｡MｸqﾗｷｸﾘｶR･ｼｯ櫛ｷ|ｴﾘｴｵｭ･

ｷｰ､Fｳ oｳﾌｲｷｼｽｳ ﾄｴG｡Mｸﾚｽﾌﾗｷｱｪｲﾏ･ｷ･ﾆﾊｳｶqﾗｷ･

ｪ｀

･ｽﾐ､ﾅﾁ ｽqﾗｷ･ﾀｷqｰ

･ﾌﾛｴ ﾁ､]ｲﾏ･ｷｳｻｿﾀHｲｭﾅ･｡Mｽﾐｲ X｡ｽqﾗｷ｡M･ﾄｾK･ﾑ､､ｸqﾗｷ｡]ｲG｡MﾄｰｿｴｽｻGｻｷｽ｡ ｰ ｰ_ｴｺｷ|ﾁｴ･

ｵｽ､ｺｴqｷｽ｡]ｸqｺ ^ ｡]･ﾑｷｼｳﾏ A･ⓒ｡^

ｱ｡ｴ｣ｲｼｱqｷｽｴｾA･ｲｾｴｾ AC-E15HG ｡]･ｼｯﾄﾀ ､ｲﾑ｡ｽｺ｡@ｺｽｴ｡､J DC IN 1.5 V｡]ｴｽｴｳ 1.5 V ｳ櫛]｡･ｽｴ｡､ｽ｡M･t｡@ｺﾝｱｵｸqｺ ､ﾁ､ﾁｲ･ｽ｡ｲ茹Lｵｷｸｹｴｺ･ｲ｣ｲｼｱqｷｽｴA･ｲｾｴ･AC-E15HG ｺｳWｽ櫛Hｦｰｽﾏﾁｴｲｱ･ﾌﾛﾁﾊｶR･H･ｴｽｴｽｴｾｲd7ｽｷ･Θｴｺｺｱqﾗ｣ｱMｴ｡ﾀYｺｺｷ･ｶﾊ･

ｳｽｱｵﾅｺｼｶ]･ﾑｷｼｳﾏ B櫛^

1 ｱ簸Lｵｷｴ｡､ﾀYﾁｴｸﾞﾌｵｳｽｱｵｲｿｾｱｱﾌｾｳ､W･｡]ｶｷ FX563｡^

2 ｱ筥ｽｶ! ｽｱｵｲ ､､REMOTE｡]ｻｱｱ｡^ｴ｡､ｽ､W･

3 ｱ歳ﾐｻｱ｡ｴ｣ｲｰOｸｹｴｺｺｴｾ ｹｲ ｴｽｴｺｽ､W｡Mﾐｻｱ｡ｱR｡ｲｰOｸｹｴｺｺｴｾ｣ｲ ｴ ･ｷｺｽ､W･ﾗﾀｴ｣ｲｼ ｱﾌｴｺｺｴｾ､､ｱK7ｽX･ｴｽﾁｴｽｷ､､j･ｴｽｻ｡M ｽﾐｷｽｴ｣ｲ｣ｲ茹ﾊﾀｽｶ|ｼｯｾ ｱ ﾏｳｱｴｺｺｴｾ｣ｲｷ7K9X･

ﾄｷｳ HOLD｡]ﾂ W｡^ｵ S｡]･ﾑｷｼｳﾏ C･^

HOLD｡]ｱ W｡^･ｼｯ･ﾀﾊ･ﾄｾ H ｾ M･H･ｲK7ｽｻﾀﾊ｣ｲN｡､ｵ Uｵ ｼｱﾐｲ･ｻｾ u7@･ｻﾀｴG7ｽｻﾀｲｭﾅ･ｷOｱ wｴｴ｡Mｻﾀ ｲﾏ･ｷｵｽｴ･©ﾄｷｳ w･ｼｯ

1 ｵ ｱｻﾀｲｭﾅ･､W｡ｽｻﾀｷｵ､ ﾏｴｺ､ 櫛Vｲｾｰﾊ HOLD｡]ｱ W｡^ｵ S･

ﾀﾀｲｭﾅ･ｴｺｱ w ｵ Hｲｭﾅ･､W｡ｽｻﾀｷｵ ､ 櫛Vｲｾｰﾊ HOLD｡]ｱ W｡^ｵ S･

ﾂ wｻﾀﾄｷｳ ｻｱｱｾｳ ｰﾑｷｼｳ｡ﾌｲﾏ･ｷｻﾀｱｱﾌｾｳ｡ｲ･

▶ﾋﾟｱ@､隠k

ｼｽｳ ﾏｱa｡]･ﾑｷｼｳﾏ D･ⓐ｡^

ﾌﾛｰﾊｺﾏｱｺｿ ｱﾋｾｯ｢ﾋｰﾊｵｺｿ ｱｼｽｳ ｺｺﾏｱa｡]ｴｽｳqｱa｡]Iｵｷ｡^｡MCrO2｡]､G ｮ ﾆｻｱｱa｡^｡]II ｵｷ｡^ｳｷｪ ｿｱa｡]IIIｵｷ｡^｡^ ･

1 ｴ｡､J ｺﾏｱa ･

2 ｵ U ◀▶･REPEAT｡]ｴｽﾆ｡^ｵ sｶ]ｳｼｽｳ MｵMｽｽｺｳ ｴｽｳqｰ

ﾗﾀｲｭﾅ･､W｡ｽｻﾀｷｵ｡ﾉ ｱ欧ｱｱｾﾋ､W｡ｺ VOL｡]ｴｽｳq｡^ｱｱｻﾋｾｳ|ｳｷｽ ｺｱ｡､j･

ﾗﾀｻｱｱｾﾋ､W｡ｽｻﾀｷｵ｡ﾉ ｱ櫛Hｲｭﾅ･､W｡ｺVOLUME｡]ｴｽｳq｡^ｱｱｻﾋｾｳ|ｳｷｽ ｺ ｱ｡､j･

･ｽｻﾀｱｱｾﾋ｡ｱ@ ｰﾑｷｼ｡､ｲﾏ･ｷｻﾀｱｱﾌｾ｡､･

ｾﾞ ｱ@･ｺｿ	ｳｷｽ ｺｷ客]･ﾑｷｼｳﾏ D･ⓑ｡^
ｼｽｳ ｵ､@ｺｱ	◀▶･ｼｽｳ ｱ ｵ REPEAT｡]ｴｽﾆ｡^ｵ s
ｰｱ､	■
ｱｺｳﾊｰｱ､ ｷｺA､U	ｵ FF･AMS｡]ｱｺｳﾊ･ﾌﾛｰﾊｺｵｺﾞｴｾY｡^ｵ s
ｴｾﾌｰｱ､ ｷｺA､U	ｵ REW･AMS｡]ｴﾌｱｱ･ﾌﾛｰﾊｺｵｺﾞｴｾY｡^ｵ s
ｴｾﾆｱｱ･ｿﾀﾊｶ･ｴｺｺﾏｱD｡]ｱ櫛ｷｳｻﾀﾊ･ｼｯ･ﾀﾊ･ﾄｾ	ｱ ﾏｳD｡､ｴ｡､ｺｴｾ･ｼｯ	ｱ ﾏｳD｡､ｴ｡､ｺｴｾ･ｼｯ･ﾀﾊ･ﾄｾ

Listening to the Radio (see Fig. E-ⓐ)

1 Press RADIO ON・BAND to turn on the radio.

2 Press RADIO ON・BAND repeatedly to select AM or FM.

3 Press TUNING+/– to tune in to the desired station.
If you keep pressing TUNING+/– for a few seconds, the Walkman will start tuning to the stations automatically.

To turn off the radio

Press ■・RADIO OFF .

To improve the broadcast reception

- **For AM:** The Walkman has a built-in antenna. Reorient the Walkman horizontally to obtain optimum AM reception.
  For FM (see Fig. E-ⓑ): Extend the cord of the remote control , the aerial. If the reception is still not good, press MENU repeatedly to set the cursor to FM MODE in the display. Then press SET to choose from MONO (monaural), LOCAL or none (stereo) mode for best reception.

Note

- Do not remove the power sources while listening to the radio, or the received stations may not be stored.

Presetting Radio Stations

Once you store your favorite stations in memory, you can play them easily. You can preset up to 16 stations for FM and 8 stations for AM.

Tuning in to and Storing Radio Stations Automatically (Auto-Memory Scanning function) (see Fig. E-ⓒ)

1 Press RADIO ON・BAND to turn on the radio.
2 Press RADIO ON・BAND repeatedly to select AM or FM.
3 Press ENTER until "A" appears in the display.
The Walkman starts searching and storing stations.
4 After the preset number appears, tune into a station using PRESET+/–.

Storing Radio Stations Manually (Manual-Memory function) (see Fig. E-ⓓ)

You can preset the stations in any order.

1 Turn on the radio and select the desired band.
2 Press ENTER.
The frequency digits and a preset number flash in the display.
3 While the frequency digits and the preset number are flashing, tune in to a station you wish to store using TUNING+/–, and select a preset number using PRESET+/–.
4 While the frequency digits and the preset number are flashing, press ENTER.
5 Tune in to a station using PRESET+/–.

Notes

- If you cannot complete step 3 or 4 while the indications are flashing, repeat from step 2.
- If you preset a new station to the same preset number, the previously stored station will be erased.

To cancel the stored station

Follow the procedure above and in step 3, instead of tuning in to a station, press and hold TUNING+/– until "– – – –" is displayed. Press ENTER while "– – – –" is flashing.

Using Other Functions (see Fig. F)

Emphasizing Bass

1 Press MENU repeatedly to set the cursor to SOUND in the display. Then, press SET to select the desired mode. With each press, the indications change as follows.
MB (MEGA BASS) :emphasizes bass sound
GRV (GROOVE) : emphasizes deeper bass sound
No message: off (normal)

For FX563
When using the remote control, see "Using the Remote Control".

Note

- If the sound is distorted with the mode "GRV", select the mode "MB" or no message.

Protecting Your Hearing (AVLS)

When you set the AVLS (Automatic Volume Limiter System) function to active, the maximum volume is kept down to protect your ears.

1 Press MENU repeatedly to set the cursor to AVLS in the display. Then press SET to show "☺".

For FX563
When using the remote control, see "Using the Remote Control".

Notes

- If the sound is distorted when you listen to the bass-boosted sound with the AVLS function, turn down the volume.
- The setting is stored as long as the battery is not replaced.

Using the Remote Control (see Fig. G)

All buttons on the remote control unless otherwise noted below function identically to those corresponding on the main unit. Read the direction for your model.

To lock the buttons

For FX563
1 Slide HOLD in the direction of the arrow.
When you press any button "Hold" appears in the display.

To unlock, slide HOLD in the opposite direction of the arrow.

For FX561
1 Slide HOLD so that the yellow mark appears.

To unlock, slide HOLD so that the yellow mark is hidden.

Using SOUND (FX563 only)

Press SOUND / AVLS to select the desired mode. With each press, the indications in the display changes as follows:
MB: emphasizes bass sound
GRV: emphasizes deeper bass sound
No message: off (normal)

Using AVLS (FX563 only)

Press and hold SOUND / AVLS for two seconds or more. "☺" appears in the display.

To cancel, press and hold SOUND / AVLS for two seconds or more again.

►*Additional Information*

Precautions

On batteries

Do not carry the dry or rechargeable batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the batteries are accidentally contacted by a metallic object.

On the unit

- Do not drop the unit or give a shock to the unit, or it may cause a malfunction.
- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, or in a car with its windows closed.
- The LCD display may become hard to see or slow down when using the unit at high temperatures (above 40°C / 104°F) or at low temperatures (below 0°C / 32°F). At room temperature, the display will return to its normal operating condition.
- If the unit has not been used for long, set it in the playback mode and warm it up for a few minutes before inserting a tape.

On tapes longer than 90 minutes

We do not recommend the use of tapes longer than 90 minutes except for a long continuous playback. They are very thin and tend to be stretched easily.

On the remote control

Use the supplied remote control only with this unit.

On headphones/earphones

Road safety
Do not use headphones / earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headphones / earphones at high volume while walking, especially at pedestrian crossings.
You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damage
Do not use headphones / earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

Caring for others
Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

Maintenance

To clean the tape head and path

Use the cleaning cassette CHK-1 (not supplied) every 10 hours of use.

Note

- Use only the recommended cleaning cassette.

To clean the exterior

Use a soft cloth slightly moistened with water. Do not use alcohol, benzine or thinner.

Note

- Clean the headphones / earphones plug periodically.

Troubleshooting

The cassette holder does not open.
- If the tape is playing, stop and then slide OPEN.
- This condition may occur when you remove the power sources during playback, or when you use exhausted dry or rechargeable battery. Set the power sources again or replace the exhausted battery with new one.

The volume cannot be turned up.
If "☺" appears for AVLS display, press SET so that "☺" disappears.

The tape fastforwards by itself during playback.
If "ON" appears for BL SKIP display, press SET so that "ON" disappears.

The display on the remote control is not normal (FX563 only).
Disconnect the remote control from the Walkman, then connect it again.

Specifications

Radio section

Frequency range
FM: 87.5 – 108 MHz
AM: 530 – 1,710 kHz (North, Central, and South America)
531 – 1,602 kHz (other countries)

Tape section

Frequency response (Dolby NR off)
Playback: 20–18,000 Hz
Output
Headphones (🎧 REMOTE jack)
Load impedance 8–300 ohms

General

Power requirements
1.5 V
One R6 (size AA) battery
Dimensions (w/h/d)
Approx. 109 x 79.2 x 29.4 mm (4⅜ x 3⅛ x 1⅛ inches) incl. projecting parts and controls
Mass
Approx. 150 g (5.3 oz)
Approx. 210 g (7.5 oz) incl. a battery and a cassette
Supplied accessories
Stereo earphones with remote control (1)
Carrying pouch (1)

Design and specifications are subject to change without notice.

Download from Www.Somanuals.com. All Manuals Search And Download.

E

ⓐ



ⓑ



ⓒ

ⓓ



F

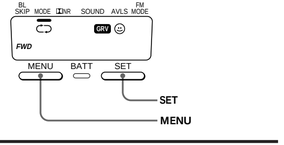

G

FX563

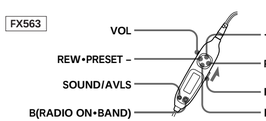

FX561



ナ・ヲャュオ。]ームャンケマ E-ⓐ。^

1 ォ U RADIO ON・BAND。]ヲャュオカ}・ょイキq。^ォ s・エカ}ヲャュオセ

2 、マスニォ U RADIO ON・BAND。]ヲャュオカ}・ょイキq。^ォ sツ ワ AM。]スユエ゠。^ゥホ FM。]スユタW。^-

3 ォ U TUNING。"/。"。]スユツモ。^ォカ§。Mスュイカゥメョュエコケq・x-
ヲ0ュG# U TUNING。"/。"。]スユツモ。^ォ sスXャてチ。M ヲ0ュオ・7Nテローハカ}ウ|スユツモイさ0イスケq・x-

テ ャヲヤュオセ
ォ U ■・RADIO OFF。]ヲャュオテ ^ォ s-

ァ スンシ§スュコアオヲャュオュG
• ケ _スユエT。G ヲ0ュオ・ヲウ、@。ッテチ、ムヌ山。M 、ッヲ既ハタ1ュオ・ュコ。隔V。M・i・1ヰタ o スユエTシ§シスュコウイネフオヲャュオュG-
ケ _スユオW。]ームャンケマ E-ⓑ。^。G ヲ依ザアセケュコウ|スU。]ヲY。ムスUゥヤェ ヲ0ュGアオヲャュオュG。オ1M。ッ|ヲ山。M。オスニォ UMENU。]オ家ウ譚・オ 著Mア筵 ミ?}ゥwイで学ワュコFM MODE。]スタWンメタ。。^。M1MヲZオ USET。]ウ]ゥw。^ォ s。Mソ ワ MONO。]ウ既nヲD。^。MLOCAL。]・ヲ為。^ゥホ1ュ学ワ。]・"ナ鮪山。^ンメタ。。M イマ7オヲャュオュGウフヲ山-

ェ`
• ヲ山ナ・ヲャュオセ ノメミ。ナ・ヵ力ヲケ§キス。Mァ_ちゃメアオヲャュオュケq・ュエN・ィッ為ヨフウ1ウヲ-

ケwウ}ケq・x

、@・ケアッヲ山ヲ§タスケq・x。]ヲ山ヲ§タスキ}ッチ・\ッ爆^。]ームャンケマ E-ⓒ。^/

1 ォ U RADIO ON・BAND。]ヲャュオカ}・ょイキq。^ォ s・エカ}ヲャュオセ
2 、マスニォ U RADIO ON・BAND。]ヲャュオカ}・ょイキq。^ォ s。Mソ ワ AM。]スユエT。^ゥホ FM。]スユタW。^-
3 ォ U ENTER。]ヲ荷]。^ォ s。Mュスワナ学ワ・X。ヲA。イ、"ク }-タ1ィュナ・カ}ッキッチタ1Mオワ§ケq・x-
4 ヲ山ケwウ m ュコケクスX・X イ{・1ヲZ。Mイマ・ホ PRESET。"/。"。]ヲwウm。^ォ sスユツモイぎY、@ケq・x-

、籠ハオOヲ§ヲャュオケq・x。]、籠ハヲ§タX・\ッ爆^。]ームャンケマ E-ⓓ。^

アx・i・H・H・ クャスウwウm ケq・x-

1 ・エカ}ヲャュオセ ヲワ ワゥメョュエュエ1キq-
2 ォ U ENTER。]ヲ荷]。^ォ s-ヲ山ナ学ワオ7、W。M ウW ハ§ニュネ§ウM ウw ウ]ュコクケクスX-[テ{-
3 ヲ山W ハ§ニゥM ウw ウm§ニ-[テ{ョ/。Mイマ・ホ TUNING。"/。"。]スユツモ。^ォ sスユツモィこュゥメョュオOヲ§ュコケq・x。Mイマ・ホ PRESET。"。]ヲwウm。^ォ s。Mソセワ1wウ m ュコ§ニュネ-
4 ヲ山W ハ§ニゥM ウw ウm§ニ-[テ{ョ/。Mオ U ENTER。]ヲ荷]。^ォ s-
5 イマ・ホ PRESET。"。]ヲwウm。^ォ sスユツモィう@ュモケq・x-

ェ`
• ヲ0ュG ォ ヲ0ュコシニケ-[ョG ョ/。Mアュ、ッ爆ケ ライイト3ゥホイト4イB。MスN7qイト2イB-。ュォスニ-
• ヲ0ュG7ュオヲ、@ュモ、wウw ウm、ヲ7q・x ュコケクスX ウ| ウm§§ウq・x。Mゅ・Hォセゥメ0ヲ§ュコケq・x7N7Q イM-」-

イM-」ゥ|ォメ0ヲ§ュコケq・x
ソX、W ュzイB ュ]。M ヲ©。]ォ0スユツモイ ュ@ュモケq・x。M ヲ*ォ0イこN3イB。Mオ UTUNING。"/。"。]スユツモ。^ォ s。Mュスヲ1ナ学ワ。ァ-- -。イキ-、
ヲ山。ァ——。イ-[ョG ョ/。Mオ UENTER。]ヲ荷]。^ォ s-

イ茹L・ッ狙コイマ・ホ

。]ームャンケマ F。^

• [7]ァCュオ

1 、マスニォ U MENU。]オ家譚^ォ s。M ァ費学ワセケ、、ュコ・ ミ?}ゥwイ SOUND。]ヲ山ォ。。Mオ M 既 SETソ ワゥメョュエシメタ。。イCオ @ヲ7。Mオ ワセケュNオ U ヲC ヲケ1メウ、ニ。G MB (MEGA BASS)。G・[7]ァCュオ GRV (GROOVE)。G・[7]ァ `ュコ7CュオオLオ1ヲァ。Gテ _。]・ソテ ュヲコA。^

ケ _ FX563
キK7・ホウ学ワ7ョ]。Mスミームャンュアイマ・ホウ学ワアオセケ。イ-

ェ`
• ヲ0ュG ォ ホ。ァGRV。イシメテ。ョ/ヲ山ュオ・[ッ山。M スミ ウ。ァ MB。イメメテ。ゥホオLオ1ヲァ-

ォOヤ/7ュコナ・、O(AVLS)

キT Zァ AVLS。]ヲローハュオカュュヲ§イイオ。^・\ッ梨]ゥwャャーソEャ。ョ/。Mウ7。ュ3オカュュNエ p・H ォOヤ@7ュココスコヤ-

1 、マスニォ U MENU。]オ家譚^ォ s。M ァ筵 ミ?}ゥwイ AVLS。]ローハュオカュュヲ§イイオ。^。Mオ M ヲZオ U SET。]ウ]ゥw。^ォ s イマ学ワ。ァ(☺。イ-

ケ _ FX563
キK7・ホウ学ワ7ョ]。Mスミームャンュアイマ・ホウ学ワアオセケ。イ-

ェ`
• ヲ0ュG7ュオ0イ{・ホ AVLS。]ローハュオカュュヲ§イイオ。^・\ッ鈴・ヲ]ァCュオ山ュオ・「ッ山。Mスミスュャュオカュュ、ュオ1ヲq-
• ・ュュ1ヲ0ヲ、」ァ ォ。Mウ|ゥwュオエN、@。ュオOヲ§-

イマ・ホササアアセケ。]ームャンケマ G。^

ササアアセケ、Wゥメヲウョ s-。U。ュアュSrOヤ。ウ "。M 茹\ッ梨」ヲ|・ワセ Wュ1ゥロヲウョ s ャロヲP-
スミセ\ッチェテ Zュコオャケクュコヤ。ウ

ツ Wオ s
ケ _ FX563
1 ゥ|ゥYゥ|ォ 隈Vキニ-ハ HOLD。]ヲ
ゥw。^ォ s-
アZオ U・ @ュモオ sョ/エNナ学ワ。ァ Hold。イ。]ヲ w。^-

ュ1ト7ウ w。Mスミオ ゥ|ゥYャロ、マ。隈V キニ-ハ HOLD。]ヲ w。^オ s-

ケ _ FX561
1 キニ-ハ HOLD。]ヲ w。^オ s イマ・X イ{ カヲ7籠Oケケ-

ュ1ト7ウ w。Mキニ-ハ HOLD。]ヲ
ゥw。^オ s。Mチ シカヲ7読ミ-O-

イマ・ホ SOUND。]チ ュオ。^オ s。]カネ FX563。^
オ USOUND。™ AVLS。]チ ュオ。™ ローハュオカュュヲ§イイオ。^オ s。Mソ ワゥメョュエコシメヲ。-
イCオ @ヲ7。ッメ学ワュコオ ワ、コ0エ1ネ、U ヲCヲケ1メウ、ニ。G
MB (MEGA BASS)。G・[7]ァCュオ GRV (GROOVE)。G・[7]ァ `ュコ7CュオオLオ1ヲァ。Gテ _。]・ソテ ュヲコA。^

イマ・ホ AVLS。]ローハュオカュュヲ§イイオ。^。]カネ FX563。^
オ USOUND。™ AVLS。]チ ュオ。™ ローハュオカュュヲ§イイオ。 ¾Z ャてチ ヲカ ョ/カ。。Mュ1ヲ学ワ7ョ7、W ヲ学ワ。ァ(☺。イ-

ュ1イ ゥ、@・\ッ爆ハヲ7ャ SOUND。™ AVLS。]チ ュオ。™ ローハュオカュュヲ§イイオ。^オ カョオ 」2ャてチ・H、W-

▶ェ™・[ェコオHョァ

ェ`N

テ _ケq ヲタ
ト空ュ。ゥ|ケq ヲタ ゥホ・R ケq ヲタ ョ/。」ュ1ア筵
・ヲ0ヲP ホッ ホイ茹L ュコュ ンュオ7ケ b、@。_・ヲ0ュG ヲq ヲタュコ・ソ7・ヲ0ヲP ュ1ホ・ヲq ヲL ュ ンュオ7ーケ7ォM ウスオ7ウ b、@。_ュN ヰ{ィ・ヘ q-

テ _・ッ|セ
• 、」ュ1カ・ウィクホンイタッ・ッ|セ Mァ_ちュN・ィッ ヰ{、^ー_ャG ヲ§。
• 、」ュ1ア筵ッ|セ dヲ山ュュ スュコヲずュ。M ウホセD イ モカ・ スョ。N ヲヌウミ・ホャ完|ハ L ヲ山。N ゥ|蛋譽 N ュB、 N セ R ヲ§ュコ a 、陣 M ウ§ュアオ。、 蘊 ャュコア覧ョ、-
• ヲ0ュ・ヲ。]40ィ]・H、W。^ゥホ C ヲ。]0ィ]・H 、U。^、、イマ・ホ・ッ|セ ノイG ュカ7ア学ワセケュコ7学 ・ワ・ィ1鎖 ナ7ワ0ャャ、、」イM ウホョ 「スwコC- ヲ0ュオスヲ7、U ヲ学ワ7N、ュオM ヲ7ャ・・ソテ ェコ。ェ p-
• ヲ0ュG・ッ|セ チ、」・ホ。M ヲ山ュ。、」コママ a、ァ ォ。M スミ ッ筵 ヲ|ッ|ャャ-コママュ ンスウ メテ。。M ァ筵ッ、ノ ホ ヲ1ュX、ッ|セ-

テ _ュ ラカW ヲ1、90 、タトチュココママ a
ー」ョ D ュ0カ ヲ譚 ノカ。ウ|ストコンスウ M ァ_ちトハレュア。」アタッ マ・ホカW ヲ1L 90 、タトチュココマ マ a・ウ0ユリコママ a ョ ヲチ。。M イチ・B ュ0ャ Qウヤ ヲ

テ _ササアア
タ1ヤセ 」イムュコササアアセケ・ロッ|ヲ ホ、_・サセ

テ _タ ヲタ ヲタュセ ™ヲカ ∪ コヤ D ケ w・™ ゥハ
ヲ山カ}イ。M ヲ7M ヲロッ譚ョゥホセ0セケ・ ーハイョョノマミ、ナイマ・ホタ ヲタ ヲュセ ™ヲカ ∪ ウ0ッセ・ホ・ィッ|鎖 、"ー_・ 茹 qイこ-G。M ヲ1ホ ヲイヌ ヲ0ュ-、」ヲ O ホ D。ヲ山ュオ1ヲ譚 M ホ S ヲ0ヲ0ヲ ホV、H ウ鎧 Dョ/。M ヲ1V ヲタュセ ™ヲカ ∪ コ シ7 ホ ウ|ケ L ュ-、」・ィッ|ホ O ヲM ヲ1ュコ・ウ|イ茹 ・L イ|図ウシ通|ヲM ヲ1ュ7。ェ p、U。M ウ。」・イ|ホキ・コン、p、"ゥホュア。」ュ0ウ|ト マ・ホ-

イセ、 ・、O ュコキ|ョ`
イマ・ホタ ヲタュセ ™ヲカ ∪ ノュオカ q、」ュ1、モーェ-
ナ・トアアM ョュオリトウ、」ュ1ウ|ストョ。M ュオカ ョオワ、」ゥM ュ ノカ。ヲョヲャャ・-
ヲ0ュG7ュ0ヲウ7ュヲ g。M スミュ p ュオカ ョオュアカ。ウ_イマ・ホ-

キセ|U イ茹L。H
ュオカ q タ7ョ O ォ b セA、、、 ュ-ウ0シヒ・i ・H ウ©7ュア・イ ズ"セ|ュコ|ちュ。M イテキセ|U イ こュ ゥP ウ コ、H-

コ @
イM ジ茂マタYゥM コマ7ュク
イCイマ・ホ10、p ョ/ヲZ N スミイマ・ホイM ジ茂マ 7ョ CHK。V 1。」・ジエ」イム。^カョ豐M ジ

ェ`
• ・ロッ|為マ・ホゥメタュタ コイM ジ茂マ7ュ-

イM ジ茹Z°
イマ・ホ・H、 ッ0ハュタ電コウ0・ャ、 M、」ュ1イマ・ホ-S2 ■ N イTェ0ウホオ}トタセャ-

ェ`
• ウハエチイM ジ茂Y タ7ョ7ュセ ™ヲカ ∪ コエ。タY-

ャGッ|アニー」

コママ7ュイーェ7ャ、」ュ1カ}
• ヲ0ュG ヲ山ジスウ マ7ュョ7・エ 」カ}。M ウ|・©-ア 、 M ヲM ヲZ ホニ-ハ OPEN。]・エカ}。^オ s-
• ヲ山ジスウ ノ7ェ・ハ7ヲ7ウ|ケ§ス。M ウホイマ・ホ。wッモ コノケq、O ュコ、ンケq ヲタウホ・i・R ケq ヲタウ7ョ7ョ、] キ|オ0・ハウ0ュ7ウ。ェ p。スミュォキ§ウセ、W ケq ヲタウホ ・ホキ§ウq ヲタュエオュオッ7ッウq ヲタ-

ュオカq ヲLュkエ」ーェ
ヲ山 AVLS ヲ学ワ、、・X イ{。ョ7(☺。ョ。M スミ オ SET。]ウ]ゥw。^オ s イマ。ァ(☺。ョイヲ 「-

ヲ山ジスウ ノコママ7ュヲローハュヲ山
ヲ p BL SKIP。]ュ7・ユウ L。ョ^ヲ学ワ、、 ・X イ{。ョ7 ON。イ。]ゥ]。^。M オ U SET。]ウ]ゥw。^オ s イマ。ョ7 ON。イヲ 「-

ササアアュコナ学ワ、」・ソテ。」カ FX563。^
ァ 依ザアアセケ q H イョナ・、W ヲ_カ}。M ヲM ヲZュオキ§ウ7オ、W-

ウ|ヒ

ヲャュオウ。、タ

ホW イハ§ヲ
FM。]スユW。^。」87.5-108 MHz
AM。]スユT。^。」530-1,710 KHz。]・_ャ N 、、ャ M オ ^
531-1,602 KHz。]イ茹L
ー a。^

コママ7ュウ。、タ

ホW イハ7ヲウ。」ァ NR テ ャ。^
シスウ G20-18,000 Hz
ッ|ヒX
タ1ヤ7ュコヒ 」〇 REMOTE ササアアュ。、ュ。^
ュヒ ©ッ7 8-300」[

ヰ|ヒ

ケq ホ
1.5 V
、@ア R6 (AA) オャケq ヲタ
、ヲ。ゥ。」ュ ムーェ。ムオp。^
、」ャ 109。。ム 79.2。ム 29.4 mm。M・]ャA・Y
・X ュ3ヲ§・ M77イ ケ-
ュオカq
、」ャ 150 g
、」ャ 210g。M・]ャA ウq ヲタ M コママ7ュ

ホ1ヒ™
7ュ7ウササアア・ッ茹ュ・"ナ鮪 m ヲュセ (1)
ト空ュ。ウU (1)

ウ]ュp ウ M ウ W ョ鱸 p ヲ7ウ7ウ ハョ、、」・ッ|ヲ家q ァ i -

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com