SONY

Cassette Player

3-864-886-71(1)

Manual de instrucciones
xxxxx
xxxxxx

(Esta marca solamente es válida para la versión para Rusia.)
xxxxxx
xxxxxx
xxxxxxx

A946

WM-EX672/EX670

WALKMAN es marca registrada de Sony Corporation.
xxxxxxx
xxxxxxxx
xxxxxxxx

Sony Corporation © 1999 Printed in Malaysia

Sony online http://www.world.sony.com/

ADVERTENCIA

Para evitar incendios o descargas eléctricas, no exponga la unidad a la lluvia ni a la humedad.

ADVERTENCIA

Para evitar incendios o descargas eléctricas, no exponga la unidad a la lluvia ni a la humedad.

ADVERTENCIA

Para evitar incendios o descargas eléctricas, no exponga la unidad a la lluvia ni a la humedad.

Las instrucciones de este manual son para el WM-EX672 y el WM-EX670. Antes de comenzar la leerlas, compruebe el número de su modelo. El WM-EX672 es elk modelo utilizado para fines de ilustración. Cualquier diferencia en la operación se indicará claramente en el texto, por ejemplo, "EX672 solamente" y "EX670 solamente".

Las instrucciones de este manual son para el WM-EX672 y el WM-EX670. Antes de comenzar la leerlas, compruebe el número de su modelo. El WM-EX672 es elk modelo utilizado para fines de ilustración. Cualquier diferencia en la operación se indicará claramente en el texto, por ejemplo, "EX672 solamente" y "EX670 solamente".

Las instrucciones de este manual son para el WM-EX672 y el WM-EX670. Antes de comenzar la leerlas, compruebe el número de su modelo. El WM-EX672 es elk modelo utilizado para fines de ilustración. Cualquier diferencia en la operación se indicará claramente en el texto, por ejemplo, "EX672 solamente" y "EX670 solamente".



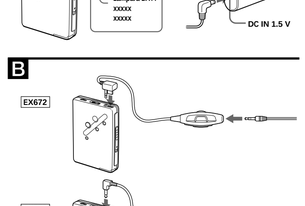

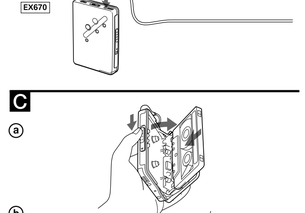

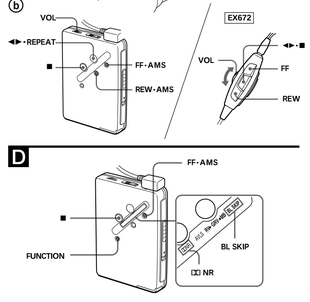

Modelo para el Reino Unido
xxxx
xxxxx

Para otros países
xxxxxx
xxxxxx

Español

►Preparativos

Elección de una fuente de alimentación

Pila (consulte la Fig. A-⊖)

Fije la capa de pila suministrada, y después inserte una pila R6 (tamaño AA) con la polaridad correcta.

Nota

- Para obtener el máximo rendimiento, se recomienda utilizar una pila alcalina Sony.

Batería (consulte la Fig. A-⊖)

1 Inserte la batería (NC-6WM) suministrada en el cargador con la polaridad correcta.
2 Enchufe el cargador en un tomacorriente de la red.
Modelo para U.S.A.: La carga completa tardará unas 2,5 horas.
Modelo para Corea: La carga completa tardará de acuerdo con la tensión de la red.
110 V: 10 horas
220 V: 2,5 horas
Modelo para otros países: La carga completa tardará de acuerdo con la tensión de la red.
120 V: 10 horas
220–240 V: 2,5 horas
Si el enchufe no encaja en el tomacorriente de la red, fíjele el adaptador de enchufe de CA suministrado.
3 Inserte la batería completamente cargada en el compartimiento para la misma (consulte la Fig. A-⊖).

Usted podrá cargar la batería unas 300 veces.

Cuándo reemplazar la pila/cargar la batería (consulte la Fig. A-⊖)

Cuando la pila/batería se debilite, parpadeará la lámpara BATT y la reproducción de la cinta se volverá inestable y ruidosa, y después la cinta se parará. Cuando parpadee la lámpara BATT, reemplace la pila o cargue la batería.

Notas

- Cuando extraiga o inserte una batería, la lámpara BATT puede encenderse temporalmente incluso aunque le quede un poco de energía. Después de ello, la lámpara BATT comenzará a parpadear.
- La lámpara BATT puede parpadear temporalmente o apagarse cuando haga que la cinta avance rapidamente o la rebobine, o cuando utilice la unidad a temperaturas extremadamente bajas.

Duración de la pila/batería

(Horas aproximadas)	(EIAJ*)
Batería NC-6WM completamente cargada	12
Pila alcalina LR6 (WM) Sony	39
Batería NC-6WM y pila alcalina LR6 (WM) juntas	50

* Valor medido según las normas de EIAJ (Electronic Industries Association of Japan). (Utilizando un cassette de la serie HF Sony)

Nota

- La duración de la pila/batería puede acortarse dependiendo de la operación de la unidad.

Corriente de la red (consulte la Fig. A-⊖)

Extraiga la batería, si está insertada, y fije la caja de pila. Conecte un adaptador de alimentación de CA AC-E15HG (no suministrado) a la toma DC IN 1,5V y a un tomacorriente de la red. No utilice ningún otro adaptador de alimentación de CA.

Polaridad de la clavija

Las especificaciones del AC-E15HG varían de acuerdo con la zona. Antes de adquirirlo, compruebe la tensión local y la forma del enchufe.

Conexión de unos auriculares con casco/auriculares (consulte la Fig. B)

1 Conecte firmemente la miniclavija en el controlador remoto (EX672 solamente).
2 Conecte los auriculares con casco/auriculares en ⌂REMOTE.
3 Colóquese el lado marcado con "L" en el oído izquierdo, y el marcado con "R" en el derecho. Si los auriculares con casco/auriculares no encajan en sus oídos, ajústelos hasta que encajen firmemente en los mismoss.

► Utilización del Walkman

Reproducción de una cinta (consulte la Fig. C-⊖)

1 Abra el portacassette e inserte un cassette.
2 Cerciórese de que la función de bloqueo (HOLD) esté desactivada. Si está activada, deslice el interruptor HOLD para desactivarla.
3 Presione ◄► •REPEAT de la unidad principal o, si está utilizando el controlador remoto (EX672 solamente), presione ◄► (reproducción)•■ (parada). Ajuste el volumen con VOL.

Para ajustar el volumen en la unidad principal (EX672 solamente)
Ajuste el control VOL del controlador remoto al máximo.

Para ajustar el volumen del controlador remoto (EX672 solamente)
Ajuste el control VOL de la unidad principal a alrededor de 6.

Nota sobre el portacassette
Antes de abrir el portacassette de la unidad principal, cerciórese de que la cinta esté parada, y después deslice el interruptor OPEN. Si abriese el portacassette mientras la cinta estuviese moviéndose, es posible que ésta se afloje o dañase.

Operación con la unidad principal

Para	Presione (consulte la Fig. C-⊖)
Reproducir la otra cara*	◄►•REPEAT durante la reproducción
Parar la reproducción	■
Hacer que la cinta avance rápidamente**	FF•AMS durante el modo de parada
Rebobinar la cinta**	REW•AMS durante el modo de parada
Repetir la canción actual (Función de repetición de una sola canción)	◄►•REPEAT 2 segundos o más durante la reproducción *Para parar la reproducción de una sola canción, vuelva a presionarlo*

Operación con el controlador remoto (EX672 solamente)

Para	Presione (consulte la Fig. C-⊖)
Reproducir la otra cara*	◄►•■ 2 segundos o más durante la reproducción
Parar la reproducción	◄►•■ una vez durante la reproducción
Fast forward**	FF durante el modo de parada
Hacer que la cinta avance rápidamente**	REW durante el modo de parada
Repetir la canción actual (Función de repetición de una sola canción)	◄►•■ dos veces durante la reproducción *Pra parar la reproducción de una sola canción,* ◄►•■ unovez

Otras operaciones de la cinta

En el controlador remoto, presione FF o REW (EX672 solamente).

Para	Presione
Reproducir la cara siguiente/9 canciones siguientes desde el comienzo (AMS***)	FF•AMS una vez/ repetidamente durante la reproducción
Reproducir la canción actual/8 canciones anteriores desde el comienzo (AMS***)	REW•AMS una vez/repetidamente durante la reproducción
Reproducir la otra cara desde el comienzo (Función de inversión con salto)	FF•AMS 2 segundos o más durante el modo de parada
Reproducir la misma cara desde el comienzo (Función de reproducción automática con rebobinado)	REW•AMS 2 segundos o más durante el modo de parada

* La reproducción cambiará automáticamente la cara opuesta cuando finalice la cinta de la cara actual.
** El avance rápido/rebobinado se parará automáticamente cuando finalice la cinta.
Si presiona ◄►•■ del controlador remoto (EX672 solamente) durante el avance rápido o el rebobinado, el Walkman cambiará a reproducción.
*** Automatic Music Sensor: Sensor automático de canciones

Para saltar un espacio largo entre canciones (Función BL SKIP) (consulte la Fig. B)

Manteniendo pulsada FUNCTION, presione FF•AMS. Aparecerá la indicación BL SKIP y usted oirá un pitido corto. (La indicación desaparecerá cuando suelte FUNCTION.)

Para cancelar la función de BL SKIP, vuelva a repetir el procedimiento. La indicación BL SKIP desaparecerá y usted oirá dos pitidos cortos.

Para confirmar el estado, presione FUNCTION. Cuando active la función, aparecerá la indicación BL SKIP.

Notas sobre el sensor automático de canciones (AMS), la repetición de una sola canción, y el salto de espacios en blanco (BL SKIP)

- Para utilizar las funciones del sensor automático de canciones y de repetición de una sola canción, entre las canciones deberá que existir un espacio en blanco de 4 segundos o más. Para la función de salto de espacios en blanco, tendrá que existir un espacio en blanco de 12 o más segundos. Por lo tanto, si entre las canciones existe ruido, estas funciones no trabajarán. De forma similar, si el nivel de grabación es moderadamente bajo dentro de una canción, estas funciones pueden trabajar sin precisión.
- Usted tendrá que dejar un espacio de 10 segundos o más al comienzo de cada cara del cassette. De lo contrario, es posible que no se reproduzese la primera canción desde el comienzo.

Para reproducir una cinta grabada con el sistema de reducción de ruido Dolby* B (consulte la Fig. D)

Manteniendo pulsada FUNCTION, presione ■. Aparecerá la indicación ⧈ NR y usted oirá un pitido corto. (La indicación desaparecerá cuando suelte FUNCTION.

Para cancelar la función de reducción de ruido Dolby, repita el mismo procedimiento.

La indicación ⧈ NR desaparecerá y usted oirá dos pitidos cortos.

Para confirmar el estado, presione FUNCTION. Cuando active la función, aparecerá la indicación ⧈ NR.

- Reducción de ruido Dolby fabricado bajo licencia de Dolby Laboratories Licensing Corporation.

DOLBY y el símbolo de la D doble ⧈ son marcas de Dolby Laboratories Licensing Corporation.

Nota

- Los ajustes de BL SKIP y ⧈ NR permanecerán almacenados mientras no reemplace la pila/batería.

(dé la vuelta)

English

►Getting Started

Choosing a Power Source

Dry Battery (see Fig. A-⊖)

Attach the supplied battery case, and then insert one R6 (size AA) battery with correct polarity.

Note

- For maximum performance we recommend that you use a Sony alkaline battery.

Rechargeable Battery (see Fig. A-⊖)

1 Insert the supplied rechargeable battery (NC-6WM) into the charger with correct polarity.
2 Plug in the charger to the house current (mains).
UK model: Full charging takes about 3,5 hours.
European Continent model: Full charging takes about 2.5 hours.
3 Insert the fully charged battery into the rechargeable battery compartment (see Fig. A-⊖).

You can charge the battery about 300 times.

When to replace/charge the battery (see Fig. A-⊖)

When the battery weakens, the BATT lamp will flash and tape playback will become unstable and noisy. Replace or charge the battery when the BATT lamp flashes.

Notes

- When you remove and reinsert a rechargeable battery, the BATT lamp may light up temporarily even if it has little battery power left. After a while, the BATT lamp will start to flash.
- The BATT lamp may temporarily flash or go off when used in extremely low temperatures.

Battery life

(Approx. hours)	(EIAJ*)
Rechargeable NC-6WM fully charged	12
Sony alkaline LR6 (WM)	39
Rechargeable NC-6WM Sony alkaline LR6 (WM) used together	50

* Measured value by the standard of EIAJ (Electronic Industries Association of Japan). (Using a Sony HF series cassette tape)

Note

- The battery life may shorten depending on the operation of the unit.

Connecting the Headphones / Earphones (see Fig. B)

1 Connect the stereo mini plug firmly to the remote control (EX672 only).
2 Connect the headphones/earphones to ⌂REMOTE.
3 Wear the "L" marked side to the left ear and the "R" marked side to the right ear.
If the earphones do not fit to your ears or the sound is unbalanced, adjust the earphones to fit to your ears firmly.

► Operating the Walkman

Playing a Tape (see Fig. C-⊖)

1 Open the cassette holder and insert a cassette.
2 Make sure the HOLD function is turned off. If it is on, slide the HOLD switch to turn it off.
3 Press ◄►•REPEAT on the main unit or if using the remote control (EX672 only), press ◄►(play)•■(stop). Adjust the volume with VOL.

When adjusting the volume on the main unit (EX672 only)
Set the VOL control on the remote control at maximum.

When adjusting the volume on the remote control (EX672 only)
Set the VOL control on the main unit to around 6.

Note on the cassette holder
When opening the cassette holder on the main unit, make sure the tape is stopped, then slide the OPEN switch. If the cassette holder is opened when the tape is running, the tape may loosen and be damaged.

Operation on the main unit

To	Press (see Fig. C-⊖)
Play the other side	◄►•REPEAT during playback
Stop playback	■
Fast forward	FF•AMS during stop
Rewind	REW•AMS during stop
Repeat the current track (Repeat Single Track function)	◄►•REPEAT 2 seconds or more during playback *To stop a single repeat, press it again.*

Operation on the remote control (EX672 only)

To	Press (see Fig. C-⊖)
Play the other side*	◄►•■ 2 seconds or more during playback
Stop playback	◄►•■ once during playback
Fast forward**	FF during stop
Rewind**	REW during stop
Repeat the current track (Repeat Single Track function)	◄►•■ twice during playback *To stop a single repeat, press* ◄►•■ *once.*

* Playback will switch automatically to the opposite side when the tape reaches the end of the side.
** Fast forward/rewind will stop automatically when the tape reaches the end of the side.
If ◄►•■ on the remote control (EX672 only) is pressed during fast forward or rewind, the Walkman switches to playback.

Other Tape Operations

On the remote control, press FF or REW (EX672 only).

To	Press
Play the next track/succeeding 9 tracks from the beginning (AMS***)	FF•AMS once/repeatedly during playback
Play the current track/previous 8 tracks from the beginning (AMS***)	REW•AMS once/repeatedly during playback
Play the other side from the beginning (Skip Reverse function)	FF•AMS 2 seconds or more during stop
Play the same side from the beginning (Rewind Auto Play function)	REW•AMS 2 seconds or more during stop

*** Automatic Music Sensor

To skip a long space between tracks (BL SKIP function) (see Fig. B)

While holding down FUNCTION, press FF•AMS. The BL SKIP indication lights up and you will hear a short beep. (The indication goes off when you release FUNCTION.)

To cancel the BL SKIP function, repeat the procedure again. The BL SKIP indication goes off and you will hear two short beeps.

To confirm the status, press FUNCTION. The BL SKIP indication lights up if the function is activated.

Notes on AMS, Repeat Single Track and BL SKIP

- To operate the AMS and the Repeat Single Track functions, you need a blank of 4 seconds or longer between the tracks. For the BL SKIP function, you need a blank of 12 seconds or longer. Therefore, if there is noise between the tracks, these functions will not detect the blank and will not operate. Likewise, if the recording level is moderately low within a track, these functions may operate inaccurately.
- You need a blank of 10 seconds or longer at the beginning of each side of the cassette. Otherwise, the first track may not be played back from the beginning.

To play a tape recorded with the Dolby*B NR system (see Fig. D)

While holding down FUNCTION, press ■. The ⧈ NR indication lights up and you will hear a short beep. (The indication goes off when you release FUNCTION.)

To cancel the Dolby NR function, repeat the procedure again. The ⧈ NR indication goes off and you will hear two short beeps.

To confirm the status, press FUNCTION. The ⧈ NR indication lights up if the function is activated.

* Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
"DOLBY" and the double-D symbol ⧈ are trademarks of Dolby Laboratories Licensing Corporation.

Note

- The BL SKIP and ⧈ NR settings are stored as long as the battery is not replaced.

English

►Getting Started

Choosing a Power Source

Dry Battery (see Fig. A-⊖)

Attach the supplied battery case, and then insert one R6 (size AA) battery with correct polarity.

Note

- For maximum performance we recommend that you use a Sony alkaline battery.

Rechargeable Battery (see Fig. A-⊖)

1 Insert the supplied rechargeable battery (NC-6WM) into the charger with correct polarity.
2 Plug in the charger to the house current (mains).
UK model: Full charging takes about 3,5 hours.
European Continent model: Full charging takes about 2.5 hours.
3 Insert the fully charged battery into the rechargeable battery compartment (see Fig. A-⊖).

You can charge the battery about 300 times.

When to replace/charge the battery (see Fig. A-⊖)

When the battery weakens, the BATT lamp will flash and tape playback will become unstable and noisy. Replace or charge the battery when the BATT lamp flashes.

Notes

- When you remove and reinsert a rechargeable battery, the BATT lamp may light up temporarily even if it has little battery power left. After a while, the BATT lamp will start to flash.
- The BATT lamp may temporarily flash or go off when used in extremely low temperatures.

Battery life

(Approx. hours)	(EIAJ*)
Rechargeable NC-6WM fully charged	12
Sony alkaline LR6 (WM)	39
Rechargeable NC-6WM Sony alkaline LR6 (WM) used together	50

* Measured value by the standard of EIAJ (Electronic Industries Association of Japan). (Using a Sony HF series cassette tape)

Note

- The battery life may shorten depending on the operation of the unit.

Connecting the Headphones / Earphones (see Fig. B)

1 Connect the stereo mini plug firmly to the remote control (EX672 only).
2 Connect the headphones/earphones to ⌂REMOTE.
3 Wear the "L" marked side to the left ear and the "R" marked side to the right ear.
If the earphones do not fit to your ears or the sound is unbalanced, adjust the earphones to fit to your ears firmly.

► Operating the Walkman

Playing a Tape (see Fig. C-⊖)

1 Open the cassette holder and insert a cassette.
2 Make sure the HOLD function is turned off. If it is on, slide the HOLD switch to turn it off.
3 Press ◄►•REPEAT on the main unit or if using the remote control (EX672 only), press ◄►(play)•■(stop). Adjust the volume with VOL.

When adjusting the volume on the main unit (EX672 only)
Set the VOL control on the remote control at maximum.

When adjusting the volume on the remote control (EX672 only)
Set the VOL control on the main unit to around 6.

Note on the cassette holder
When opening the cassette holder on the main unit, make sure the tape is stopped, then slide the OPEN switch. If the cassette holder is opened when the tape is running, the tape may loosen and be damaged.

Operation on the main unit

To	Press (see Fig. C-⊖)
Play the other side	◄►•REPEAT during playback
Stop playback	■
Fast forward	FF•AMS during stop
Rewind	REW•AMS during stop
Repeat the current track (Repeat Single Track function)	◄►•REPEAT 2 seconds or more during playback *To stop a single repeat, press it again.*

Operation on the remote control (EX672 only)

To	Press (see Fig. C-⊖)
Play the other side*	◄►•■ 2 seconds or more during playback
Stop playback	◄►•■ once during playback
Fast forward**	FF during stop
Rewind**	REW during stop
Repeat the current track (Repeat Single Track function)	◄►•■ twice during playback *To stop a single repeat, press* ◄►•■ *once.*

* Playback will switch automatically to the opposite side when the tape reaches the end of the side.
** Fast forward/rewind will stop automatically when the tape reaches the end of the side.
If ◄►•■ on the remote control (EX672 only) is pressed during fast forward or rewind, the Walkman switches to playback.

Other Tape Operations

On the remote control, press FF or REW (EX672 only).

To	Press
Play the next track/succeeding 9 tracks from the beginning (AMS***)	FF•AMS once/repeatedly during playback
Play the current track/previous 8 tracks from the beginning (AMS***)	REW•AMS once/repeatedly during playback
Play the other side from the beginning (Skip Reverse function)	FF•AMS 2 seconds or more during stop
Play the same side from the beginning (Rewind Auto Play function)	REW•AMS 2 seconds or more during stop

*** Automatic Music Sensor

To skip a long space between tracks (BL SKIP function) (see Fig. B)

While holding down FUNCTION, press FF•AMS. The BL SKIP indication lights up and you will hear a short beep. (The indication goes off when you release FUNCTION.)

To cancel the BL SKIP function, repeat the procedure again. The BL SKIP indication goes off and you will hear two short beeps.

To confirm the status, press FUNCTION. The BL SKIP indication lights up if the function is activated.

Notes on AMS, Repeat Single Track and BL SKIP

- To operate the AMS and the Repeat Single Track functions, you need a blank of 4 seconds or longer between the tracks. For the BL SKIP function, you need a blank of 12 seconds or longer. Therefore, if there is noise between the tracks, these functions will not detect the blank and will not operate. Likewise, if the recording level is moderately low within a track, these functions may operate inaccurately.
- You need a blank of 10 seconds or longer at the beginning of each side of the cassette. Otherwise, the first track may not be played back from the beginning.

To play a tape recorded with the Dolby*B NR system (see Fig. D)

While holding down FUNCTION, press ■. The ⧈ NR indication lights up and you will hear a short beep. (The indication goes off when you release FUNCTION.)

To cancel the Dolby NR function, repeat the procedure again. The ⧈ NR indication goes off and you will hear two short beeps.

To confirm the status, press FUNCTION. The ⧈ NR indication lights up if the function is activated.

* Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
"DOLBY" and the double-D symbol ⧈ are trademarks of Dolby Laboratories Licensing Corporation.

Note

- The BL SKIP and ⧈ NR settings are stored as long as the battery is not replaced.

(turn over)

Download from Www.Somanuals.com. All Manuals Search And Download.

E

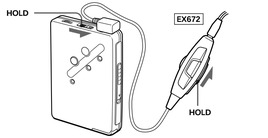

F

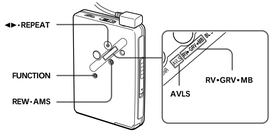

Utilización de otras funciones

Bloqueo de los controles — Función de bloqueo (consulte la Fig. E)

Para bloquear los controles de la unidad principal, deslice el interruptor HOLD de la unidad principal en el sentido de la flecha.

Para bloquear los controles del controlador remoto, deslice el interruptor HOLD del mismo en el sentido de la flecha (EX672 solamente).

Acentuación del sonido (consulte la Fig. F)

Manteniendo pulsada FUNCTION, presione repetidamente ◆▶ • REPEAT.
Con cada presión, las lámparas indicadoras de sonido se encenderán de la forma siguiente. (Las lámparas se apagarán cuando suelte FUNCTION.)

Lámparas **Sonido**

RV●•GRV•○MB — RV
↑
Encendida ↓
RV○•GRV•●MB — MB
↑
↓ Encendida
RV●•GRV•●MB — GRV
└ ┘
Encendida
↓
RV○•GRV•○MB — Normal

RV (Sound Revitalizer): Acentúa el sonido de agudos.
MB (Mega Bass): Acentúa el sonido de graves.
GRV (Groove): Acentúa el sonido de graves más profundos.
Normal: Sonido normal

Notas
- Si el sonido se oye distorsion en el modo GRV, seleccione sonido MB o normal.
- El ajuste permanecerá almacenado mientras no reemplace la pila/batería.

Para confirmar el estado
Presione FUNCTION. Las lámparas se encenderán para indicar la acentuación del sonido activada.

Protección de sus oídos —Función AVLS (consulte la Fig. F)

Cuando active la función del sistem a limitador automatico de volumen (AVLS), el volumen máximo se mantendrá bajo para proteger sus oídos.

Manteniendo pulsada FUNCTION, presione REW • AMS. Aparecerá la indicación AVLS y usted oirá un pitido corto. (La indicación desaparecerá cuando suelte FUNCTION.)

Para cancelar la función AVLS, repita el procedimiento. La indicación AVLS desaparecerá y usted oirá dos pitidos cortos.

Para confirmar el estado, presione FUNCTION. Cuando active la función, aparecerá la indicación AVLS.

Nota
- Los ajustes de sonido y de AVLS permanecerán almacenados mientras no reemplace la pila/batería.

▶ *Información adicional*

Precauciones

Precauciones sobre la batería y el cargador
- Desconecte el cargador del tomacorriente lo antes posible después de haber cargado la batería. La sobrecarga podría dañar la batería.
- El cargador de baterías y la batería pueden calentarse durante la carga, pero esto no significa problema alguno.
- No despegue la película de la batería.
- Para cargar la batería suministrada, utilice solamente el cargador de baterías suministrado.
- Tenga cuidado de no cortocircuitar la batería. Cuando la lleve consigo, utilice la caja de transporte suministrada. Si no va a utilizar la caja de transporte, no lleve la batería con otros objetos metálicos, como llaveros, en su bolsillo.
- Si la batería es nueva o no se ha utilizado durante mucho tiempo, es posible que no se cargue completamente hasta que la utilice varias veces.
- La placa de características en la que se indica la tensión de alimentación, el consumo, etc., se encuentra en la parte inferior exterior del cargador de baterías.

Pilas/baterías
- No cargue una pila.
- No lleve las pilas/baterías con monedas ni otros objetos metálicos. Si los terminales positivo y negativo de las pilas/baterías se cortocircuitasen accidentalmente con un objeto metálico, se generaria calor.
- Cuando no vaya a utilizar el Walkman durante mucho tiempo, extraiga la pila/batería para evitar el daño que podría causar el electrólito de la misma en caso de fugarse.

Unidad
- No deje caer la unidad ni la golpee, ya que podría provocar su mal funcionamiento.
- No deje la unidad cerca de fuentes térmicas, ni en un lugar sometido a la luz solar directa, a polvo excesivo, a arena, a la humedad, a la lluvia, ni a golpes, ni en el interior de un automóvil con las ventanillas cerradas.
- Si no ha utilizado la unidad durante mucho tiempo, póngala en el modo de reproducción durante algunos minutos para calentarla antes de volver a usarla.

Cintas de más de 90 minutos
No se recomienda la utilización de cintas de más de 90 minutos excepto para reproducción larga y continua. Estas cintas son muy finas y tienden a estirarse fácilmente.

Controlador remoto (EX672 solamente)
Utilice el controlador remoto suministrado solamente para cada unidad.

Sobre los auriculares con casco/auriculares

Seguridad en la carretera
No utilice los auriculares con casco/auriculares cuando conduzca, vaya en bicicleta, o maneje cualquier vehículo motorizado. Esto podría suponer un peligro para el tráfico, y es ilegal en ciertas zonas. También puede resultar potencialmente peligroso escuchar a través de los auriculares a gran volumen mientras camine, especialmente en pasos cebra. En situaciones potencialmente peligrosas, deberá tener mucho cuidado o dejar de utilizar los auriculares.

Cuidado de sus oídos
Evite utilizar los auriculares a gran volumen. Los expertos en oídos desaconsejan la escucha prolongada a gran nivel. Si experimenta un silbido en sus oídos, reduzca el volumen o deje de escuchar a través de los auriculares.

Respeto a los demás
Mantenga el volumen a un nivel moderado. Esto le permitirá escuchar los sonidos del exterior y respetar a quienes se encuentren a su alrededor.

Mantenimiento

Para limpiar la cabeza y la trayectoria de la cinta
Utilice un cassette limpiador CHK-1W (no suministrado) cada 10 horas de utilización.

Nota
- Utilice solamente el cassette de limpieza recomendado.

Para limpiar el exterior
Utilice el paño de limpieza suministrado ligeramente humedecido en agua. No use alcohol, bencina, ni diluidor de pintura.

Nota
- Limpie periódicamente la clavija de los auriculares con casco/auriculares y los terminales de la caja de pilas (interiores y exteriores).

Solución de problemas

La unidad no funciona en absoluto.
- Cargue la batería o reemplace la pila por otra nueva alcalina Sony.
- La función de bloqueo (HOLD) está activada. Desactívela.

La operación de la cinta es imposible.
- Insert un casete.

El volumen no aumenta.
- Desactive AVLS.

La cinta avanza rápidamente sola durante la reproducción.
- Desactive BL SKIP.

El sonido contiene ruido.
- Utilice la unidad alejada de dispositivos que emitan ondas radioeléctricas, tales como teléfonos celulares.

I Walkman no funciona aunque se ha reemplazado la pila/cargado la batería.
- Extraiga y vuelva a insertar la pila/batería.

Especificaciones

Sección del reproductor de cassettes

Respuesta en frecuencia (sin sistema de reducción de ruido Dolby NR)
Reproducción: 30–18,000 Hz
Salida
Auriculares: Toma ∩ REMOTE
Impedancia de carga:
8–300 ohmios

Sección general

Alimentación
1,5 V
Batería
Una pila R6 (tamaño AA)
Dimensiones (an/al/prf)
Aprox. 77,7 x 109,1 x 21,4 mm
(incluyendo partes y controles salientes)
Masa
Aprox. 140 g
Aprox. 205 g (incluyendo la batería y un cassette)
Accesorios suministrados
- Caja de pila (1)
- Auriculares con casco o auriculares estéreo con controlador remoto (1) (EX672)
- Auriculares con casco o auriculares estéreo (EX670)
- Cargador de baterías (1)
- Adaptador para enchufe de CA (1) (excluyendo los modelos para, U.S.A., Arabia y Corea)
- Batería (NC-6WM, 1,2 V, 600 mAh, Níquel-cadmio) (1)
- Funda de transporte (1)
- Caja de transporte de la batería (1)

El diseño y las especificaciones están sujetos a cambio sin previo aviso.

Using Other Functions

Locking the Controls —Hold Function (see Fig. E)

Slide the HOLD switch on the main unit in the direction of the arrow to lock the controls of the main unit. To lock the controls on the remote control, slide the HOLD switch on the remote control in the direction of the arrow (EX672 only).

Emphasizing Sound (see Fig. F)

While holding down FUNCTION, press ◆▶ • REPEAT repeatedly. With each press, the sound indication lamps light up as follows. (The indications go off when you release FUNCTION.)

Lamps **Sound**

RV●•GRV•○MB — RV
↑
lit ↓
RV○•GRV•●MB — MB
↓
lit
RV●•GRV•●MB — GRV
└ lit ┘
↓
RV○•GRV•○MB — None

RV (SOUND REVITALIZER): emphasizes treble sound
MB (MEGA BASS): emphasizes bass sound
GRV (GROOVE): emphasizes deeper bass sound
None: normal sound

Notes
- If the sound becomes distorted in the GRV mode, select MB or NORM.
- The setting is stored as long as the battery is not replaced.

To confirm the status
Press FUNCTION. The lamps light up to indicate active sound emphasis.

Protecting Your Hearing —AVLS (Automatic Volume Limiter System) Function (see Fig. F)

While holding down FUNCTION, press REW • AMS. The AVLS indication lights up and you will hear a short beep. (The indication goes off when you release FUNCTION.)

To cancel the AVLS function, repeat the procedure again. The AVLS indication goes off and you will hear two short beeps.

To confirm the status, press FUNCTION. The AVLS indication lights up if the function is activated.

Note
- The sound and AVLS settings are stored as long as the battery is not replaced.

▶ *Additional Information*

Precautions

On rechargeable battery and charger
- Remove the charger unit from the wall outlet as soon as possible after the rechargeable battery has been charged. Overcharging may damage the rechargeable battery.
- The battery charger and the rechargeable battery may become warm during charging, but this is not a problem.
- Do not tear off the film on the rechargeable battery.
- Use only the supplied battery charger to charge the supplied rechargeable battery.
- Be sure not to short-circuit the battery. When you carry it with you, use the supplied carrying case. If you are not using the case, do not carry the battery with other metallic objects such as keys rings in your pocket.
- If the rechargeable battery is new or has not been used for a long time, it may not be charged completely until you use it several times.
- The nameplate indicating the operating voltage, power consumption, etc. is located on the bottom exterior of the battery charger.

On batteries
- Do not charge a dry battery.
- Do not carry the dry or rechargeable batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the batteries are accidentally contacted by a metallic object.
- When you do not use the Walkman for a long time, remove the battery to avoid any damage caused by battery leakage and subsequent corrosion.

On the unit
- Do not drop the unit or give a shock to the unit, or it may cause a malfunction.
- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, or in a car with its windows closed.
- If the unit has not been used for long, set it in the playback mode to warm up for a few minutes before before you start using again.

On tapes longer than 90 minutes
We do not recommend the use of tapes longer than 90 minutes except for a long continuous playback. They are very thin and tend to be stretched easily.

On the remote control (EX672 only)
Use the supplied remote control only for each unit.

On headphones/earphones

Road safety
Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headphones/earphones at high volume while walking, especially at pedestrian crossings.
You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damage
Do not use headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce the volume or discontinue use.

Caring for others
Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

Maintenance

To clean the tape head and path
Use the cleaning cassette CHK-1W (not supplied) every 10 hours of use.

Note
- Use only the recommended cleaning cassette.

To clean the exterior
Use a soft cloth slightly moistened in water. Do not use alcohol, benzine or thinner.

Note
- Clean the headphones/earphones and remote control plugs and battery case terminals (both inside and outside) periodically.

Troubleshooting

The unit does not operate at all.
- Charge the rechargeable battery or replace the battery with a new Sony alkaline battery.
- HOLD is activated. Deactivate HOLD.

The volume cannot be turned up.
- Set AVLS to off.

The tape fast-forwards by itself during playback.
- Set BL SKIP to off.

The sound contains noise.
- Use the unit away from radiowave-emitting devises such as cellular phones.

The Walkman does not operate although the dry battery has been replaced/the rechargeable battery has been charged.
- Remove the battery and insert it again.

Specifications

Tape section

Frequency response (Dolby NR off)
Playback: 30–18,000 Hz
Output
Headphones (∩REMOTE jack)
Load impedance 8–300 ohms

General

Power requirements
1.5 V
Rechargeable battery
One R6 (size AA) battery
Dimensions (w/h/d)
Approx. 109.1 x 77.7 x 21.4 mm
(4⅓ x 3⅛ x ⅞ inches), incl. projecting parts and controls
Mass
Approx. 140 g (5.0 oz.)
Approx. 205 g (7.3 oz.) incl. a rechargeable battery and a cassette
Supplied accessories
- Battery case (1)
- Stereo headphones or earphones with remote control (1) (EX672)
- Stereo headphones or earphones (EX670)
- Battery charger (1)
- Rechargeable battery (NC-6WM, 1.2 V, 600 mAh, Ni-Cd) (1)
- Carrying pouch (1)
- Rechargeable battery carrying case (1)

Design and specifications are subject to change without notice.

English

Using Other Functions

Locking the Controls —Hold Function (see Fig. E)

Slide the HOLD switch on the main unit in the direction of the arrow to lock the controls of the main unit. To lock the controls on the remote control, slide the HOLD switch on the remote control in the direction of the arrow (EX672 only).

Emphasizing Sound (see Fig. F)

While holding down FUNCTION, press ◆▶ • REPEAT repeatedly. With each press, the sound indication lamps light up as follows. (The indications go off when you release FUNCTION.)

Lamps Sound

RV●•GRV•○MB — RV
↑
lit ↓
RV○•GRV•●MB — MB
↓
lit
RV●•GRV•●MB — GRV
└ lit ┘
↓
RV○•GRV•○MB — None

RV (SOUND REVITALIZER): emphasizes treble sound
MB (MEGA BASS): emphasizes bass sound
GRV (GROOVE): emphasizes deeper bass sound
None: normal sound

Notes
- If the sound becomes distorted in the GRV mode, select MB or NORM.
- The setting is stored as long as the battery is not replaced.

To confirm the status
Press FUNCTION. The lamps light up to indicate active sound emphasis.

Protecting Your Hearing —AVLS (Automatic Volume Limiter System) Function (see Fig. F)

While holding down FUNCTION, press REW • AMS. The AVLS indication lights up and you will hear a short beep. (The indication goes off when you release FUNCTION.)

To cancel the AVLS function, repeat the procedure again. The AVLS indication goes off and you will hear two short beeps.

To confirm the status, press FUNCTION. The AVLS indication lights up if the function is activated.

Note
- The sound and AVLS settings are stored as long as the battery is not replaced.

▶ Additional Information

Precautions

On rechargeable battery and charger
- Remove the charger unit from the wall outlet as soon as possible after the rechargeable battery has been charged. Overcharging may damage the rechargeable battery.
- The battery charger and the rechargeable battery may become warm during charging, but this is not a problem.
- Do not tear off the film on the rechargeable battery.
- Use only the supplied battery charger to charge the supplied rechargeable battery.
- Be sure not to short-circuit the battery. When you carry it with you, use the supplied carrying case. If you are not using the case, do not carry the battery with other metallic objects such as keys rings in your pocket.
- If the rechargeable battery is new or has not been used for a long time, it may not be charged completely until you use it several times.
- The nameplate indicating the operating voltage, power consumption, etc. is located on the bottom exterior of the battery charger.

On batteries
- Do not charge a dry battery.
- Do not carry the dry or rechargeable batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the batteries are accidentally contacted by a metallic object.
- When you do not use the Walkman for a long time, remove the battery to avoid any damage caused by battery leakage and subsequent corrosion.

On the unit
- Do not drop the unit or give a shock to the unit, or it may cause a malfunction.
- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, or in a car with its windows closed.
- If the unit has not been used for long, set it in the playback mode to warm up for a few minutes before before you start using again.

On tapes longer than 90 minutes
We do not recommend the use of tapes longer than 90 minutes except for a long continuous playback. They are very thin and tend to be stretched easily.

On the remote control (EX672 only)
Use the supplied remote control only for each unit.

On headphones/earphones

Road safety
Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headphones/earphones at high volume while walking, especially at pedestrian crossings.
You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damage
Do not use headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce the volume or discontinue use.

Caring for others
Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

Maintenance

To clean the tape head and path
Use the cleaning cassette CHK-1W (not supplied) every 10 hours of use.

Note
- Use only the recommended cleaning cassette.

To clean the exterior
Use a soft cloth slightly moistened in water. Do not use alcohol, benzine or thinner.

Note
- Clean the headphones/earphones and remote control plugs and battery case terminals (both inside and outside) periodically.

Troubleshooting

The unit does not operate at all.
- Charge the rechargeable battery or replace the battery with a new Sony alkaline battery.
- HOLD is activated. Deactivate HOLD.

The volume cannot be turned up.
- Set AVLS to off.

The tape fast-forwards by itself during playback.
- Set BL SKIP to off.

The sound contains noise.
- Use the unit away from radiowave-emitting devises such as cellular phones.

The Walkman does not operate although the dry battery has been replaced/the rechargeable battery has been charged.
- Remove the battery and insert it again.

Specifications

Tape section

Frequency response (Dolby NR off)
Playback: 30–18,000 Hz
Output
Headphones (∩REMOTE jack)
Load impedance 8–300 ohms

General

Power requirements
1.5 V
Rechargeable battery
One R6 (size AA) battery
Dimensions (w/h/d)
Approx. 109.1 x 77.7 x 21.4 mm
(4⅓ x 3⅛ x ⅞ inches), incl. projecting parts and controls
Mass
Approx. 140 g (5.0 oz.)
Approx. 205 g (7.3 oz.) incl. a rechargeable battery and a cassette
Supplied accessories
- Battery case (1)
- Stereo headphones or earphones with remote control (1) (EX672)
- Stereo headphones or earphones (EX670)
- Battery charger (1)
- Rechargeable battery (NC-6WM, 1.2 V, 600 mAh, Ni-Cd) (1)
- Carrying pouch (1)
- Rechargeable battery carrying case (1)

Design and specifications are subject to change without notice.

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com