CLIPPER, TRIMMER & NOSE/EAR DETAILER CHROME

3-in-1 Kit

MULTI-PURPOSE
includes clipper, trimmer and nose/ear detailer for all your grooming needs

Instructions for Clipper Care and Use
Model HCT401

CONAIR
HOME HAIRCUTTING KIT

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

FOR HOUSEHOLD USE ONLY
KEEP AWAY FROM WATER

DANGER – Any appliance is electrically live, even when the switch is off.

To reduce the risk of death or injury by electric shock:

1. **Always unplug this appliance from electrical outlet immediately after using.**
2. Unplug this appliance before cleaning. Unplug the appliance when not in use.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not use while bathing or in a shower.
5. Do not place in, or drop into water or other liquid.
6. **Do not reach for an appliance that has fallen into water. Unplug immediately.**

WARNING – To reduce the risk of burns, electric shock, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in. Do not pull, twist, or wrap line cord around appliance.
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer. Do not use an extension cord to operate this appliance.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never drop or insert any object into any opening on this appliance.
7. Do not place appliance on any surface while it is operating.
8. Do not use this appliance with a damaged or broken comb or with teeth missing from the blades as injury may occur. Before use, make certain blades are aligned properly. (See "Care of your Clippers.")
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Never operate the appliance with the air openings blocked or while on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and other debris.
11. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to "OFF", then remove plug from outlet.
12. Avoid skin contact with moving blade.
13. Keep lubricating oil out of reach of children.
14. When using the appliance with its cord, be mindful of tangles or kinks in the cord. If the cord does become tangled during use, turn the unit off and straighten cord before operating again.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

This appliance is intended for household use. Use on Alternating Current 120V/60 hertz only. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in the outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not attempt to defeat this safety feature.

Your new Conair® haircut kit has everything you need to achieve professional haircuts at home. It features a powerful clipper with adjustable taper control and stainless steel blades for cutting precision, a nose/ear trimmer and a detail trimmer that is great for necks, sideburns, goatees and mustache trimming. Also included are 10 attachment combs (1/8" (3 mm), 1/4" (6 mm), 3/8" (9.5 mm), 1/2" (13 mm), 5/8" (16 mm), 3/4" (19 mm), 7/8" (22 mm), 1" (25 mm) for different hair lengths (left and right ear combs), barber scissors, barber cape, deluxe storage case, barber comb with straight teeth, styling comb with angled teeth, and 3 styling clips to assist you in cutting longer hair styles. It also comes with lubricating oil, a cleaning brush and a blade guard for easy maintenance of the clipper blades.

THE CONAIR GUIDE TO CUTTING HAIR AT HOME

Before you start:

1. Inspect your clipper. Make sure it's free of hair and dirt, properly oiled, and running smoothly.
2. Place a towel around the neck of the person.
3. Seat the person so that his or her head is at your eye level. This gives you greater visibility and control.
4. First, comb hair until it's tangle-free. Then hold clipper in a comfortable grip. Now you're ready to cut.

MEDIUM TO LONG CUT

To begin with, cut only a small amount of hair until you become used to the length each attachment leaves the hair. Try the longest attachment on the clipper first. If you want a shorter cut, you can then use shorter combs.

- Short attachment comb (number 1) cuts hair to 1/8" (3mm).
- Medium-Short attachment comb (number 2) cuts hair to 1/4" (6mm).
- Medium-Long attachment comb (number 3) cuts hair to 3/8" (9.5mm).
- Long attachment comb (number 4) cuts hair to 1/2" (12.5mm).
- Long attachment comb (number 5) cuts hair to 5/8" (16mm).
- Long attachment comb (number 6) cuts hair to 3/4" (19mm).
- Long attachment comb (number 7) cuts hair to 7/8" (22mm).
- Long attachment comb (number 8) cuts hair to 1" (25mm).
- Left ear attachment comb lightly tapers over left ear.
- Right ear attachment comb lightly tapers over right ear.



Attach combs by holding them teeth up, then snapping onto the bottom of the clipper blade.

To remove comb attachments, place index finger and thumb as illustrated; then pull out and up.

NOTE: Never push or shove the clipper through the hair to make it move more quickly. Professional experience shows that the clipper works most efficiently when it cuts through the hair at its own speed.

To begin cutting hair:

1. The hair should be combed in its natural direction.



2. Using the largest attachment comb, trim sides from the bottom upward. Hold clipper lightly against the hair with teeth of the attachment comb pointing upward, yet flat against the head. Gradually lift the clipper upward and outward through the hair, trimming just a little at a time.

Repeat around sides and back of head.

If you want hair to be even shorter:

A) Apply more pressure to the head with the attachment comb that is in place. This takes a little practice, of course. **OR** B) Just switch to a shorter attachment comb.

Remember, it's better to leave too much hair than too little. For longer hair on top, use the barber comb and lift hair on the top of the head, cutting over the comb. Or hold the hair between the fingers and cut to desired length. Always working from the front to the back of the head, gradually cut the hair shorter by reducing the space between the comb or fingers and the head. Comb often to check for uneven strands, and to get rid of trimmed hair.

OUTLINING:

Outlining requires no attachments. Comb hair into the desired style. Position the clipper between the sideburns and the ear (see below), making sure the corner edge of the blade is against the hairline. With the outline of the hair as your guide, slowly move the clipper over, around and behind the ears. For the back of the neck and the sideburns, hold the clipper upside down (see above) and, holding it against the skin at the length desired, move the clipper downward.

STOP. COMB. CHECK.

For best results, do as the professionals do: comb hair often, and check clipping results as you comb. This way you avoid uneven sides, bangs, neckline, etc.

SHORT CUTS TO PERFECT FLAT TOPS, CREW CUTS, ETC.

Always cut from the back of the neck to the crown, using the longest comb setting.

Hold the comb attachment flat against the head and slowly move the clipper up through the hair. Use the same technique for the sides, cutting from the bottom to the upper side of the head.

For the front to the crown, cut the hair against the direction in which it grows. Then even it up with the sides.

For a flat top, use the flat comb, not the attachment comb. Just cut hair on top of the head over flat comb. (see above).

To taper hair down to the neckline, use attachment comb #1. Comb hair andcheck for uneven spots. Outline sideburns and neck areas (see "Outlining").



USER-MAINTENANCE INSTRUCTIONS

CARE OF YOUR CLIPPERS

IF YOU DETERMINE THAT BLADE ALIGNMENT IS INCORRECT:

Conair® hair clippers are carefully inspected to insure that the blades are in perfect alignment. Of course you will need to realign the blades after removal for cleaning or replacement, or if they should be knocked out of alignment. How can you tell if blades need realigning? Simply match them up, point for point, to conform with FIG. 1 below:

FIG. 1

To prevent the clipper from contacting the skin or cutting too closely, make certain that the end top blade teeth are 1/32" to 1/16" back from bottom blade.

To Align Blades:

1. Add two or three drops of Conair Lubricating Oil (included).
2. Turn clipper on for a minute to disperse oil evenly over blades, then turn off.
3. Unplug clipper and slightly loosen screws. (See FIG. 2)



FIG. 2

4. Position the extreme left-hand tooth of the top blade so that it either covers or appears on the left of the first small tooth on the bottom blade.
5. Make sure that the big tooth on the bottom blade touches the extreme right hand tooth of the top blade.

SPECIAL OIL

To maintain the blades of your Conair clipper, oil them after every three or four haircuts. Gently place a few drops of oil on the teeth of the blades, using the special Conair oil included with your set. Turn the clipper on for a minute, then turn off. This light, natural oil was formulated specifically for the Conair high-speed
clipper. Because it is the right oil to use, it will not slow down the blades. Never use any other product. There is no substitute for Conair oil.



POWER SCREW

The power screw permits you to adjust power to your clipper. You may need to make this adjustment if the power in your house is low. (The Conair® clipper was designed for household use.)

1. With a screwdriver or a dime, turn the power screw counter clockwise until the arm strikes coil, making a clacking noise. (FIG.1)



FIG. 1

2. Then turn the screw clockwise, until the noise stops and then turn about 45 degrees more. This is the maximum power setting. (FIG. 2)

FIG. 2

OIL BLADE BEFORE USE.

MEDIDAS DE SEGURIDAD IMPORTANTES

ADVERTENCIA – Para reducir el riesgo de quemaduras, electrocución, incendio o lesiones:

1. Nunca deje el aparato desatendido mientras esté enchufado. No jale, retuerza ni enrolle el cable alrededor del aparato.
2. Este aparato no debe ser usado por, sobre o cerca de niños o personas con ciertas discapacidades.
3. Utilice este aparato únicamente con el propósito para el cual fue diseñado y siempre según las instrucciones. Sólo use accesorios recomendados por el fabricante. No utilice una extensión con este aparato.
4. No utilice este aparato si el cordón o la clavija están dañados, después de que hubiese funcionado mal o que se hubiese caído o si estuviese dañado. Regrese el aparato a un centro de servicio autorizado para su revisión y reparación.
5. Manténgalo alejado de superficies calientes.
6. No trate de alcanzar el aparato después de que hubiese caído al agua. Desconéctelo inmediatamente.

Siempre desconecte el aparato inmediatamente después de usarlo.

1. Siempre desconecte el aparato de la toma de corriente eléctrica antes de limpiarlo.
2. Desconecte el aparato después de usarlo.
3. No coloque ni guarde este producto donde pueda caer o ser empujado o caer hacia o dentro de una tina o lavabo.
4. No lo use en la baño o la ducha.
5. No coloque el aparato al borde o cerca del agua u otro líquido.
6. No lo utilice en exteriores, ni lo haga funcionar donde se están usando productos en aerosol (spray) o donde se está administrando oxígeno.
7. No lo use mientras duerme.
8. Nunca deje que las deshilachadas líneas de pelusas se enrollen alrededor de la cabeza.
9. No lo utilice si el aparato está dañado o si no funciona correctamente. Sólo el personal de reparación autorizado puede reparar el aparato.
10. Nunca bloquee las aberturas de ventilación mientras esté funcionando. Mantenga las aberturas libres de pelusas, cabellos y elementos similares.
11. Siempre conecte el cable al aparato antes de enchufarlo a la toma de corriente. Siempre apague el aparato (OFF) antes de desconectarlo.
12. Evite que las cuchillas toquen la piel cuando están moviéndose.
13. Mantenga el aceite lubricante fuera del alcance de los niños.
14. Siempre asegúrese de que el cable del aparato, una capa, 3 pinzas y una caja de almacenamiento de cuchillas de peinillas tengan un dibujo de lightning. Aceite lubricante, un cepillo de limpieza y un protector de cuchillas de peinillas también están incluidos en la caja. Los aceites de cuchillas de peinillas están incluidos en la caja. Los aceites de cuchillas de peinillas están incluidos en la caja. Los aceites de cuchillas de peinillas

ADJUSTABLE TAPER LEVER

Just like professional clippers, the Conair taper lever is positioned at your thumb. You can hold the clipper in your hand and adjust the lever at the same time... while you're clipping.

This taper lever eliminates the need for an attachment comb because it lets you gradually adjust the closeness of the cut. For the closest cut and the shortest hair, push taper lever up as far as it will go. To increase cutting length, slowly push lever down. If you push to the lowest position, it will leave hair about the same length as the short attachment.

Because a different cutting edge is used in each setting, the taper lever lengthens the life of your blades.

Packed-in hair can slow down any clipper.

To remove hair without removing the blades, do what the professionals do: keeping the clipper on, quickly push the taper lever back and forth from "close" to "longer" cut a few times.

If you do this after every clipping, especially with heavy hair cutting, the blades should remain free of cut hair.



If clipper stops cutting and this action doesn't help, check the blades. If they've become dull, replace them or return them to a Conair service center. We'll be glad to sharpen them for you. For new blades, send check or money order for $6.50 (see order blank) which includes postage and handling (If $10 minimum is met) to:

Conair Corporation
150 Milford Rd.
East Windsor, NJ 08520

NOTE: Never pull on the clipper cord. Never twist or wrap the cord around the clipper. Lay it flat with the cord coiled up when not in use.

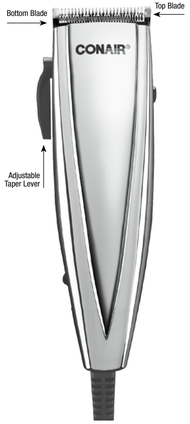

WARNING:
IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG.

KEEP AWAY FROM WATER



Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically alive even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

LIMITED FIVE YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and $3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 60 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 60 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Please register this product at www.conair.com/registration

Service Center
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

©2012 Conair Corporation
150 Milford Road, East Windsor, NJ 08520
7475 North Glen Harbor Blvd., Glendale, AZ 85307

Once again, thanks for buying a Conair product.

Your Conair® clipper blades are made of high carbon stainless steel. They are engineered for precise, professional results. If blades feel like they are pulling or grabbing hair, it means they are losing their sharpness and should be replaced as soon as possible.

Attachment combs should also be replaced if they are lost or broken. It is easier to cut hair with the accuracy of a pro when the necessary tools are at your fingertips.

Conair makes a variety of accessories for different haircut kits. If your haircut kit does not include them, you may want to consider adding them to your professional haircutting tools.

Left and right ear attachment combs provide effortless, precise cutting around the ears. Styling clips hold hair in place when you are sectioning hair. A styling comb makes it easy to taper or cut hair at an angle. A barber cape ensures a comfortable and neat haircut and a convenient storage pouch keeps all your essentials in one place.

Last but not least, an easy-to-follow 30-minute "Haircuts at Home" video is available. It demonstrates basic haircutting techniques and follows four popular haircuts step by step. It will give you the confidence and instruction you need to give great looking haircuts to every member of your family.

12PG129785 IB-11276

Download from Www.Somanuals.com. All Manuals Search And Download.

FORMULARIO DE PEDIDO – PARTES DE REPUESTO Y ACCESORIOS

Precios válidos hasta el 31 de diciembre de 2013. Aplicarán los cargos envíos
Precios válidos hasta el 31 de diciembre de 2013. Aplicarán los cargos envíos

CORTAR AQUÍ

DESCRIPCIÓN	NÚMERO	PRECIO	CANTIDAD	TOTAL
Juego de 4 guías: 1/8", 1/4", 3/8", y 1/2". Compatibles con todas las cortadoras (HC200, HC220, HC240, HC102 HC300, HC318, HC414, HC275, HC222)	**COMB-10**	$5.00		
Juego de 2 guías: cada una para el lado izquierdo y el lado derecho (HC222). Compatibles con todas las cortadoras (HC200, HC240, HC102 y HC300). Aceptado en modelo HC222	**COMB-11**	$1.75		
Guía de 1". Compatible con todas las cortadoras.	**COMB-12**	$1.75		
Juego de 3 guías: 5/8", 3/4", 7/8", compatibles con todas las cortadoras.	**COMB-13**	$5.00		
Cepillo para la nuca	**HCNB-1**	$1.50		
Capa de nylon con cierre velcro	**CAPE-1**	$5.00		
3 tubos de aceite lubricante	**HC OIL**	$2.00		
Video educativo de 30 minutos	**HC VIDEO**	$8.95		
Tijeras de peluquero	**SC-1**	$2.00		
Juego de cuchillas para el modelo HC200	**BLD-8**	$6.50		
Protector de cuchillas	**BG30**	$1.00		
3 pinzas	**CLP-1**	$1.50		

Subtotal

*Impuesto a la venta

TOTAL

Enviar a:
Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520-9730

Para reparar sus productos, visítenos en:
www.conair.com/registration

Centro de servicio
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

©2012 Conair Corporation
150 Milford Road, East Windsor, NJ 08520
7475 North Glen Harbor Blvd., Glendale, AZ 85307

12PG129785 IB-11276

NOVEDADES ESCONDIDAS DE CONAIR

Nuevamente, gracias por comprar un producto de Conair.

Las cuchillas de su cortadora Conair® son de acero inoxidable con alto contenido de carbono. Han sido diseñadas para proporcionar resultados precisos y profesionales. Si siente que las cuchillas trabajan o engañan la cabello, nada significa que están perdiendo el filo y debe reemplazarlas lo más pronto posible.

También deberá cambiar las guías si se pierden o se dañan. Se le hará más fácil cortar el cabello con las herramientas adecuadas.

Conair ofrece una gran variedad de accesorios para cortar el cabello. Si su juego de peluquería no los incluye, ha pueda pedir por correo.

Cortadora multiuso recargable con 4 guías; para todas sus necesidades.

Modelo GMT189RGB

Modelo COMB-11 | Modelo SC- 1 | Modelo HC VIDEO

Modelo COMB-13 | Modelo COMB-10 | Modelo BLD- 8

Modelo HCNB-1 | Modelo CAPE-1 | Modelo HC OIL

Modelo BG30 | Modelo CLP- 1 | Modelo COMB-12

También puede ordenar el DVD instructivo "Corte de cabello en casa", con instrucciones básicas del corte de cabello y presenta cuatro atractivos cortes paso a paso. Le da la confianza de cómo hacer los cortes necesita para cortarle el cabello a toda su familia.

La primera tarjeta de peluquería recargable con 4 guías, para todas sus necesidades.

Modelo GMT189RGB

Guías para la oreja izquierda y derecha permiten cortar el cabello alrededor de las orejas fácilmente. Las pinzas son muy convenientes para sostener el cabello durante el corte. El peine permite desvanecer o cortar el cabello en ángulo. La capa de corte ofrece mayor comodidad durante el corte y la bolsa de almacenaje guarda estas herramientas de todos sus accesorios en un mismo lugar.

"Corte de cabello en casa", con instrucciones básicas del corte de cabello y presenta cuatro atractivos cortes paso a paso. Le da la confianza de cómo hacer los cortes necesita para cortarle el cabello a toda su familia.

Modelo COMB-12 | Modelo CLP- 1 | Modelo BG30

Modelo HC OIL | Modelo CAPE-1 | Modelo HCNB-1

Modelo HC VIDEO | Modelo SC- 1 | Modelo COMB-11

Cortadora multiuso recargable con 4 guías; para todas sus necesidades.

Modelo GMT189RGB

Modelo HG300

Peine para cortar el cabello a la altura deseada. Cuando se corta el cabello, el peine se desliza por la parte de la cabeza y se detiene en la longitud deseada. Cuando se corta el cabello, el peine se desliza por la parte de la cabeza y se detiene en la longitud deseada.

Tijeras para cortar el cabello a la altura deseada. Cuando se corta el cabello, las tijeras se deslizan por la parte de la cabeza y se detienen en la longitud deseada.

Cepillo para limpiar las cuchillas sin tener que remover la cuchilla. Para limpiar las cuchillas sin tener que remover la cuchilla, sigue el ejemplo de los profesionales: cepillo de limpieza de cuchillas incluido. Cuando se quiten las cuchillas, se recomienda que se limpie el cepillo de limpieza de cuchillas incluido. Para limpiar las cuchillas sin tener que remover la cuchilla, sigue el ejemplo de los profesionales: cepillo de limpieza de cuchillas incluido.

Cepillo de limpieza de cuchillas incluido

Cortadora de cuchillas

Cortadora de cuchillas superior

Cortadora de cuchillas inferior

Filtraje de aceite de longitud de corte

Cortar más largo

Cortar más corto

PALANCA DE AJUSTE DE LONGITUD DE CORTE

Al igual que las cortadoras profesionales, su cortadora está equipada con una palanca de ajuste de longitud de corte al nivel del pulgar que permite ajustar el largo del corte a medida que la cortadora está en movimiento. Hacer esto después de cada uso, especialmente cuando se corta mucho cabello, mantiene las cuchillas en condición óptima. Si la cortadora deja de funcionar y que esto no solucionó el problema, examine las cuchillas. Si están embotadas, cambiadas o reparadas a nuestro centro de servicio, donde las afilaremos por correo, mandando un cheque o un giro postal de US$6.50 (incluye gastos de envío y manejo) a la dirección mas abajo.

Para obtener un corte mas largo, deslice el botón hacia atrás, hasta la posición no.1. Para obtener un corte mas corto, deslice el botón hacia adelante, hasta la posición no. 7.

Usar la palanca de ajuste de longitud de corte prolonga la vida útil de las cuchillas, pues esta manera utilizan el mismo ángulo para cortar.

Su cortadora puede perder velocidad si recortes de cabello están trabados en las cuchillas.

Para limpiar las cuchillas sin tener que remover la cuchilla, sigue el ejemplo de los profesionales: cepillo de limpieza de cuchillas incluido. Para limpiar las cuchillas sin tener que remover la cuchilla, sigue el ejemplo de los profesionales: cepillo de limpieza de cuchillas incluido.

NOTA: Nunca jale el cable, Nunca retuerza el envolte el cable alrededor del aparato. Enrolle el cable sin apretar al lado del aparato.

Conair Corporation
150 Milford Rd.
East Windsor, NJ 08520

MANTÉNGALO ALEJADO DEL AGUA

ADVERTENCIA:
SI CREE QUE NO HAY CORRIENTE CUANDO EL APARATO ESTÁ APAGADO, ESTÁ EQUIVOCADO

SIEMPRE DESENCHUFE LOS APARATOS PEQUEÑOS

Todos sabemos que no se debe mezclar la electricidad y el agua. Pero ¿Sabe usted que un aparato eléctrico permanece bajo tensión aunque está apagado? Si está conectado, hay corriente. Por lo tanto, siempre desenchufe los aparatos eléctricos después de usarlos.

GARANTÍA LIMITADA DE CINCO AÑOS

Conair reparará o remplazará (a su opción) su aparato en un lapso de cinco años a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado al dorso, junto con recibo de compra o cheque a nombre de Conair Corporation. Para recibir instrucciones de envío, en ausencia del recibo de compra, el periodo de garantía será de 60 meses a partir de la fecha de fabricación.

CALCULOIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 60 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no ser para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO EXPRESA O IMPLÍCITA, AIGUNOS ESTADOS DE ESTA O CUALQUIER OTRA GARANTÍA, DE CONSECUENTE DEBIDO AL INCUMPLIMIENTO

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

Para registrar su producto, visítenos en:
www.conair.com/registration

Centro de servicio
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

©2012 Conair Corporation
150 Milford Road, East Windsor, NJ 08520
7475 North Glen Harbor Blvd., Glendale, AZ 85307

12PG129785 IB-11276

EXCITING ITEMS FROM CONAIR

Cordless/rechargeable multi-use trimmer with 4 total blade attachments for all your grooming needs.
Model GMT189RGB

The first cordless, rechargeable angled shaving head with an universal grip, 3-position taper control, 3 attachment combs and trimmer attachment.
Model HG300

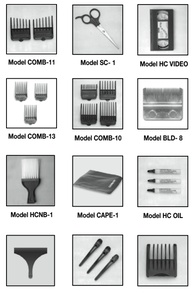

HAIRCUT KIT REPLACEMENT PARTS & ACCESSORIES ORDER FORM

Pricing in effect through December 31, 2013. Orders postmarked after this date will be accepted, and the customer will be notified if pricing has changed.

CORTAR AQUÍ

ITEM	PART #	PRICE	QUANTITY	AMOUNT
Set of 4 Attachment Combs:1/8", 1/4", 3/8", 1/2". Fits all clippers (HC200, HC220, HC240, HC102 HC300, HC318, HC414, HC275, HC222)	**COMB-10**	$5.00		
Set of 2 Attachment Combs: left ear and right ear. Fits all clippers (see COMB-10).except HC222	**COMB-11**	$1.75		
1" Comb fits all clippers	**COMB-12**	$1.75		
3 attachment combs 5/8", 3/4", 7/8". Fits all clippers	**COMB-13**	$5.00		
Neck Brush	**HCNB-1**	$1.50		
Deluxe Black Vinyl Cape with Velcro Collar	**CAPE-1**	$5.00		
Lubricating Oil (pkg. of 3 tubes)	**HC OIL**	$2.00		
30 Minute Haircut Video	**HC VIDEO**	$8.95		
Barber Scissors	**SC-1**	$2.00		
Blade Set for HC200 Detent Clipper	**BLD-8**	$6.50		
Blade Guard	**BG30**	$1.00		
Styling Clips (set of 3)	**CLP-1**	$1.50		

Subtotal	
*Sales Tax	
TOTAL	

Enclose check or money order made payable to Conair. (We cannot accept cash, stamps or C.O.D. orders.) CT, IL, AZ, and PA residents should add applicable state sales tax. Minimum order of $10.00 or a $2.00 handling charge will be added to order.

All prices include handling and return postage. *Prices are subject to change without notice. Prices are valid only for shipments within the Continental United States.* ***Please allow 4-6 weeks for delivery.***

To avoid delays, please print clearly.
We must have a street address, as UPS cannot deliver to a P.O. box.

NAME ____

ADDRESS ____ APT. ____

CITY ____ STATE ____ ZIP ____

TELEPHONE ( ) ____ *(We call only if we have a question about your order.)*

For information on other Conair® haircut kit parts call: 1-800-3-CONAIR.

Mail to:
Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520-9730

Instructions for Trimmer Care and Use
Model HCT401

CONAIR®
HOME HAIRCUTTING KIT

GUARDE ESTAS INSTRUCCIONES

RESOLUCIÓN DE PROBLEMAS

Si su aparato no funciona correctamente:
1. Asegúrese de que el aparato esté encendido.
2. Asegúrese de que la pila esté debidamente instalada. Cerciórese de que la pila no está agotada.
3. Revise las cuchillas y límpiales si fuera necesario, usando el cepillo de limpieza provisto.
4. Si esto no soluciona el problema, regrese el aparato a un centro de servicio autorizado (véase la información de garantía).

PARA USO DOMÉSTICO SOLAMENTE

INSTRUCCIONES DE OPERACIÓN

1. Para instalar la(s) pila(s) abra el compartimiento de la(s) pila(s) ubicado en la parte trasera del aparato. (Fig. 1)
2. Introduzca el polo negativo primero, teniendo cuidado de no doblar las patas de contacto.
3. Cierre el compartimiento de la(s) pila(s).
4. Para encender el aparato, deslice el interruptor hacia arriba (ON).

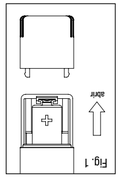

5. Para apagar el aparato, deslice el interruptor hacia abajo (OFF).
6. No utilice pilas que no sean de tamaño o de la potencia indicada para uso con este aparato.
7. Reemplace la(s) pila(s) muerta(s) sin demora.
8. Limpie los contactos del aparato y los de la(s) pila(s) antes de instalar esta(s).
9. Siempre respete los signos de polaridad (+/-) al instalar la(s) pila(s).
10. Retire las pilas si no va a usar el aparato durante un largo período de tiempo.
11. Retire las pilas usadas sin demora.
12. Guarde las pilas nuevas en su paquete original, lejos de los objetos de metal; los cuales podrían provocar un cortocircuito. Nunca cortocircuite las pilas.
13. Nunca tire las pilas al fuego, excepto mediante incineración controlada. Esto podría causar una explosión. Nunca intente cargar una pila no recargable. Esto podría presentar un riesgo de pérdida de electrolito, incendio o explosión.

*** El cargador para nariz/orejas y la recortadora requieren 1 pila AA (no incluida).** Le aconsejamos que utilice pilas alcalinas, las cuales son más duraderas. Retire la(s) pila(s) al final de su vida útil o si no va a usar el aparato durante un largo período de tiempo. Esto prolongará la vida de su aparato.

CÓMO RECORTAR LAS PATILLAS Y EL CABELLO EN LA NUCA

Sostenga la cortadora recta, coloquela contra la piel al nivel deseado y deslicela hacia abajo.

CÓMO CORTAR EL VELLO FACIAL

De forma y defina la barba o el bigote, moviendo la cortadora lentamente, para no cortar demasiado pelo.

CÓMO CORTAR EL PELO EN LA NARIZ

Introduzca delicadamente la punta del cabezal en la oreja o la nariz. Nuevamente el aparato hacia dentro y fuera de la nariz. Nunca inserte el cabezal más de 1/4 pulgada (1.5 cm) adentro de la nariz.

CÓMO CORTAR EL PELO EN LAS OREJAS

Introduzca delicadamente la punta del cabezal en la oreja. Mueva suavemente el aparato alrededor del canal del oído. Guíe el aparato alrededor de la superficie externa de la oreja para cortar pelos que sobresalen. Nunca inserte el cabezal más de 1/4 pulgada (1.5 cm) adentro de la oreja.

MANTENIMIENTO DE SU CORTADORA

LIMPIEZA DE LAS CUCHILLAS Y EL CABELLO EN LA NUCA

Las cuchillas de su aparato fueron diseñadas con precisión para un uso específico, y deben recibir un cuidado muy especial. Limpie las cuchillas después de cada uso con el cepillo de limpieza provisto.

LIMPIEZA

Asegúrese de que el aparato esté apagado.
1. Para remover el cabezal, gírelo en sentido antihorario hasta que la marca "|" coincida con la flecha (Fig. 1) y jale suavemente el cabezal.



2. Enjuague el cabezal en agua corriente (Fig. 2). No permita que el cuerpo del aparato tenga contacto con agua.



3. Después de limpiar el cabezal, sacúdalo para secarlo.
4. Vuelva a instalar el cabezal, haciendo coincidir la marca "|" con la flecha. Para sujetar el cabezal, gírelo en sentido horario hasta que la marca "|" coincida con el círculo (Fig. 3).

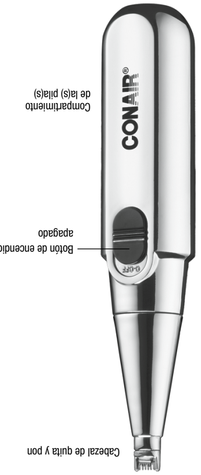

CORTAPELO PARA NARIZ/OREJAS & RECORTADORA

GARANTÍA LIMITADA DE DOS AÑOS

Conair reparará o remplazará (a su opción) su aparato sin cargo por un período de 24 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado al dorso, junto con su recibo de compra y un cheque o giro postal de US$3.00 por gastos de manejo y envío. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-366-0937 para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 24 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 24 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

Para registrar su producto, visítenos en:
www.conair.com/registration

©2012 Conair Corporation
Centro de servicio
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

12PG129785

IB-11276

CONAIR®

JUEGO DE PELUQUERÍA

Instrucciones de uso y mantenimiento
Modelo HCT401

MULTIUSO
Incluye una cortadora, una recortadora y un cortapelo para nariz/ orejas, para todas sus necesidades de corte de cabello y cuidado personal en casa.

3-en-1

CORTADORA, RECORTADORA & CORTAPELO PARA NARIZ/OREJAS

SAVE THESE INSTRUCTIONS

TROUBLESHOOTING

There are several things to look for if your trimmer fails to operate:
1. Be sure the trimmer is turned ON.
2. Make sure that the battery is properly placed in the battery compartment. Test the battery to be sure it is working.
3. Check the blades to see if they are clogged with hair clippings; if so, use a cleaning brush to remove hair.
4. If the trimmer still fails to operate, take or send it to a Conair Service Center (see warranty procedure and addresses).

FOR HOUSEHOLD USE ONLY

OPERATING INSTRUCTIONS

1. Remove the battery cover at the back of the unit by pulling straight down. (Fig.1)
2. Being careful not to bend the clips, insert the negative end of the battery first, so it will slip easily into position.
3. Return the battery cover to its original position by pushing it into place.
4. To use your trimmer, push ON/OFF switch upwards to ON position.

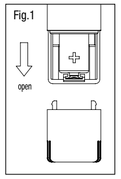

5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.
6. Always purchase the correct size and grade of battery most suitable for the intended use.
7. Replace the battery once it is no longer functional.
8. Clean the battery contacts and also those of the devise prior to battery installation.
9. Ensure the batteries are installed correctly with regard to polarity (+ and -).
10. Remove batteries from equipment, which is not to be used for an extended period of time.
11. Remove used batteries promptly.
12. Store unused batteries in their original packaging, away from metal objects that could short-circuit them. Never short-circuit batteries.
13. Never dispose of batteries in fire, except under conditions of controlled incineration. Failure to observe this precaution may result in an explosion. Never attempt to recharge primary batteries as this may cause leakage, fire, or explosion.

***Both trimmers require 1 "AA" battery (not included).** We recommend using alkaline batteries in your trimmers because they last longer. If you are not going to use your trimmers for a long period of time, or if the battery is dead, remove the battery from the unit. This will increase the life of your trimmers.

TO TRIM NECKLINE & SIDEBURNS
Using the detail trimmer, hold the trimmer blade against the skin at the length desired and move the trimmer downward.

TO TRIM YOUR FACIAL HAIR
To shape and define, move the detail trimmer slowly so as not to cut any hair you do not intend to trim.

TO TRIM NOSE HAIR
Gently insert the nose/ear trimmer into nostril. Gently move trimmer in and out of the nostril to remove unwanted hair. Avoid inserting the trimmer more than 1/4" to ensure safe trimming.

TO TRIM EAR HAIR
Gently insert the nose/ear trimmer no more than 1/4" into outer ear canal. Gently move trimmer around the outer ear to remove unwanted hair extending beyond the outer ear. Guide the trimmer around the outer surface of ear to trim protruding hairs. Never insert trimmer more than 1/4" into ear canal.

TAKING CARE OF YOUR TRIMMER

BLADE CARE
Because the trimmer blades are precision made for a very special use, they should always be handled with care. Each time you finish using the trimmer, take a cleaning brush and brush away any loose hair that has collected in the blades.

TO CLEAN YOUR TRIMMER

Make sure trimmer is off.
1. To remove the trimmer head for cleaning, turn the head counter-clockwise until the "I" mark aligns with the "arrow" mark, then lift the head gently (Fig. 1).

2. Only rinse the head under water (Fig. 2). For proper functioning of the unit, the handle can not touch or be immersed in water.



3. After cleaning, make sure to shake dry the head before replacing it to the body.
4. To reassemble the head onto the body, align the "I" mark on the head with the "arrow" mark on the body and then turn clockwise until the "I" mark aligns with the "circle" mark on the body (Fig.3).

NOSE/EAR TRIMMER & DETAIL TRIMMER

TWO YEAR LIMITED WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on the back, together with your purchase receipt and $3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Please register this product at www.conair.com/registration

©2012 Conair Corp.
Service Center
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

12PG129785

IB-11276

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com