


DOOR KNOCKER WITH VIEWER

FOR USE ON EXTERIOR OR INTERIOR DOORS OF HOMES, CONDOMINIUMS, APARTMENTS AND OFFICES.

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Drill, $\frac{3}{8}$ " and $\frac{1}{2}$ " drill bits, awl, and screwdriver.

1. Position template (right) centered from side to side 60" above threshold. Tape template to outside of door.
2. Mark centers with awl (or nail) and drill holes (A) with $\frac{3}{8}$ " drill bit completely through door.
3. Drill hole (B) for viewer completely through door from outside with $\frac{1}{2}$ " drill bit.
4. Mount door knocker with screws and cover washers.
5. Insert viewer (C) through knocker from outside. Insert receiver tube (D) from inside and tighten. See illustration.

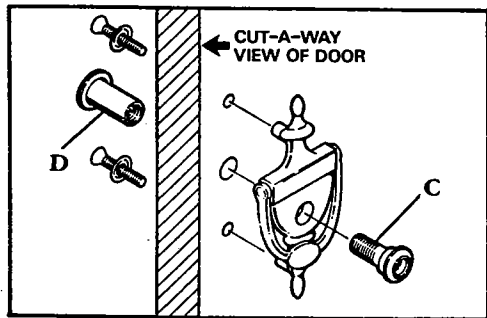

NOTE: Check product against template before installing.

MAINTENANCE INSTRUCTIONS

H.B. Ives Solid Brass products have a clear, protective lacquer coating which helps prevent discoloration. Do not use abrasive waxes or cleaners.


ASK FOR OTHER FINE DECORATIVE HARDWARE BY H.B. IVES



KNOCKER VIEW C2-31022-605 BRT
MADE EXCLUSIVELY FOR H.B. IVES IN PORTUGAL

H.B. Ives, New Haven, CT. 06511

USE TEMPLATE BELOW FOR EASY INSTALLATION OF DOOR KNOCKER.

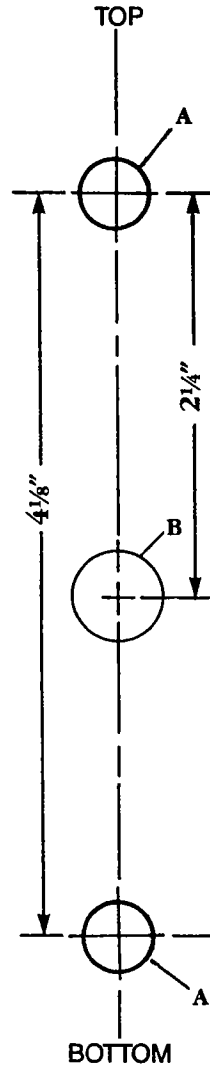

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>