

FOR USE ON DOORS (UNDERCUT APPROXIMATELY 3/4") TO STOP DOOR AND PREVENT DAMAGE TO WALL, DOOR AND DOOR KNOB.


INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Drill, 3/16" and 1/8" drill bits, Phillips screwdriver, hammer, awl or pencil.

1. Open door into desired stop position.
2. Slide template under door and tape to floor.
3. Mark hole centers.
4. Drill stud hole approximately 1" deep with 1/8" drill bit. Drill screw hole 1" deep with 3/16" drill bit.
5. Insert plastic screw anchor and secure stop into position.

Note: Check product against template before installing.

← ALIGN DOOR ALONG THIS LINE

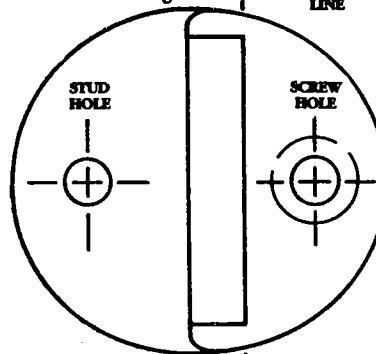

ASK FOR OTHER FINE HARDWARE BY H.B. IVES



FLOOR DOOR STOP C436PA28 ALUM

MADE IN U.S.A.

H.B. Ives, New Haven, CT. 06511

9011-64-9
829-0552
Byce

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>