

70-1722
INSTRUCTIONS
FOR AMPLIFIED SOUND
SYSTEMS



For vehicles with factory amplifiers:

In order to turn on the factory amplifier you must locate the 20-way harness that was plugged into the factory radio. In pin 16 in vehicles without navigation or pin 20 in vehicles with navigation (see diagram on reverse side) there is a Light Blue wire that you must attach to the Amp Turn On wire of the aftermarket radio for the amplifier to turn on.

Use Metra's standard wiring instructions for the remainder of the installation.

(See harness diagram on back of page)
REV. 06/08/06 INST70-1722

70-1722
INSTRUCTIONS
FOR AMPLIFIED SOUND
SYSTEMS



For vehicles with factory amplifiers:

In order to turn on the factory amplifier you must locate the 20-way harness that was plugged into the factory radio. In pin 16 in vehicles without navigation or pin 20 in vehicles with navigation (see diagram on reverse side) there is a Light Blue wire that you must attach to the Amp Turn On wire of the aftermarket radio for the amplifier to turn on.

Use Metra's standard wiring instructions for the remainder of the installation.

(See harness diagram on back of page)
REV. 06/08/06 INST70-1722

70-1722
INSTRUCTIONS
FOR AMPLIFIED SOUND
SYSTEMS



For vehicles with factory amplifiers:

In order to turn on the factory amplifier you must locate the 20-way harness that was plugged into the factory radio. In pin 16 in vehicles without navigation or pin 20 in vehicles with navigation (see diagram on reverse side) there is a Light Blue wire that you must attach to the Amp Turn On wire of the aftermarket radio for the amplifier to turn on.

Use Metra's standard wiring instructions for the remainder of the installation.

(See harness diagram on back of page)
REV. 06/08/06 INST70-1722

70-1722
INSTRUCTIONS
FOR AMPLIFIED SOUND
SYSTEMS



For vehicles with factory amplifiers:

In order to turn on the factory amplifier you must locate the 20-way harness that was plugged into the factory radio. In pin 16 in vehicles without navigation or pin 20 in vehicles with navigation (see diagram on reverse side) there is a Light Blue wire that you must attach to the Amp Turn On wire of the aftermarket radio for the amplifier to turn on.

Use Metra's standard wiring instructions for the remainder of the installation.

(See harness diagram on back of page)
REV. 06/08/06 INST70-1722

70-1722
INSTRUCTIONS
FOR AMPLIFIED SOUND
SYSTEMS



For vehicles with factory amplifiers:

In order to turn on the factory amplifier you must locate the 20-way harness that was plugged into the factory radio. In pin 16 in vehicles without navigation or pin 20 in vehicles with navigation (see diagram on reverse side) there is a Light Blue wire that you must attach to the Amp Turn On wire of the aftermarket radio for the amplifier to turn on.

Use Metra's standard wiring instructions for the remainder of the installation.

(See harness diagram on back of page)
REV. 06/08/06 INST70-1722

70-1722
INSTRUCTIONS
FOR AMPLIFIED SOUND
SYSTEMS



For vehicles with factory amplifiers:

In order to turn on the factory amplifier you must locate the 20-way harness that was plugged into the factory radio. In pin 16 in vehicles without navigation or pin 20 in vehicles with navigation (see diagram on reverse side) there is a Light Blue wire that you must attach to the Amp Turn On wire of the aftermarket radio for the amplifier to turn on.

Use Metra's standard wiring instructions for the remainder of the installation.

(See harness diagram on back of page)
REV. 06/08/06 INST70-1722

70-1722
INSTRUCTIONS
FOR AMPLIFIED SOUND
SYSTEMS



For vehicles with factory amplifiers:

In order to turn on the factory amplifier you must locate the 20-way harness that was plugged into the factory radio. In pin 16 in vehicles without navigation or pin 20 in vehicles with navigation (see diagram on reverse side) there is a Light Blue wire that you must attach to the Amp Turn On wire of the aftermarket radio for the amplifier to turn on.

Use Metra's standard wiring instructions for the remainder of the installation.

(See harness diagram on back of page)
REV. 06/08/06 INST70-1722

70-1722
INSTRUCTIONS
FOR AMPLIFIED SOUND
SYSTEMS




For vehicles with factory amplifiers:

In order to turn on the factory amplifier you must locate the 20-way harness that was plugged into the factory radio. In pin 16 in vehicles without navigation or pin 20 in vehicles with navigation (see diagram on reverse side) there is a Light Blue wire that you must attach to the Amp Turn On wire of the aftermarket radio for the amplifier to turn on.

Use Metra's standard wiring instructions for the remainder of the installation.

(See harness diagram on back of page)
REV. 06/08/06 INST70-1722

20 WAY HARNESS

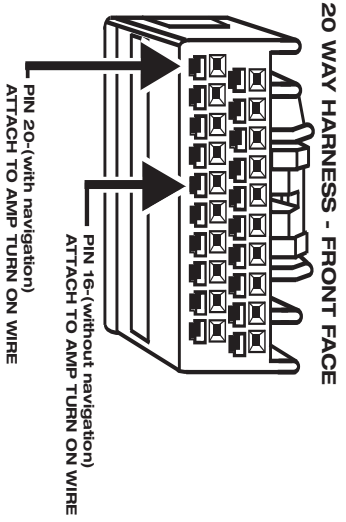


20 WAY HARNESS - FRONT FACE

PIN 16-(without navigation)
ATTACH TO AMP TURN ON WIRE

PIN 20-(with navigation)
ATTACH TO AMP TURN ON WIRE

1-800-221-0932 www.metroonline.com
© COPYRIGHT 2004
METRA ELECTRONICS CORPORATION

20 WAY HARNESS

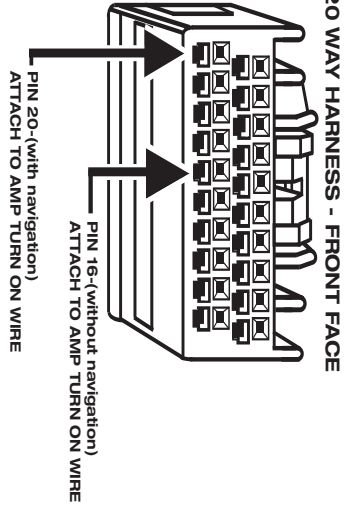


20 WAY HARNESS - FRONT FACE

PIN 16-(without navigation)
ATTACH TO AMP TURN ON WIRE

PIN 20-(with navigation)
ATTACH TO AMP TURN ON WIRE

1-800-221-0932 www.metroonline.com
© COPYRIGHT 2004
METRA ELECTRONICS CORPORATION

20 WAY HARNESS

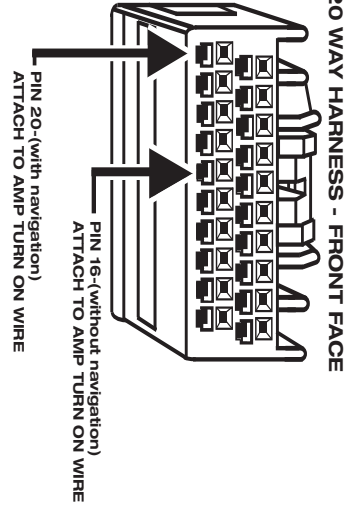


20 WAY HARNESS - FRONT FACE

PIN 16-(without navigation)
ATTACH TO AMP TURN ON WIRE

PIN 20-(with navigation)
ATTACH TO AMP TURN ON WIRE

1-800-221-0932 www.metroonline.com
© COPYRIGHT 2004
METRA ELECTRONICS CORPORATION

20 WAY HARNESS

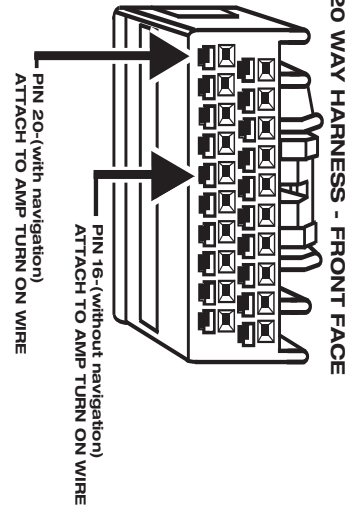


20 WAY HARNESS - FRONT FACE

PIN 16-(without navigation)
ATTACH TO AMP TURN ON WIRE

PIN 20-(with navigation)
ATTACH TO AMP TURN ON WIRE

1-800-221-0932 www.metroonline.com
© COPYRIGHT 2004
METRA ELECTRONICS CORPORATION

20 WAY HARNESS

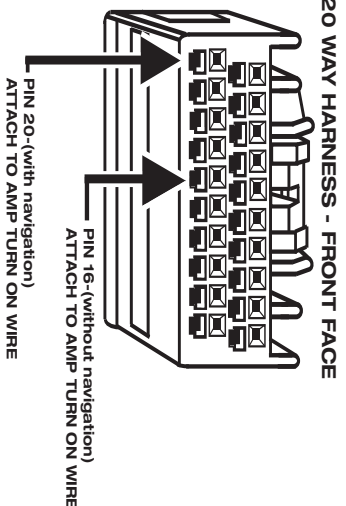


20 WAY HARNESS - FRONT FACE

PIN 16-(without navigation)
ATTACH TO AMP TURN ON WIRE

PIN 20-(with navigation)
ATTACH TO AMP TURN ON WIRE

1-800-221-0932 www.metroonline.com
© COPYRIGHT 2004
METRA ELECTRONICS CORPORATION

20 WAY HARNESS

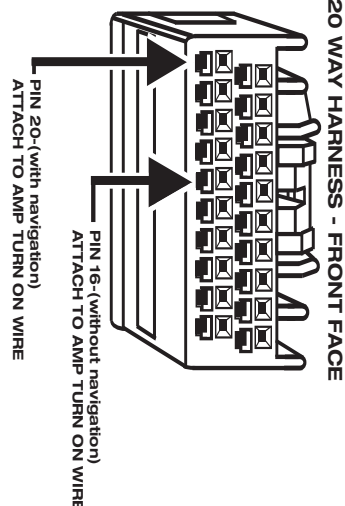


20 WAY HARNESS - FRONT FACE

PIN 16-(without navigation)
ATTACH TO AMP TURN ON WIRE

PIN 20-(with navigation)
ATTACH TO AMP TURN ON WIRE

1-800-221-0932 www.metroonline.com
© COPYRIGHT 2004
METRA ELECTRONICS CORPORATION

20 WAY HARNESS

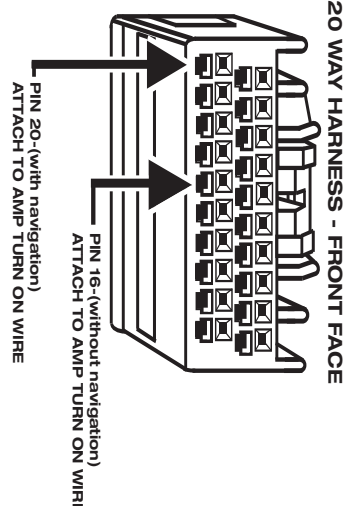


20 WAY HARNESS - FRONT FACE

PIN 16-(without navigation)
ATTACH TO AMP TURN ON WIRE

PIN 20-(with navigation)
ATTACH TO AMP TURN ON WIRE

1-800-221-0932 www.metroonline.com
© COPYRIGHT 2004
METRA ELECTRONICS CORPORATION

20 WAY HARNESS

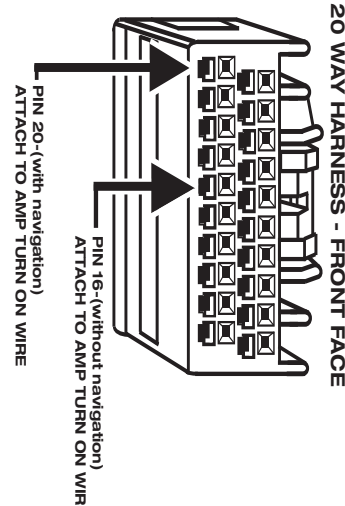

20 WAY HARNESS - FRONT FACE

PIN 16-(without navigation)
ATTACH TO AMP TURN ON WIRE

PIN 20-(with navigation)
ATTACH TO AMP TURN ON WIRE

1-800-221-0932 www.metroonline.com
© COPYRIGHT 2004
METRA ELECTRONICS CORPORATION

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>