



INSTALLATION INSTRUCTIONS FOR PART 99-7009

APPLICATIONS

Mitsubishi Endeavor 2004-2010

99-7009




KIT FEATURES

- DIN Head Unit Provisions
- ISO DIN Head Unit Provisions

KIT COMPONENTS

A) Radio Housing • B) ISO Brackets • C) Trim Plate



WIRING AND ANTENNA CONNECTIONS (Sold Separately)

Harness:

- 70-7001 - Mitsubishi harness 1992-up
- MITO-01 - Mitsubishi amplified Interface 2006-up

Antenna Adapter:

- Not required

TOOLS REQUIRED:

Phillips Screwdriver • Socket Wrench



1-800-221-0932



www.metraonline.com

© COPYRIGHT 2004-2010 METRA ELECTRONICS CORPORATION

TABLE OF CONTENTS

- **Dash Disassembly**
 - **Mitsubishi Endeavor 2004-2010 ----- 1**

- **Kit Assembly**
 - **ISO Head Unit Provision with Pocket ----- 2**
 - **DIN Head Unit Provision with Pocket ----- 3**

- **Final Assembly ----- 4**

- **Notes ----- 5**







KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.

2004-2010 MITSUBISHI ENDEAVOR

- 1** Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2** Unsnap and remove entire panel surrounding radio and A/C controls.
(Figure A)
- 3** Remove (1) 10MM nut from the rear support on the top left of radio on cross bar behind dash. (FIGURE B)
- 4** Remove (3) Phillips screws to remove factory radio chassis (Figure C)
- 5** Remove (4) Phillips screws from the pocket at the bottom of the radio and A/C panel and remove the pocket. (This is where the 99-7009 will be mounted.) (Figure D)

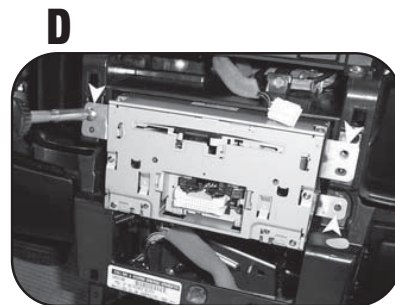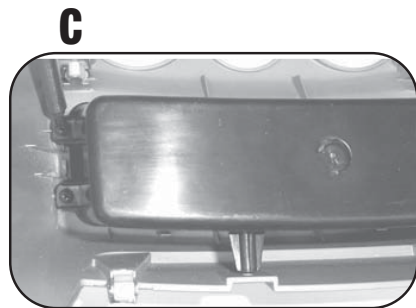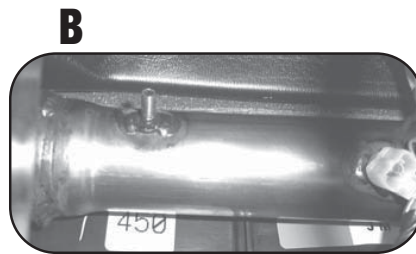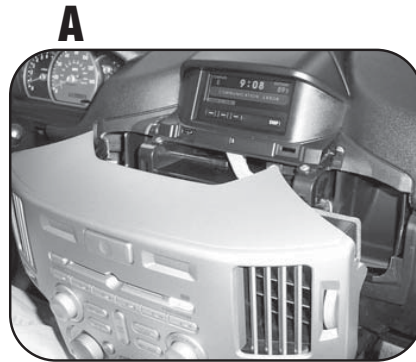


DASH DISASSEMBLY

99-7009

KIT ASSEMBLY

DIN Head Unit Provision

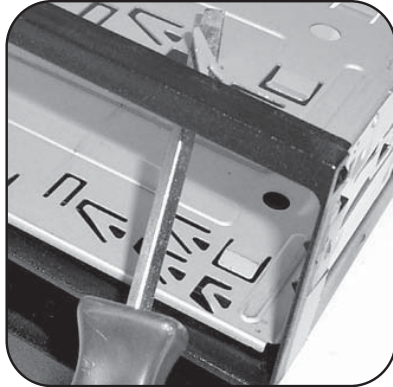


Using the factory hardware, mount the 99-7009 in the location where the factory pocket resided.

- 1** Slide the DIN cage into the Radio Housing and secure by bending the metal locking tabs down.
- 2** Slide the after-market head unit into the cage and secure. Snap trim plate into the radio housing.


ISO DIN HEAD UNIT PROVISION

- 1** Mount the ISO Brackets to the head unit with the screws supplied with the unit.
- 2** Slide the head unit into the radio opening until the side clips engage.
- 3** Snap the Trim plate into the Radio Housing.

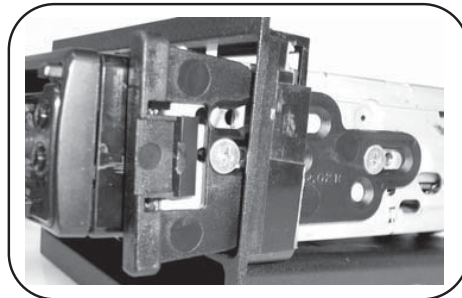

KIT ASSEMBLY

FINAL ASSEMBLY

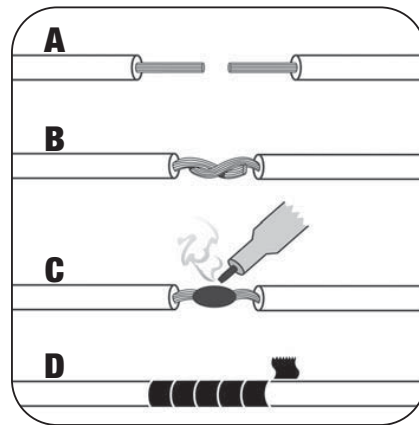

- A) Strip wire ends back 1/2"**
- B) Twist ends together**
- C) Solder**
- D) Tape**

- 1** Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter and making the connections as shown. (Isolate and individually tape off the ends of any unused wires to prevent electrical short circuit) See figure A.
- 2** Re-connect the negative battery terminal and test the unit for proper operation.
- 3** Reassemble radio and dash assemblies in reverse order of disassembly.



99-7009

NOTES



INST997009

1-800-221-0932

www.metraonline.com

Rev. 04-26-10 © COPYRIGHT 2004-2010 METRA ELECTRONICS CORPORATION INST99-7009

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>