

INSTALLATION INSTRUCTIONS FOR WINDOW TRIM KITS FOR USE WITH SPECTRA MODELS CI1000HT AND CI2000HT WOODSTOVES

ELITE™ SERIES

KIT CONTENTS


1 ea. Window Trim Kit
1 ea. Instruction Sheet
6mm Braided Rope Gasket

TOOLS REQUIRED

Scissors
Glass Cleaner and Soft Cloth

WINDOW TRIM KITS			
Cat. No.	Model	Description	Where Used
41M2401	WTK-CI10	Charcoal Trim	CI1000HT
41M2001	WTK-CI20	Charcoal Trim	CI2000HT

Table 1

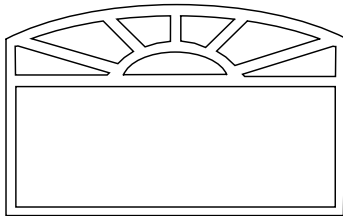

WARNING

INSTALL ONLY WHEN APPLIANCE IS COLD!

INSTALLATION INSTRUCTIONS

- Step 1. Cut Top Rope Gasket** - Turn the door trim casting face down so that the attachment clamps are fully visible. Measure the braided rope gasket so that it is roughly the same length as the arched top surface of the casting, and cut with scissors (see **Figure 1**).
- Step 2. Cut Bottom Rope Gasket** - Measure the rope gasket against the bottom edge of the casting and cut (see **Figure 2**).
- Step 3. Peel Off Tape** - Peel the paper backing off of the gasket adhesive (see **Figure 3**).
- Step 4. Install Lower Rope Gasket** - Place the lower rope gasket along the bottom edge of the casting and press down firmly (see **Figure 4**).

**Cut Top
Rope Gasket**

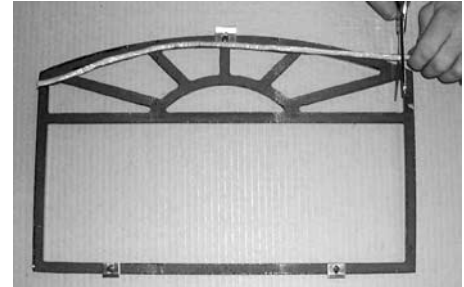


Figure 1

**Cut Bottom
Rope Gasket**

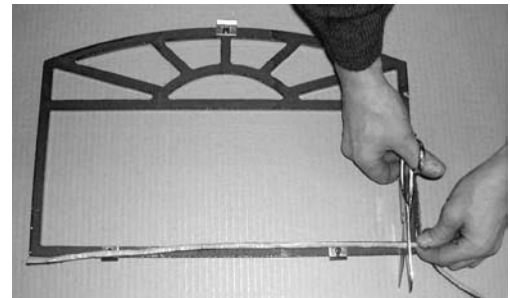


Figure 2

Peel Off Tape

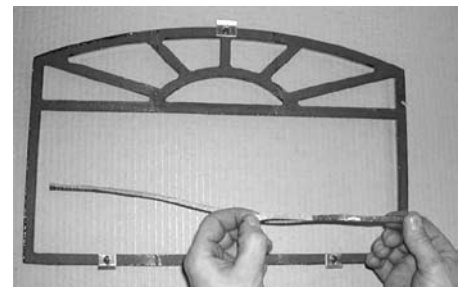


Figure 3

**Install Lower
Rope Gasket**



Figure 4

Step 5. Install Top Rope Gasket - Place the top rope along the top edge of the casting and press down firmly.

*Note: Ensure gasket is positioned so it will not be visible from the front (see **Figure 5**).*

Step 6. Clean Glass - Prior to installing the window trim, the glass should be cleaned thoroughly with a glass cleaner using a soft cloth. A household ammonia based glass cleaner is approved (see notes below).

Note:

For woodstove models CI1000HT and CI2000HT, when cleaning the inside of the glass after it has been burned, a commercial glass cleaner designed for stoves is recommended.

For woodstove models CI1000HT and CI2000HT, when cleaning the inside of the glass after it has been burned, a commercial glass cleaner designed for stoves is recommended.

Step 7. Install Trim - Position the locating nub on the top center of the trim into the notch on the top center of the window opening (see **Figure 6**).

While slightly lifting up on the trim rotate the bottom of the trim to the glass. Let the trim drop down until the 2 nubs on the bottom of the trim drop into the slots on window opening (see **Figure 7**).

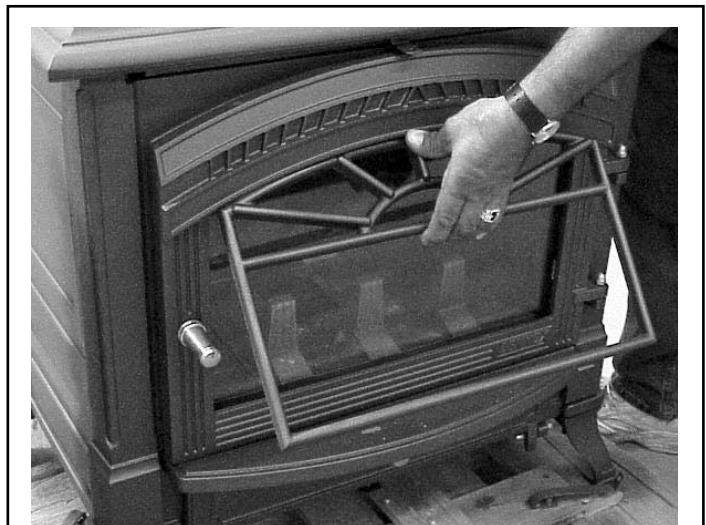


Figure 6 - Position Locating Tab at Top Center



Figure 7 - Lift and Rotate Trim into Place

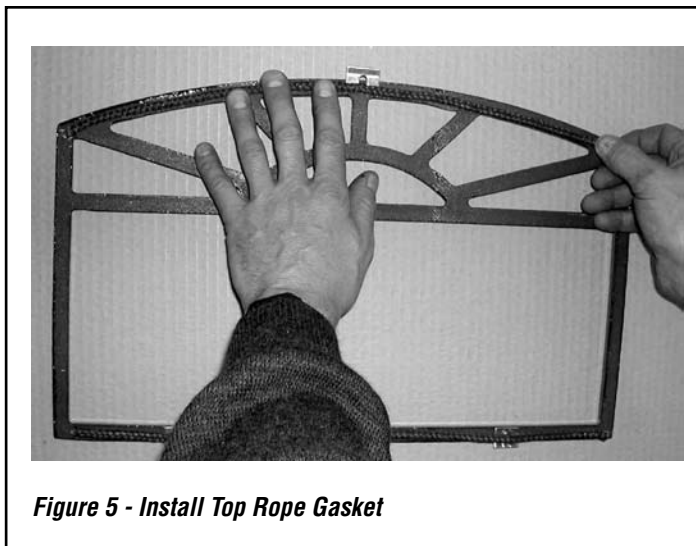


Figure 5 - Install Top Rope Gasket

NOTE: DIAGRAMS & ILLUSTRATIONS ARE NOT TO SCALE.

Lennox Hearth Products reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and the discontinuance of colors, styles and products. Consult your local distributor for fireplace code information.

Printed in U.S.A. © Lennox Hearth Products 2003
P/N 775,092M REV. B 09/2007

LENNOXTM

HEARTH PRODUCTS

1110 West Taft Avenue • Orange, CA 92865

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>