




K00333/K00334 TRAY SLIDE KIT 1/2/3 DOOR

Installation Instructions

TOP VIEWS OF CABINET SHOWING TRAY SLIDE PILASTER POSITIONS

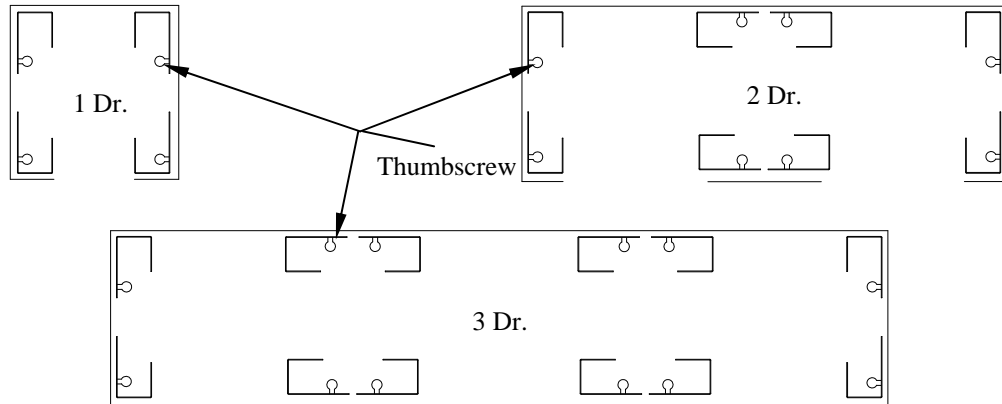

K00333 PARTS LIST			
Item	Qty.	Part No.	Description
1	4	3203343	Wire Shelf Pilaster
2	16	6022201	Tray Slide
3	4	6022301	Tray Slide Pilaster

K00334 PARTS LIST			
Item	Qty.	Part No.	Description
1	4	3203343	Wire Shelf Pilaster
2	16	6022201	Tray Slide
3	1	6022191	Tray Slide Pilaster - 2 Dr.
4	3	6022301	Tray Slide Pilaster
5	47"	9202503	Tape, Extruded

READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

1. Remove all wire shelves from door opening. Remove existing pilasters by removing the thumbscrews at the top and lifting up and off the mounting studs.
2. (Use steps 2 and 3, when installing on bottom half.) Use top slotted holes on tray slide pilaster, as shown in Fig. 3. Press in and down to lock into place.





Manitowoc Ice, Inc.

2110 South 26 Street, P.O. Box 1720, Manitowoc, WI 54221-1720 USA
 Telephone 920-682-0161, Fax - Sales: 920-683-7589, Service/Parts: 920-683-7585, Other: 920-683-7879
 Web Site - www.manitowocice.com

8010553
 Sheet 1 of 2
 Rev. 04/01/99

3. Install your precut wire shelf pilasters to the top half of your cabinet above the tray slide pilaster. Note: when installing your wire shelf pilaster above the tray slide pilaster on the 2-door, the top of the pilaster closest to the drain tube must be cut off to an overall length of 17.625" for clearance. The thumbscrews should be used to lock the shelf pilasters in place at the top of the cabinet.
4. (Use steps 4 and 5, when installing on top half.) Install your precut wire shelf pilasters to the bottom half of the cabinet first.
5. Install your tray slide pilasters using the bottom slotted holes on the pilaster, as shown in Fig. 4. Press in and down to lock into place. Use the thumbscrews to lock into place.
6. When installing a full cabinet door of tray slides, always start with the bottom and work up, making sure the top and bottom pilasters are flush where they meet.
7. Hang tray slides on tray slide pilaster with tap openings facing down (see Fig. 1). Insert shelf clips at desired levels. There should be no less than a minimum of 9" between the top wire rack or tray slide and evaporator drain pan.

NOTE: The 2-door kit is K00334. When installing this kit, the notched pilaster goes around the drain tube on the top back wall. The foam tape should be installed between the tray slide pilaster (on the pilaster) and the back wall of the cabinet (see Fig. 2).

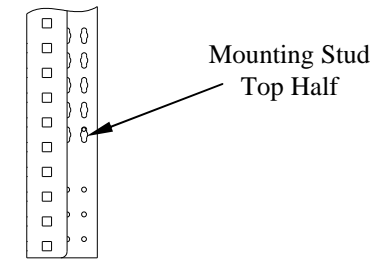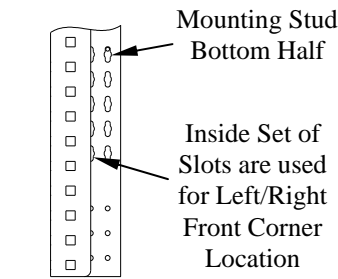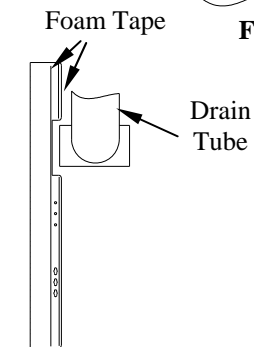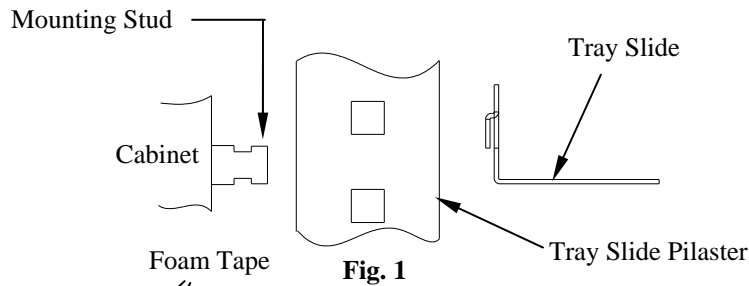

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>