




Manitowoc

K00119 BIN DEFLECTOR KIT

Installation Instructions

NOTE: This kit will convert a C-900/C-950 bin to a C-970 bin or a C-910/C-960 bin to a C-980 bin. This kit is also used on Manitowoc F-style bins, when stacking Q-1300/1600/1800 ice machines.

1. Remove the gasket material along the front and both sides of the bin.
2. Remove the #8 screws holding the current ice deflector. Save these screws – a total of six from a C-900/C-910; a total of eight from a C-950/C-960.
3. Remove the ice deflector.
4. Place new ice deflector in position and use the slots in the side flanges as guidance to drill four 1/8" holes.
5. Fasten the ice deflector using the screws removed in step 2 for the front and the four supplied screws, two each side, for the side flanges. NOTE: C-900/C-910 only – use additional two screws, shipped with the new ice deflector, on the front.
6. Install the new gasket material along the front and sides of the bin.

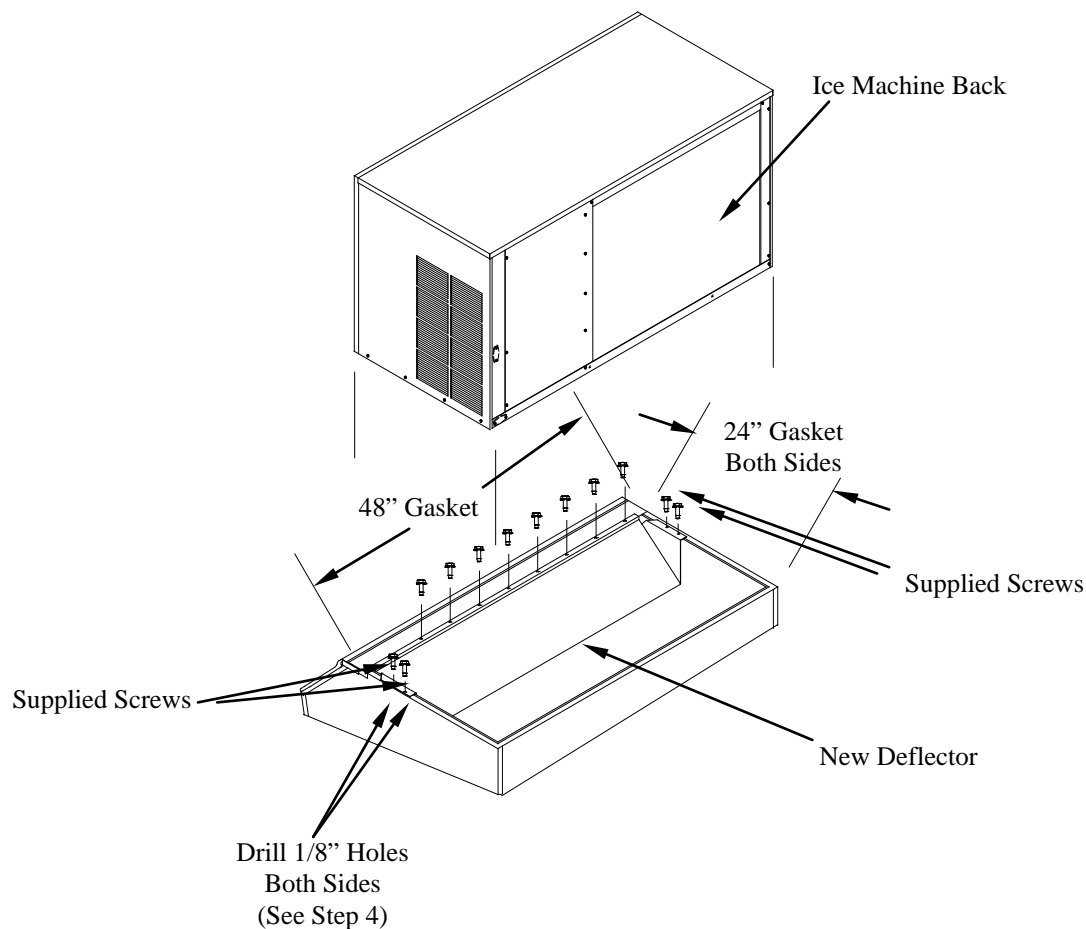

Manitowoc Ice, Inc.

2110 South 26th Street, P.O. Box 1720, Manitowoc, WI 54221-1720 USA

Telephone 920-682-0161, Fax - Sales: 920-683-7589, Service/Parts: 920-683-7585, Other: 920-683-7879

Web Site - www.manitowocice.com

8010253

Rev. 06/13/03

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>