




## PSD-CAM INSTALLATION INSTRUCTIONS

PSD-CAM (Qty 1)

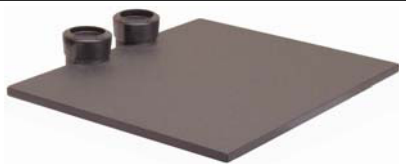

M8 x 10mm Set  
Screw (Qty 2)



1. Place each PSD-CAM shelf over the end of the support poles (Figure 1).
2. Use one (1) M8 x 10mm set screw and attach it in the hole that is located to the rear of each collar (Figure 2).
3. Use a 5/32" Allen Wrench (supplied) to tighten the set screws (Figure 2).

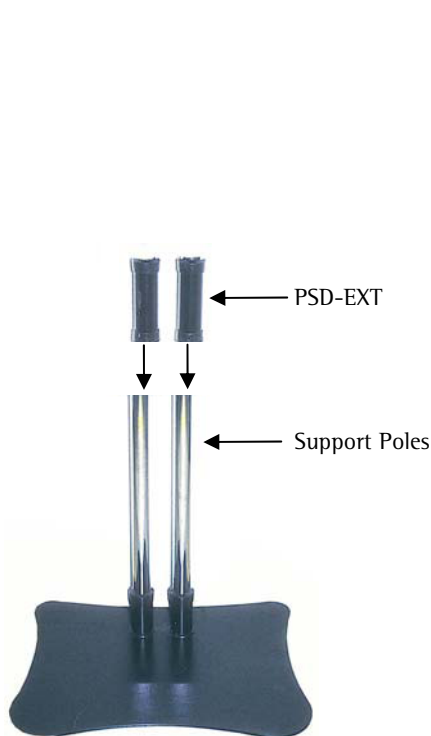


Figure 1

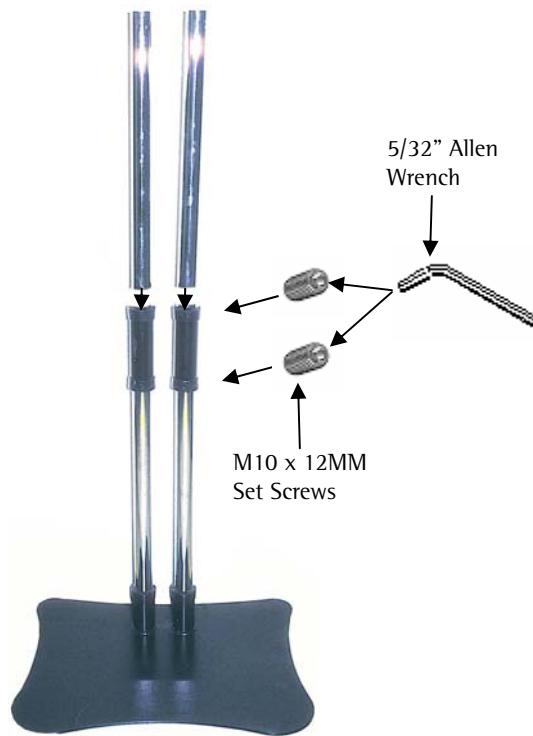


Figure 2



Figure 3

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>