

ASSEMBLY INSTRUCTION




ITEM# 75272-15

1. Thread long support screws into holes of the mounting strip. Secure with hex nut.
The support screws should be long enough to protrude out the canopy when mounted.
2. Fasten mounting strip onto wall outlet box using two shorter screws .
3. Connect the wires from the fixture to the power supply wires outlet box.
 - A. Twist together white wire from the fixture with white wire from outlet box. Cover with wire connectors.
 - B. Twist together black wire from the fixture with black wire from outlet box. Cover with wire connectors.
 - C. Wrap the ground wire from the fixture around the green ground screw located on the mounting strip.
Tighten the green ground screw to the mounting strip.
4. Pass canopy through the support screws of mounting strip. Tighten cap nut onto the protruding support screws on mounting strip until the fixture body is held firmly to the wall.
5. Install the bulb (not included) into socket. Do not use greater than 60-watt bulb.
6. Mount bottom shade to top shade, secure with ball nut.

NOTE: Carefully remove the fixture from the carton. Check that all parts shown in package parts 1 and parts 2 are included.
Be carefully not to misplace any of the screws or wire connectors, which are needed for installing the fixture.

PACKAGE PART

Wire Connectors	2	Ball Nut	2
Support Screw	2	Cap Nut	2
5/32" Nut	2		
Green Ground Screw	1		
Outlet Box Screw	2		
Moutingstrip	1		

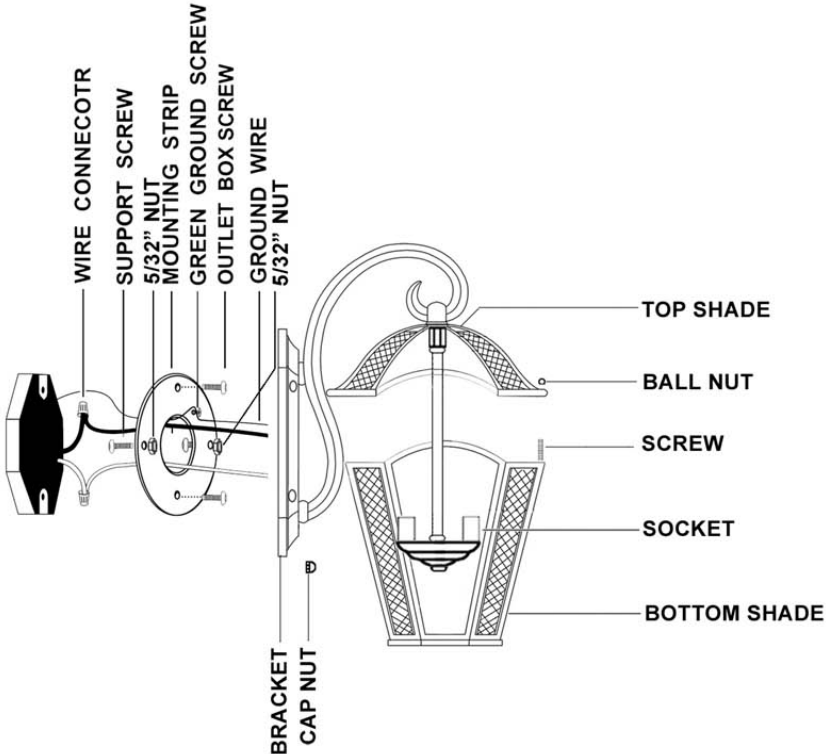

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>