

# BB212 | Mini Friction Dashboard Mount for BlackBerry® Tour™, Curve™, Bold 9650™ and 9700™

Patent Pending



## Package Contents:

- (1) SM012 - Mini friction dashboard mount
- (1) GN014-SBH - Travelmount® Mini swivel head windshield mount
- (1) CC001-BB - Custom Holder for BlackBerry Tour, Curve, Bold 9650 and 9700
- (1) Optional adhesive safety hook (recommended but not required)
- (1) Alcohol cleaning pad

## Compatible with:

- BlackBerry Tour, Curve, Bold 9650 and 9700 Smartphones

BlackBerry brand name and Tour, Curve, and Bold product names are trademarks or registered trademarks of Research in Motion, Ltd.


**!** Do not place mount in or near an air bag deployment zone or where it will obstruct view of the road.

## Dashboard Mount Installation


Step 1. Find a safe location on the vehicle dashboard that is not in an air bag deployment zone.



Step 2. **Optional Safety hook installation will add extra stability.** Clean the area with the included alcohol pad and let dry. Remove the adhesive backing on the safety hook base. The hook curve must point towards the windshield. Press and hold the hook down on the dashboard surface for about a minute. Allow 24 hrs. to cure to the dashboard at room temperature (72° F).

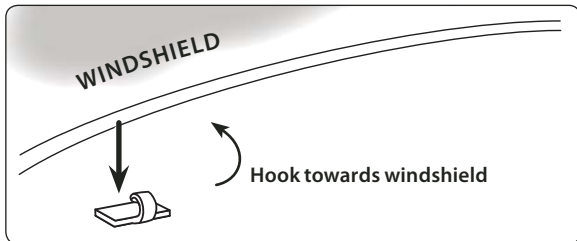


Step 3. Loop the back of the dashboard mount around the safety hook and place on the dashboard in front of the hook. Remove the protective film from pedestal mounting surface (A).

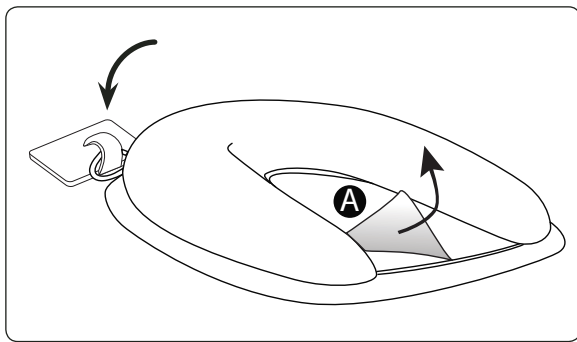


## Swivel Ball Head Assembly Attachment


Step 1. Slip the tightening ring (A) over the pedestal ball. Snap the dual-T head adapter plate (B) on to the pedestal ball (C). Screw the tightening ring over the adapter plate until securely holding the plate. Adjust the angle as needed.

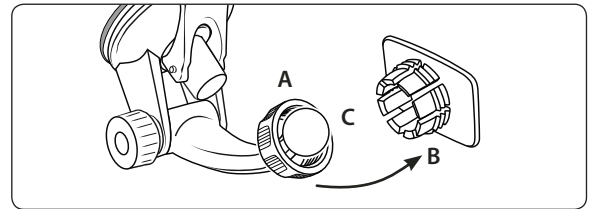

Step 2. Lower the mount onto the disc and press down firmly. Flip the locking lever (D) down to secure the pedestal to the dash mount.

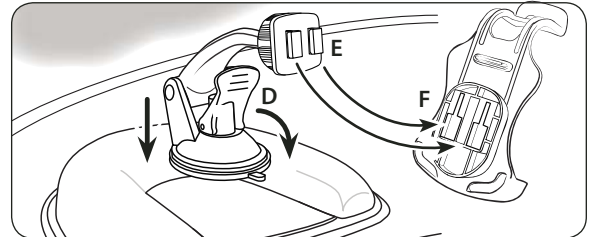

Step 3. Install the BlackBerry holder by inserting the dual T-tabs (E) on the mount into the T-slots (F) on the back of the holder.

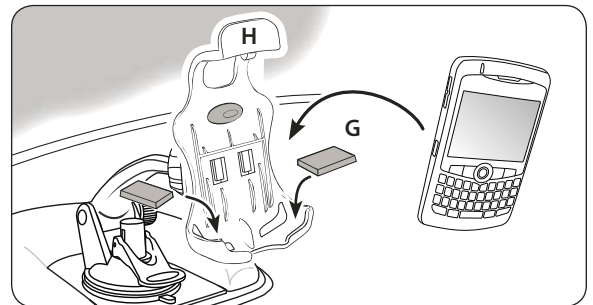

Step 3. Insert adhesive pads (G) at the holder base as shown so the device can fit securely. Place the bottom of the BlackBerry device (device not included) on the pads and lift up on the large tab (H) at the top of the holder. Gently push the top of the device into the holder and lower the tab to secure.

## ! Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and /or air bag deployment.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

**ARKON**  
RESOURCES INC.

The Mobile Mounting Specialists™

Consumer Hotline:  
USA (800) 841-0884  
INT'L (626) 254-9005  
Monday - Friday 9am - 5pm, PST

[www.arkon.com](http://www.arkon.com)  
Arcadia, CA 91006 USA  
Designed in USA | Made in China and Taiwan  
© Copyright 2010 Arkon Resources, Inc.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>