

INSTALL INSTRUCTIONS WGI-D23-1 & 6 INTERIOR WINDOW GUARDS 2006-2007 DODGE CHARGER

TOOLS REQUIRED:

Power drill

Drill bits – 1/8", 5/32"

T-25 tamperproof torx bit

Phillips screwdriver

HARDWARE:

QTY	DESCRIPTION	PART #
-----	-------------	--------

2	Upper mounting bracket	WGI-MB-12-90
---	------------------------	--------------

8	#10 x 3/4" Sheet metal screw	GSM33195
---	------------------------------	----------

8	#10 x 1/2" Sheet metal screw	GSM33194
---	------------------------------	----------

4	1/4" x 1/2" T-25 Tamperproof bolts	GSM34190
---	------------------------------------	----------


4	1/4" Flat Washers	GSM31005
---	-------------------	----------

Always!

- Read all instructions before installing any Havis-Shields Equipment Corp products.
- Check for obstructions (Wire, brake lines, fuel tank, etc.) before drilling any holes!
- Use hardware provided with install kit

SUBASSEMBLY:

1. Bend window guard so it contours the door as shown in *photo #1*.
2. Determine the proper window guard for each window.
3. If installing aluminum door panels refer to those instructions at this time. They will need to be installed first.

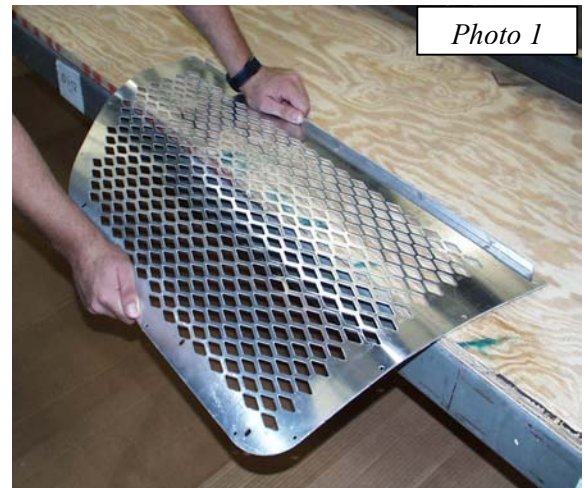

INSTALL WINDOW GUARDS



- Loosely attach upper mounting bracket to window guard using $\frac{1}{4}$ " x $\frac{1}{2}$ " tamper proof screws and flat washers. (This step may already be done during shipping)
- Position screen to vehicle as shown in *photo #2*.
- Make sure you have the window guard centered on the door.
- Mark, drill $\frac{1}{8}$ " holes, and attach lower mount using #10 x $\frac{1}{2}$ " screws as shown in *photo #3*.

Note: Be sure the upper mounting brackets go under weather stripping and the notches go around the mounting plugs.

Make sure the mounting holes will have metal material to drill into.

- Press firmly against window guard and mark door where the upper mounting brackets are located
- Drill $\frac{5}{32}$ " holes and mount to door using #10 x $\frac{3}{4}$ " sheet metal screws.

Mount upper bracket using #10 x $\frac{3}{4}$ " screws

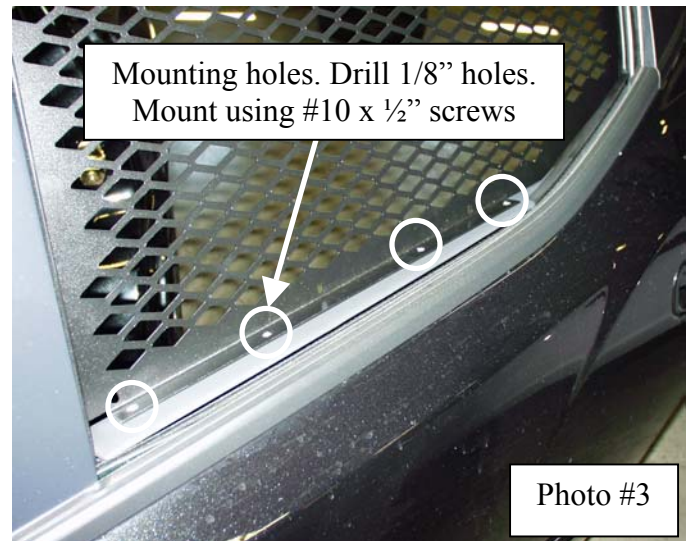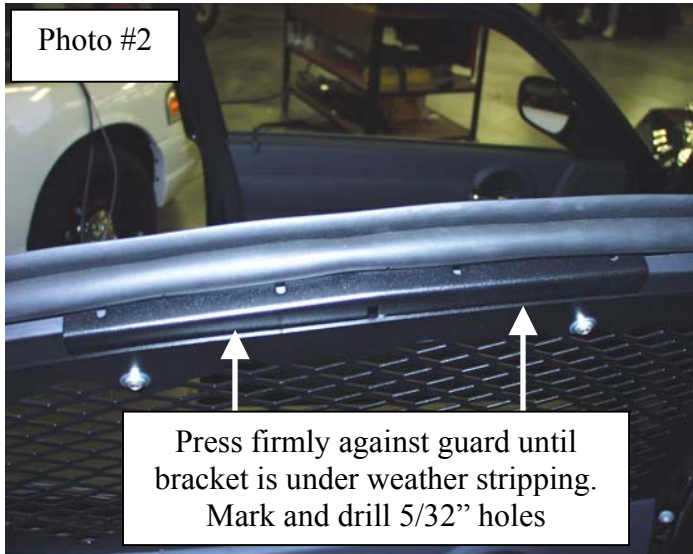

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>