


For Models: KERC607HWH0, KERC607HBL0, KERC607HBS0, KERC607HBT0
(White) (Black) (Black-Stainless) (Biscuit)

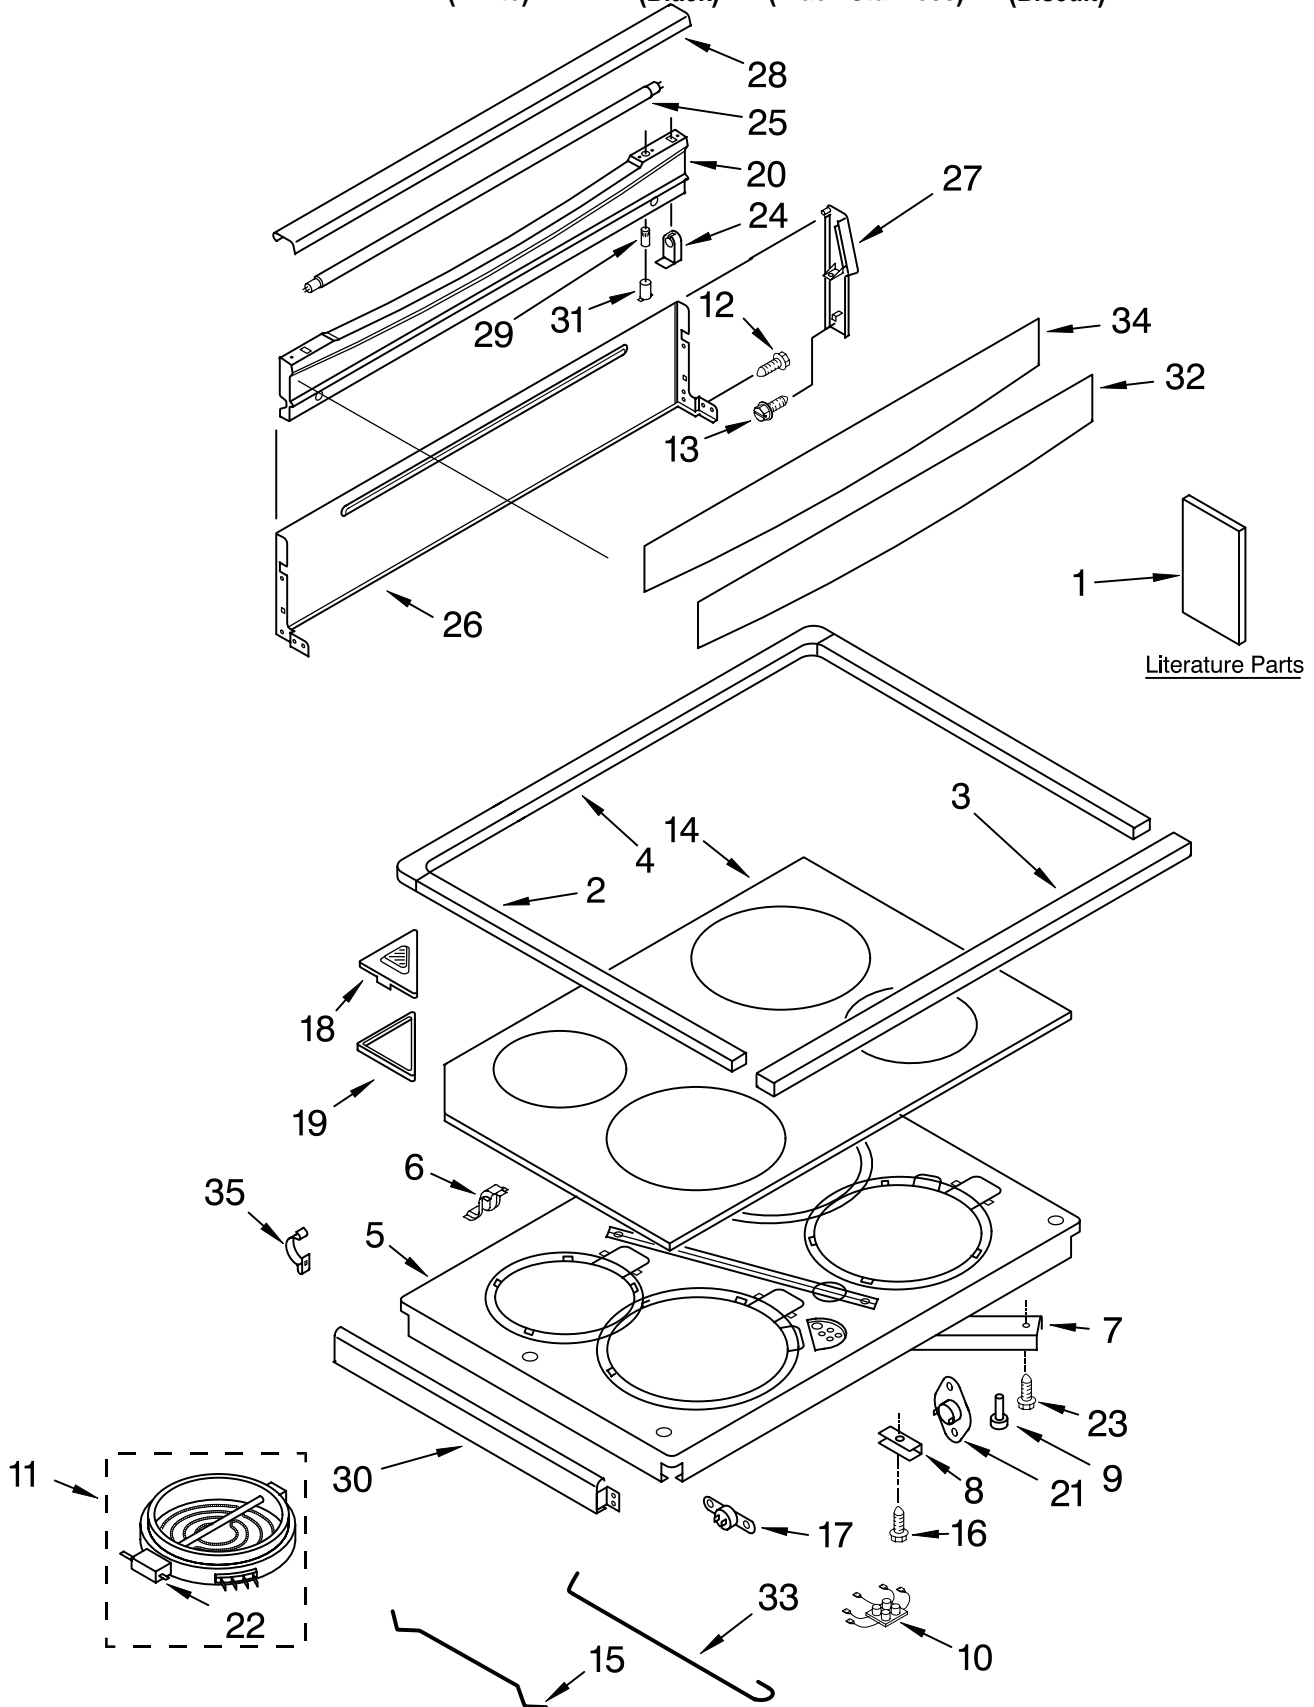

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP PARTS

For Models: KERC607HWH0, KERC607HBL0, KERC607HBS0, KERC607HBT0


(White) (Black) (Black-Stainless) (Biscuit)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Literature Parts	14		Cooktop, Ceran	28		Cover, Light
	LIT9752043	Installation Instructions		9753711CW	White		9751327	White
	LIT9753846	Use & Care Guide		9753711CB	Black		9751632	Black
	LIT4449066	Cookbook T/C Ovens		9753711CC	Biscuit		9753320	Biscuit
	LIT9753027	Tech Sheet	15	9781459	Rod, Large	29	9781118	Starter
	LIT9753028	Wiring Diagram			Ceran Element	30		Trim, Cooktop (Right Hand)
	LIT9752686	Smart & Easy Guide	16	9751871	Screw		9751275PW	White
	LIT9752775	Template, Anti-Tip	17	341196	Thermo Disc		9751275PB	Black
	LIT3191638	Safer Cooking Tips		9780265	Screw(4)		9751275PC	Biscuit (Left Hand)
2	9780939	Gasket, Cooktop	18	9751800	Cover, Vent			
3	9751478	Gasket, Console	19	9751841	Gasket, Vent Cover			
4	9781614	Gasket, Cooktop	20		Backsplash		9751276PW	White
5	9752892	Support, Element		9781896GW	White		9751276PB	Black
6	9751629	Bracket, Pivot		9781896GB	Black		9751276PC	Biscuit
7	9781553	Brace, Support		9781896GC	Biscuit	31	9750866	Holder, Starter
8	9753691	Clip, Support (4)	21	9751984	Bimetal	32		Glass, Backsplash
9	9750969	Bumper, Rubber (4)	22		Limiter, Temp.		9781154	White
10	9781497	Hot Light		8053620	LR-RF-LF		9753292	Clear
11		Element, Surface		3191966	RR	33	9781460	Rod, Small
	8053604	1500W - LR	23	9780272	Screw			Ceran Element
	8053606	1800W - RF	24	9752760	Receptacle, Light	34	9753291	Panel, Backguard (Stainless)
	9753663	2200W - RR	25	422581	Lamp. Flourescent			
	3191723	1000/2400W - LF	26	9751664	Cover, Backsplash	35	98997	Clip, Wire
12	3149333	Screw	27		Endcap, Backsplash (Right Hand)			
13	9780265	Screw		9781885FW	White			
				9781885FB	Black			
				9781885FC	Biscuit (Left Hand)			
				9781884FW	White			
				9781884FB	Black			
				9781884FC	Biscuit			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Models: KERC607HWH0, KERC607HBL0, KERC607HBS0, KERC607HBT0
(White) (Black) (Black-Stainless) (Biscuit)

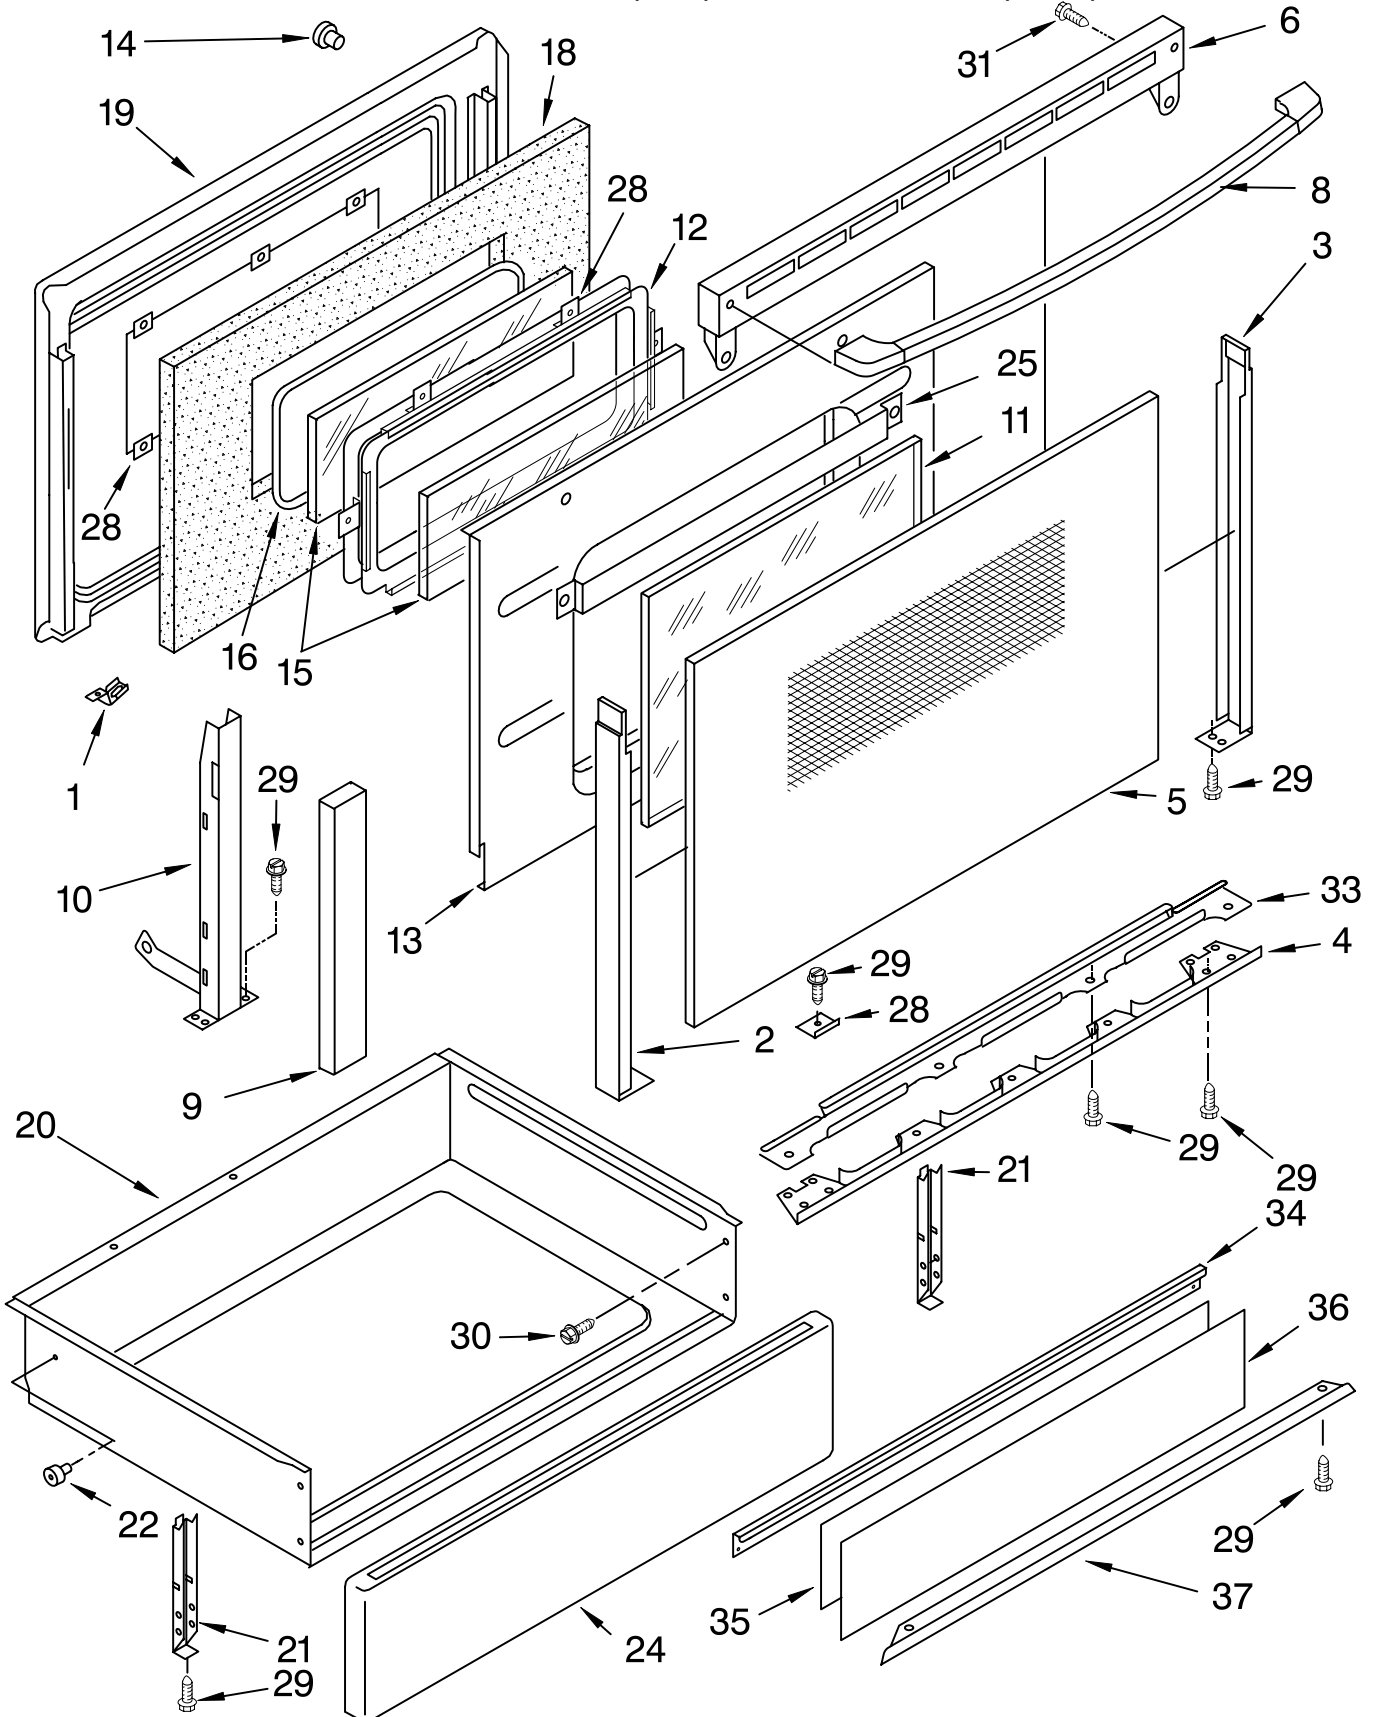

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Models: KERC607HWH0, KERC607HBL0, KERC607HBS0, KERC607HBT0


(White) (Black) (Black-Stainless) (Biscuit)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	9750676	Retainer, Glass	6		Vent, Door	20	9780583	Drawer & Roller
2		Trim, Door-Left		9753498GW	White		9750257	For BS Model
	9750631PW	White		9753498GT	Almond	21	9750169	Bracket, Drawer
	9750631PT	Almond		9753498GB	Black	22	423713	Support, Roller
	9750631PB	Black		9753498GC	Biscuit	24		Front, Drawer
	9750631PC	Biscuit		9781659	Gasket, Door Vent		9750168PW	White
3		Trim, Door-Right		9781490	Seal, Door		9750168PT	Almond
	9750632PW	White			Vent Side		9750168PB	Black
	9750632PT	Almond	8		Handle, Door		9750569PB	BS Model
	9750632PB	Black		9780523PW	White		9750168PC	Biscuit
	9750632PC	Biscuit		9780523PT	Almond	25	9750693	Heat Channel
4		Trim, Door Bottom		9780523PB	Black		90296	Clip
	9781209PW	White		9780523PC	Biscuit	28	9781502	Spacer, Door (8)
	9781209PT	Almond	9	9781449	Gasket, Door Glass (4)	29	9780265	Screw
	9781209PB	Black	10	9750234	Hinge, Door R or L	30	9780272	Screw
	9781209PC	Biscuit	11	9781592	Baffle, Glass	31	9781072	Screw
5		Glass, Door	12	9781602	Frame, Glass	33	9781771	Steam, Deflector
	9781627PW	White	13	9781586	Shield Door	34	9750614PB	Trim, Drawer-Top
	9781627PT	Almond	14	9780771	Bumper, Rubber	35	9753329	Spacer
	9781627PB	Black	15	9781593	Glass, Pyro	36	9753293	Panel, Drawer
	9753378	Stainless	16	9781587	Seal, Glass			(Stainless)
	9781627PC	Biscuit	18	9781626	Insulation	37	9750613PB	Trim, Drawer-Bot
			19	9781600GM	Liner, Door			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN CHASSIS PARTS

For Models: KERC607HWH0, KERC607HBL0, KERC607HBS0, KERC607HBT0
(White) (Black) (Black-Stainless) (Biscuit)

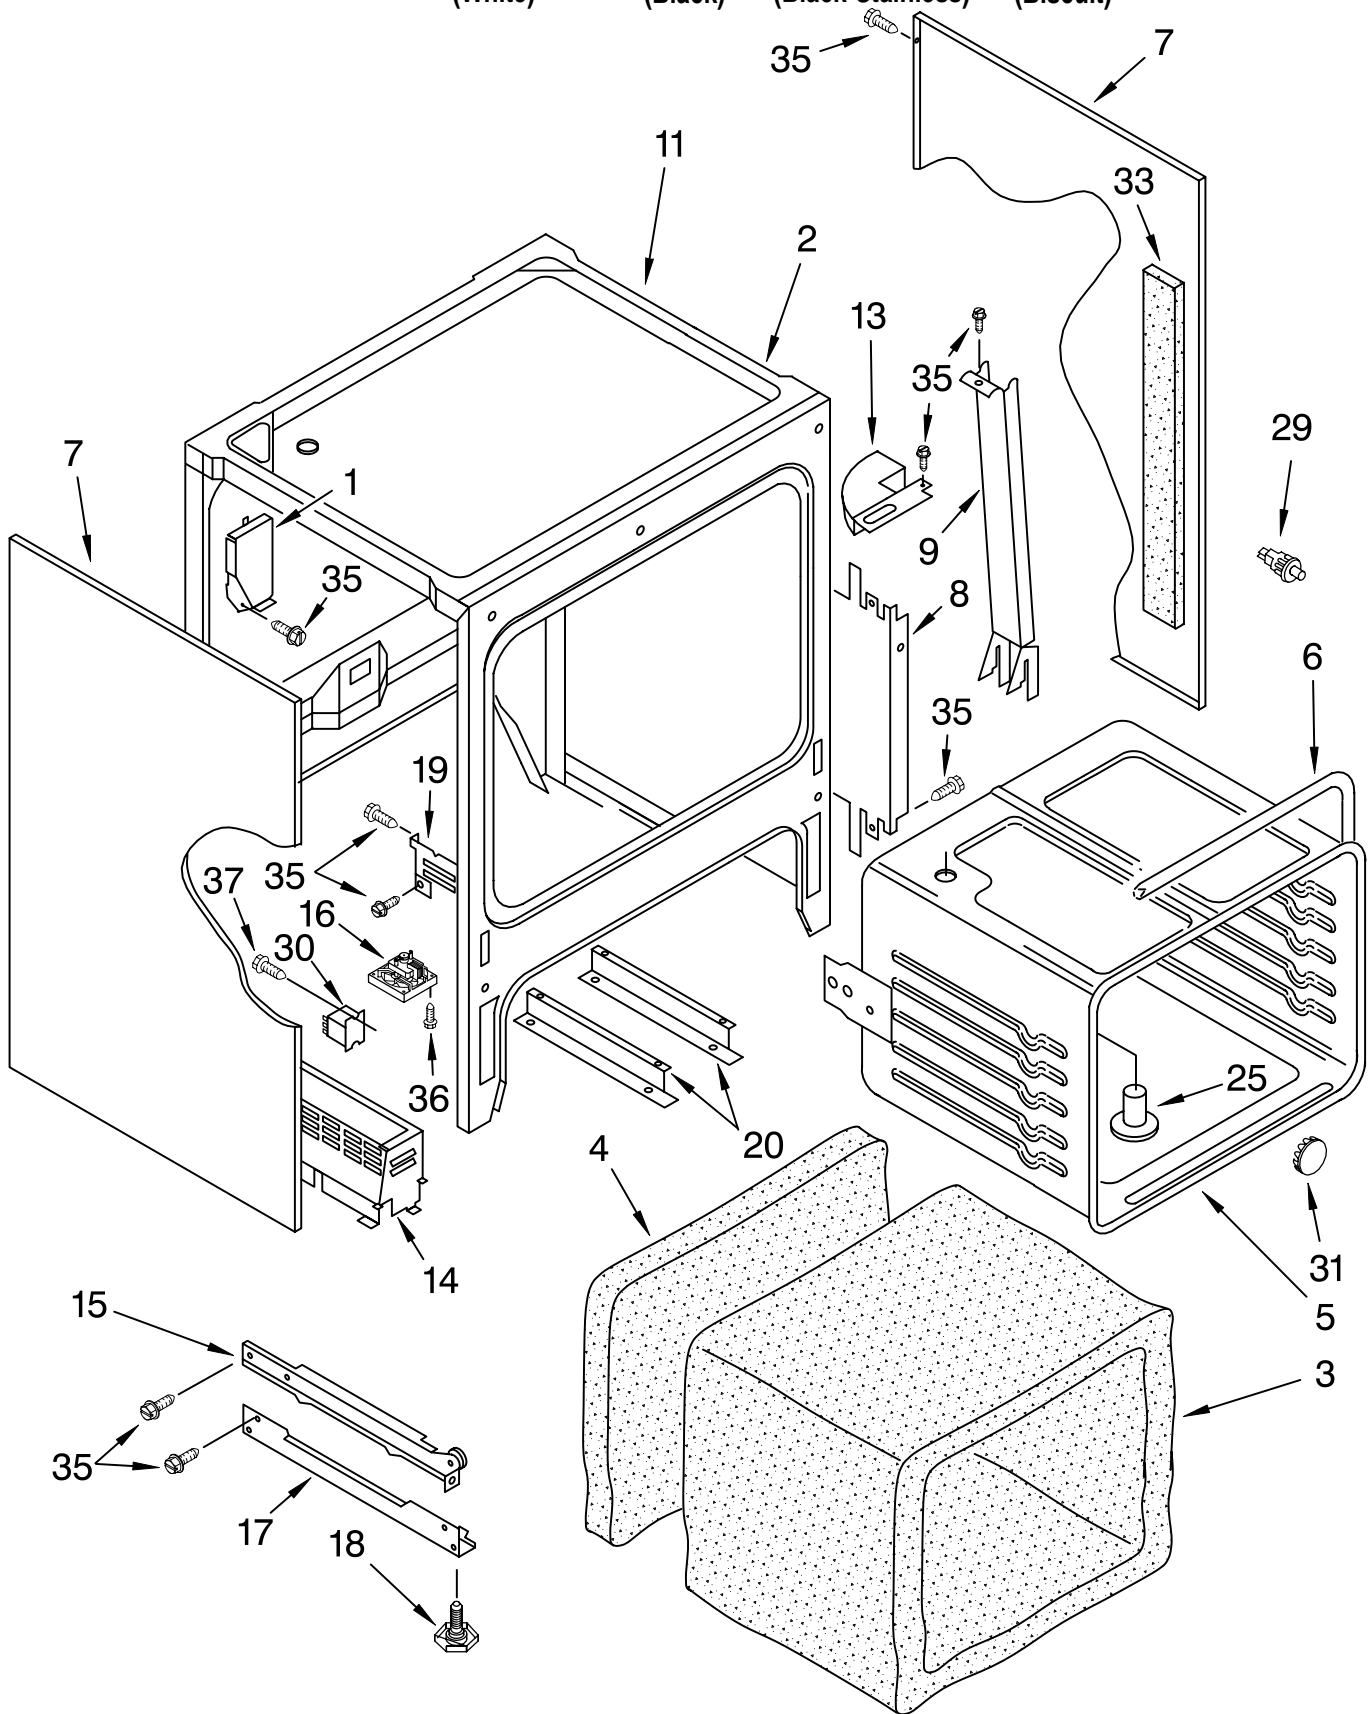

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN CHASSIS PARTS


For Models: KERC607HWH0, KERC607HBL0, KERC607HBS0, KERC607HBT0
 (White) (Black) (Black-Stainless) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	9751350	Vent Box, Oven
2	9750514GM	Chassis, Front
3	9753739	Insulation, Wrap
4	9750221	Insulation, Rear
5	9753744GM	Oven Liner
6	3191649	Gasket Oven
7		Side, Oven L or R
	9781907PW	White
	9781907PB	Black
	9781907PC	Biscuit
8	9780664	Shield, Insulation
9	9751789	Fan Duct, Side
11	9752637	Burner Box
13	9751653	Duct, Top
14	9751060	Support, Fan
15	9750223	Drawer Rail, Left
	9750224	Drawer Rail, Right
16	9751020	Motor, Fan
17	9750147	Bottom Rail (2)
18	312701	Foot, (4)
19	9750149	Hinge, Door L or R
20	9781904	Support Rail, Pan
25	9753091	Vent, Tube
29	9781581	Door Switch
30	9751948	Relay, Dlb.
31	9780578	Button, Plug
33	9752654	Insulation, Side
35	9780265	Screw
36	9751808	Screw
37	9781509	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models: KERC607HWH0, KERC607HBL0, KERC607HBS0, KERC607HBT0
(White) (Black) (Black-Stainless) (Biscuit)

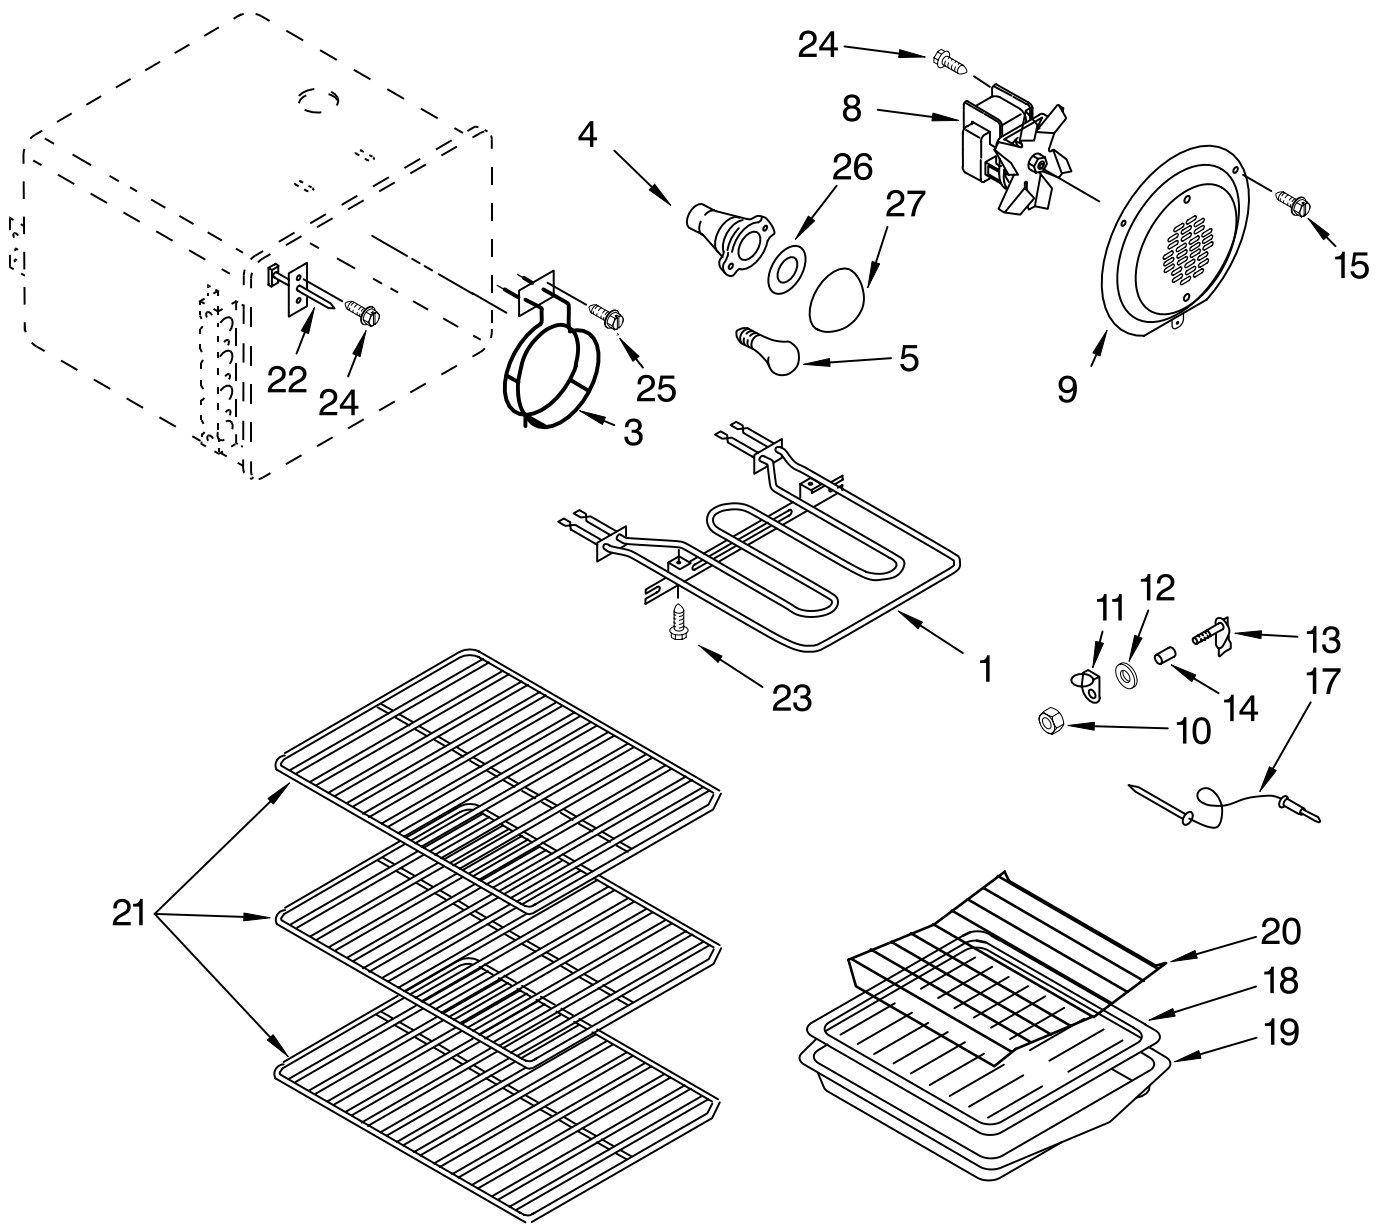

Illus. No.	Part No.	DESCRIPTION
1	9750967	Element, Broil
3	9751447	Element, Convection
4	9781050	Socket, Light
5	8935	Bulb, Oven
8	9781543	Assembly, Fan
9	9751904GM	Baffle, Convection
10	4167277	Lock-Nut, Cvr.Jack


Illus. No.	Part No.	DESCRIPTION
11	4167266	Jack Cover
12	305289	Gasket
13	4173575	Receptacle, Probe
14	3179672	Spacer, Tubing
15	9781509	Screw
17	3150144	Probe
18	420104GM	Grill, Broiler
19	420101GM	Pan, Broiler

Illus. No.	Part No.	DESCRIPTION
20	9750827	Rack, Roasting
21	9750823	Rack, Standard
22	8053344	Sensor
23	340184	Screw
24	9780272	Screw
25	9780269	Screw
26	3184533	Gasket, Lens
27	9781049	Lens, Light

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

REAR CHASSIS PARTS

For Models: KERC607HWH0, KERC607HBL0, KERC607HBS0, KERC607HBT0
(White) (Black) (Black-Stainless) (Biscuit)

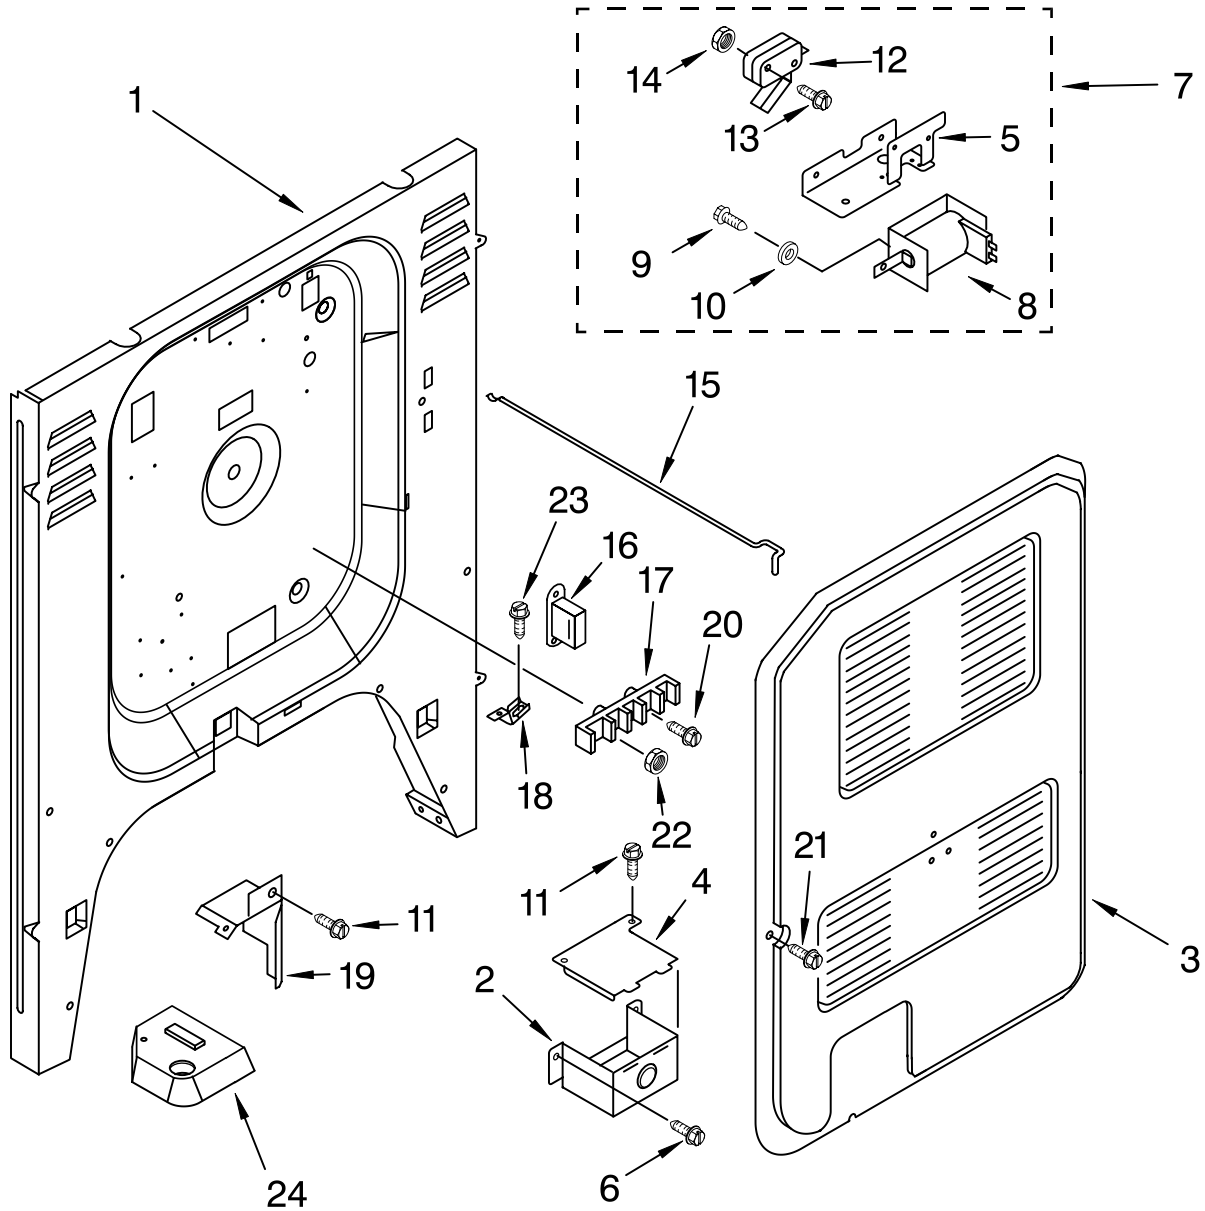

Illus. No.	Part No.	DESCRIPTION
1	9751051	Back panel, Chassis
2	9752344	Box, Terminal
3	9751353	Panel, Rear Cover
4	9752345	Cover, Terminal Box
5	9751418	Bracket, Lock
6	9780272	Screw
7	9751439	Oven Lock Assembly
8	9751590	Solenoid


Illus. No.	Part No.	DESCRIPTION
9	422222	Screw
10	424238	Washer
11	9780265	Screw
12	9751763	Switch, Interloc
13	9750887	Screw
14	9750888	Nut
15	9750523	Rod, Lock
16	3191044	Ballast, Light

Illus. No.	Part No.	DESCRIPTION
17	258076	Terminal Block
18	3169573	Ground Strap
	313660	Clip, (1)
19	9751798	Vent Back, Oven
20	98884	Screw
21	423247	Screw
22	112432	Nut
23	690989	Screw, Grounding
24	9753413	Block, Balance

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: KERC607HWH0, KERC607HBL0, KERC607HBS0, KERC607HBT0
 (White) (Black) (Black-Stainless) (Biscuit)

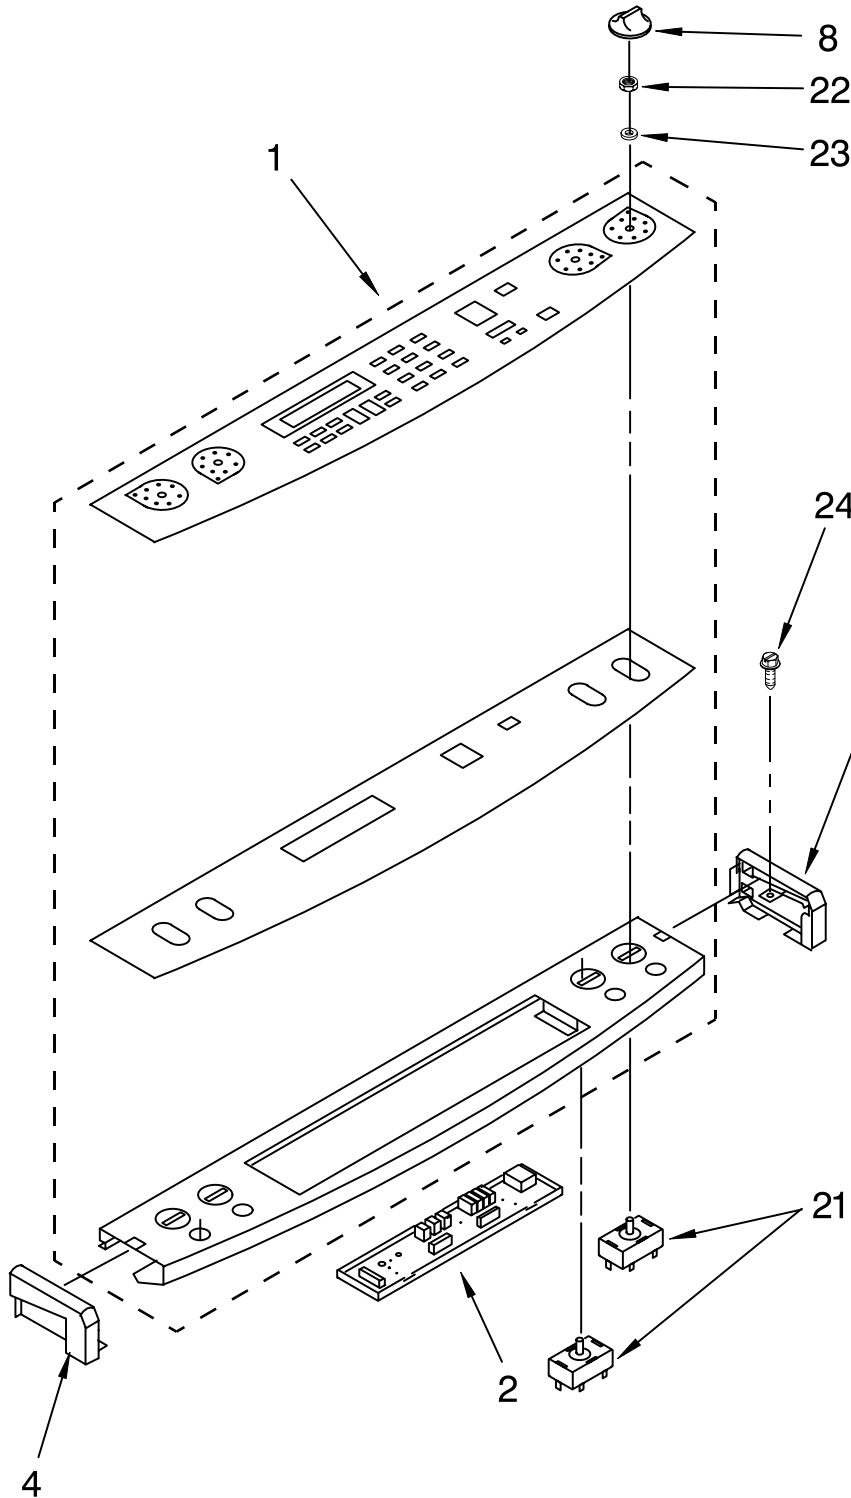


Illus. No.	Part No.	DESCRIPTION
1	9753898CW	Console, Glass White
	9753898CB	Black
	9753898CC	Biscuit
2	3191106	Timer, Electronic
	9780271	Screw, (2)
4		End Cap (Right Hand)
	9751280FW	White
	9751280FB	Black
	9751280FC	Biscuit (Left Hand)
	9751279FW	White
	9751279FB	Black
	9751279FC	Biscuit
	9781488	Spacer (2)
8		Knobs, Control
	9750372FW	White
	9750372FF	Black
	9750372FC	Biscuit
21		Switch, Infinite
	9751364	1500W - LR
	9751363	1800W - RF
	9751362	2200W - RR
	9751758	1000/2400W - LF
22		Nut, Mounting
	422617	Single Element
	9751711	Dual Element
23	9781455	Seal, Switch (4)
24	9780265	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

HIDDEN BAKE PARTS

For Models: KERC607HWH0, KERC607HBL0, KERC607HBS0, KERC607HBT0
 (White) (Black) (Black-Stainless) (Biscuit)

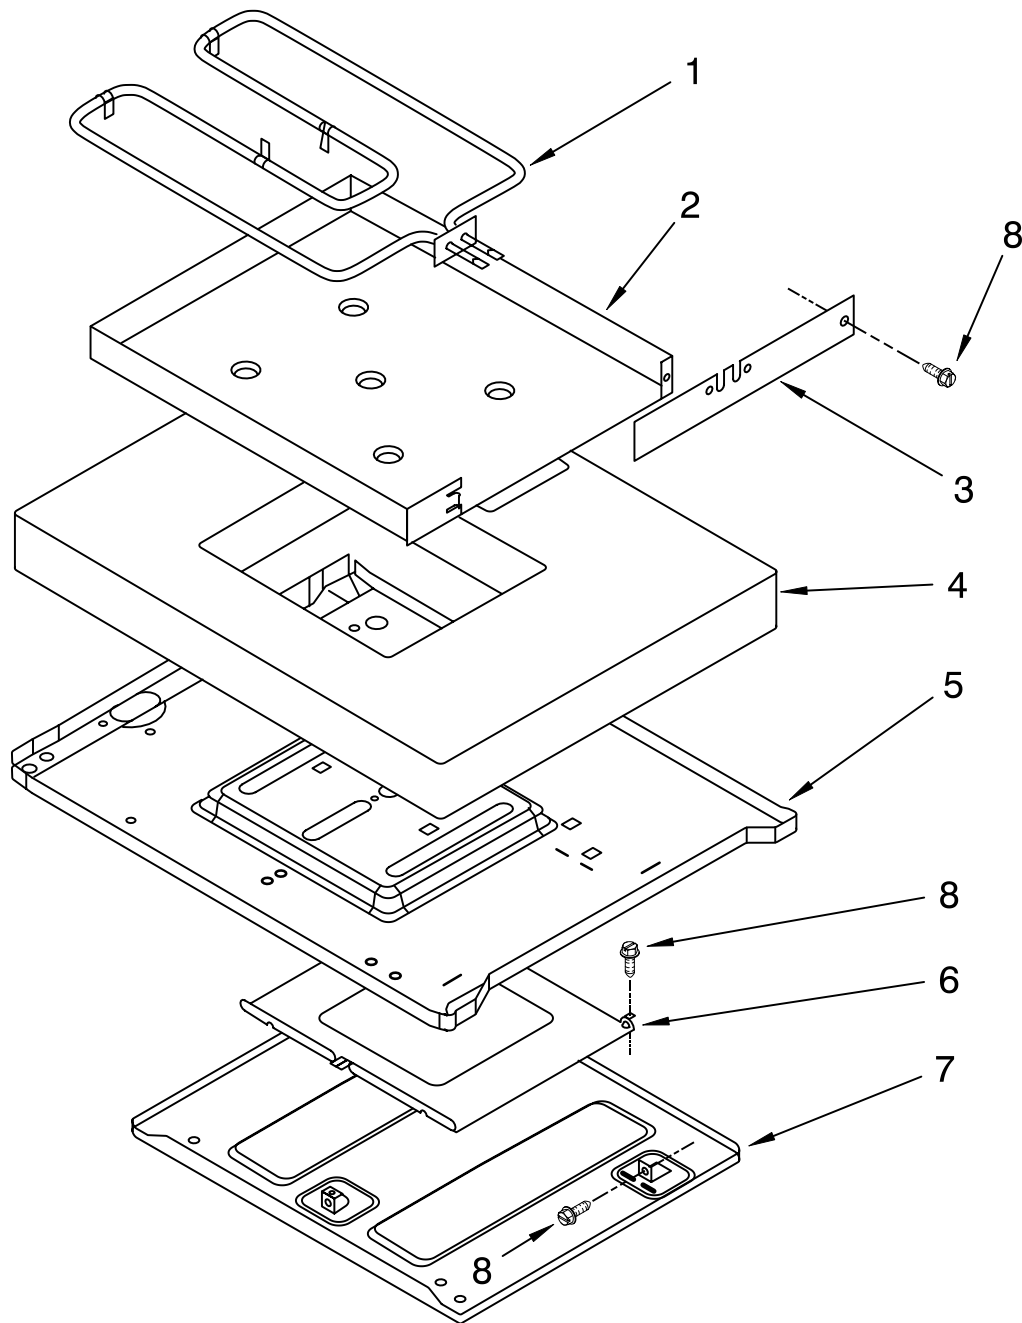

Illus. No.	Part No.	DESCRIPTION
1	9752294	Element, Bake
2	9752228	Pan, Hidden Bake
3	9752250	Cover, Hidden Bake
4	9751323	Insulation
5	9752735	Retainer, Insulation
6	9751641	Plate, Reflector
7	9781025	Shield
8	9780265	Screw, 10-16 x 3/8

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Models: KERC607HWH0, KERC607HBL0, KERC607HBS0, KERC607HBT0

(White) (Black) (Black-Stainless) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
<u>SPLICING WIRES--25FT. LENGTH</u>		
242828	Wire, Black	12 Ga. 150°c
242820	Wire, Black	14 Ga. 150°c
242821	Wire, Blue	14 Ga. 150°c
242822	Wire, Brown	14 Ga. 150°c
242830	Wire, Brown	14 Ga. 200°c
242823	Wire, Green	14 Ga. 150°c
242824	Wire, Orange	14 Ga. 150°c
242829	Wire, Red	12 Ga. 150°c
242825	Wire, Red	14 Ga. 150°c
242831	Wire, Red	14 Ga. 200°c
242826	Wire, White	14 Ga. 150°c
242827	Wire, Yellow	14 Ga. 150°c
242832	Wire, Yellow	14 Ga. 200°c
<u>PAINT, TOUCH-UP (1/2oz.)</u>		
72017	White	
72107	Almond	
72109	New Avocado	
72108	Coffee	
72110	Harvest Gold	
**511873	White Porcelain	(2 Oz.)
4392899	Biscuit	

** Note: Cooktop Surface is Porcelain; All Other Panels are Painted Surfaces.

Illus. No.	Part No.	DESCRIPTION
<u>PAINT, PRESSURIZED SPRAY (12 oz.)</u>		
350930	White	
350956	Almond	
261888	New Avocado	
261886	Coffee	
261890	Harvest Gold	
285006	Superior Black	
206922	Primer (White)	
4392901	Biscuit	
<u>PAINT, BULK (1 qt.)</u>		
799344	White (Uncut)	
978883	Almond (Uncut)	
261891	Harvest Gold (Uncut)	
4392900	Biscuit (Uncut)	
<u>REFINISHING MATERIAL</u>		
799832	Kit, Porcelain Repair (White)	
242756	Touch-Up Self-Clean (1/2 Pt.)	
<u>INSULATION</u>		
9750222	Insulation, Wrap	
9750221	Insulation, Rear	
<u>CLEANER, COOKTOP</u>		
9780196	Glass Cleaner	

Illus. No.	Part No.	DESCRIPTION
<u>ANTI-TIP KIT</u>		
9751745	Anti-Tip Kit	
<u>WIRING HARNESS PARTS</u>		
9753944	Harness, Wire (Main Harness)	
9781767	Harness, Wire (Control, Ceran)	
9781769	Harness, Wire (Console)	
9753943	Harness, Wire (Main Harness) (For BS Model)	
9781842	Harness, Wire (Cooktop)	
9750376	Harness, Wire (Oven Door)	
9753374	Harness, Wire (Dual Oven Light)	
9753683	Harness, Wire (Hidden Bake)	
90016	Clip, Wire	
9781656	L2 - Electric	
9751868	Grommet, Harness	
9751139	Harness, Wire (Meat Probe)	
20082084	Tie, Wire	
9751750	Harness, Wire (Top Light)	
690989	Screw, Ground	
3196520	Clip, Wire	

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>