



Service Manual

Built-in oven
AKP 620/WH

Model Version		Page
	AKP 620/WH 8577 620 42000	
	Technical data	2
	Spare part list	3
	Exploded view	4
	Wiring diagram	5

This documentation is only intended for qualified technicians who are aware of the respective safety regulations.

Date: 09.03.1998

Document-No.: 4812 715 18021


Subject to modification

Spare part list

Model **AKP620/WH**
Service No. **857762042000**
Version **857762042000**


Pos. No.	12NC Code	Description	from	to
025 1	4819 460 78468	Trim, side right		
025 2	4819 460 78469	Trim, side left		
040 0	4819 417 19458	Hinge		
047 0	4819 466 89197	Hinge run.mech.		
110 0	4819 498 78042	Handle,door		
121 0	4819 442 38333	Innerdoor,oven		
141 0	4819 450 69863	Oven glass		
143 0	4819 459 28301	Frame		
191 0	4819 468 18109	Gasket		
201 0	4819 442 38093	Plate		
232 0	4819 460 89445	Trim		
245 0	4819 458 19991	Oven shelf		
247 0	4819 418 38367	Tray,leak		
256 0	4819 466 89268	Protector sheet		
256 3	4819 458 68011	Grid		
261 0	4819 458 19999	Inset grid left		
261 1	4819 458 19998	Inset grid right		
301 3	4819 460 78628	Trim, lower		
320 0	4819 453 58506	Control panel		
332 0	4819 410 28709	Button,push		
334 0	4819 411 29199	Knob		
341 1	4819 413 79197	Indication disc thermostat		
341 2	4819 413 79155	Indication disc oven selector switch		
344 9	4819 532 28269	Ring		
351 0	4812 134 48021	Pilot lamp		
354 0	4819 381 18076	Lens red		
440 0	4819 361 78242	Motor		
441 0	4819 361 18427	Motor cooling fan		
441 1	4819 468 18099	Gasket		
443 0	4819 515 48065	Fan wheel		
451 0	4819 259 28822	Heating element circulation		
452 0	4819 259 28838	Heating element		
456 0	4819 259 28791	Heating element lower		
491 0	4819 290 68363	Terminal block		
500 0	4819 282 18726	Autotimer		
554 0	4819 271 29039	Thermostat		
562 0	4819 282 28697	Thermostat		
620 0	4819 273 28404	Hex.code switch		
651 0	4819 134 88153	Lamp,oven		
652 0	4819 255 18237	Holder,lamp		
652 1	4819 450 69844	Lamp screen		
653 0	4819 134 88189	Lamp		
914 0	4819 505 18323	Nut		
915 0	4819 505 18145	Nut		
932 0	4819 492 68714	Spring		
993 0	4819 310 39087	Mounting kit		

Exploded view

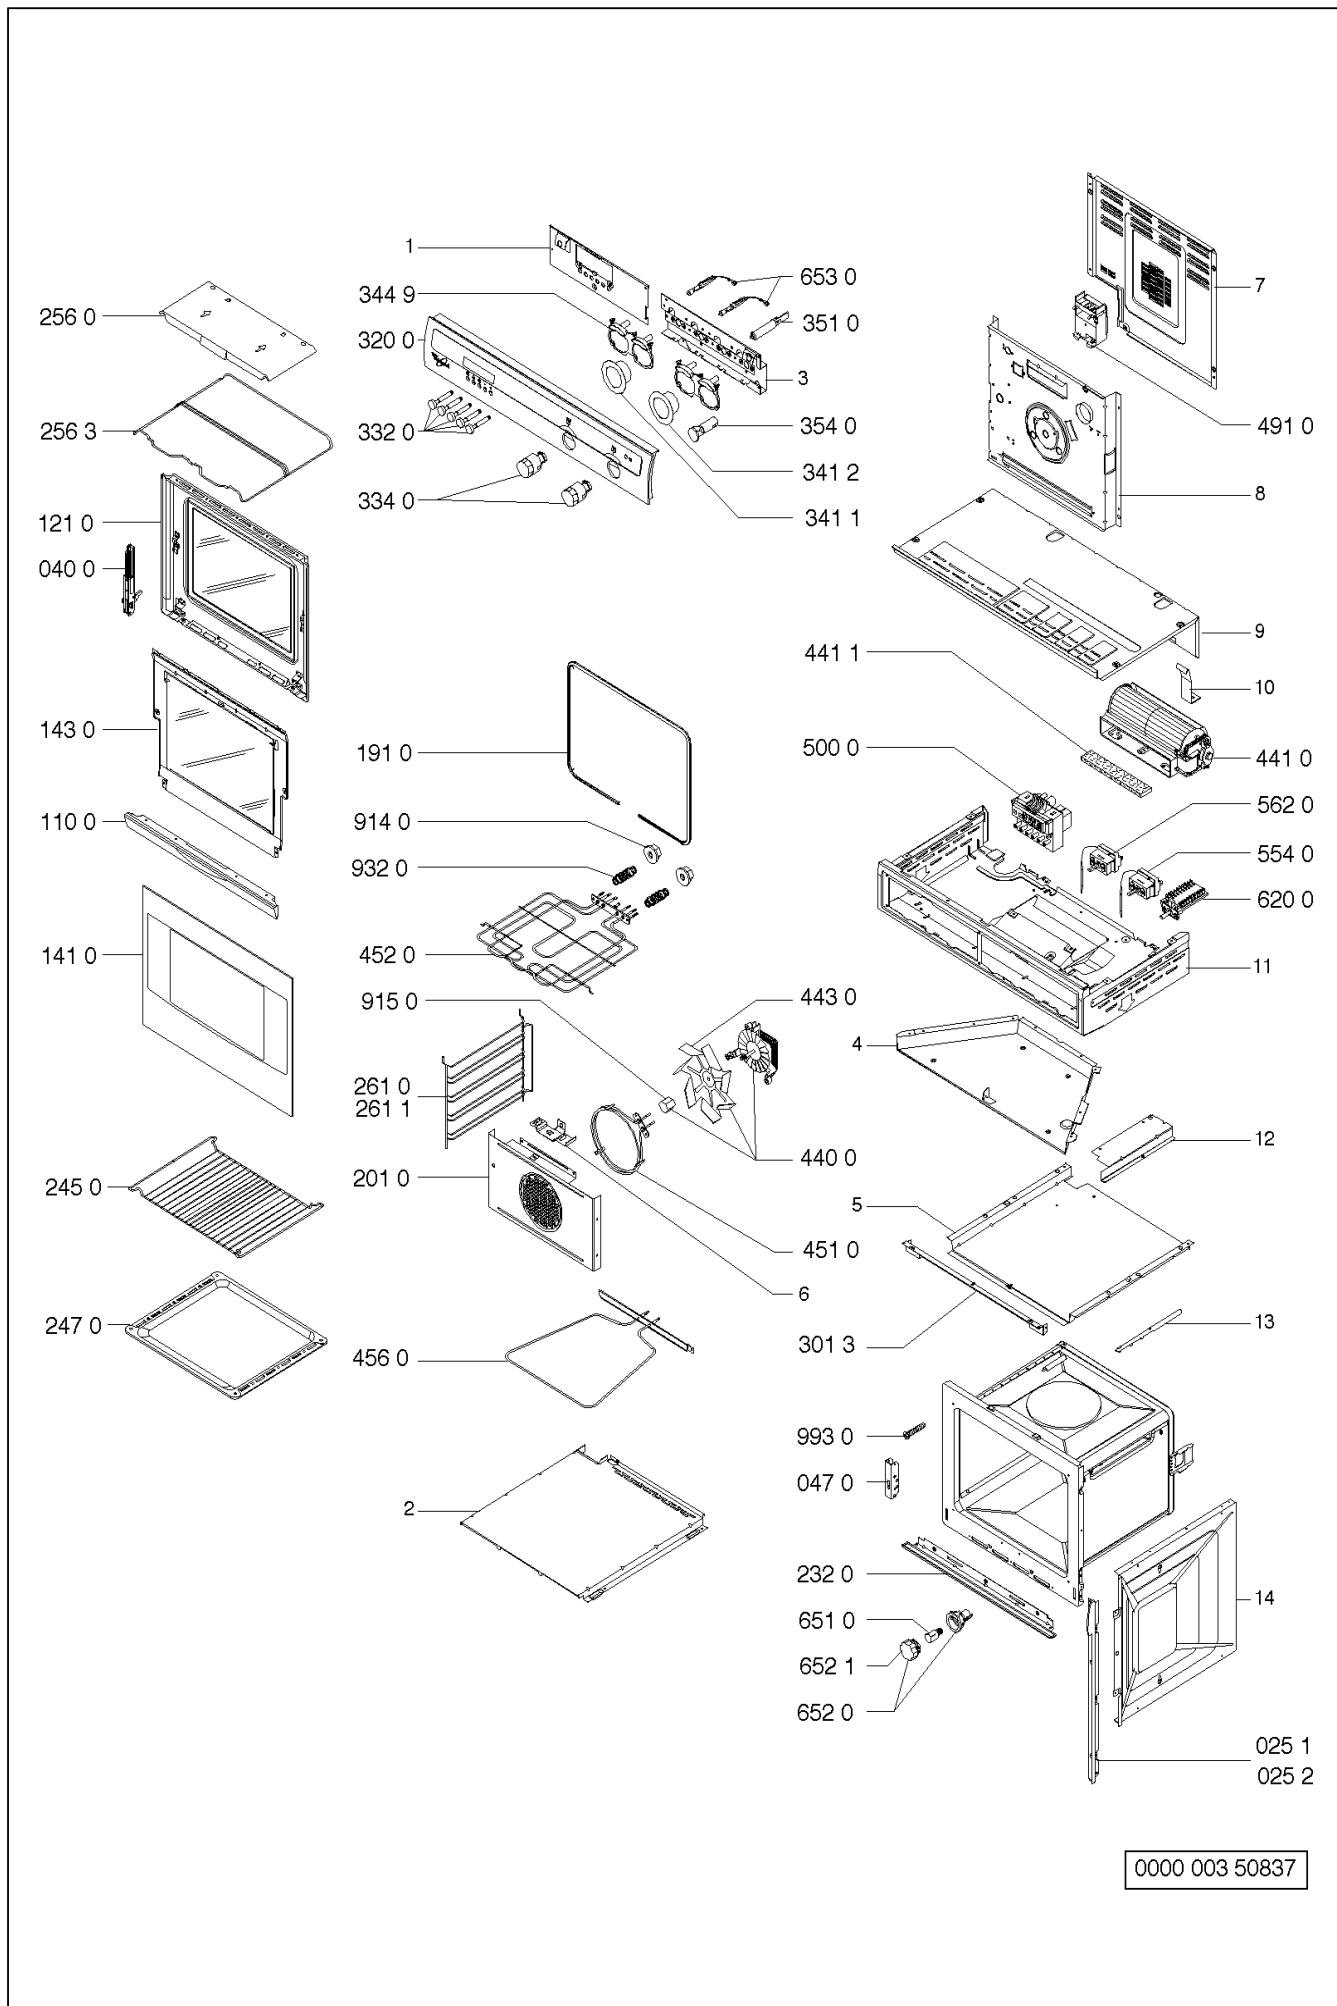


0000 003 50837

Wiring diagram

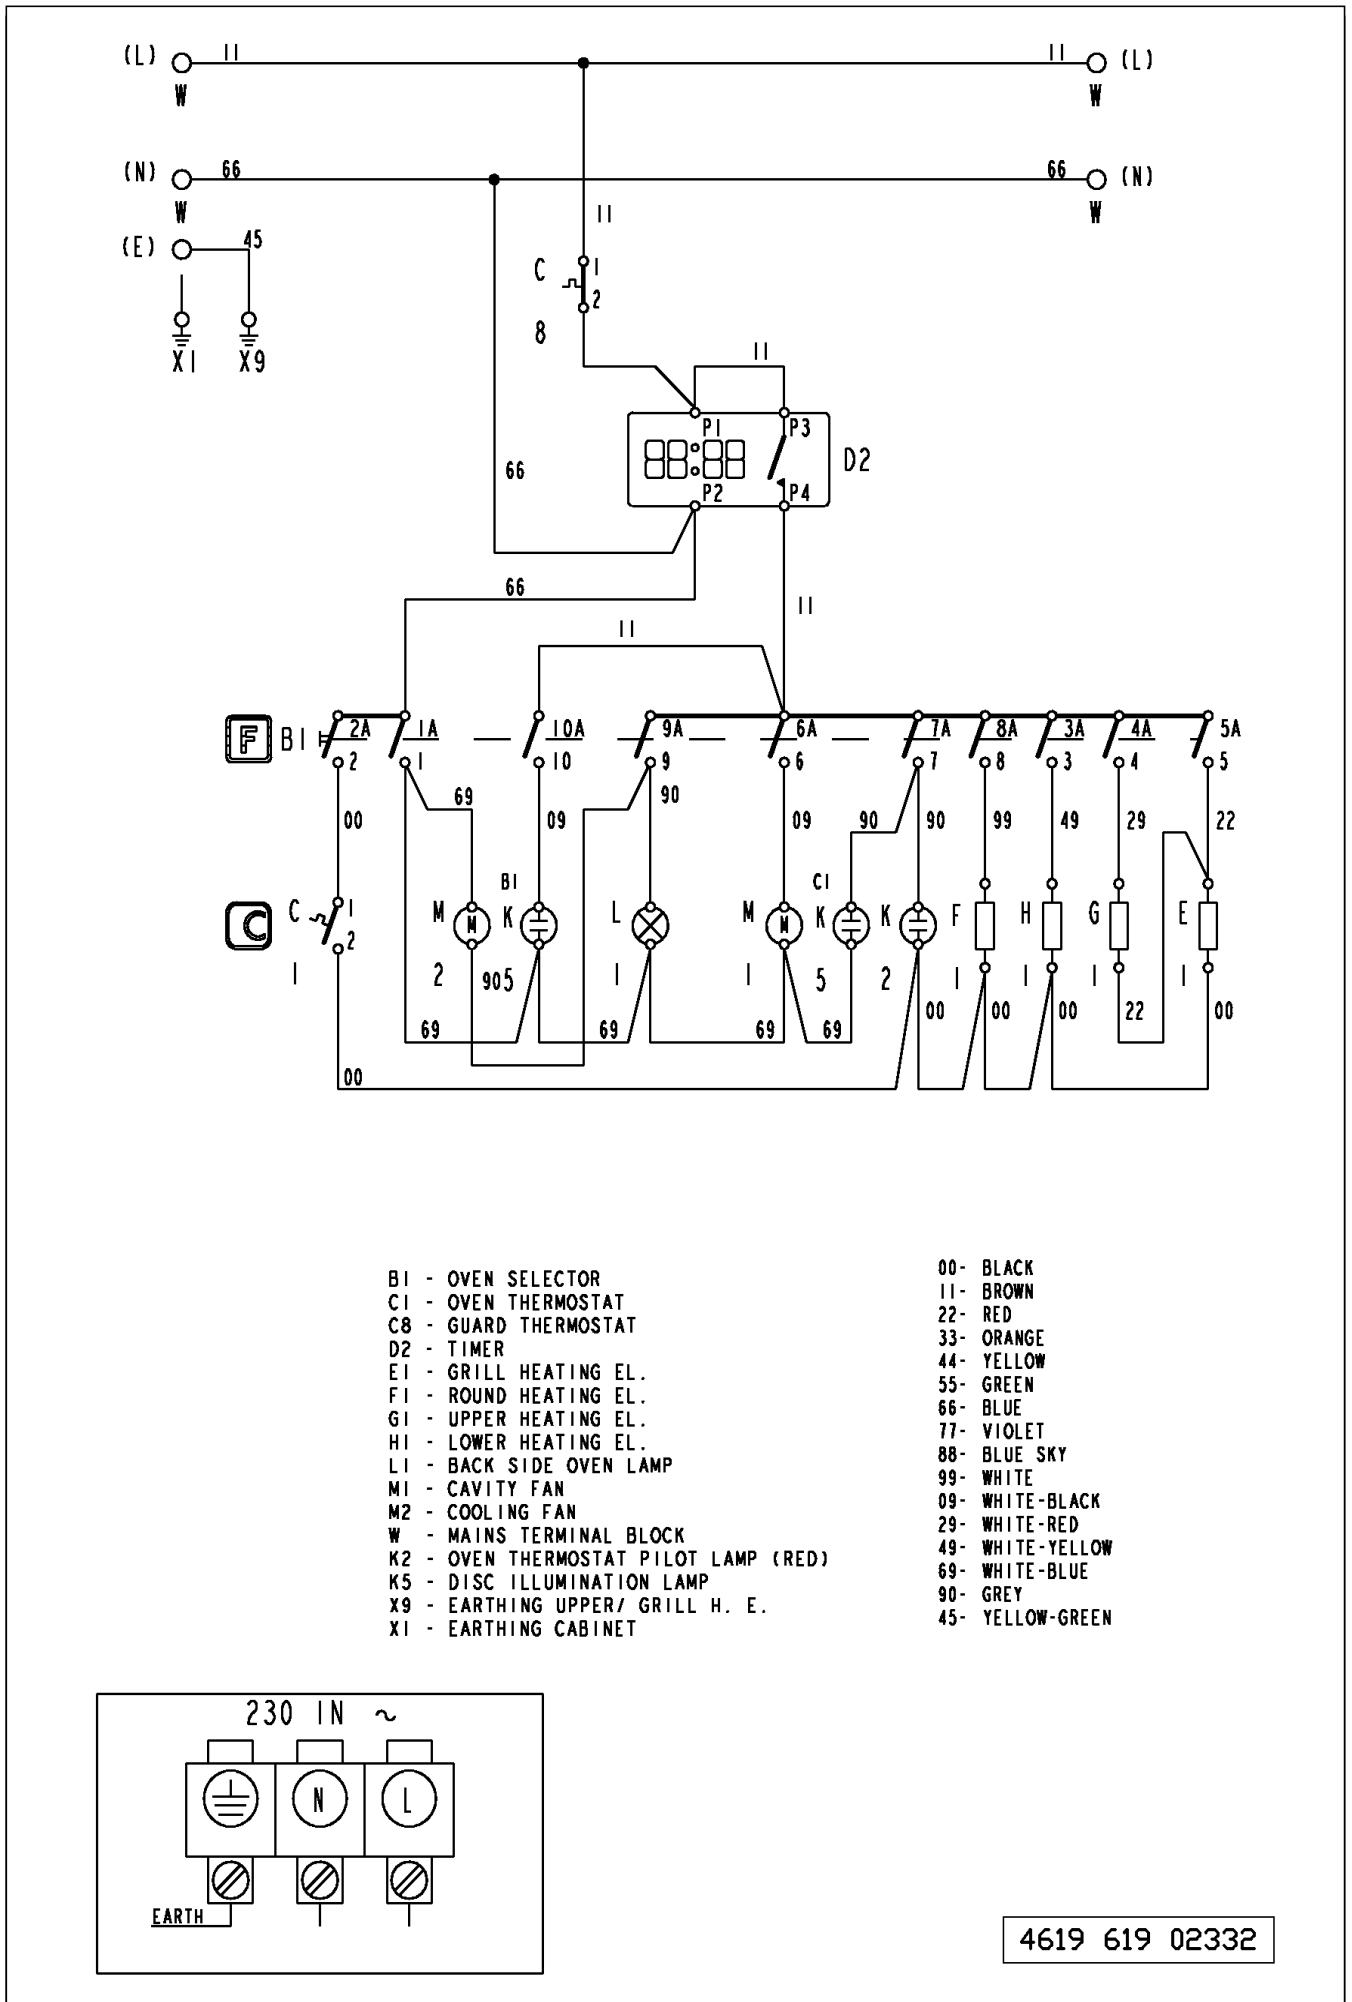

- BI - OVEN SELECTOR
- CI - OVEN THERMOSTAT
- C8 - GUARD THERMOSTAT
- D2 - TIMER
- EI - GRILL HEATING EL.
- FI - ROUND HEATING EL.
- GI - UPPER HEATING EL.
- HI - LOWER HEATING EL.
- LI - BACK SIDE OVEN LAMP
- MI - CAVITY FAN
- M2 - COOLING FAN
- W - MAINS TERMINAL BLOCK
- K2 - OVEN THERMOSTAT PILOT LAMP (RED)
- K5 - DISC ILLUMINATION LAMP
- X9 - EARTHING UPPER/ GRILL H. E.
- XI - EARTHING CABINET

- 00- BLACK
- 11- BROWN
- 22- RED
- 33- ORANGE
- 44- YELLOW
- 55- GREEN
- 66- BLUE
- 77- VIOLET
- 88- BLUE SKY
- 99- WHITE
- 09- WHITE-BLACK
- 29- WHITE-RED
- 49- WHITE-YELLOW
- 69- WHITE-BLUE
- 90- GREY
- 45- YELLOW-GREEN

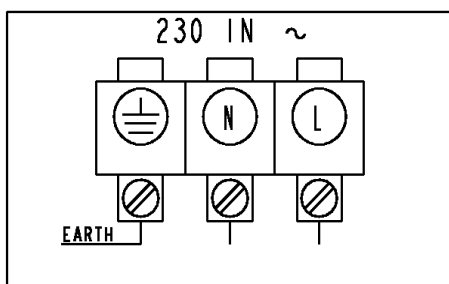

4619 619 02332

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>