




## Whynter 62 QT DUAL ZONE PORTABLE FRIDGE / FREEZER

**MODEL# : FM-62DZ**

**Instruction Manual**

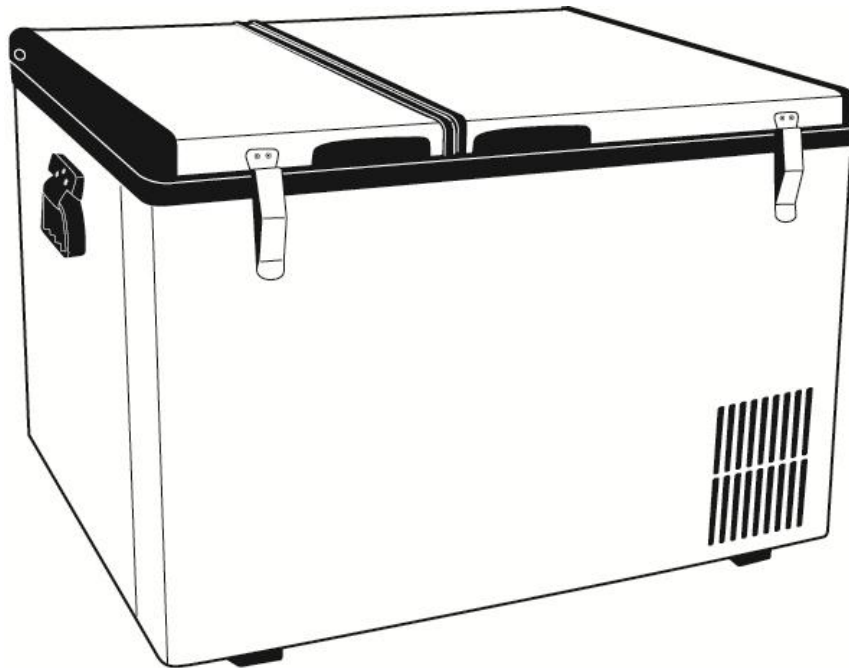

Congratulations on your new WHYNTER product. To ensure proper operation, please read this Instruction Manual carefully before using this product. Keep this manual in a safe place for future reference.

---

## **TABLE OF CONTENT**

SAFETY PRECAUTIONS.....	3
PARTS AND FEATURES.....	4
PROPER LOCATION.....	5
MOVEMENT AND INSTALLATION INSTRUCTIONS.....	5
OPERATING YOUR PORTABLE FREEZER.....	6-8
TEST-RUN.....	6
UNDERSTANDING THE TEMPERATURE CONTROL SETTING.....	6
TEMPERATURE ADJUSTMNET.....	7
FOOD STORAGE.....	7
DEFROSTING AND DE-ODERIZING.....	7
NORMAL OPERATING SOUNDS AND FUNCTIONS.....	8
CLEANING AND MAINTAINING YOUR PORTABLE FREEZER.....	8
TROUBLESHOOTING.....	9
WARRANTY.....	10


## SAFETY PRECAUTIONS

Read all of the instructions before using this appliance. When using this appliance, always exercise basic safety precautions, including the following:

- Do not use if the power supply cord is damaged. If damaged, it must be replaced by qualified technician/electrician.
- This portable freezer is not intended for use by young children or infirm persons without supervision. Young children must be supervised to ensure they do not play with the appliance.
- Ensure the freezer is unplugged before cleaning or if not in use.
- To clean the freezer use only mild detergents or glass cleaning products. Never use harsh chemicals or solvents.
- Do not use this portable freezer with an extension cord or power strip. Please ensure that the appliance is plugged directly into the electrical outlet.
- When positioning the portable freezer, ensure that there is at least a 6" clearance at the sides of the portable freezer. This will allow for adequate ventilation of heat from the back of the freezer.
- Close the freezer lid(s) immediately after putting in any items to maintain the internal temperature of the unit.
- Avoid placing the freezer near external heat sources or direct sunlight.
- Make sure the freezer is placed on a flat, level, and solid surface.
- Make sure that the surface on which the freezer is placed is strong enough to hold the freezer once it is fully loaded with items.
- The portable freezer is an electrical appliance. To avoid serious injury from electrical shock, do not operate the freezer with wet hands, while standing on a wet surface, or while standing in water.
- Do not expose this appliance to rain or excessive moisture.
- Do not turn the portable freezer upside down, on its side, or 45° or more off level.
- Never pull the power cord to disconnect the unit from an outlet. Grasp the plug directly and pull it from the outlet.
- Never lift or carry the freezer by the power cord.
- Keep the power cord away from heated surfaces.
- This portable freezer is designed for non-commercial use only.
- Do not plug this portable freezer into the power socket before setup is completed.
- An empty portable freezer can be dangerous for children or small animals. If disposing of the portable freezer remove gaskets, latches, lids and the entire door from your unused appliance so that children or small animals cannot become trapped inside.
- Do not cut or remove the third prong (the grounding prong) from the power cord.
- The cord should be secured behind the unit and should not be left exposed or dangling.
- Do not move this portable freezer without securing the lids in a closed and latched position.
- Performance may vary based on operational and ambient conditions.

## PARTS AND FEATURES

Your Whynter portable freezer is supplied with all the accessories you need to enjoy refrigeration almost anywhere. Below is an image of the freezer features and standard accessories.

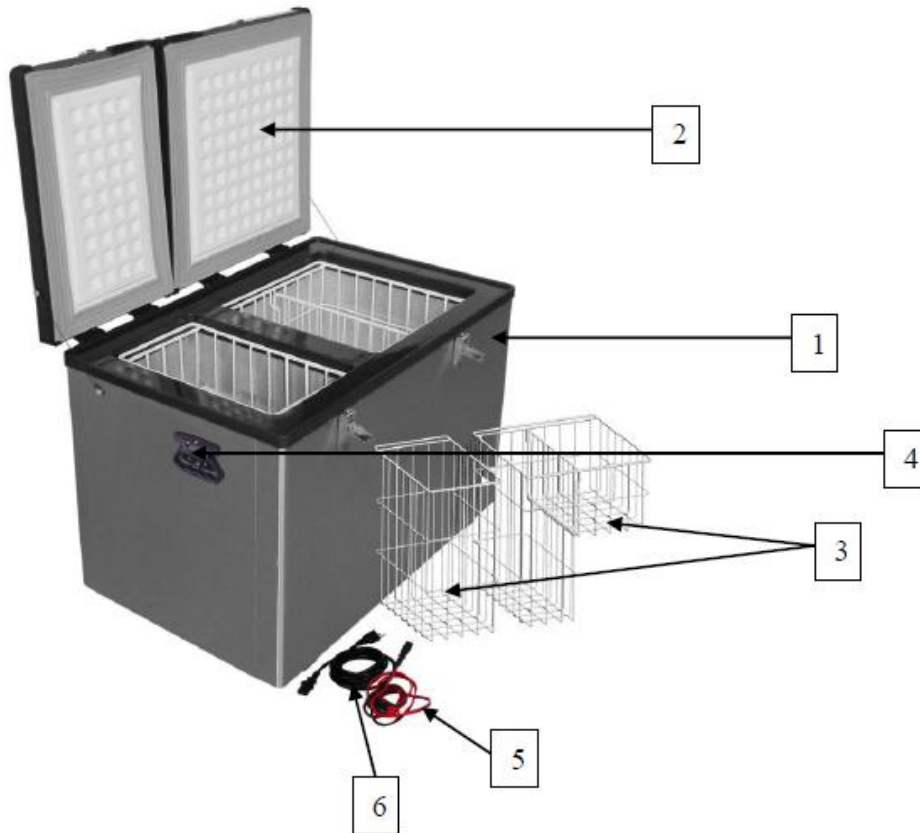

1. Latch
2. Insulated lids
3. Wire baskets
4. Side handle
5. DC power cord
6. AC power cord

If you want to protect and provide additional insulation for your Whynter portable freezer, the Whynter insulated flexible transit bag is your best solution. The transit bag comes custom tailored with openings for your freezer's handle grips, air vents, and power cords to allow operation with the bag in place. The transit bag also comes with a fast open top flap for quick and easy access to the freezer compartment. A convenient side pocket also allows you to tote any cords and accessories with the bag.

Please feel free to contact our Sales Team at [info@whynter.com](mailto:info@whynter.com) for purchase information.

## Proper Location

- Position your portable freezer in a location where there is proper air circulation and electrical connections.
- Keep the portable freezer away from heat and direct sunlight if possible.
- This portable freezer is suitable for vehicle use and camping however, the appliance should never be exposed to rain.
- This portable freezer should not be placed in a built-in or recessed area. It is designed to be freestanding.
- The normal operation of the freezer depends on heat radiation from the condenser. For the initial use, remove all packaging and allow at least 6" of clearance around the perimeter of the freezer.

Because this unit is compressor based appliance, ample space is required around the unit to allow it to exhaust

## Movement and Installation Instructions

1. Remove all interior and exterior packaging.
2. Position the freezer in a dry and well-ventilated place. Keep the freezer away from direct sunlight, heaters and corrosive gases/chemicals.
3. Clean the interior surface with lukewarm water and a soft cloth.
4. When inserting the AC power-cord into the power socket, make sure the power socket is a grounded 115V~AC / 60Hz socket. Also, make sure that the unit's grounding prong has not being tampered with.

**Note:** When inserting the DC power-cord, make sure the input is a 12V~DC / 24V power source.

5. When moving the freezer, always use both handles to the carry the unit as level as possible. This is in order to protect the compressor and the sealed system.

# OPERATING YOUR PORTABLE FREEZER


## Test-Run

### DC input power

- When powering your portable freezer with a standard 12 V socket, the unit will not work if socket has a voltage of less than 10.4 V. The unit will restart when the voltage is 11.8V or greater.
- When powering your portable freezer into a standard 24 V socket, the unit will not work if the socket has a voltage of less than 22.5 V. The unit will restart when the voltage is 24.2 V or greater.

## UNDERSTANDING THE TEMPERATURE CONTROL SETTING

Your portable freezer uses a digital control system for adjusting the thermostat.

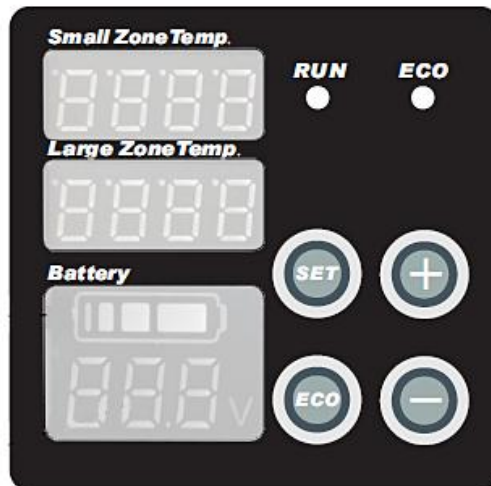

1. SET:  
Temperature setting:  
Press the set button once to set desired temperature of the Small zone.  
Press the set button twice to set desired temperature of the Large zone.  
Battery cut-out voltage setting:  
This function sets the minimum voltage that the unit will run. Press the set button 3 times to set the Battery cut-out voltage. To select different cut-out voltage (10V/ 10.7V/ 11.8V), press the +/- buttons.
2. +: Button for increasing the temperature setting.
3. -: Button for decreasing the temperature setting.
4. ECO:  
ECO button: Press the ECO button to set the unit in ECO mode. The unit maintains the internal temperature at about 2F higher than the set temperature.  
ECO light: Indicates when the ECO mode is on.
5. RUN light: When the RUN light is green, it indicates the unit is running.
6. Battery display: Shows battery condition in DC power supply only.  
\*When battery level is too low, the battery display will flash.

## Temperature Adjustment

1. When the freezer is plugged in to a power outlet, press the “Set” button. The LED will display the factory pre-set temperature of 0°F
2. To adjust the temperature:
  - a. Press the “Set” button again
  - b. While the LED is flashing, press the “▲” or “▼” buttons to reach the desired temperature
  - c. Once the desired temperature is set, the LED stops flashing. The current internal temperature will then be displayed. After the LED has stopped flashing, you can check the set temperature by pressing the set button again
  - d. To change the preset temperature again repeat steps a., b. and c.

**Note:** Do not use the refrigerator-freezer as a refrigerator when the ambient temperature is lower than 41°F

## Food Storing

- Fresh foods should NOT be stored together with frozen foods.
- When the temperature is set below 32°F, do not keep glass-bottled drinks such as beer and lemonade or soda cans, as the glass and cans might shatter.

## Defrosting and Deodorizing

When the ice layer on the inner cabinet sides is over 0.2”, the defrosting operation should be performed to improve the refrigerating efficiency. To do this, follow these steps below:

1. Turn off the power, and remove all items inside the freezer.
2. Allow the ice to completely melt.
3. Turn the unit to drain out the water. Once the unit is defrosted and all the water has drained out, clean the interior with a soft rag before using the unit.

**Tip:** To remove unpleasant odors place a piece of charcoal in the chest.

**Never remove ice with a sharp object or screwdriver.**

## Normal Operating Sounds and Functions

- It is normal to hear gurgling sounds caused by the flow of refrigerant when each cooling cycle ends.
- The surface temperature of the compressor can reach 158-194°F when running.
- The noise emitted by the cooling fan on the condenser is a normal function.
- It is normal for the fan in the power supply to run all the time.

## ***CLEANING YOUR PORTABLE FREEZER***

- Always disconnect the power supply before cleaning. Clean the inside of the cabinet whenever necessary using a solution of warm water and baking soda (1 tablespoon to every 2 liters of water). Dry with a soft cloth.
- Do not use steel brushes or harsh detergents to clean the inner liner.
- Dirt from the condenser should be cleaned by a qualified technician when necessary.



## TROUBLESHOOTING

Problem	Cause	Solution
The compressor runs for 1 to 5 minutes and stops.	The voltage is not in the correct range.	Switch off the power and restart when the power is normal.
The compressor runs but the inner liner does not get very cold.	The ambient temperature is too high.	The operating temperature of this unit is <90F. If temperature is higher than 90F, the unit need longer to cool to the set temperature.
	The system is blocked.	Contact service department via email at <a href="mailto:service@whynter.com">service@whynter.com</a>
The inner liner is very cold and the compressor runs continuously.	The ice layer on the evaporator is too thick.	Defrost the freezer
	The door is being opened and closed too frequently.	The door should be opened as little as possible.
	The freezer is overloaded.	Remove some products from the freezer.
	The condenser is not well-ventilated.	Place the freezer in a well-ventilated place.
	The temperature sensor-tube is out of the evaporator or the controller is faulty.	Contact service department via email at <a href="mailto:service@whynter.com">service@whynter.com</a>
The compressor does not run.	The controller is faulty (the power indicator is not on).	Contact service department via email at <a href="mailto:service@whynter.com">service@whynter.com</a>
	The thermostat is set too high and the ambient temperature is too low.	Set the freezer to a lower temperature.
The freezer is noisy.	The freezer is not level.	Place the freezer on a flat and hard surface.
	The voltage is not in the correct range.	Switch off the power and restart when the power is normal.
Can the unit plugged into both AC and DC power supply?		Yes. If both AC and DC are plugged in at the same time, then the unit will primarily operate on AC. If the AC power source fails, DC will become primary source of power supply.

# **ONE YEAR LIMITED WARRANTY**

This WHYNTER Portable Fridge/ Freezer is warranted, to the original owner within the 48 continental states, for one year from the date of purchase against defects in material and workmanship under normal use and service. Should your portable fridge/ freezer prove defective within one year from the date of purchase, return the defective part or unit, freight prepaid (within two months of purchase; after two months to one year, customer will be responsible for freight cost to Whynter's service department), along with an explanation of the claim to Whynter LLC. Please package the portable fridge/ freezer carefully in its original packaging material to avoid damage in transit. Please retain the original box and packaging material. Under this warranty, Whynter will repair or replace any parts found defective. This warranty is not transferable. After the expiration of the warranty, the cost of labor and parts will be the responsibility of the original owner of the unit.

## **THIS WARRANTY DOES NOT COVER:**

- Acts of God, such as fire, flood, hurricanes, earthquakes and tornadoes.
- Damage, accidental or otherwise, to the portable fridge/ freezer while in the possession of a consumer not caused by a defect in material or workmanship;
- Damage caused by consumer misuse, tampering, or failure to follow the care and special handling provisions in the instructions.
- Damage to the finish of the case, or other appearance parts caused by wear.
- Damage caused by repairs or alterations to the product by anyone other than authorized by the manufacturer.
- Freight and Insurance cost for the warranty service.

## **DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES**

*CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW, BUT NOT LESS THAN ONE YEAR. WHYNTER SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.*

To obtain service or information, contact  
Whynter LLC via email at [service@whynter.com](mailto:service@whynter.com) or call  
866-WHYNTER.

Product contents and specifications may change without notice.  
Copyright © 2012 Whynter LLC  
[www.Whynter.com](http://www.Whynter.com)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>