



129H00

Illustrated Parts List

Model Series

129H00

TYPE NUMBERS
0005 through 0185.

TABLE OF CONTENTS

Alternator	6
Air Cleaner	4
Blower Housing/Shrouds	5
Camshaft	2
Carburetor	3
Controls	4
Crankshaft	2
Cylinder	2
Electric Starter	6
Electrical	6
Engine Sump	2
Exhaust System	4
Flywheel	5
Flywheel Brake	6
Fuel Supply	3
Governor Spring	4
Ignition	6
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	5
Valves	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

129H00














1319 WARNING LABEL

REQUIRED when replacing parts with warning labels affixed.





1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL


1019 LABEL KIT

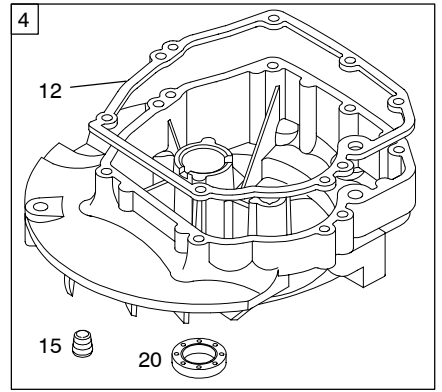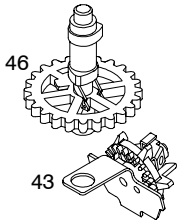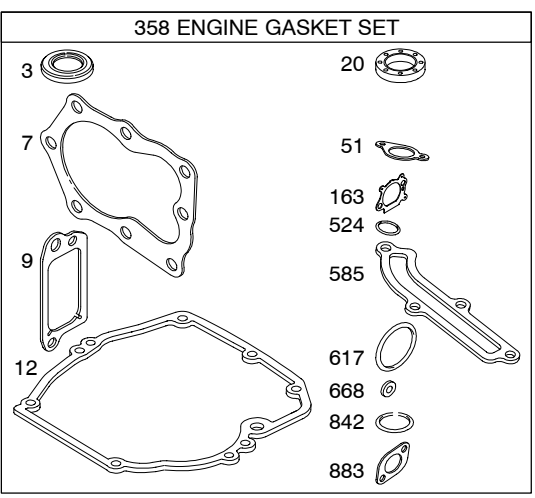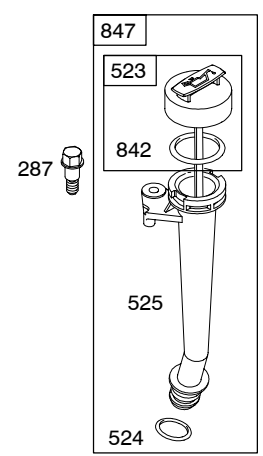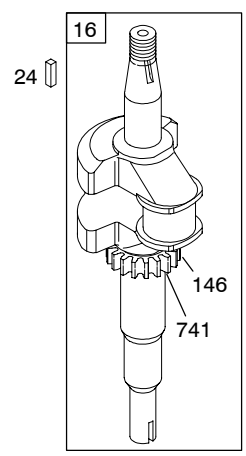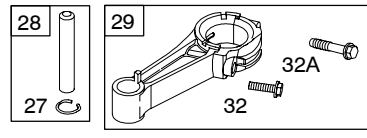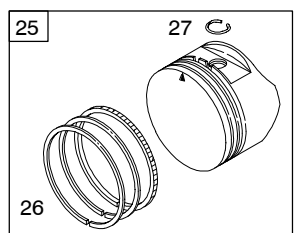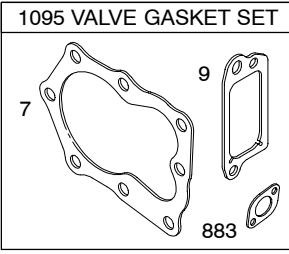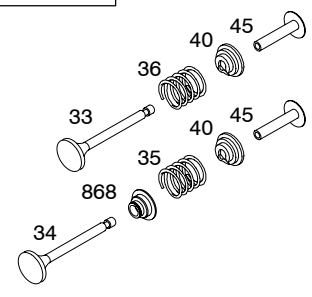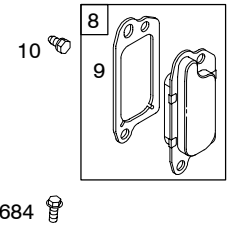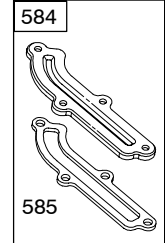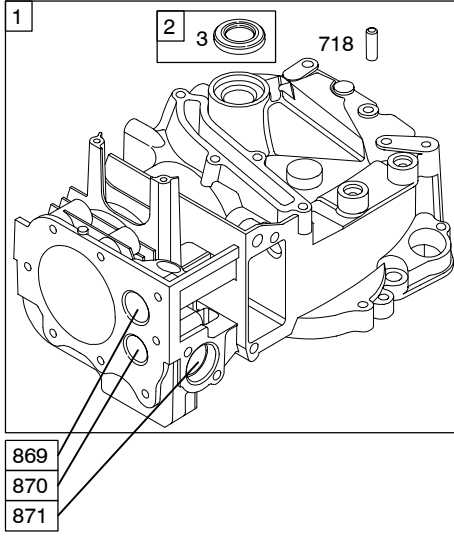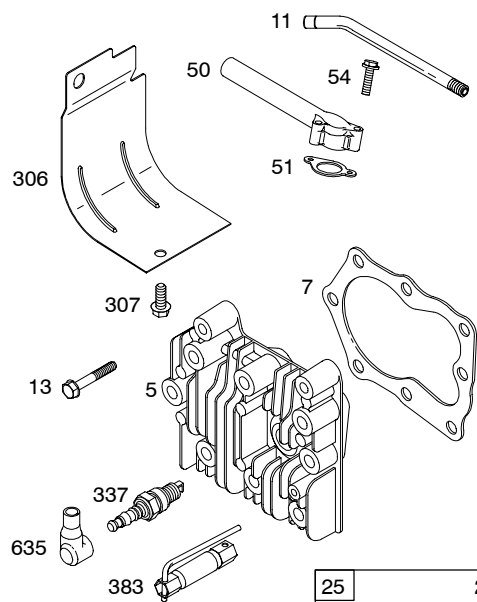







Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5118-2 Assemblies include all parts shown in frames. 12/07/2007

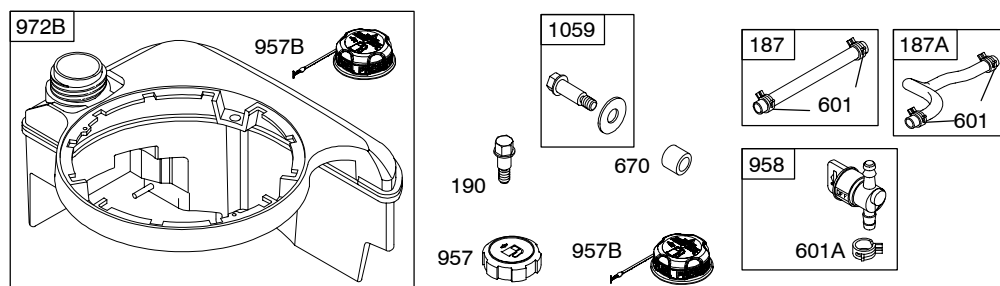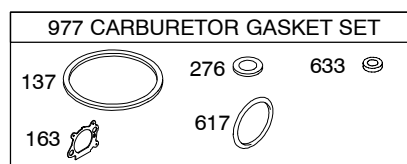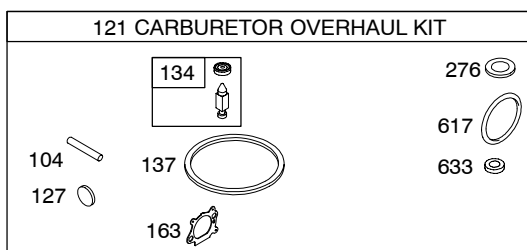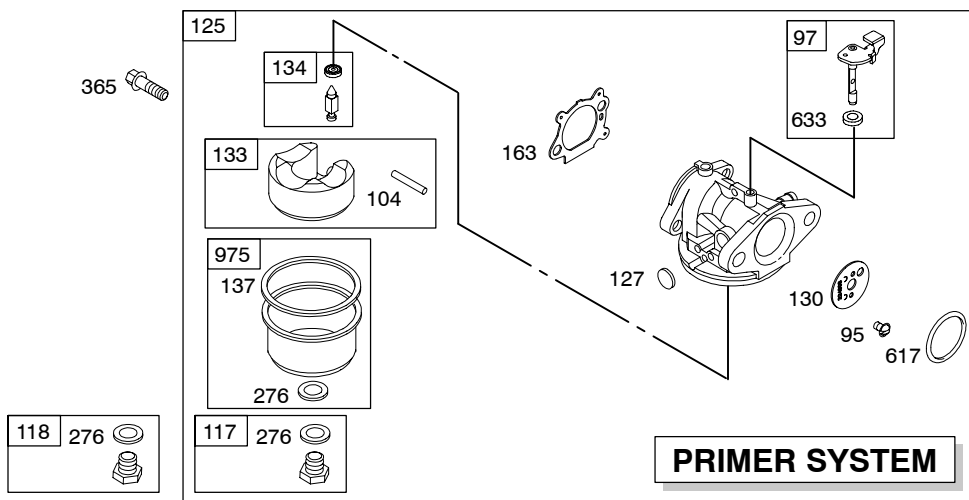



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

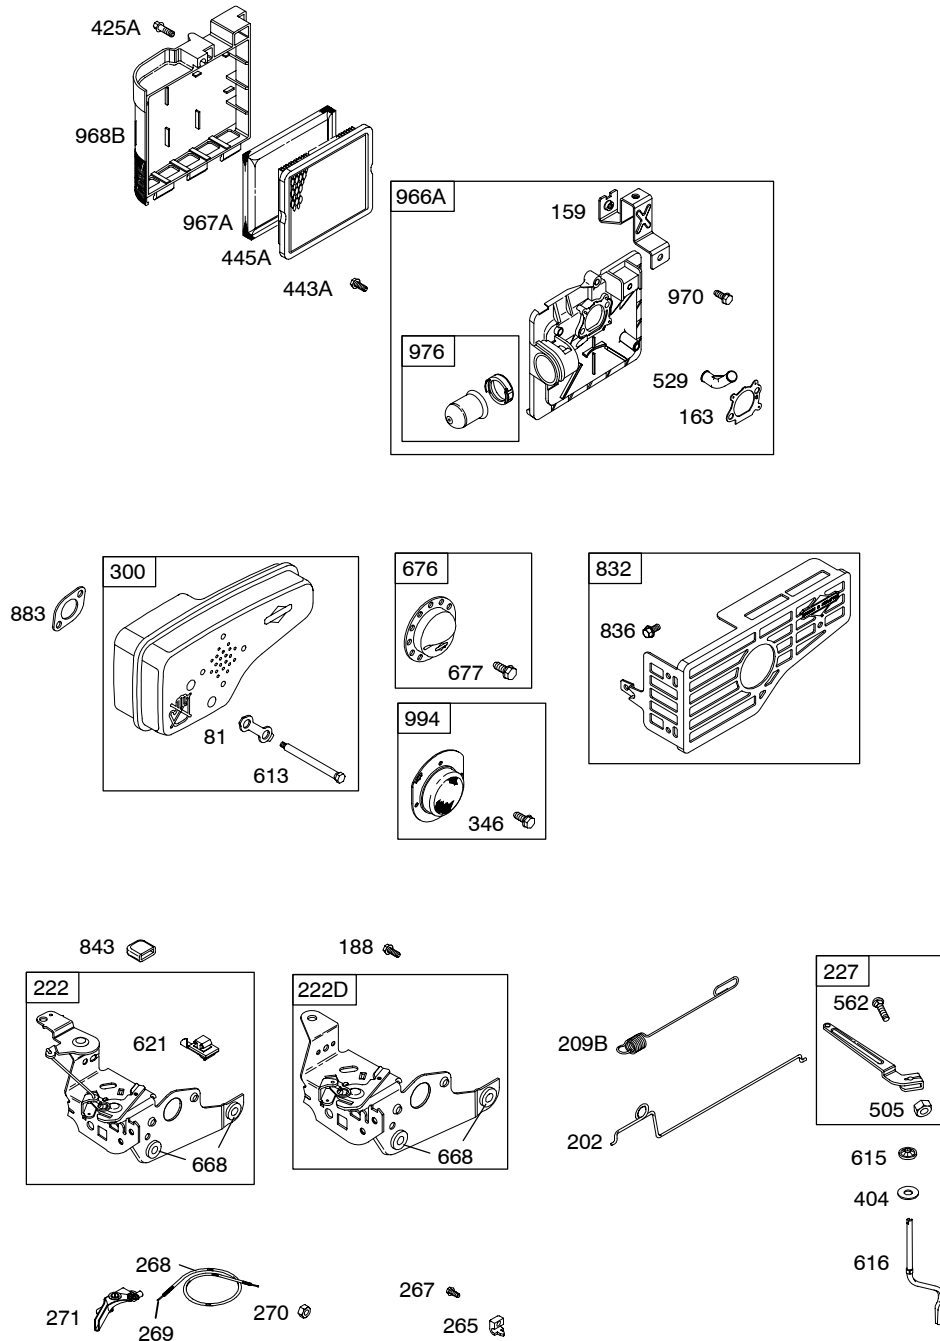

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5118-4 Assemblies include all parts shown in frames. **12/07/2007**

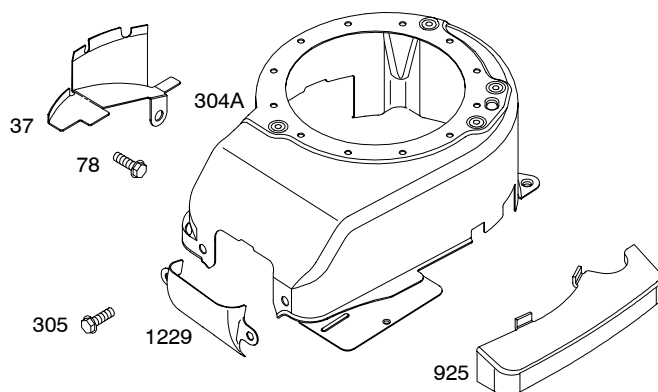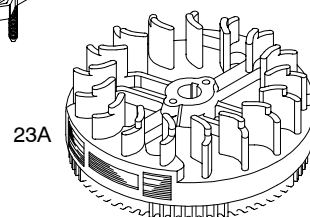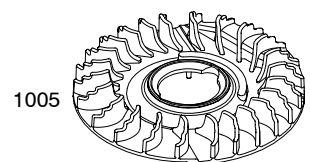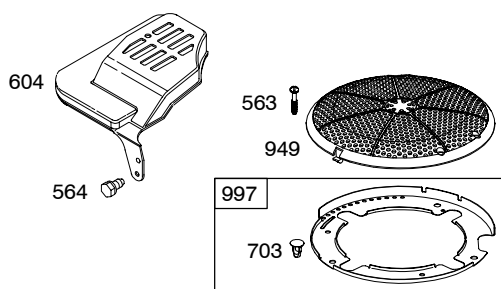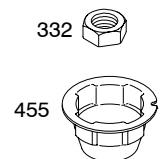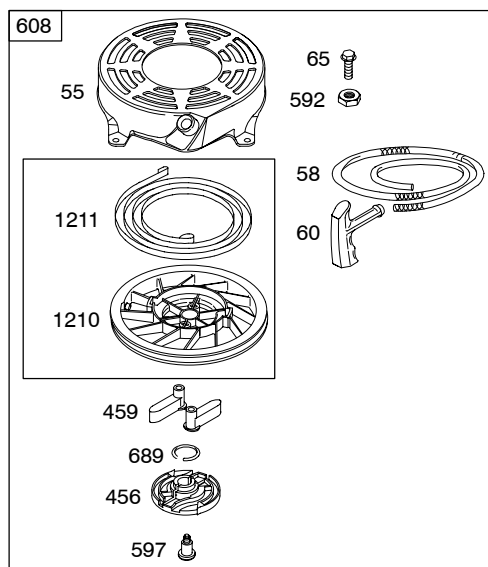

1036 EMISSIONS LABEL

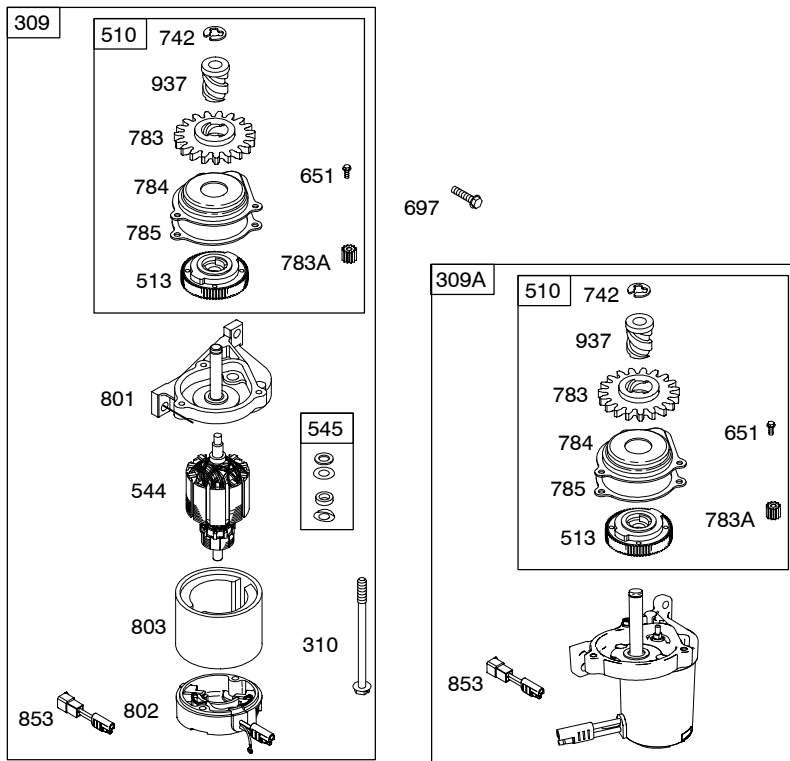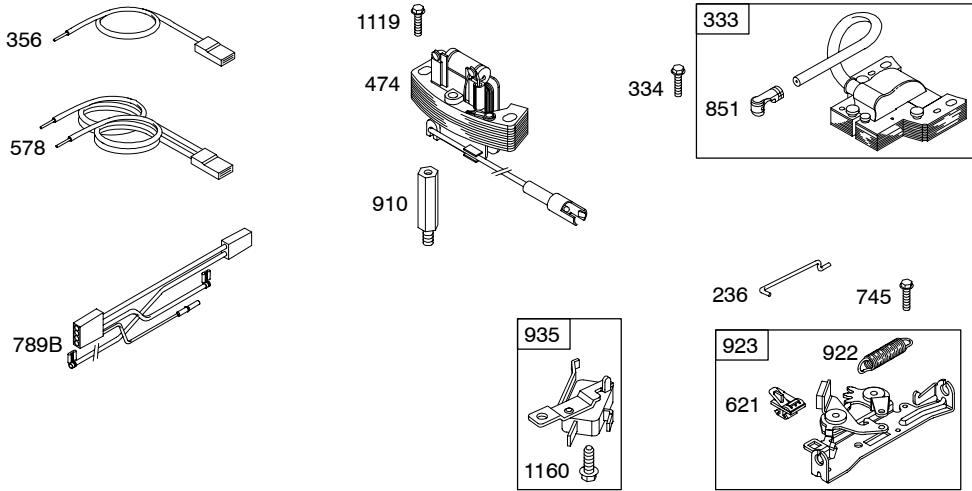

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5118-6 Assemblies include all parts shown in frames. **12/07/2007**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697322	Cylinder Assembly	25	795429	Piston Assembly (Standard)	27	691866	Lock-Piston Pin
2	399269	Kit-Bushing/Seal (Magneto Side)			(Used After Code Date 07090300).	28	499423	Pin-Piston (Standard)
3	★299819S	Seal-Oil (Magneto Side)			----- Note -----	29	499424	Rod-Connecting (Standard)
4	493279	Sump-Engine			791097 Piston Assembly (Standard)	32	691664	Screw (Connecting Rod)
5	691160	Head-Cylinder			(Used Before Code Date 07090300).	32A	695759	Screw (Connecting Rod)
7	★Ø692249	Gasket-Cylinder Head			795430 Piston Assembly (.020" Oversize)	33	262651S	Valve-Exhaust
8	695250	Breather Assembly			(Used After Code Date 07090300).	34	262652S	Valve-Intake
9	★Ø696125	Gasket-Breather			791326 Piston Assembly (.020" Oversize)	35	691270	Spring-Valve (Intake)
10	691125	Screw (Breather Assembly)			(Used After Code Date 07090300).	36	691270	Spring-Valve (Exhaust)
11	691781	Tube-Breather			791326 Piston Assembly (.020" Oversize)	37	694086	Guard-Flywheel
12	★692232	Gasket-Crankcase			(Used After Code Date 04102100 and Before Code Date 07040400).	40	692194	Retainer-Valve
13	690912	Screw (Cylinder Head)			697341 Piston Assembly (.020" Oversize)	43	691997	Slinger-Governor/Oil
15	691680	Plug-Oil Drain (Square Socket)			(Used Before Code Date 04102200).	45	690548	Tappet-Valve
16	691451	Crankshaft			----- Note -----	46	691449	Camshaft
		691452 Crankshaft Used on Type No(s). 0105, 0117.			697341 Piston Assembly (.020" Oversize)	50	497465	Manifold-Intake
20	★399781S	Seal-Oil (PTO Side)			(Used Before Code Date 04102200).	51	★272199S	Gasket-Intake
22	691092	Screw (Crankcase Cover/Sump)	26	795431	Ring Set (Standard)	54	691650	Screw (Intake Manifold)
23A	691992	Flywheel Used on Type No(s). 0005, 0110, 0111, 0112, 0113.			(Used After Code Date 07090300).	55	691421	Housing-Rewind Starter
		----- Note -----			----- Note -----	58	697316	Rope-Starter (Cut To Required Length)
		691987 Flywheel Used on Type No(s). 0015, 0100, 0105, 0115, 0116, 0117, 0118, 0185.			791098 Ring Set (Standard)	60	281434S	Grip-Starter Rope
24	222698S	Key-Flywheel			(Used After Code Date 04031400 and Before Code Date 07090400).	65	690837	Screw (Rewind Starter)
					499425 Ring Set (Standard)	78	691108	Screw (Flywheel Guard)
					(Used Before Code Date 04031500).	81	691740	Lock-Muffler Screw
					795432 Ring Set (.020" Oversize)	95	691636	Screw (Throttle Valve)
					(Used After Code Date 07090300).	97	696565	Shaft-Throttle
					791324 Ring Set (.020" Oversize)	104	●691242	Pin-Float Hinge
					(Used After Code Date 04102100 and Before Code Date 07090400).			
					499427 Ring Set (.020" Oversize)			
					(Used Before Code Date 04102200).			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5118-7

Assemblies include all parts shown in frames.

12/07/2007

129H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
117	498978	Jet–Main (Standard)	227	690783	Lever–Governor Control	310	690662	Bolt (Starter Motor)		
118	497466	Jet–Main (High Altitude)	236	691826	Link–Lockout	332	690662	Nut (Flywheel)		
121	498260	Kit–Carburetor Overhaul	265	690798	Clamp–Casing	333	802574	Armature–Magneto		
125	498170	Carburetor (Primer System)	267	691044	Screw (Casing Clamp)	334	691061	Screw (Magneto Armature)		
127	●694468	Plug–Welch	268	691025	Casing–Control Wire (Cut to Required Length)	337	802592S	Plug–Spark		
130	696564	Valve–Throttle	269	691026	Wire–Control (Cut to Required Length)	346	690661	Screw (Spark Arrester)		
133	398187	Float–Carburetor	270	691027	Nut (Control Wire Casing)	356	692390	Wire–Stop		
134	●398188	Kit–Needle/Seat	271	691028	Lever–Control	358	497316	Gasket Set–Engine		
137	◆693981	Gasket–Float Bowl	276	◆271716	Washer–Sealing (Main Jet)	363	19069	Flywheel Puller		
146	690979	Key–Timing	287	690940	Screw (Dipstick Tube)	365	691688	Screw (Carburetor)		
159	691753	Bracket–Air Cleaner Primer	300	692038	Muffler (Super Lo Tone)	383	89838S	Wrench–Spark Plug		
163	★◆272653	Gasket–Air Cleaner	304A	493294	Housing–Blower ----- Note -----	404	690272	Washer (Governor Crank)		
187	791766	Line–Fuel (Cut to Required Length)			695892	Housing– Blower	425A	690670	Screw (Air Cleaner Cover)	
187A	791873	Line–Fuel (Molded)				Used on Type No(s). 0015, 0100, 0105, 0115.	443A	692523	Screw (Air Cleaner Primer Base)	
188	693399	Screw (Control Bracket)				493293	Housing– Blower	445A	491588S	Filter–Air Cleaner Cartridge
190	690940	Screw (Fuel Tank)				Used on Type No(s). 0116, 0117, 0118.	455	791960	Cup–Flywheel	
202	691829	Link–Mechanical Governor	305	691108	Screw (Blower Housing)	456	692299	Plate–Pawl Friction		
209B	691291	Spring–Governor ----- Note -----	306	690450	Shield–Cylinder	459	281505S	Plate–Ratchet		
		691851	Spring– Governor	307	690345	Screw (Cylinder Shield)	474	691991	Alternator	
			Used on Type No(s). 0185.	309	695550	Motor–Starter (Used Before Code Date 07052900).	505	691251	Nut (Governor Control Lever)	
			691292	Spring– Governor	309A	795092	Motor–Starter (Used After Code Date 07052800).	510	795093	Drive–Starter
			Used on Type No(s). 0105.				513	692358	Clutch–Drive	
222	790143	Bracket–Control (Remote/Manual Friction)(Primer)					523	499621	Dipstick	
222D	692467	Bracket–Control (Fixed Speed)					524	★692296	Seal–Dipstick Tube	
							525	495265	Tube–Dipstick	
							529	691923	Grommet	
							544	690786	Armature–Starter	
							545	492919	Washer Set (Starter Motor)	
							562	92613	Bolt (Governor Control Lever)	

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊘ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5118–8

Assemblies include all parts shown in frames.

12/07/2007

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
563	691138	Screw (Debris Guard Screen)	741	794388	Gear-Timing (Use Without Woodruff Key)	869	691155	Seat-Valve (Intake)
564	690664	Screw (Control Cover)			(Used After Code Date 07093000).	870	690380	Seat-Valve (Exhaust)
578	398153	Wire-Assembly			----- Note -----	871	262001	Bushing-Valve Guide (Exhaust)
584	697734	Cover-Breather Passage			790345 Gear-Timing (Use Without Woodruff Key)			----- Note -----
585	★691879	Gasket-Breather Passage			(Used Before Code Date 07100100).			63709 Bushing-Valve Guide (Intake)
592	690800	Nut (Rewind Starter)			691830 Gear-Timing (Uses Woodruff Key)	883	★∅691881	Gasket-Exhaust
597	691696	Screw (Pawl Friction Plate)	742	93941	Retainer-E Ring	910	691094	Stud (Alternator)
601	791850	Clamp-Hose	745	691648	Screw (Brake)	922	692135	Spring-Brake ----- Note -----
601A	691038	Clamp-Hose	783	691918	Gear-Pinion (Starter Drive) (19 Teeth)			691831 Spring-Brake Used on Type No(s). 0116, 0117, 0118.
604	691757	Cover-Control	783A	691269	Gear-Pinion (12 Teeth)	923	695891	Brake ----- Note -----
608	497680	Starter-Rewind	784	795095	Cover-Starter Gear			691994 Brake Used on Type No(s). 0116, 0117, 0118.
613	691340	Screw (Muffler)	785	692352	Gasket-Starter Cover	925	795403	Cover-Linkage (Used After Code Date 07072200).
615	690340	Retainer-Governor Shaft	789B	696546	Harness-Wiring ----- Note -----			----- Note -----
616	698801	Crank-Governor			696547 Harness- Wiring Used on Type No(s). 0116, 0117, 0118.			690595 Cover- Linkage (Used Before Code Date 07072300).
617	★◆691321	Seal-O Ring (Intake Manifold)	801	690782	Cap-Drive	935	499421	Switch-Interlock
621	692310	Switch-Stop	802	695267	Cap-End	937	691325	Spline-Starter
633	◆691321	Seal-Choke/Throttle Shaft (Throttle)	803	695266	Housing-Starter	949	696306	Guard-Debris Screen
635	66538S	Boot-Spark Plug	832	499034	Guard-Muffler	957	397974S	Cap-Fuel Tank (Plastic)
651	690345	Scerw (Starter Gear Cover)	836	690664	Scerw (Muffler Guard)	957B	699985	Cap-Fuel Tank (Plastic)
668	★493823	Spacer	842	★691031	Seal-O Ring (Dipstick Tube)	958	698183	Valve-Fuel Shut Off (Plastic)
670	692294	Spacer-Fuel Tank	843	691884	Sleeve-Lever	966A	496116	Base-Air Cleaner Primer
676	396548	Deflector-Muffler	847	692047	Dipstick/Tube Assembly	967A	493537S	Filter-Pre Cleaner
677	690661	Screw (Muffler Deflector)	851	493880S	Terminal-Spark Plug			
684	690345	Screw (Breather Passage Cover)	853	696842	Adapter-Wire			
689	691855	Spring-Friction	868	697338	Seal-Valve			
703	696309	Clip						
718	690959	Pin-Locating						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5118-9

Assemblies include all parts shown in frames.

12/07/2007

129H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
968B	692298	Cover-Air Cleaner	1019	696438	Kit-Label	1210	498144	Pulley/Spring Assembly
970	691669	Screw (Air Cleaner Primer Bracket)	1036		Label-Emissions (Available From A Briggs & Statton Authorized Dealer)	1211	498144	Pulley/Spring Assembly (Spring)
972B	699374	Tank-Fuel (Plastic)	1058	277039	Operator's Manual	1229	696308	Extension-Blower Housing
975	493640	Bowl-Float	1059	692311	Kit-Screw/Washer	1319	794467	Label-Warning
976	694395	Primer-Carburetor	1095	498528	Gasket Set-Valve	1330	270962	Manual-Repair
977	498261	Gasket Set-Carburetor	1119	691648	Screw (Alternator)			
994	398067	Arrestor-Spark	1160	690345	Screw (Interlock Switch)			
997	696310	Shield-Debris						
1005	691346	Fan-Flywheel						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5118-10

Assemblies include all parts shown in frames.

12/07/2007

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>