




# PR04000 Portable Generator Illustrated Parts List

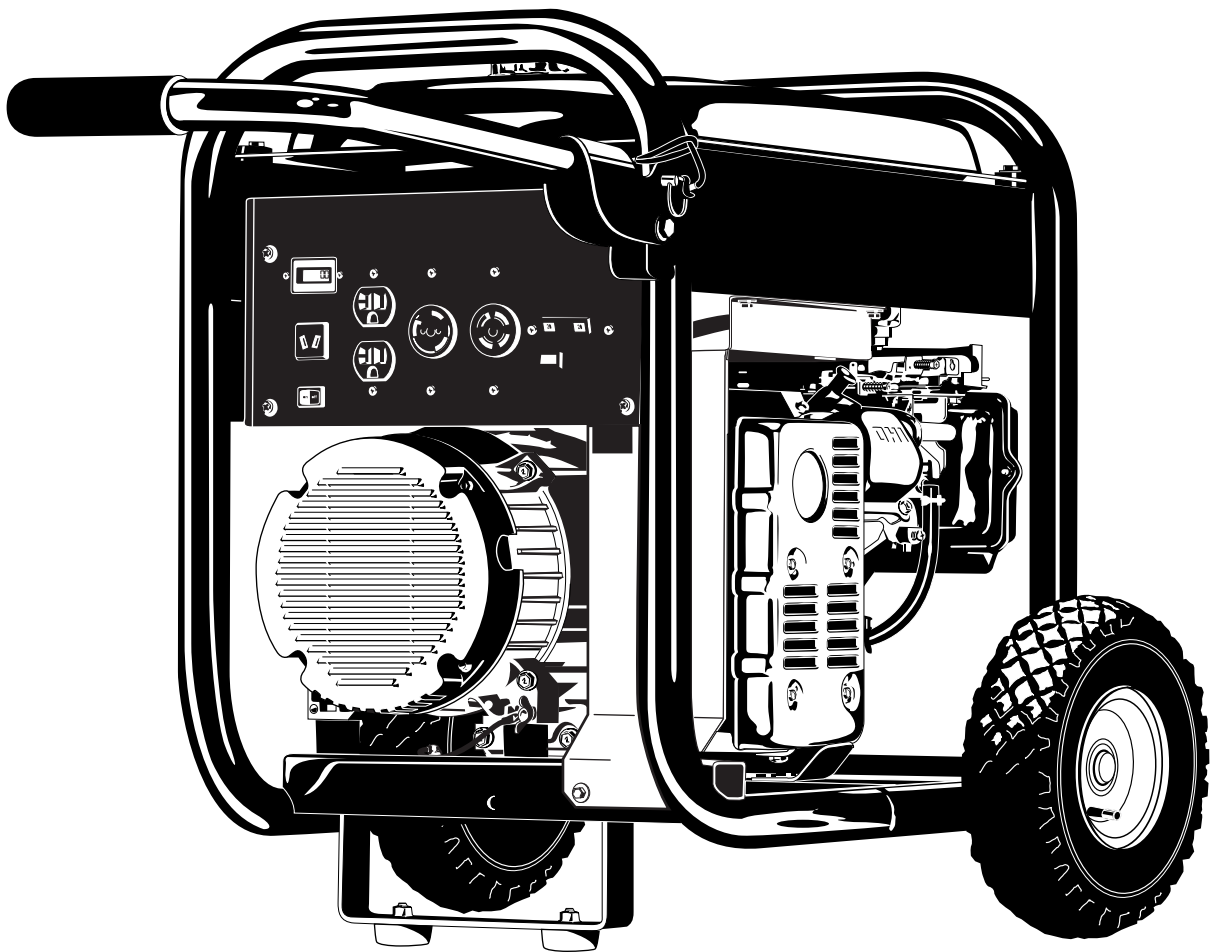


**BRIGGS & STRATTON POWER PRODUCTS GROUP, LLC**  
**JEFFERSON, WISCONSIN, U.S.A.**

Model 030342 Manual No. 203336A Revision A (12/05/2007)

# Exploded Views and Parts Lists

## EXPLODED VIEW - MAIN UNIT

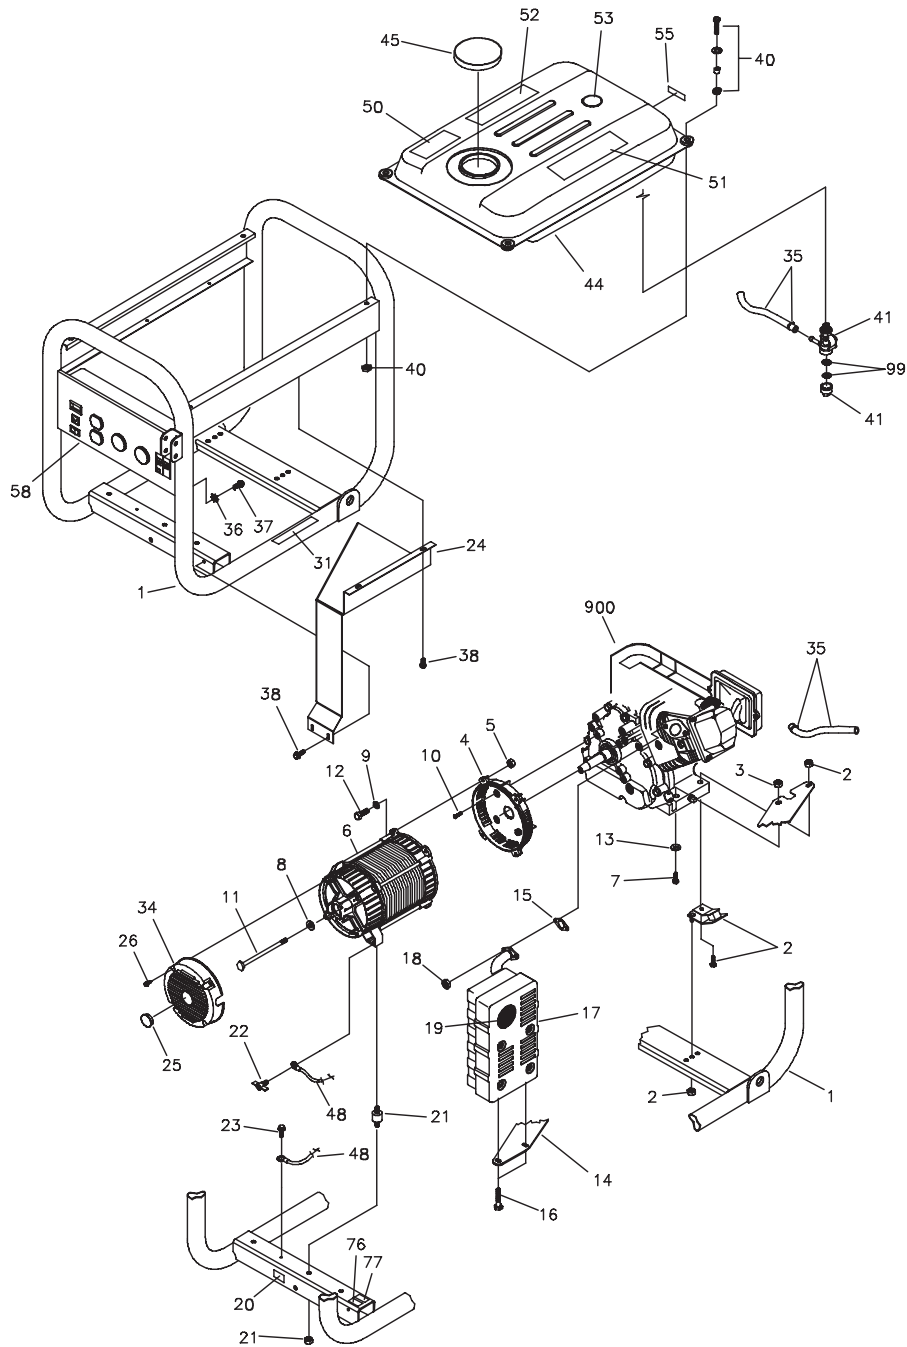

Copyright © 2007 Briggs & Stratton Power Products Group, LLC. All rights reserved. No part of this material may be reproduced or transmitted in any form by any means without the express written permission of Briggs & Stratton Power Products Group, LLC.

**BRIGGSandSTRATTON.COM**

# Exploded Views and Parts Lists

## PARTS LIST - MAIN UNIT

Item	Part #	Description	Item	Part #	Description
1	B192658GS	CRADLE (Includes Items 20, 31, 76 & 77)	37	B2153GS	SCREW, #10 Self Drilling
2	194150GS	KIT, Mount, Vibration, 45°	38	192376GS	SCREW, 12-24 x 1/2 THD Forming
3	67989GS	NUT, M8 Flange Serrated	40	194212GS	KIT, Fuel Tank Hardware (Includes Qty of 4)
4	190220GS	HOUSING, Engine Adapter	41	193272GS	VALVE, Tank
5	*	NUT, Hex M8 - 1.25	44	195988GS	ASSY., Tank, Fuel 4.5-Gallon (Includes Items 41, 50, 51, 52, 53 & 55)
6	NSP	ASSY, Alternator (see page 5)	45	189135GS	CAP, Fuel, Vented
7	*	TPHMS, M8 - 1.25 x 35	48	195373GS	WIRE, Ground
8	96796GS	WASHER, M8 Flat	50	202997GS	DECAL, CO Warning
9	*	WASHER, Lock 5/16 M8	51	194984GS	DECAL, Danger
10	190274DGS	SCREW, 3/8-16 x 7/8	52	94480GS	DECAL, Start Instructions
11	53122GS	HHCS, 5/16-24 x 6-1/2	53	189136GS	GAUGE, Fuel
12	*	HHCS, M8 1.25 x 25	55	197797GS	DECAL, Fuel Shutoff
13	*	WASHER, 5/16 Flat	58	195512GS	ASSY, Control Panel
14	193021GS	BRACKET, Muffler	76	195459GS	DECAL, Neutral Ground
15	710082	GASKET, Exhaust	77	195940GS	DECAL, Ground French
16	*	HHCS, M6 - 1.0 x 12	99	189759GS	KIT, Fuel Repair Valve
17	192898GS	MUFFLER	900	§	ENGINE
18	710090	NUT			
19	83083GS	SCREEN, Spark Arrest			
20	B4986GS	DECAL, Ground			
21	194153GS	KIT, Vibration Mount			
22	86494GS	SCREW, Wing M6 1.0 x 16			
23	86292GS	SCREW, 10-16 x 3/4, Self Drill			
24	J193053GS	SHIELD, Heat			
25	191190GS	CAP			
26	74908GS	TAPTITE, M5-0.8 x 10			
31	200310GS	DECAL, Warning Exhaust			
34	195422GS	COVER, RBC, Plastic with Cap			
35	791745	KIT, Fuel Hose (cut to fit)			
36	*	WASHER, M6 - 1/4 Int. Shakeproof			


  

Parts Not Illustrated	
43483GS	PLUG, 250V 20A, 4 Prong
100523GS	PLUG, 125V 30A, 3 Prong
65787GS	CABLE, Battery Charge
BB3061GS	OIL BOTTLE
203336GS	MANUAL, Operator's
203589GS	KIT, Decals Service

\* - Items without part numbers are common fasteners and are available at your local hardware store.  
 § - Contact Engine Manufacturer

# Exploded Views and Parts Lists


## CONTROL PANEL EXPLODED VIEW & PARTS LIST

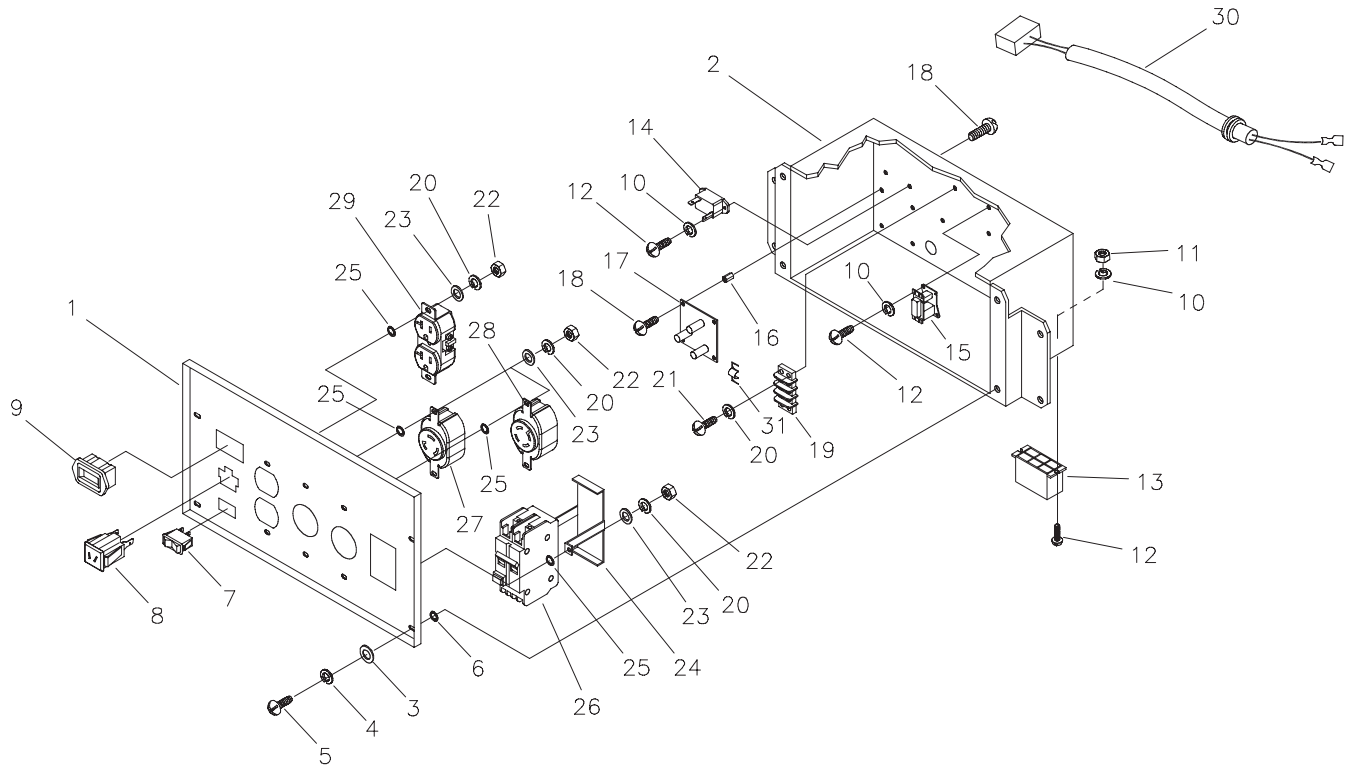

Item	Part #	Description	Item	Part #	Description
1	B192832GS	PANEL, Control	18	*	PHTS, #6-32 x 3/8
2	B192835GS	BOX, Control Panel	19	B5052GS	STRIP, Terminal
3	*	WASHER, Flat, #10 - M5	20	*	LOCKWASHER, M4
4	*	LOCKWASHER, M5	21	*	PPHMS, M4 - 0.7 x 16
5	*	PPHMS, M5 - 0.8 x 12	22	*	NUT, M4 - 0.7
6	*	WASHER, M6 - 1/4, Int. Shakeproof	23	*	WASHER, Flat, M4
7	82538GS	SWITCH, Rocker	24	192931GS	BRACKET, GFCI Breaker
8	90418GS	OUTLET, 12VDC, Snap	25	*	WASHER, Shakeproof, Int. #8
9	202602GS	HOUR METER	26	192828BGS	BREAKER, Circuit, GFCI, 20A
10	*	LOCKWASHER, M3	27	68868GS	OUTLET, 120V, 30A
11	*	NUT, M3 - 0.5	28	68867GS	OUTLET, 120/240V, 20A
12	*	PHMS, M3 - 0.5 x 10	29	68759GS	OUTLET, 120V, 20A, Duplex
13	22694GS	HOUSING, Receptacle	30	193036GS	HARNES, Wire
14	87962GS	CIRCUIT BREAKER, 12V, 10A	31	46669GS	JUMPER, Terminal Block
15	84028GS	TRANSFORMER, Idle Control			
16	64525GS	STANDOFF, Hex			
17	193362GS	PCB, Idle Control			

\* - Items without part numbers are common fasteners and are available at your local hardware store.


## ALTERNATOR EXPLODED VIEW & PARTS LIST

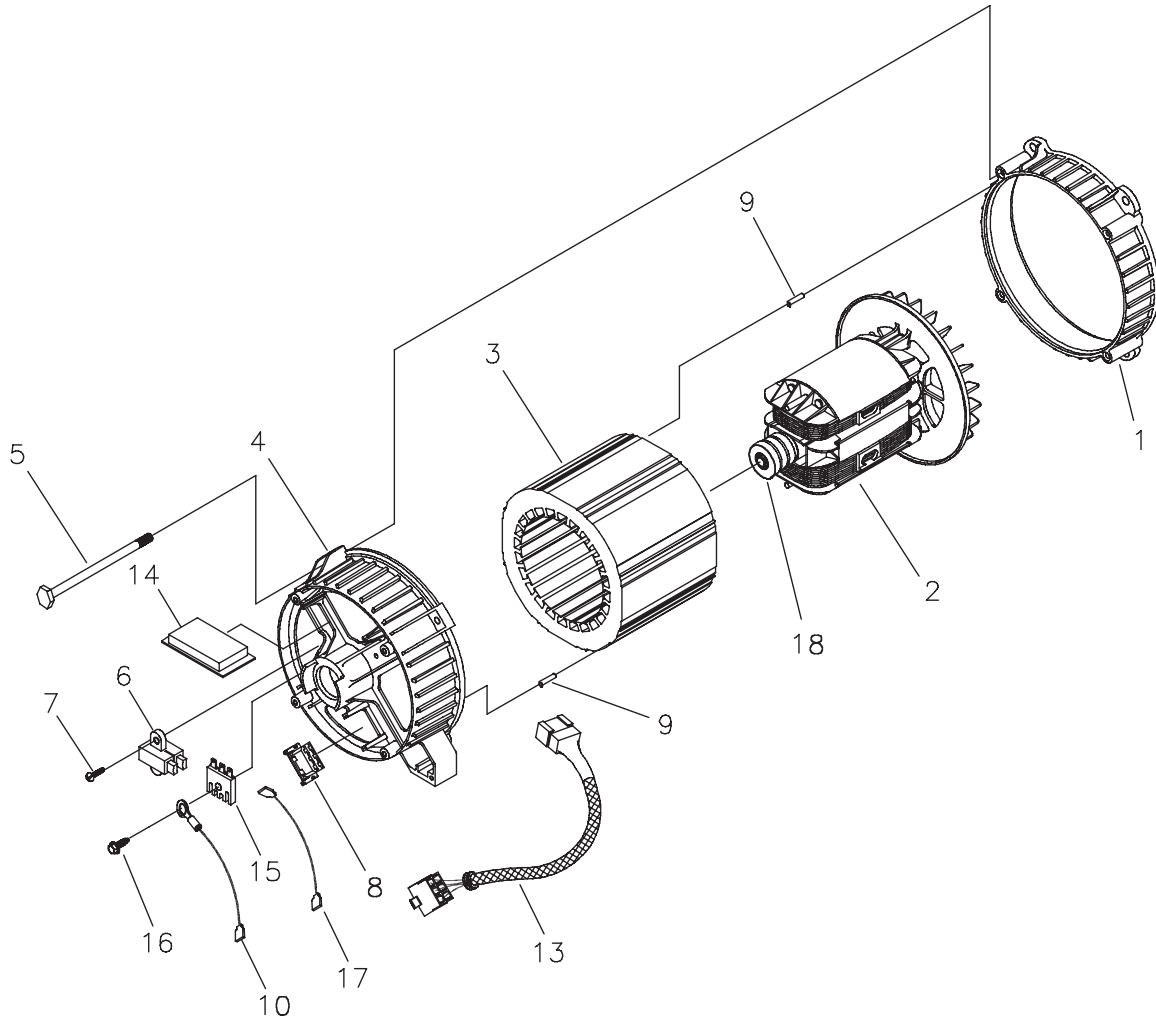

Item	Part #	Description
1	186059GS	ADAPTER, Mounting, Alternator
2	193034GS	ROTOR, (Includes Item #18)
3	193035AGS	STATOR
4	186060GS	RBC, with O-Ring (p/n 189197GS)
5	86308GS	HHCS, M6 - 1.0 x 115 SEMS
6	66386GS	ASSY, Holder, Brush
7	66849GS	TAPTITE, M5 - 0.8 x 16
8	22694GS	RECEPTACLE, 6 pin
9	81917GS	PIN, Roll, 4mm x 10
10	193428AGS	WIRE-A, Ground
13	193157GS	HARNESS, Wire, Power
14	189769GS	REGULATOR
15	65795GS	RECTIFIER
16	66849AGS	TAPTITE, M5 - 0.8 x 20
17	192403XGS	WIRE, Ground
18	65791GS	BEARING

# Exploded Views and Parts Lists

## WHEEL KIT EXPLODED VIEW & PARTS LIST

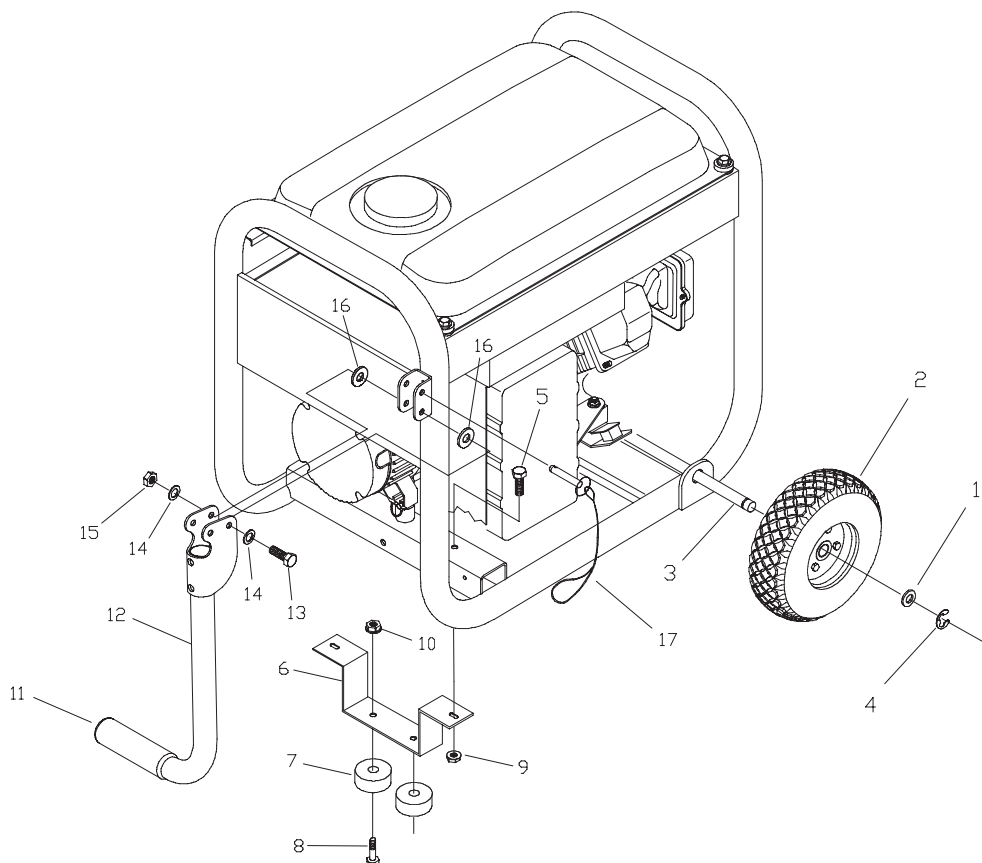

Item	Part #	Description
1	*	WASHER, 5/8
2	B4966GS	WHEEL
3	191267PGS	AXLE, 5/8" x 22.20"
4	191265GS	E-RING, 5/8
5	*	HHCS, M8 1.25 x 20
6	B89595GS	BRACKET, Support
7	87841GS	VIBE MOUNT
8	*	HHCS, 1/4 - 20 x 3/4
9	67989GS	NUT, M8 Flange Serrated
10	194005GS	NUT, 1/4 - 20 Flange Nylok
11	192477GS	GRIP
12	B193166GS	ASSY, Handle w/ Grip
13	*	HHCS, M8 - 1.25 x 50
14	*	WASHER, Flat 5/16 - M8
15	*	NUT, M8 - 1.25
16	*	WASHER, 1.2 x .346 x .03 Nylon
17	B4135GS	PIN, Handle Release

\* - Items without part numbers are common fasteners and are available at your local hardware store.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>