

## IR 901 Remote Control Instruction Guide, continued

### Freeze On/Off

Pressing this button will toggle the Freeze mode On or Off. The Freeze mode freezes the output display.

### Input Selection and Take

Press the **Input Selection** button to select the desired input. A subsequent input selection must be followed by pressing the **Take** button to select that input. The corresponding input button lights on the DVS 406's front panel.

### Size


To adjust image size, press the  $\blacklozenge$  button to increase vertical size, the  $\blacktriangledown$  button to decrease the vertical size, the  $\blacktriangleleft$  button to increase horizontal size, or the  $\blacktriangleright$  button to decrease horizontal size.

### Center

Press the  $\blacktriangleleft$  button to shift the image to the left, the  $\blacktriangleright$  button to shift the image to the right, the  $\blacktriangleup$  button to shift the image up, or the  $\blacktriangledown$  button to shift the image down.

### Image Adjustments

The + and - image adjustment controls (**Color**, **Tint**, **Brightness**, **Contrast**, **Detail**, and **Sharpness**) increment or decrement the image settings.

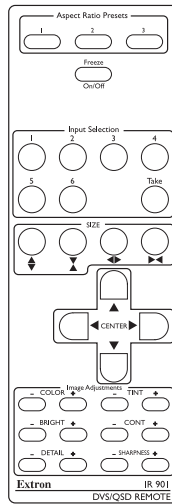

**Extron Electronics, USA**  
1230 South Lewis Street  
Anaheim, CA 92805  
800.633.9876 714.491.1500  
FAX 714.491.1517


**Extron Electronics, Europe**  
Beeldschermweg 6C  
3821 AH Amersfoort, The Netherlands  
+800.3987.6673 +31.33.453.4040  
FAX +31.33.453.4050

**Extron Electronics, Asia**  
135 Joo Seng Rd. #04-01  
PM Industrial Bldg., Singapore 368363  
+800.7339.8766 +65.6383.4400  
FAX +65.6383.4664

**Extron Electronics, Japan**  
Kyodo Building, 16 Ichibancho  
Chiyoda-ku, Tokyo 102-0082  
Japan  
+81.3.3511.7655 FAX +81.3.3511.7656

## IR 901 Remote Control Instruction Guide

Install two AAA batteries as shown at right.

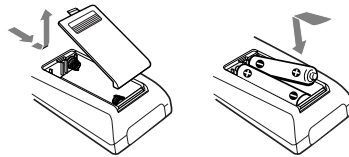

### Operation


The buttons on the IR 901 duplicate the DVS 406's front panel controls for normal operation. The scaler responds to commands from the IR 901 as if that button or knob were pressed or rotated on the scaler. From a distance of no more than 30 feet, the IR 901 sends infrared (IR) signals to the DVS 406 via the scaler's front panel IR sensor.

**NOTE** The DVS 406 must be powered on and active **before** operating the IR 901. Setup operations cannot be performed from the IR 901.

Refer to the *DVS 406 User's Manual* for details.

### Aspect Ratio Presets

Pressing any one of these three preset buttons will retrieve an input's saved aspect ratio presets (up to three).

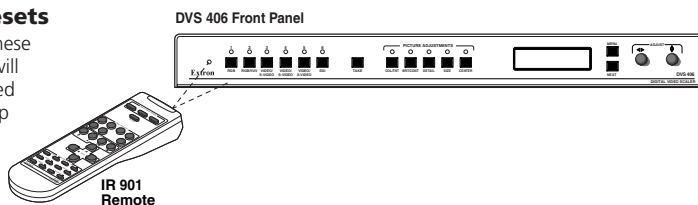

68-543-04  
Rev. C 02 08

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>