



RM285

Ergonomic Optical Mouse

User's Quick Guide


Congratulations on your purchase of this Optical Mouse. Please carefully read the User's Quick Guide to learn about the installation and the greatest functions of your new Optical Mouse.

Contents of the Package

- ✓ Optical Mouse (PS/2, USB or UP Combo)
- ✓ Mouse Driver Disk
- ✓ User's Quick Guide

Install Hardware

- PS/2 Version: Please turn off the computer. Plug the PS/2 connector of the mouse to the computer.
- USB Version: You may turn on the computer. Plug the USB connector of the mouse to the computer.
- USB to PS/2 Version: Turn off the computer. Plug the adapter of the USB to PS/2 to the mouse USB connector and then connect to the computer.

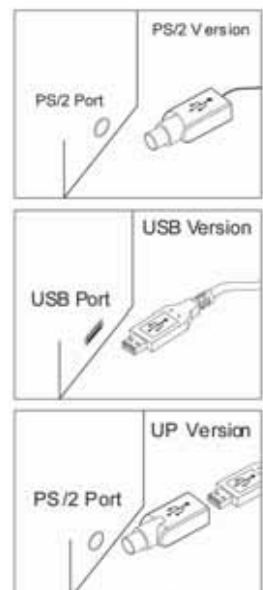

Install Driver

Notice:

- The driver supports Windows 95/ 98/ NT/ 2000/ ME and XP.
- The USB interface is compatible with Windows 98/ 2000/ ME and XP.
- Insert the driver disk to your computer → Double click "Setup.exe" and follow the setup instructions to complete the driver installation.

- A Mouse Setting icon will appear on the task bar of Windows
→ Double click the icon to set the button functions.

Notice

- The optical technology can precisely detect the mouse motion on most surfaces. Please avoid using the optical mouse on any reflective, transparent, metallic or complex-pattern surface.

Thank you for purchasing a quality Rosewill Product.

Please register your product at : www.rosewill.com for complete warranty information and future support for your product.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>